

HANDBOOK



CITROËN
C1



CRÉATIVE TECHNOLOGIE

On-line handbook

Select one of the following means of access to view your handbook on-line...

Referring to the handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



MyCITROËN

Find your handbook on the CITROËN website, under "MyCITROËN".

This personal and customisable space allows you to establish direct and special contact with the manufacturer.

If the "MyCITROËN" function is not available on the CITROËN public website for your country, you can find your handbook at the following address:

<http://service.citroen.com/ddb/>

Select:

- > the language,
 - > the vehicle, its body style,
 - > the print edition of your handbook appropriate for the date of registration of your vehicle.
-

Scan this code for direct access to your handbook.



This handbook has been designed to help to make the most of your C1 in all circumstances and in complete safety.

Take the time to read through it so as to familiarise yourself with your vehicle.

This handbook covers all of the variations in equipment available across the whole C1 range.

Your vehicle will be fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.


The descriptions and illustrations are given as indications only.


Automobiles CITROËN reserves the right to modify the technical characteristics, equipment and accessories without having to update this edition of the handbook.

This document forms an integral part of your vehicle. Remember to pass it on to the new owner in the event of the sale of the vehicle.

Key

 safety warning

 additional information

 contributes to the protection of the environment

CITROËN has a presence on every continent,
a complete product range,
bringing together technology and a permanent spirit of innovation,
for a modern and creative approach to mobility.
We thank you and congratulate you on your choice.

At the wheel of your new vehicle,
getting to know each system,
each control, each setting,
makes your trips, your journeys
more comfortable and more enjoyable.

Happy motoring!

Overview

Instruments

Instrument panels	11
Display screens	13
Indicator and warning lamps	15
Indicators	26
Trip computer	27
Setting the time	29

Eco-driving

Access

Keys	31
Keyless Entry and Starting system	34
Doors	38
Boot	39
Front electric windows	41
Rear quarter windows	41
Electric fabric roof	42

Ease of use and comfort

Front seats	46
Rear seats	48
Mirrors	50
Steering wheel adjustment	51
Ventilation	52
Heating	54
Manual air conditioning	55
Automatic air conditioning	57
Front demist - defrost	60
Rear screen demist - defrost	61
Courtesy lamp	62
Boot lamp	62
Interior fittings	63
Rear parcel shelf	67
Boot fittings	68

Access

2

Driving

4

Driving recommendations	70
Starting - switching off the engine with the key	71
Starting - switching off the engine with the Keyless Entry and Starting system	72
Manual parking brake	76
5-speed manual gearbox	76
ETG electronic gearbox	77
Gear shift indicator	81
Hill start assist	82
Stop & Start	83
Speed limiter	86
Reversing camera	92
Lane departure warning system	93
Under-inflation detection	95

Lighting and visibility

5

Exterior lighting control stalk	98
Automatic illumination of headlamps	101
Direction indicators	103
Headlamp beam height adjustment	103
Wiper control stalk	104

Safety

6

Horn	106
Hazard warning lamps	106
ESC system	107
Active City Brake	110
Seat belts	115
Airbags	118
Child seats	123
Deactivating the passenger's front airbag	126
ISOFIX child seats	132
Child lock	137

Practical information

7

Fuel tank	138
Snow chains	140
Electrical energy economy mode	141
Accessories	142
Changing a wiper blade	144
Fitting roof bars	144
Bonnet	146
Petrol engines	147
Checking levels	148
Checks	151

In the event of a breakdown

8

Temporary puncture repair kit	153
Spare wheel	158
Changing a bulb	163
Changing a fuse	168
12 V battery	177
Towing the vehicle	180

Technical data

9

Engines	181
Weights	182
Dimensions	183
Identification markings	184

Audio and telematics


7-inch touch screen tablet	185
Audio system	235

Alphabetical index



Exterior

Keys	31
Remote control	32-33
"Keyless Entry and Starting" system	34-37
Remote control battery	33, 37
Starting	71, 72-73

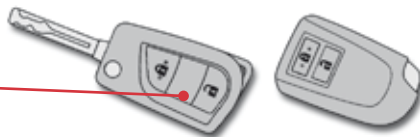


Electric fabric roof	42-45
Roof bars	144
Accessories	142-143

Door mirrors	50
--------------	----

Wipers	104-105
Changing a wiper blade	144

Boot	39-40
Temporary puncture repair kit	153-157

Lighting control stalk	98-103
Adjusting the headlamps	103
Changing bulbs	163-165, 167
- front lamps	
- direction indicator repeaters	

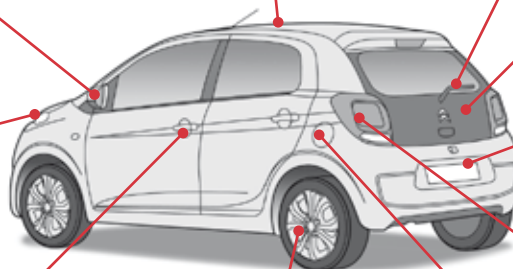

Reversing camera	92
Towing	180


Changing bulbs	166-167
- rear lamps	
- 3 rd brake lamp	
- number plate lamps	

Doors	38-40
- opening / closing	
- central locking	
Electric windows	41
Quarter lights (5-door)	41

Electronic stability programme	107-109
Snow chains	140
Under-inflation detection	95-97
Tyre pressures	156-157, 184
Changing a wheel	158-162
- tools	
- removal / fitting	


Fuel tank, refuelling	138-139
Fuel gauge	26

Interior

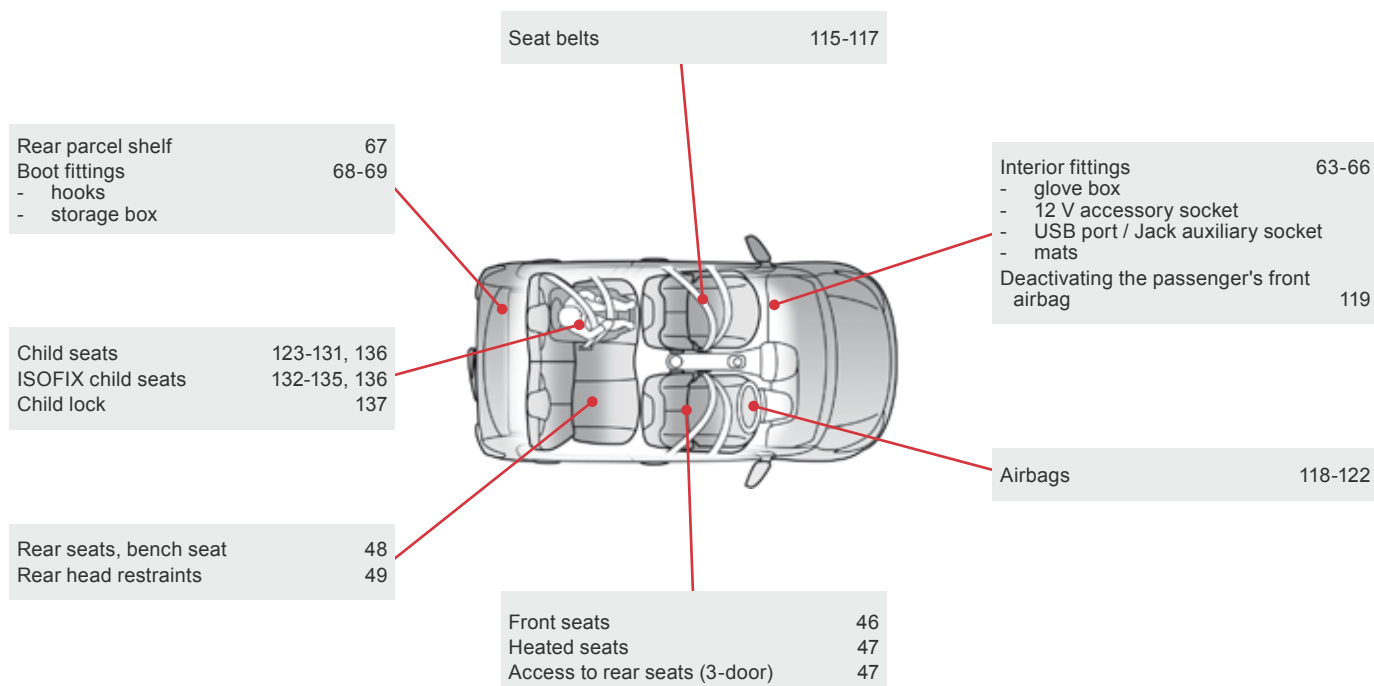


Instruments and controls


Heating, ventilation	52-54	Courtesy lamp	62	7-inch touch screen tablet	185-234
Manual air conditioning	55-56	Control for electric fabric roof	42	Audio system	235-254
Automatic air conditioning	57-59	Rear view mirror	51	Setting the time	29, 30
Windscreen demist / defrost	60	Sun visors	64		
Rear screen demist / defrost	61				
Passenger's front airbag	119			Instrument panel	11-12
				Rev counter	12
Side air vents	52			Central screen	13
				Indicator and warning lamps	15-25
Glove box	64			Indicators	26
Deactivating the passenger's front airbag	119			Trip computer	27-28
Reinitialising the under-inflation detection	96-97				
Opening the bonnet	146			Door mirrors	50
				Electric windows	41
Manual gearbox	76			Dashboard fuses	168-172
ETG electronic gearbox	77-80	Manual parking brake	76	12 V accessory socket	64
Gear shift indicator	81			USB port	65
Hill start assist	82			Jack auxiliary socket	65

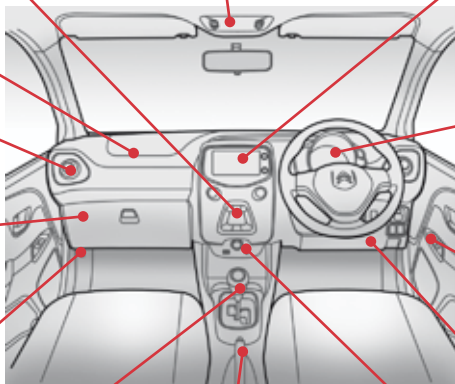


Instruments and controls (continued)

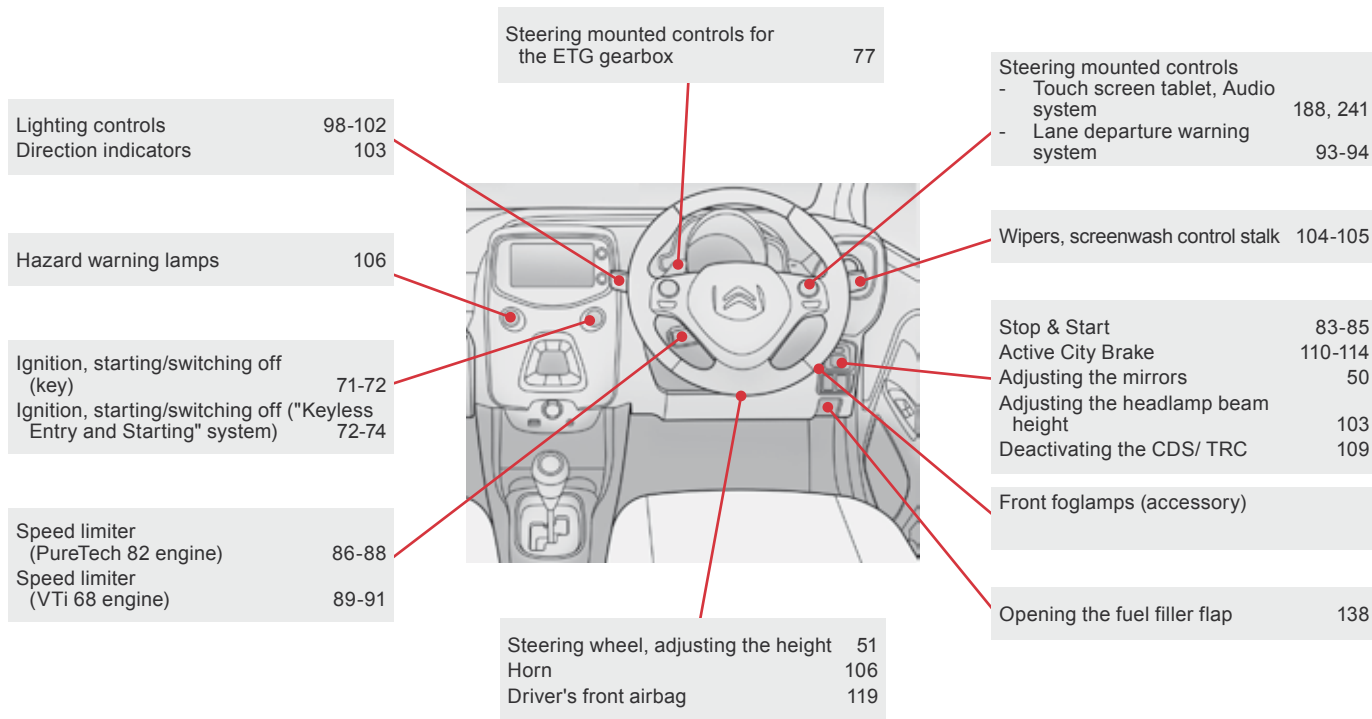

Maintenance - Technical data

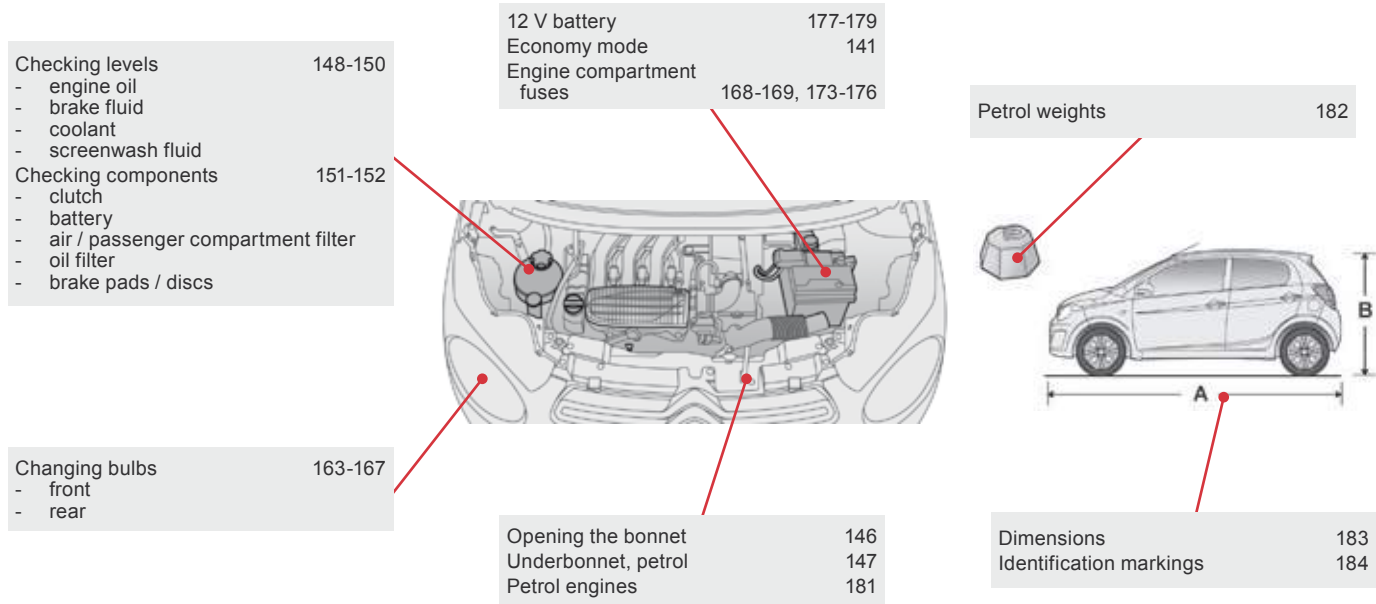



Eco-driving

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO₂ emissions.

Optimise the use of your gearbox

With a manual gearbox, move off gently and change up without waiting. During acceleration change up early.

With an ETG electronic gearbox, give preference to automatic (Easy) mode and avoid pressing the accelerator pedal heavily or suddenly.

The gear shift indicator invites you to engage the most suitable gear: as soon as the indication is displayed in the instrument panel, follow it straight away.

For vehicles fitted with an ETG electronic gearbox, this indicator appears only in manual mode.

Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO₂ emissions and also helps reduce the background traffic noise.

Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning. Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter, passenger compartment filter...) and observe the schedule of operations recommended in the maintenance and warranty guide.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.

Instrument panels

Type 1 instrument panel



1. Speedometer (mph or km/h).
2. Central display screen.
For more information, refer to the corresponding section.
3. Gear efficiency indicator.
4. Display management button (DISP).
Display of information in ascending order.
5. Display management button (DISP).
Display of information in descending order.

Type 2 instrument panel



1. Speedometer (mph or km/h).
2. Central display screen.
For more information, refer to the corresponding section.
3. Gear efficiency indicator.
4. Display management button (DISP).
Display of information in ascending order.
5. Display management button (DISP).
Display of information in descending order.
6. Rev counter
The engine speed is indicated by the display of orange illuminated bars.
Above the maximum engine speed, the bars are displayed in red to warn you of the need to change up.

Central display screen


The information displayed varies according to your vehicle's engine and type of gearbox.

Central display screen with the VTi 68 engine and manual gearbox



1. Ambient temperature.
It flashes if there is a risk of ice.
2. Vehicle information with:
 - Total and trip distance recorders.
 - Trip computer information.
 - Speed limiter information.
3. Fuel gauge.

Central display screen with the VTi 68 and ETG electronic gearbox

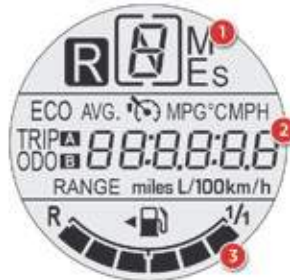

1. Gear selector position and gear engaged.
2. Vehicle information with:
 - Total and trip distance recorders.
 - Trip computer information.
 - Speed limiter information.
 - Ambient temperature.
It flashes if there is a risk of ice.
3. Fuel gauge.

Central display screen with the PureTech 82 engine and manual gearbox



1. Speed limiter information.
2. Vehicle information with:
 - Total and trip distance recorders.
 - Trip computer information.
 - Ambient temperature.
It flashes if there is a risk of ice.
3. Fuel gauge.

i For more information, refer to the section corresponding to the function and its associated display.

Seat belts and passenger's front airbag warning lamps display screen



- A. Left hand rear seat belt unfastened warning.
- B. Right hand rear seat belt unfastened warning.
- C. Passenger's front airbag deactivated warning lamp.
- D. Passenger's front airbag activated warning lamp.

! Warning lamp C or D remains on, depending on the state of the passenger's front airbag (deactivated or activated).

Indicator and warning lamps

Visual indicators informing the driver that a system is in operation or is switched off (indicator lamp) or has a fault (warning lamp).

When the ignition is switched on

Certain warning lamps come on for a few seconds in the instrument panel when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should go off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

Associated warnings

The illumination of certain warning lamps may be accompanied by an audible signal.

The warning lamps may come on continuously (fixed) or flash.



Certain warning lamps may come on in one of two modes: fixed (continuous) or flashing.

Only by relating the type of illumination to the operation of the vehicle can it be determined whether the situation is normal or a fault has occurred.

Refer to the tables in the following pages for more information.





Warning lamps





When the engine is running or the vehicle is being driven, illumination of one of the following warning lamps indicates a fault which requires action on the part of the driver.





Any fault resulting in the illumination of a warning lamp must be investigated further.





If you encounter any problems, do not hesitate to contact a CITROËN dealer or a qualified workshop.








Warning / indicator lamp		State	Cause	Action / Observations
STOP	STOP	flashing, associated with another warning lamp.	It is associated with the engine oil pressure or the engine coolant temperature.	Stop as soon as it is safe to do so. Park, switch off the ignition and call a CITROËN dealer or qualified workshop.

Warning / indicator lamp		State	Cause	Action / Observations
	Braking	fixed.	The braking system fluid level has dropped significantly.	Top up with brake fluid recommended by CITROËN. If the problem persists, have the system checked by a CITROËN dealer or a qualified workshop.
			The braking system has a fault.	Stop as soon as it is safe to do so. Park, switch off the ignition and contact a CITROËN dealer or a qualified workshop.
	Engine oil pressure	fixed, associated with the STOP warning lamp.	The engine oil pressure is too low.	Stop as soon it is safe to do so. Park, switch off the ignition and contact a CITROËN dealer or a qualified workshop.
	Coolant temperature	flashing (VTi 68 engine only).	The temperature of the engine coolant is increasing.	Drive gently.
		fixed.	The temperature of the engine coolant is too high.	Stop as soon as it is safe to do so. Wait until the engine has cooled down before checking up the level; top up if necessary. If the problem persists, contact a CITROËN dealer or qualified workshop.
	Anti-lock Braking System (ABS)	fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking. Drive carefully at reduced speed and contact a CITROËN dealer or a qualified workshop without delay.

Warning / indicator lamp		State	Cause	Action / Observations
	Dynamic stability control and traction control (DSC/TRC)	flashing.	The DSC/TRC system is in action.	The system optimises traction and improves the directional stability of the vehicle.
		fixed.	The DSC/TRC system has a fault.	Have it checked by a CITROËN dealer or a qualified workshop.
	Emission control system	fixed.	The emission control system has a fault.	Contact a CITROËN dealer or a qualified workshop without delay.
	Engine fault	fixed.	A major fault has been detected that does not have a specific warning lamp.	You must contact a CITROËN dealer or a qualified workshop.
	Low fuel level	fixed, accompanied by an audible signal.	When it first comes on there remains approximately 5 litres of fuel in the tank.	You must refuel as soon as possible to avoid running out of fuel. This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made. Fuel tank capacity: approximately 35 litres. Never continue to drive until you run out of fuel as this could damage the emission control and injection systems.
	Battery charge	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...).	Contact a CITROËN dealer or a qualified workshop.






Warning / indicator lamp		State	Cause	Action / Observations
	Front seat belts	flashing, accompanied by an audible signal.	The driver has not fastened or has unfastened their seat belt. The front passenger has unfastened their seat belt.	Pull the strap then insert the tongue in the buckle.
	Airbags	fixed.	One of the airbags or seat belt pretensioners has a fault.	Have it checked by a CITROËN dealer or a qualified workshop.
	ETG electronic gearbox	fixed.	The ETG electronic gearbox has a fault.	Contact a CITROËN dealer or a qualified workshop without delay.
	Clutch	flashing, accompanied by an audible signal.	The clutch temperature is too high.	Stop as soon as it is safe to do so, place the ETG electronic gearbox selector in position N , and wait about 15 minutes for the clutch to cool down.
	Electric power steering	flashing or fixed, accompanied by an audible signal.	The electric power steering has a fault.	Drive carefully at reduced speed. Have it checked by a CITROËN dealer or qualified workshop.





Warning / indicator lamp	State	Cause	Action / Observations
	Under-inflation	fixed.	<p>The pressure in one or more wheels is too low.</p> <p>Check the tyre pressures as soon as possible. This check should preferably be carried out when the tyres are cold.</p> <p>You must reinitialise the system after the adjustment of one or more tyre pressures and after changing one or more wheels.</p> <p>For more information, refer to the "Under-inflation detection" section.</p>
	Stop & Start (VTi 68 S&S engine)	flashing.	<p>The Stop & Start system has a fault.</p> <p>Have the system checked by a CITROËN dealer or a qualified workshop.</p>
	Speed limiter	fixed.	<p>The speed limiter has a fault.</p> <p>Have it checked by a CITROËN dealer or a qualified workshop.</p>
	Door(s) open / Boot open	fixed, accompanied by an audible signal.	<p>A door or the boot is still open.</p> <p>Close the door or boot.</p>







Warning / indicator lamp		State	Cause	Action / Observations
 	Keyless Entry and Starting system	flashing quickly.	The steering column has not been unlocked.	Change to "OFF" mode, then "ON" mode and turn the wheel slightly to unlock the steering column.
		flashing, accompanied by an audible signal.	The battery in the electronic key is discharged.	Replace the battery. Refer to the corresponding section.
			You are leaving the vehicle without activating "OFF" mode.	With the electronic key on your person, press the START/STOP button to change to "OFF" mode.
			The electronic key has not been detected.	Check that you have the electronic key with you.
			The Keyless Entry and Starting system has a fault.	Have the system checked by a CITROËN dealer or a qualified workshop.
  	Lane departure warning system	flashing (orange), accompanied by an audible signal.	A lane marking is being crossed, on the right.	Turn the wheel in the other direction to return to the correct trajectory. For more information, refer to the corresponding section.
			A lane marking is being crossed, on the left.	
		fixed.	The lane departure warning system has a fault.	Have the system checked by a CITROËN dealer or a qualified workshop.
 	Active City Brake	flashing, accompanied by an audible signal.	The Active City Brake system is in action.	The system optimises braking to avoid a collision. For more information, refer to the corresponding section.
		flashing.	The Active City Brake system has a fault.	Have the system checked by a CITROËN dealer or a qualified workshop.

Operation indicator lamps

Illumination of one of the following indicator lamps confirms that the corresponding system has been switched on. It may be accompanied by an audible signal.




Warning / indicator lamp		State	Cause	Action / Observations
	Left-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed down.	
	Right-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed up.	
	Sidelamps or dipped beam headlamps	fixed.	The sidelamps or dipped beam headlamps are on.	
	Main beam headlamps	fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.
	Rear foglamp	fixed.	The rear foglamp has been switched on using the ring on the lighting control stalk.	Turn the ring on the lighting control stalk to the rear to switch off the rear foglamp.



Warning / indicator lamp		State	Cause	Action / Observations
	Parking brake	fixed, accompanied by an audible signal.	The parking brake is applied or not properly released.	Release the parking brake to switch off the warning lamp, keeping your foot on the brake pedal. Observe the safety recommendations. For more information on the parking brake, refer to the corresponding section.
	Passenger's front airbag	fixed in the seat belt and passenger's front airbag warning lamps display.	The control switch, located in the glove box, has been placed in the "ON" position.	The passenger's front airbag is activated. In this case, do not install a rearward facing child seat.
	Stop & Start (VTi 68 S&S engine)	fixed.	When the vehicle stops (red lights, traffic jams...) the Stop & Start system has put the engine into STOP mode.	The indicator lamp goes off and the engine restarts automatically in START mode, as soon as you want to move off.
	Keyless Entry and Starting system	fixed.	The conditions for starting are met.	For more information, refer to the "Starting - switching off the engine with the Keyless Entry and Starting system" section.
		flashing slowly.	The vehicle is in "ACC" mode. The accessories (audio system, 12V socket...) can be used.	

Warning / indicator lamp		State	Cause	Action / Observations
	Gear efficiency indicator	fixed.	You can change up.	For more information, refer to the corresponding section.
			You can change down (only for the VTi 68 engine).	
	Speed limiter (VTi 68 engine)	fixed.	The speed limiter is active.	
	Lane departure warning system	fixed.	The button has been pressed.	The lane departure warning system has been activated. For more information, refer to the corresponding section.
 		fixed.		The system is operational: it has detected road markings to the left and/or right. For more information, refer to the corresponding section.
	Active City Brake	fixed.	The button has been pressed. The configuration of the system has been modified.	The Active City Brake system has been activated. For more information, refer to the corresponding section.

Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This may be accompanied by an audible signal.

Warning / indicator lamp	State	Cause	Action / Observations
	Passenger's front airbag	fixed, in the seat belt and front passenger's airbag warning lamps display.	The control switch, located in the glove box, is set to the OFF position.
	Traction control (TRC)	fixed.	A brief press has been made on the button. The traction control (TRC) system is deactivated.
	Dynamic stability control (DSC)	fixed.	Vehicle stationary , the button has been pressed for more than 3 seconds. The traction control (TRC) and dynamic stability control (DSC) systems are deactivated.

Warning / indicator lamp		State	Cause	Action / Observations
	Stop & Start (VTi 68 S&S engine)	fixed.	The Stop & Start system has been deactivated.	Reactivate the system by pressing the button again. For more information, refer to the corresponding section.
	Active City Brake	fixed.	The Active City Brake system has been deactivated.	Reactivate the system by pressing the button again. For more information, refer to the corresponding section.

Indicators

Total/trip distance recorder



When the ignition is switched on, the distance recorder selected when the engine was switched off is displayed.




Press one of the buttons 1 to alternate the distance display:

- total with "ODO" (odometer) displayed,
- trip with "TRIP" displayed.

To reset the trip recorder to zero, when it is displayed, press and hold one of the two buttons 1.

Fuel gauge

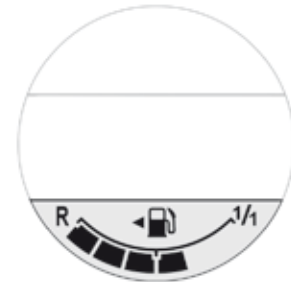

This indicates the quantity of fuel available:

- 1/1 and six bars, the fuel tank is full.
- R and one bar, the fuel tank is on the reserve.

Low fuel level



When the low level in the fuel tank is reached, this warning lamp comes on in the instrument panel, accompanied by an audible signal.

You have approximately 5 litres remaining.

i At least 5 litres must be added after running out of fuel.

Trip computer

System that gives you information on the journey in progress (range, fuel consumption...).

Information display



- ☞ Press one of these buttons to display the various trip computer tabs in turn:
 - The total distance.
 - The trip "A".
 - The trip "B".
 - The Stop & Start partial time counter*.
 - The Stop & Start global time counter*.
 - The ambient temperature*.
 - The current fuel consumption.
 - The average fuel consumption.
 - The remaining range.
 - The average speed.
 - The lighting dimmer.

Ambient temperature

In certain situations, the ambient temperature may only be displayed after a delay or not at all, in particular:

- when stationary or at low speed (less than about 16 mph (25 km/h),
- where there is too much variation in temperature (entering or leaving a garage, a tunnel...),
- during very short journeys (less than about 2 minutes).

Lighting dimmer

When driving at night, this function allows certain displays in the instrument panel to be switched off to reduce visual fatigue for the driver.

It operates only when the sidelamps are on.

- ☞ When the "Lighting dimmer" menu is displayed, press and hold one of the "DISP" buttons for access to the adjustment.
- ☞ Then make repeated presses on one of the two "DISP" buttons to increase or reduce the brightness.
The display flashes to show you the brightness chosen.

Trip reset



- ☞ When the trip required is displayed, press one of the two "DISP" buttons for more than two seconds.
Trips "A" and "B" are independent but their use is identical.
For example, trip "A" can be used for daily figures, and trip "B" for monthly figures.

* Depending on version.

With the touch screen tablet

If your vehicle has a touch screen tablet, you can view information on the current journey.



From the **Menu** page in the touch screen tablet:

☞ Select the **"Vehicle information"** tab.

The **"Trip information"** window is displayed with the following information:

- **"Average speed"**,
- **"Elapsed time"**,
- **"Range"**,
- the current fuel consumption, presented in graphical form.

The **"Erase"** button resets the fuel consumption data in the touch screen tablet and the instrument panel.

Trip computer, a few definitions

Range

(miles or km)

The distance which can still be travelled with the fuel remaining in the tank (related to the average fuel consumption over the last few miles (kilometres) travelled).

i This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the fuel level is low, the message "Lo FUEL" is displayed.

If only a small amount of fuel is added, the range may not be recalculated.

Current fuel consumption

(mpg or l/100 km or km/l)

Calculated over the last few seconds.

Average fuel consumption

(mpg or l/100 km or km/l)

Calculated since the last trip computer reset.

Average speed

(mph or km/h)

Calculated since the last trip computer reset.

Stop & Start time counter


(minutes / seconds or hours / minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on.

Setting the time

Audio system

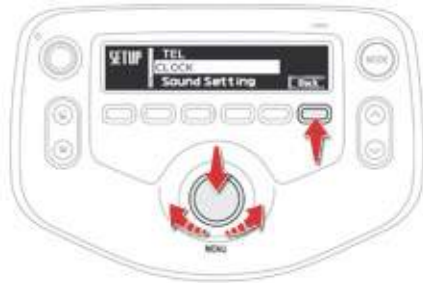


- The time is adjusted using the "**MENU**" knob:
- press the knob for access to menus and to confirm a selection,
 - turn the knob to select a function, an item in a list.

You can go back to the previous step at any time by using the "**Back**" button.



- ☞ Press the knob for access to the menus.
- ☞ Turn the knob to select "**CLOCK**".
- ☞ Press the knob to confirm.
The hours figure flashes.
- ☞ Turn the knob to adjust the hours.
- ☞ Press the knob to confirm.
The minutes figure flashes.
- ☞ Turn the knob to adjust the minutes.
- ☞ Press the knob to confirm and quit the menu.

Touch screen tablet

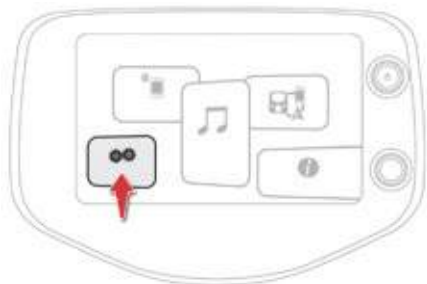


Press on "**Configuration**".



Press on "**General**".

Select "**Clock**".

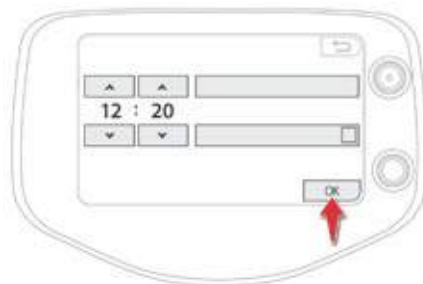


Adjust the hours and minutes using the virtual arrows in the screen.

Choose the time format.


Press on "**OK**" to confirm and quit the menu.

Keys

The keys allow you to switch on the ignition and operate the locks on the front doors, the boot, the steering lock and the passenger's front airbag deactivation switch.

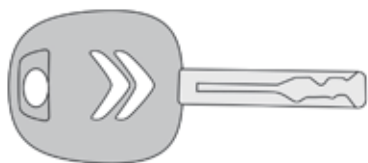


Locking

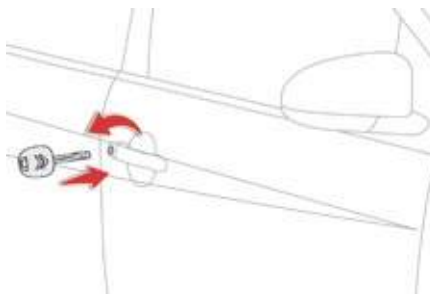

- Insert the key in one of the front door lock barrels and turn it towards the rear of the vehicle to lock the door in question.
- Insert the key in the boot lock barrel and turn it to the right to lock the boot.

Unlocking

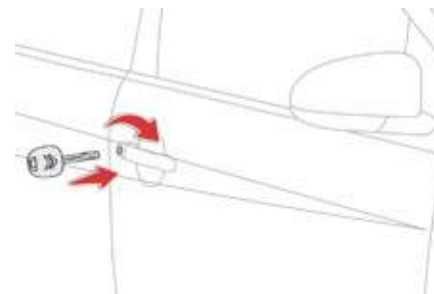


- Insert the key in one of the front door lock barrels and turn it towards the front of the vehicle to unlock the door in question.
- Insert the key in the boot lock barrel and turn it to the left to unlock the boot.

Remote control

This is used to lock, unlock and locate the vehicle at a distance.

Unfolding / Folding the key

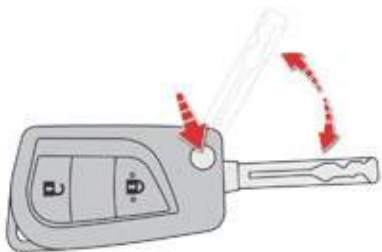

☞ Press this button to unfold / fold the key.

Locking



☞ Press the closed padlock to lock the vehicle.

The direction indicators flash once.

i After locking, if you notice that a door is not closed properly, close it then lock the vehicle again.

Unlocking



☞ Press the open padlock to unlock the vehicle.

The direction indicators flash twice.

Locating your vehicle



☞ Press the closed padlock to locate your locked vehicle in a car park.

This is indicated by lighting of the direction indicators for a few seconds.

i The high frequency remote control is a sensitive system; do not handle it in your pockets as there is a risk that it may unlock the vehicle without you being aware of this. Avoid pressing the buttons of your remote control out of range of your vehicle, you risk rendering it inoperative.

Changing the remote control battery



Battery ref.: CR 2016 / 3 volts.


- ☞ Unclip the cover using a small screwdriver in the cut-out.
- ☞ Lift off the cover.
- ☞ Remove the old battery from its housing.
- ☞ Fit the new battery in its place, observing the direction of fitment.
- ☞ Clip the cover in place.



Do not discard the remote control batteries, they contain metals which are harmful to the environment. Take them to a CITROËN dealer, or to an approved collection point.

Keyless Entry and Starting system

System that allows the opening, closing and starting of the vehicle while keeping the electronic key on your person.

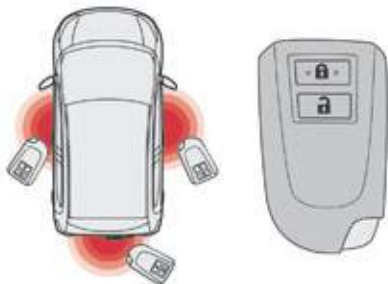

Electronic key


This electronic key can also be used as a remote control.

It includes an integral emergency key.

For more information on the remote control, refer to the corresponding section.


i As a safety measure, the detection zones in which the electronic key is operational have a radius of about 70 cm around each opening button.

Unlocking the vehicle

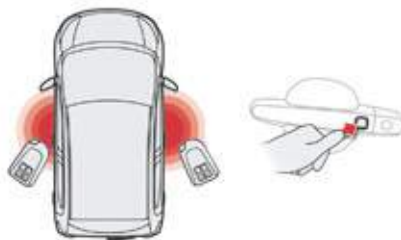

Unlocking by the doors

- ☞ With the electronic key on your person and in one of the recognition zones, press one of the buttons on the door handles to unlock the vehicle.
- ☞ Then pull on the door handle to open the door.

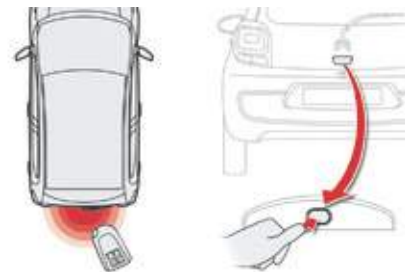


Unlocking by the boot

- ☞ With the electronic key on your person and in the recognition zone located at the rear, press the button below the boot handle to unlock the vehicle and release the tailgate.
- ☞ Then raise the tailgate to open it.

i The direction indicators flash twice to confirm the unlocking of the vehicle.

Locking the vehicle

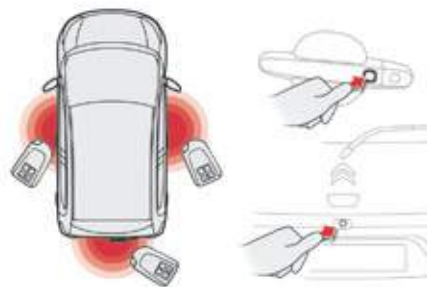

Locking

- ☞ With the electronic key in the recognition zone, press one of the buttons on the front door handles or press the button on the boot sill.

i The direction indicators flash once.

i If one of the doors or the boot is still open or if the electronic key for the Keyless Entry and Starting system has been left inside the vehicle, you are warned by an audible signal and the central locking does not take place.

i If the vehicle is unlocked and no door or the boot is opened, the vehicle will lock again automatically after about 30 seconds.

! Never expose the electronic key to extreme temperatures (below -20°C or above $+60^{\circ}\text{C}$); this could cause faults.


! For reasons of safety and theft protection, do not leave your electronic key in the vehicle, even when you are close to it. It is recommended that you keep it on your person.

Emergency procedure



The integral key is used to lock and unlock the vehicle when the electronic key cannot operate and in the event of a fault with the Keyless Entry and Starting system:

- cell battery discharged, vehicle battery discharged or disconnected, ...
 - vehicle located in an area with strong electromagnetic signals.
- ☞ Press and hold the latch **1** to extract the integral key **2**.

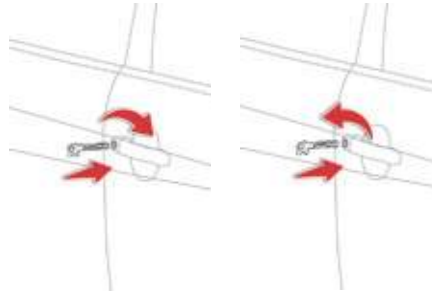

Unlocking

- ☞ Insert the integral key into the driver's door lock barrel and turn it towards the front of the vehicle to unlock the vehicle.

Locking

- ☞ Insert the integral key into the driver's door lock barrel and turn it towards the rear of the vehicle to lock the vehicle.

Saving the electronic key battery

To preserve the battery, it is possible to prevent the electronic key working (no reception of radio waves).



- ☞ Press on the open padlock twice, while pressing on and holding the closed padlock.




Check that the indicator lamp in the electronic key flashes 4 times.

When this function is activated, the "Keyless Entry and Starting" system is inoperative.

To reactivate the electronic key, press one of the buttons (open or closed padlock).

Changing the battery of the electronic key

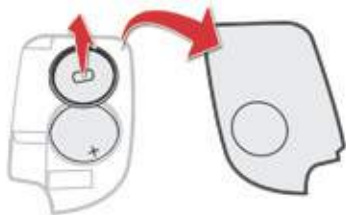

Battery ref.: CR2032 / 3 volts.



When replacement of the battery is needed, this warning lamp comes on in the instrument panel.

- ☞ Unclip the cover using a small screwdriver at the cutout.
- ☞ Remove the cover.
- ☞ Remove the protective battery holder, pulling it upwards.
- ☞ Remove the discharged battery from its housing.
- ☞ Fit the new battery into its housing observing the original direction of fitment.
- ☞ Refit the battery holder.
- ☞ Clip the cover onto the casing.

! Lost keys

Go to a CITROËN dealer with the vehicle's registration document, your personal identification documents and if possible the key code label.

The CITROËN dealer will be able to look up the key code and the transponder code required to order a new key.

Remote control / Electronic key

These high frequency devices are sensitive systems; do not handle them while in your pocket as there is a risk of unlocking the vehicle, without you being aware of it.

Do not repeatedly press the buttons of your remote control or electronic key out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

Locking the vehicle

As a safety precaution, never leave children alone in the vehicle, except for a very short period.

In all cases, it is essential to remove the key from the ignition switch, or take the electronic key with you when leaving the vehicle.


Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

When purchasing a second-hand vehicle

Have the pairing of all of the keys in your possession checked by a CITROËN dealer, to ensure that only your keys can be used to open and start the vehicle.

Doors

Locking/unlocking from the inside

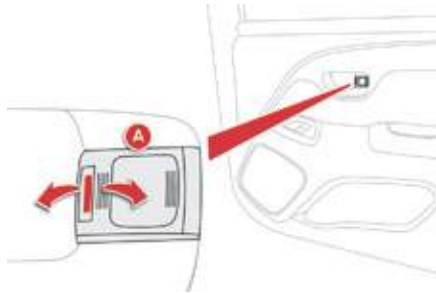

To lock/unlock a door, press/pull button **A**.

Vehicles without central locking

Pressing button **A** locks/unlocks the driver's door only.

Vehicles with central locking

Pressing button **A**, driver's side, locks/unlocks all of the doors and the boot.

Pressing button **A**, passenger's side, locks/unlocks just that door.

i Operating the handle always opens the door, even if it is locked.


Door open



If a door is open, the courtesy lamp remains on if the button is in this position.

Locking / unlocking and opening the boot


Using the key

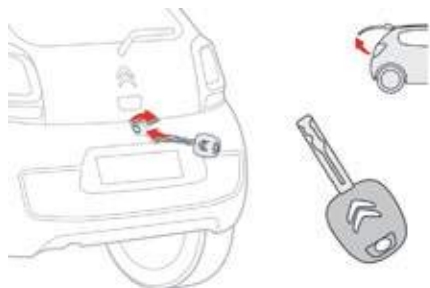

- Insert the key in the lock barrel and turn it to the right to unlock and release the tailgate.
The vehicle remains locked.
- Raise the tailgate by the exterior handle to open it.

As soon as you close the tailgate, it locks again.

Using the remote control

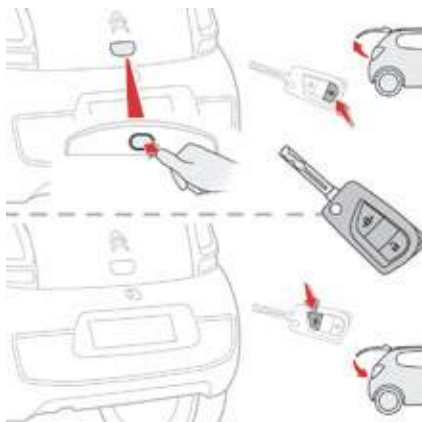

- ☞ Press the open padlock to unlock the vehicle and boot.




- ☞ Press the opening button to release the tailgate.
- ☞ Raise the tailgate by the exterior handle to open it.



- ☞ Press the closed padlock to unlock the boot and vehicle.

Using the Keyless Entry and Starting system

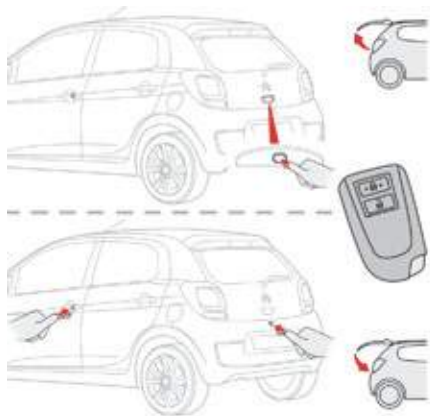

- ☞ With the electronic key on your person, press the boot opening control to unlock and release the tailgate. The vehicle is unlocked as well.
- ☞ Raise the tailgate by the exterior handle to open it.

If the vehicle had been previously unlocked by the front door, it is not necessary to have the electronic key on your person to use the boot opening control.

- ☞ With the electronic key on your person, press the button on the boot sill to lock it, or Lock the vehicle by the front doors.

! When closing the boot, do not slam shut the tailgate: guide it down and release it at the end of its travel.

Boot release

System for mechanical unlocking of the boot in the event of a battery or central locking malfunction.



Unlocking

- ☞ Fold the rear seat backrest to gain access to the lock from inside the boot.
- ☞ Using a screwdriver protected by a cloth, remove the 4 fixing clips, then the boot trim.
- ☞ Move the trigger to the right to unlock the tailgate.

Front electric windows*



1. Left hand front electric window.
2. Right hand front electric window.

After the ignition has been switched on, press one of the control switches to open or pull to close the window. The window stops when you release the control switch.

i The driver has controls for both front windows.

i The electric windows do not work with the ignition off.

! Closing the windows can cause serious injury. Ensure that nothing is preventing the closing of the windows and take particular care with children.

Rear quarter windows

On the 5-door versions, system for ventilation of the rear seats by the partial opening of the window.

Opening



- ☞ Tilt the lever outwards.
- ☞ Push it fully to secure the window in the open position.

Closing


- ☞ Pull the lever to release the window.
- ☞ Tilt the lever fully inwards to secure the window in the closed position.

* Depending on version.

Electric fabric roof*

Your vehicle may be fitted with an electrically operated fabric roof.

Electric opening and closing

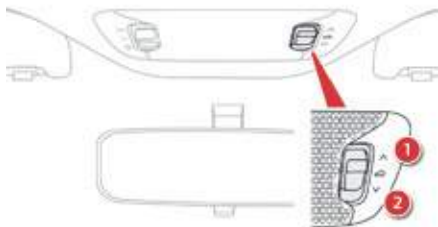

The roof is opened and closed by pressing the control at the interior lamp, in the opening direction **1** and in the closing direction **2**.


i The asymmetric shape of the opening control avoids closing the roof by mistake.

i Operation of the roof is possible with the ignition on and when driving.

! In order to maintain the state of charge of the battery, it is recommended that the roof be operated with the **engine running**.

i During operation of the roof with just the ignition on, starting the engine may cause the roof to stop, depending on the state of charge of the battery. To have the roof continue the operation, operate the control again after the engine has started.

! Operation of the roof could cause serious injuries: before operating the roof, ensure that no occupant of the vehicle or person outside the vehicle could be subject to any risk related to the movement of the roof and that no object could interfere with the operation.

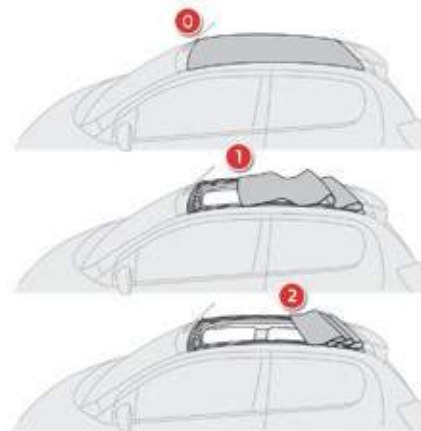

Position of the roof

Position 0: Roof completely closed.

Position 1: Automatic stop position for the roof.

Position 2: Roof completely open.

* Depending on version.

Opening

☞ Briefly press the control in the opening direction to open the roof in stages.

or

☞ Press and hold the control in the opening direction, until the manoeuvre is complete, to open the roof completely.
Pressing again stops the movement of the roof.

Closing

☞ Briefly press the control in the closing direction to open the the roof in stages.

or

☞ Press and hold the control in the closing direction, until the manoeuvre is complete, to close the roof to position **1**.
Pressing again stops the movement of the roof.
☞ To close the roof completely, press and hold the control (between positions **1** and **0**) until the roof locks closed.

! The closing manoeuvre of the roof could cause serious injuries: take particular care with children.

If the roof does not close correctly:

- check that nothing is blocking the roof (ignition off),
- repeat the closing command (with the engine running).

If the problem persists, contact a CITROËN dealer or a qualified workshop.


Protection of the electric motors used for opening and closing the roof

Following repeated opening and closing of the roof, the electric motors may become too warm and no longer allow the roof to be opened or closed. Allow the motors to cool down with no operation of the roof for 10 minutes.

Operating fault

i In the event of an electrical fault, contact a CITROËN dealer or a qualified workshop.

Aero-acoustic deflector

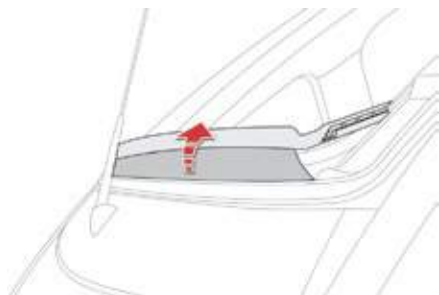

An aero-acoustic deflector is available to improve the acoustic comfort of occupants of the vehicle in certain driving conditions (high speed), by reducing the turbulence in the passenger compartment resulting from the displacement of air.

On opening the roof, the aero-acoustic deflector is deployed.

On closing the roof, the deflector folds away automatically.

Precautions for use

! Never place objects on the roof, whether open or closed.
Never sit on or place objects on the transverse roof support when the roof is open.

To avoid damaging the roof, do not open it under snowy or frosty conditions.
Never use sharp tools to remove ice or accumulations of snow on the roof.

To limit the creation of folds in the roof fabric, it is recommended that the roof not be left open for long periods.
The vehicle's air conditioning system should not be operated while the roof is open.

i In the event of prolonged storage of the vehicle outside, it is recommended that the roof be protected with a cover.

It is recommended that the roof be closed when the vehicle is left parked. Even if the roof is closed, it is prudent not to leave any valuable objects inside the vehicle.

When you leave the vehicle, switch off the ignition and remove the key (take the electronic key with you) to avoid any unwanted operation of the roof.

Recommendations on care of your vehicle

The general recommendations on the care of your vehicle are given in the maintenance and warranty guide.

Fabric roof

i Before washing the fabric roof, first remove as much dirt as possible from the surface using a soft brush or a vacuum cleaner.

i To remove marks, sponge them (but never rub them) using soapy water, then immediately rinse with clean water.

! Never use chemical products, detergents, stain removers, solvents, alcohol, petrol, ... to clean the roof.

! To avoid damaging the roof.

- never use a high pressure jet wash,
- never wash your vehicle in an automatic roller-brush car wash.

! Remove bird droppings or tree resins as their acidity may damage the roof.

! To waterproof the roof, use only special waterproofing products for fabric roofs.

i Allow the vehicle to dry in a shaded area and avoid direct exposure to the sun.

i For the regular maintenance of the fabric roof and to conserve its original appearance, we recommend an ecological "Fly remover - Fabric roof cleaner" from the "TECHNATURE" range. To obtain this product go to a CITROËN dealer.

Aero-acoustic deflector

i We recommend that you clean the aero-acoustic deflector **with care** using a soft brush.

Front seats with manual adjustments


As a safety measure, seat adjustments should only be carried out when stationary.

Forwards-backwards




- ☞ Raise the control and slide the seat forwards or backwards.

Seat backrest angle

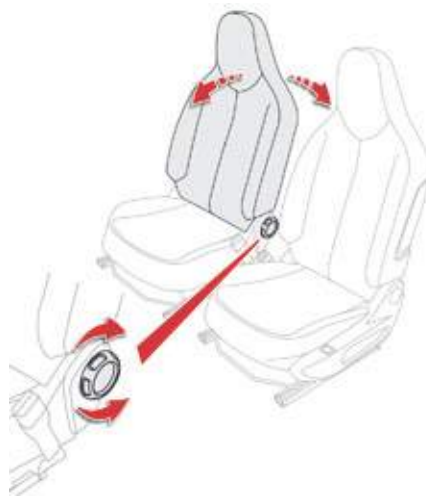

- ☞ Take the weight of the backrest with your body.
- ☞ Turn the knob to obtain the desired angle.

Driver's seat height*

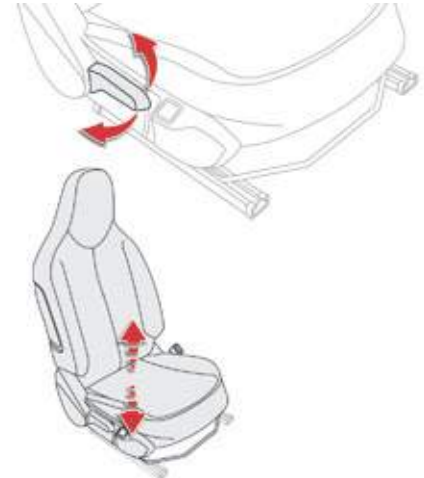

- ☞ Pull the control upwards to raise or push it downwards to lower, as many times as required, to obtain the position required.

i Before moving the seat backwards, ensure that there is nothing that might prevent the full travel of the seat, so as to avoid the risk of jamming the seat caused by the presence of objects on the floor behind the seat or rear passengers. If the seat jams, stop the movement immediately.

* Depending on version.

Access to the rear seats (3-door)



- ☞ Pull this control toward you to fold the seat backrest and move the seat forward. When returning the seat to its initial position, guide it back until the seat and backrest lock into place.


! Ensure that no person or object prevents the seat slide from returning to its initial position. Check that the seat belt has reeled in correctly so as to not impede access for passengers to the rear seats.

Rear seats

Your vehicle is fitted with a fixed one-piece cushion bench rear seat, and depending on version:

- a folding split (50/50) backrest,
- a folding one-piece backrest.

Stowing the seat belts

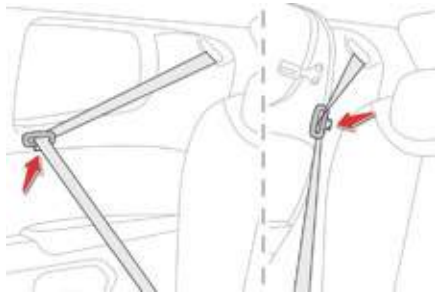

3-door

When not in use, or before folding the seat backrest(s), stow the rear seat belts by inserting their tongues in the dedicated holders, located on the side pillars.

5-door


Folding the seat backrest



The seat backrest is folded from the rear of the vehicle, with the boot open.


- ☞ Place the head restraints in the low position. Refer to the "rear head restraints" section.
- ☞ Pull the strap(s) **A**, located behind the seat backrest(s) to release them, and lay them on the seat cushion.

Returning the backrest of the bench seat to its initial position

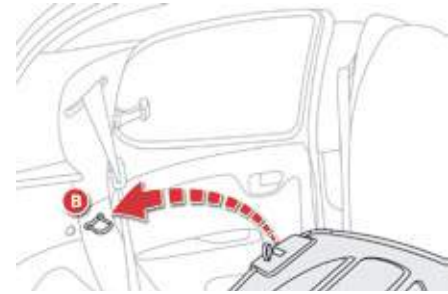

- ☞ Unfold the backrest to the rear and engage it on the anchorage **B**.
- ☞ Ensure that the seat back has locked in place correctly.

Rear head restraints*

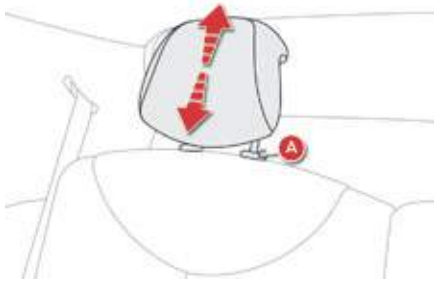

The rear head restraints can be removed and have two positions:

- high, position for use.
- low, storage position.

To raise the head restraint, pull it upwards.

To lower it, press lug **A** then the head restraint.

To remove it:

- tilt the seat back slightly,
- move the head restraint to the high position,
- press lug **A** pulling the head restraint upwards at the same time.

To refit it:


- tilt the seat back slightly,
- engage the rods of the head restraint in the openings.

To put the head restraint in the low position, press lug **A**.

* Depending on version.


Mirrors

Manual door mirrors

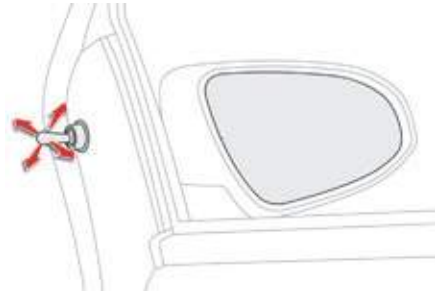

- ☞ Operate the lever in four directions to adjust the mirror.

Electric door mirrors

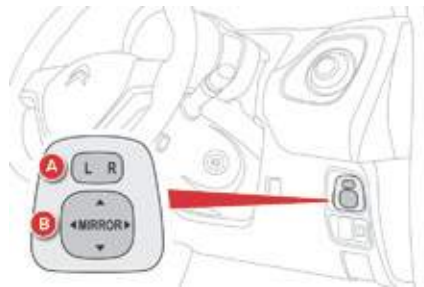

Adjustment

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Move control **B** in all four directions to adjust.
- ☞ Return control **A** to the central position.

! The objects observed are, in reality, closer than they appear. Take this into account in order to correctly judge the distance of vehicles approaching from behind.

Demisting - Defrosting



Use the heated rear window switch.

Refer to the "Rear screen demist - defrost" section.

Folding / Unfolding

When parking, the mirrors can be folded manually.

i The initial adjustments are retained when unfolding.

Steering wheel adjustment (with power steering)

Manual rear view mirror



The rear view mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.




- ☞ **When stationary**, hold the steering wheel then lower the lever to release the adjustment mechanism.
- ☞ Adjust the steering wheel to the desired **height** and then raise the lever to lock the adjustment mechanism.

! For safety reasons, these operations must not be carried out while driving.

Correct driving position

Before taking to the road and to make the most of the ergonomics of your driving position, carry out these adjustments in the following order:

- backrest angle,
- cushion height,
- longitudinal position of the seat,
- height of the steering wheel,
- the interior and door mirrors.

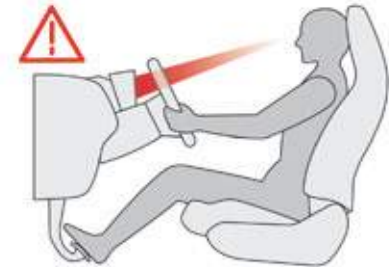


! Once these adjustments have been made, ensure that you can see the instrument panel clearly from your driving position.

3

Ventilation


1. Windscreen demisting/defrosting vent.
2. Centre vent.
3. Side vents.
4. Air outlets to the front footwells.
5. Air outlets to the rear footwells (depending on version).

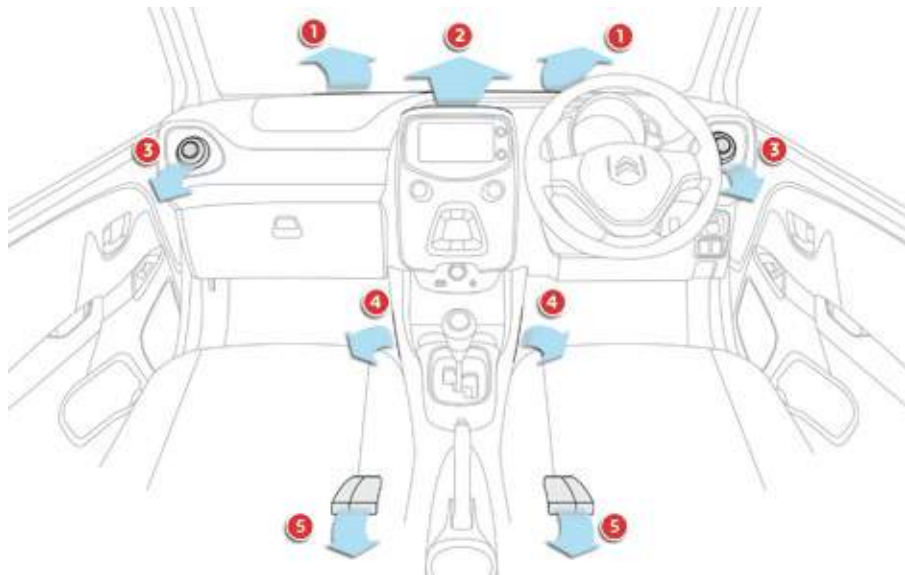

Recommendations for use


i If the interior temperature remains very high after a prolonged period parked in the sun, first ventilate the passenger compartment for a few minutes.
For an even air distribution, make sure that you do not block the outside air inlet grille, the vents, the air passages and the air outlets to the footwells.
Ensure that the passenger compartment filter, located behind the glove box in the heater unit, is in good condition. Have the filter elements replaced regularly. If you drive in dusty conditions, change them twice as often.
Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in perfect working order.
In order to ensure that your air conditioning system continues to operate correctly, you are advised to have it checked regularly.
If the system does not produce cold air, do not use it and contact a CITROËN dealer or a qualified workshop.

i The condensation created by the air conditioning results in a flow of water under the vehicle when stationary which is perfectly normal.

 The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

Heating

The heating system only operates with the engine running.

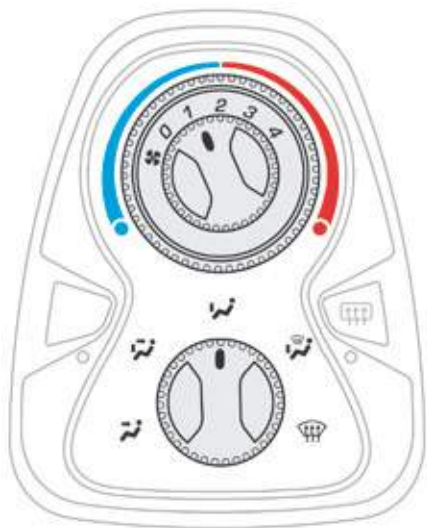

Temperature adjustment



☞ Turn the control from blue (cold) to red (hot) to adjust the temperature to your wishes.

Air flow adjustment



☞ Turn the knob from position 1 to 4 to obtain the desired flow of air.



Avoid driving for too long without ventilation (risk of misting and deterioration of air quality).

Air distribution adjustment



Centre vent and side air vents.



Centre vent, side vents and footwells.



Footwells.



Windscreen and footwells.




Windscreen.



The air distribution can be varied by placing the control in an intermediate position.

Manual air conditioning

The air conditioning system only operates with the engine running.

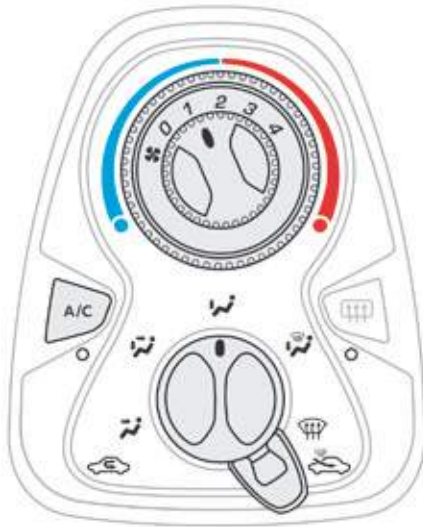

Temperature adjustment



- Turn the control knob from blue (cold) to red (hot) to adjust the temperature to your requirements.

Air flow adjustment



- Turn the control knob from position 1 to position 4 to obtain a comfortable air flow.

If you put the air flow control in position 0 (system off), the temperature is no longer controlled. However, a slight flow of air can still be felt, resulting from the movement of the vehicle.

Air distribution adjustment



Centre and side vents.



Centre and side air vents, footwells.



Footwells.



Windscreen and footwells.



Windscreen.

Air intake / Air recirculation

The recirculation of interior air insulates the passenger compartment from exterior odours and smoke.

Return to exterior air intake as soon as possible to prevent deterioration of the air quality and the formation of mist.



- ☞ Move the manual control to the left for the "Recirculation of interior air" position.



- ☞ Move the manual control to the right to return to the "Exterior air intake" position.

Air conditioning On / Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 3°C.

Switching on

- ☞ Press this button, the associated indicator lamp comes on.


i The air conditioning does not operate when the air flow adjustment is set to off.

Switching off

- ☞ Press the button again, the associated indicator lamp switches off.

Automatic air conditioning

The air conditioning system only operates with the engine running.

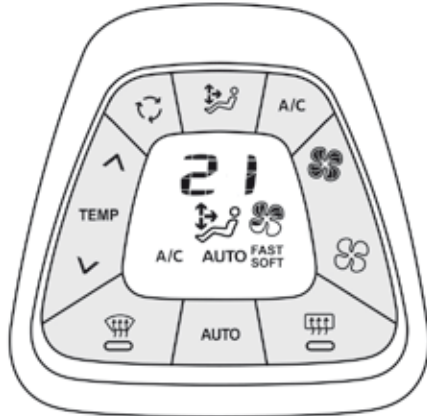

Automatic programme

We recommend that you use this mode.

It provides optimised automatic control of all of the following functions: passenger compartment temperature, air flow, air distribution and air intake, in accordance with the comfort value that you have chosen.

This system is designed to operate effectively in all seasons, with the windows and fabric roof closed.

For your comfort, when the engine is switched off, the settings are retained until the engine is switched on again.

To prevent too great a distribution of cold air when the engine is cold, the air flow will only reach its optimum level gradually.

- Press the **"AUTO"** button.
The **"AUTO"** symbol comes on.

By pressing the **"AUTO"** button again, you can choose from one of the following settings in turn:

- AUTO** Allows optimum operation of the system.
- AUTO SOFT** Offers temperature control while restricting air flow.
- FAST AUTO** Dynamic air distribution mainly towards the side air vents.

Manual override

It is possible to adjust one or more functions manually while leaving the other functions in automatic mode.

The **"AUTO"** symbol switches off.

To return to automatic mode, press the **"AUTO"** button.

Switching to manual mode may not be suitable (temperature, humidity, odour, condensation) and does not provide optimum comfort.

Temperature adjustment

The value indicated in the screen corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.



☞ Press this button downward to reduce the value and upward to increase it.

A setting around **21** gives optimum comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

On entering the vehicle, if the interior is very cold or hot, there is no need to change the value displayed in order to reach the required level of comfort. The system corrects the temperature difference automatically and as quickly as possible.

i For maximum cooling or heating of the cabin, it is possible to go beyond the minimum 14 or maximum 28 value.

☞ Press the temperature adjustment button down or up until "LO" or "HI" is displayed.

Air flow adjustment



☞ Press this button to increase air flow.



☞ Press this button to decrease air flow.

The air flow symbol, the fan, fills progressively.

Air distribution adjustment



☞ Press this button repeatedly to direct the air to:

- the centre and side air vents,
- the centre vent, side air vents and footwells,
- the footwells,
- the windscreen and footwells,
- the centre vent, side air vents and windscreen,
- the windscreen.

Air intake / Air recirculation



☞ Pressing this buttons isolates the passenger compartment from the outside air.
The air recirculation symbol is displayed.

Air recirculation enables the passenger compartment to be isolated from exterior odours and smoke.

Press this button again or press the "AUTO" button to resume automatic management of the intake of air. The air recirculation symbol goes off.

! Avoid prolonged recirculation of interior air (risk of condensation or deterioration of the air quality).

Air conditioning on / off



☞ Press this button to stop the air conditioning.

Stopping the air conditioning may cause some problems (humidity, misting).

Automatic operation of the air conditioning is resumed when the button is pressed again.

The "**A/C**" symbol is displayed.

Switching the system off



☞ Press the air flow adjustment button until the fan symbol disappears.

This action switches off all of the functions of the air conditioning system.

Thermal comfort is no longer controlled.

A slight flow of air resulting from the movement of the vehicle, remains perceptible however.

Pressing the "**AUTO**" button again reactivates the system with the values set before it was switched off.



Avoid driving for long periods with the air conditioning switched off (risk of misting and reduction of the air quality in the cabin).

Front demist - defrost



These markings on the control panels indicate the control positions for rapid demisting or defrosting of the windscreen and side windows. During the winter period, direct the side air vents towards the side glasses to optimise their demisting and defrosting.

With the heating / ventilation system

- ☞ Put the temperature and air flow controls to the dedicated marked position.
- ☞ Put the air distribution control to the "Windscreen" position.

With the manual air conditioning system

- ☞ Put the temperature and air flow controls to the dedicated marked position.
- ☞ Put the air intake control to the "Exterior air intake" position (manual control to the right).
- ☞ Put the air distribution control to the "Windscreen" position.
- ☞ Switch on the air conditioning by pressing the appropriate button; the indicator lamp in the button comes on.

With the automatic air conditioning system

- ☞ Press this button.
The indicator lamp in the button comes on.
- ☞ Press this button again to switch it off.
The indicator lamp in the button goes off.

i Other settings (air flow, air distribution...) are controlled automatically.

Rear screen demist - defrost



The control button is located on the heating / ventilation or air conditioning system control panel.

Switching on

The heated rear screen can only operate when the engine is running.

- ☞ Press this button to demist/defrost the rear screen and, depending on version, the door mirrors.
The indicator lamp associated with the button comes on.


Switching off

- ☞ Press this button again to switch off the heated rear screen.
The indicator lamp associated with the button goes off.



Switch off the demisting/defrosting of the rear screen and door mirrors (depending on version) as soon as appropriate, as lower current consumption results in reduced fuel consumption.

Courtesy lamp

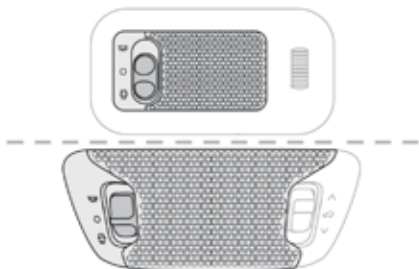

In this position, it comes on when one of the doors is opened.



The courtesy lamp is permanently off.



The courtesy lamp is permanently on.

i If left in the "permanently on" position, the courtesy lamp will switch off about 20 minutes after the last door is closed.

Boot lamp*




This comes on automatically when the boot is opened and goes off automatically when the boot is closed.


* Depending on version.

Front fittings

1. Sun visor.
2. Glove box.
3. Audio system, touch screen tablet or storage.
4. 12 volt accessory socket
(maximum 120 W).
Do not exceed the power rating to avoid
damaging your accessory.
5. USB port.
6. Auxiliary socket.
7. Storage or cup holder.
8. Cup holder.
9. Door pockets.
Storage for a bottle of water.

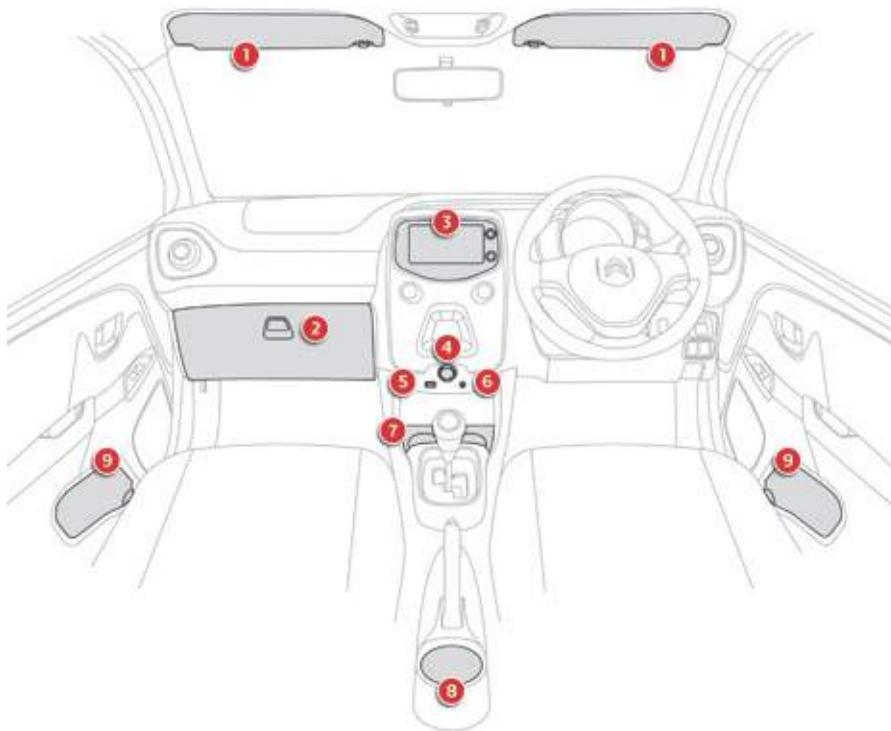


Sun visor

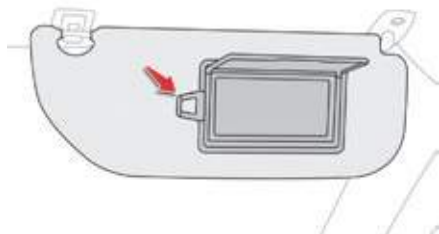

The sun visors are fitted with a vanity mirror, with a concealing flap and a map holder (or ticket holder).

Glove box

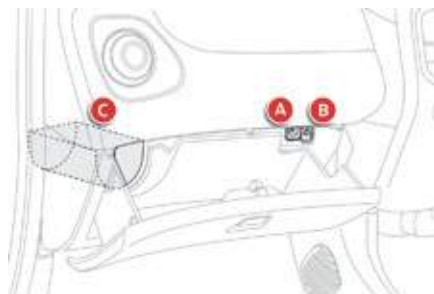

It can be used to hold the vehicle's handbook pack...

☞ To open the glove box, raise the handle. It houses the front passenger airbag deactivation switch **A** and the reinitialisation button **(B)** for the tyre under-inflation detection system (depending on equipment). On one side there is a location **C** intended to hold a water bottle (1 litre maximum).


12 V accessory socket



☞ To connect a 12 V accessory (maximum power: 120 Watts), lift the cover and connect a suitable adaptor.

! Do not exceed the maximum power rating of the socket (risk of damage to your device).

USB port

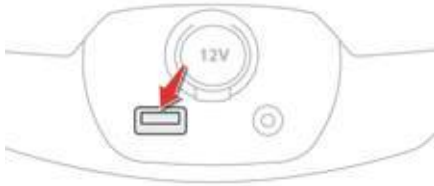

It permits the connection of a portable device, such as a digital audio player of the iPod® type or USB memory stick.


It reads the audio files, which are sent to your audio system to be heard via the vehicle's speakers.

You can manage these files using the steering mounted controls or those on the audio system control panel.

i Connected to the USB port, the portable device charges automatically while in use.

For more information on the use of this equipment, see the "Audio and telematics" section.

Auxiliary socket

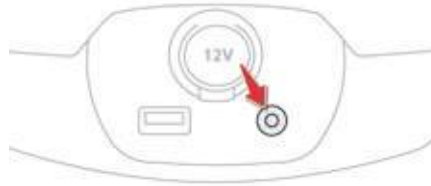

It permits the connection of a portable device to listen to your music files via the vehicle's speakers.

The management of the files is done using your portable device.

i For more information on the use of this equipment, refer to the "Audio and telematics" section.


i The USB port and auxiliary Jack socket also allow connection of a smartphone.

- either by MirrorLink™ connection using the USB port only,
- or by iPhone® connection using both the USB port and the auxiliary Jack socket.

These connections allow you to use certain applications on the telephone in the touch screen tablet.

Mats

Fitting

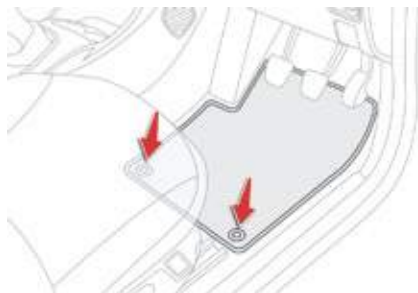

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.


Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.


- !** To avoid any risk of jamming of the pedals:
- only use mats which are suited to the fixings already present in the vehicle; these fixings must be used,
 - never fit one mat on top of another.
- The use of mats not approved by CITROËN may interfere with access to the pedals and hinder the operation of the speed limiter or ETG electronic gearbox.

Rear parcel shelf

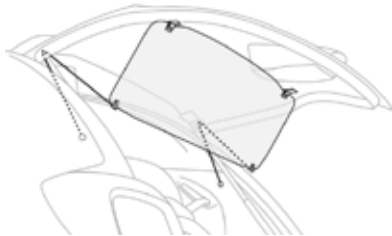

To facilitate loading of the boot, the rear parcel shelf is fitted to the tailgate.


When closing the tailgate, check that nothing could interfere with the return to position of the shelf.

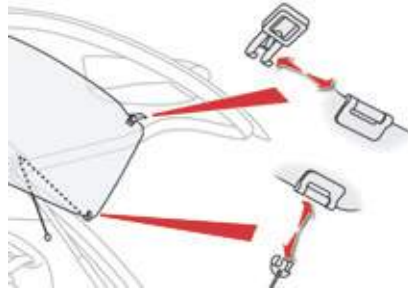

To remove the shelf:

- ☞ open the tailgate,
- ☞ unclip the two cords,
- ☞ pull firmly on the shelf to disengage it from its hinges on the tailgate inner trim.

You can then stow the shelf behind the front seats.

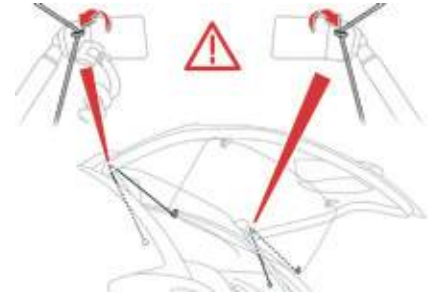

To refit the shelf:

- ☞ open the tailgate,
- ☞ position the underside of the shelf facing you,
- ☞ clip the shelf into the two hinges,
- ☞ pass the two cords through the guides either side of the struts,
- ☞ clip the two cords in place.


i Do not place heavy loads on the shelf, as they may cause the shelf to unclip.

3


Boot fittings

1. Hooks.
2. Temporary use spare wheel and tools.
or
Storage box.

! The wheel or storage box must be put in place under the carpet before loading the boot.

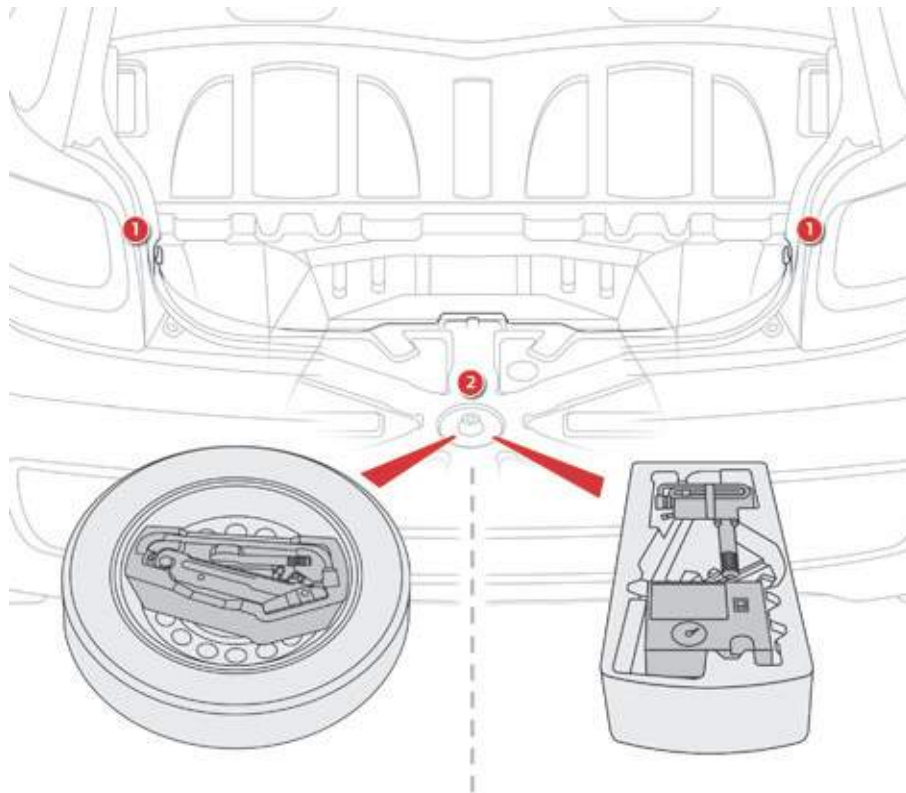


Hooks

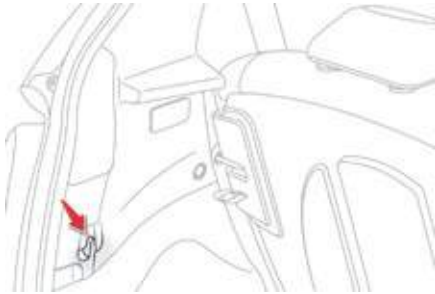

The hooks can be used to secure shopping bags.

! Maximum authorised load on the hooks: **2 kg**.

Storage box

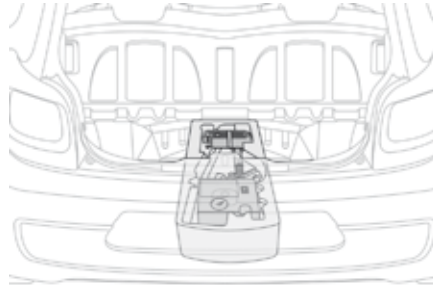

☞ Remove the boot carpet for access to the storage box.

Depending on the configuration, it is laid out for storing:

- a towing eye,
- a temporary puncture repair kit,
- ...

! For versions with storage box: it must be in place before loading the boot.

A few driving recommendations

Observe the driving regulations at all times and remain vigilant whatever the traffic conditions.

Pay close attention to the traffic and keep your hands on the wheel so that you are ready to react at any time to any eventuality.


On a long journey, a break every two hours is strongly recommended.

In difficult weather, drive smoothly, anticipate the need to brake and increase the distance from other vehicles.

Driving on flooded roads

We strongly advise against driving on flooded roads, as this could cause serious damage to the engine or gearbox, as well as to the electrical systems of your vehicle.

If you are obliged to drive through water:

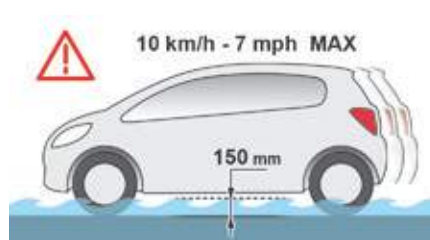

- check that the depth of water does not exceed 15 cm, taking account of waves that might be generated by other users,
- deactivate the Stop & Start system,
- drive as slowly as possible without stalling. In all cases, do not exceed 6 mph (10 km/h),
- do not stop and do not switch off the engine.

On leaving the flooded road, as soon as circumstances allow, make several light brake applications to dry the brake discs and pads. If in doubt on the state of your vehicle, contact a CITROËN dealer or a qualified workshop.

Important!

! Never drive with the parking brake applied - Risk of overheating and damage to the braking system!
Do not park or run the engine when stationary in areas where inflammable substances and materials (dry grass, dead leaves...) might come into contact with the hot exhaust system - Risk of fire!

! Never leave a vehicle unsupervised with the engine running. If you have to leave your vehicle with the engine running, apply the parking brake and put the gearbox into neutral or position **N**, depending on the type of gearbox.

Starting - switching off the engine with the key

Ignition switch



1. **"LOCK"** position.
The steering column is unlocked.
2. **"ACC"** position.
The ancillaries (audio system, 12V socket...) can be used.
3. **"ON"** position
Ignition on.
4. **"START"** position.
Engine starting.

i If you use the ancillaries for a prolonged period (key in position 2 or 3), you risk discharging the battery. Starting your vehicle will then no longer be possible.
Be aware.

Starting using the key

For vehicle fitted with a manual gearbox:

- ☞ Insert the key in the ignition switch.
- ☞ Turn the key to position 2.
- ☞ Unlock the steering column, by turning the wheel slightly.
- ☞ Fully depress the clutch pedal.
- ☞ Put the gear lever into neutral.
- ☞ Operate the starter by turning the key to position 4 (**START**).
- ☞ Once the engine is running, release the key.
The key returns automatically to position 3 (**ON**).

For vehicles fitted with an ETG gearbox:

- ☞ Insert the key in the ignition switch.
- ☞ Turn the key to position 2.
- ☞ Unlock the steering column, by turning the wheel slightly.
- ☞ **Press and hold the brake pedal.**
- ☞ Put the gear selector into position **N**.
- ☞ Operate the starter by turning the key to position 4 (**START**).
- ☞ Once the engine is running, release the key.
The key returns automatically to position 3 (**ON**).

4

! Never leave the engine running in an enclosed area without adequate ventilation: internal combustion engines emit toxic exhaust gases, such as carbon monoxide. Danger of intoxication and death. In very severe winter conditions (temperatures below -23°C), it is necessary to allow the engine to run for 4 minutes before setting off, in order to ensure the correct operation and durability of the mechanical components of your vehicle, the engine and gearbox.

Switching off

- ☞ Immobilise the vehicle.
- ☞ With a manual gearbox: put the gear lever into neutral.
- ☞ With an ETG gearbox: place the selector at position **N**.
- ☞ Turn the key towards you to position **2 (ACC)**.
- ☞ Press in and turn the key to position **1 (LOCK)**.
- ☞ Remove the key from the ignition switch.
- ☞ Turn the steering until the steering column locks.

i Avoid attaching heavy objects to the key, which would weigh down on its blade in the ignition switch and could cause a malfunction.

Starting - switching off the engine with the Keyless Entry and Starting system

Changing the mode of the vehicle




With the electronic key inside the vehicle; each press on the **"START/STOP"** button, with no action on the pedals, changes the vehicle's mode:

- ☞ First press ("**ACC**" mode).
The ancillaries (radio, 12V socket...) can be used.
- ☞ Second press ("**ON**" mode).
Ignition on.
- ☞ Third press ("**OFF**" mode).

i If you use the ancillaries for a prolonged period, the vehicle will automatically switch to **"OFF"** mode after about 20 minutes.
Be aware in order to avoid discharging the battery.


Starting using the electronic key



 With the first press on the "**START/STOP**" button, this indicator lamp flashes slowly in the instrument panel.

For vehicles fitted with a manual gearbox:

☞ With the electronic key inside the vehicle, put the gear lever into neutral and fully depress the clutch pedal.

 This indicator lamp comes on in the instrument panel.

☞ Press and release the "**START/STOP**" button.

For vehicles fitted with an ETG gearbox:

☞ With the electronic key inside the vehicle, put the gear selector at **N** and press the brake pedal.



This indicator lamp comes on in the instrument panel.



☞ Press and release the "**START/STOP**" button.

i Depending on the ambient temperature, each attempt at starting can take up to around 30 seconds. During this period, do not press the "**START/STOP**" button again, or release the clutch pedal or brake pedal (depending on the type of gearbox). After this period, if the engine has not started, press the "**START/STOP**" button again for another attempt at starting.

i If one of the starting conditions is not met, the "Keyless Entry and Starting" system indicator lamp flashes in the instrument panel. In some circumstances, it is necessary to turn the steering wheel slightly while pressing the "**START/STOP**" button to assist unlocking of the steering.

The presence of the electronic key in the vehicle is essential for switching on the ignition and starting only. Once the engine has started, make sure that the electronic key remains with the vehicle until the end of the journey: otherwise you would not be able to lock the vehicle.

Switching off using the electronic key

- ☞ Immobilise the vehicle.
- ☞ With a manual gearbox: put the gear lever into neutral.
- ☞ With an ETG gearbox: place the gear selector at **N**.



- ☞ With the electronic key inside the vehicle, press the "**START/STOP**" button.

The engine stops.

The steering locks when a door is opened or on locking the vehicle.

i If the vehicle is not immobilised, the engine will not stop.

There is an audible signal when the driver's door is opened and the vehicle is in "**ACC**" mode.



- ☞ Press the "**START/STOP**" button again to change to "**OFF**" mode.

Emergency starting



When the electronic key is in the recognition zone and your vehicle does not start after pressing the "**START/STOP**" button, this warning lamp flashes in the instrument panel.

- ☞ With a manual gearbox: put the gear lever into neutral.
- ☞ With an ETG gearbox: place the selector lever at **N**.

- ☞ Put the corner of the electronic key, where the indicator lamp is located, in contact with the "**START/STOP**" button. There is an audible signal when the electronic key is recognised; the vehicle changes to "**ON**" mode.
 - ☞ With a manual gearbox: press the clutch pedal fully down.
 - ☞ With an ETG gearbox: press the brake pedal.
 - ☞ Check that the "Keyless Entry and Starting" indicator lamp comes on in green in the instrument panel.
 - ☞ Press the "**START/STOP**" button. The engine starts.
- If the engine does not start, contact a CITROËN dealer or a qualified workshop.

Emergency switch-off


In the event of an emergency only, the engine can be switched off without conditions. To do this, press for more than 2 seconds, or make a minimum of 3 successive presses on the "START/STOP" button.

In this case the steering column locks as soon as the vehicle stops.

Electronic key not recognised

If the electronic key is no longer in the recognition zone when driving or when you (later) request switching off the engine, there is an audible signal to warn you.



 Press for more than 2 seconds, or make a minimum of 3 successive presses on the "START/STOP" button if you want to force switching off of the engine (**note that restarting will not be possible without the key**).

Electronic engine immobiliser

This locks the engine management system as soon as the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code must be recognised for starting to be possible.


In the event of a malfunction, your vehicle will not start.

Contact a CITROËN dealer or a qualified workshop.



Do not make any modifications to the electronic immobiliser system.

Manual parking brake

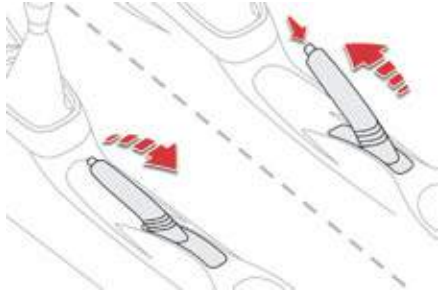

Applying

- ☞ Pull the parking brake lever up to immobilise your vehicle.

Releasing


- ☞ Pull the parking brake lever up gently, press the release button then lower the lever fully.

(!) When the vehicle is being driven, if the parking brake is still on or has not been fully released, this warning lamp comes on accompanied by an audible signal.

! When parking on a slope, direct your wheels against the kerb, apply the parking brake, switch off the ignition and engage a gear (vehicles fitted with a manual gearbox).

5-speed manual gearbox

Engaging reverse gear

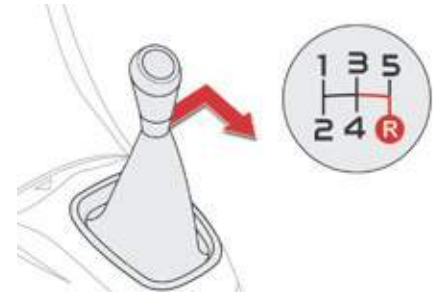


- ☞ Press the clutch pedal fully down.
- ☞ Push the gear lever fully to the right then backwards.

! Only engage reverse gear when the vehicle is stationary with the engine at idle.

ETG electronic gearbox

The five-speed ETG electronic gearbox offers a choice between the ease of **automated operation** or the pleasure of **manual gear changing**.

Gear selector

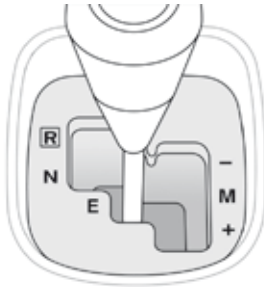

- R.** Reverse: with your foot on the brake pedal, move the gear selector to the right then forward to select this position.
- N.** Neutral: with your foot on the brake pedal, select this position to start the engine.
- E.** Automatic (Easy) mode: move the gear selector back to select this mode.
- M.** Manual mode with sequential gear changing: move the gear selector back then to the left to select this mode.

Steering mounted control paddles



Press behind the "+" steering mounted control paddle to change up.



Press behind the "-" steering mounted control paddle to change down.



The steering mounted control paddles cannot be used to select neutral or to engage or come out of reverse gear.

Display in the instrument panel



The position of the gear selector (**R**, **N**, **E** or **M**) is displayed in the instrument panel. In automatic (Easy) mode, when you temporarily take control of gear changing, the gear engaged is also displayed in the instrument panel.

4

Moving off

- ☞ With the parking brake applied, press the brake pedal then select position **N**.
- ☞ Start the engine.

i if you do not press the brake pedal or if the gear selector is not in position **N**, engine starting is not possible.

- ☞ With your foot on the brake pedal, select position **R**, **E** or **M**.
- ☞ Release the parking brake.
- ☞ Progressively release the brake pedal. Accelerate away.

Creep function

This function makes manoeuvring the vehicle at low speed easier (parking, traffic jams...). After first placing the gear selector in position **E**, **M** or **R**, **the vehicle moves off as soon as you take your foot off the brake pedal**, at low speed, with the engine at idle.

! Never leave a child unsupervised inside the vehicle with the engine running.

i The creep function may be temporarily unavailable if the clutch temperature is too high or the gradient too steep. An audible signal gives a warning if the clutch temperature is too high.

Automatic (EASY) mode

☞ Select position **E** using the gear selector. The gearbox then operates in auto-active mode, without any intervention required by the driver.

It continuously selects the most suitable gear for:

- optimised fuel consumption,
- the driving style,
- the profile of the road,
- the load in the vehicle.

To obtain optimum acceleration, when overtaking another vehicle for example, press firmly on the accelerator pedal going beyond the point of resistance.

It is possible to change mode at any time, by moving the gear selector from position **E** to position **M** and the other way round.

! Never select neutral **N** when the vehicle is moving.

Temporarily taking control of gear changes

You can temporarily take control of gear changes using the "+" and "-" steering mounted control paddles.

Gear change commands are only acted on if the engine speed allows. There is an audible signal if a command is not accepted.

The gear engaged is displayed in the instrument panel.

This function allows you to anticipate certain situations such as overtaking a vehicle or approaching a corner.

After a few moments with no action on the controls, the gearbox returns to automatic control of the gears.

Manual mode

- ☞ Place the gear selector in position **M**.
- ☞ Change up or down using:
 - the gear selector, pushing:
 - back, "+" to change up,
 - forward, "-" to change down.
 - or the "+" or "-" steering mounted control paddle.

The gear engaged is displayed.

Gear change commands are only acted on if the engine speed allows.

It is not necessary to release the accelerator pedal during gear changes. There is an audible signal if a command is not accepted.

When braking or slowing down, the gearbox automatically changes down so that pick-up is in the right gear.

Under sharp acceleration, the gearbox will not change up without action by the driver on the gear selector or steering mounted control paddles (unless the engine speed is close to maximum).

It is possible to change mode at any time, by moving the gear selector from position **E** to position **M** and the other way round.

! Never select neutral **N** when the vehicle is moving.

Reverse

To engage reverse, the vehicle must be stationary with your foot on the brake pedal.

- ☞ Select position **R**.

There is an audible signal on engaging reverse.

Switching off

The vehicle can be stopped whatever the position of the gear selector (**N**, **E** or **R**). However, there is an audible signal on opening the driver's door if the gear selector is not at position **N**.

! When the vehicle is stopped with the engine running, always put the gear selector to neutral **N**.

! There is a continuous audible signal if you turn the ignition switch to "OFF" with the vehicle in 2nd, 3rd, 4th or 5th gear. In this case return the ignition switch to "ON", move the gear selector to position **N**, then to position **E**, **M** or **R**, then turn the ignition switch to "OFF".

! On a slope, use the brakes to immobilise the vehicle and place the gear selector in position **N**, **E** or **R**.

! In all cases, it is **essential that you apply the parking brake** to immobilise the vehicle.

! Before doing anything under the bonnet, check that the gear selector is in neutral **N** and the parking brake is applied.

Limits of operation

On a gradient, or when hill start assist is activated, **never hold the vehicle using the accelerator**: you could damage the clutch. In these situations there is an audible signal.

- ☞ Move the gear selector to position **N**.
- ☞ Wait 15 minutes to allow the clutch to cool down before setting off.

Operating faults



With the ignition on, illumination of this warning lamp indicates a gearbox fault. Contact a CITROËN dealer or a qualified workshop.

If **N** is flashing in the instrument panel accompanied by an audible signal for a long time:

- check that the ignition switch is at the "ON" position,
- place the gear selector at **N**, then move it to **E**, **M** or **R**.

If **1** is flashing in the instrument panel:

- place the gear selector at **E** or **M**, then move it to **N**.

If **R** is flashing in the instrument panel:

- place the gear selector at **R**, then move it to **N**.

Gear shift indicator

System which reduces fuel consumption by recommending the most appropriate gear.

Operation

Depending on the driving situation and your vehicle's equipment, the system may advise you to change gear.

The gear engagement recommendations must not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system. This function cannot be deactivated.

Example:

- You are in third gear.
- You press the accelerator pedal.
- The system may suggest that you engage a higher gear.



The information appears in the instrument panel in the form of an arrow.

i With an ETG electronic gearbox, the system is only active in manual mode.

i With the PureTech 82 engine, the system only suggests when to change up.

i The system adapts its gear change recommendation according to the driving conditions (slope, load, ...) and the demands of the driver (power, acceleration, braking, ...).
The system never suggests:

- engaging first gear,
- engaging reverse gear.

Hill start assist

System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.


This system only operates when:

- the vehicle is completely stationary, with your foot on the brake pedal,
- certain conditions of slope are met,
- with the driver's door closed.

The hill start assist system cannot be deactivated.

! Do not exit the vehicle while it is being held in the hill start assist phase. If you need to exit the vehicle with the engine running, apply the parking brake manually.

Operation

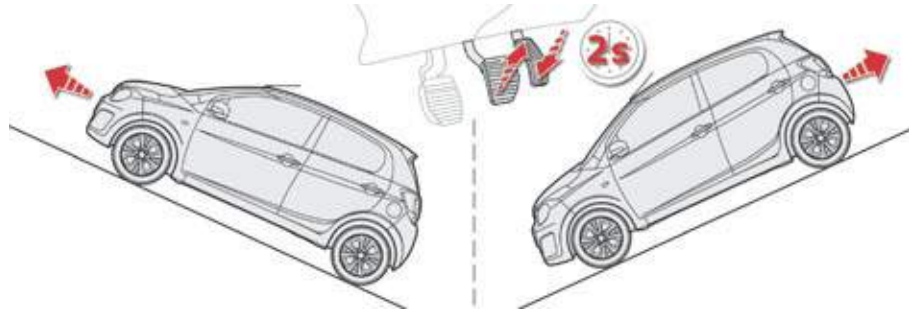

On an ascending slope, with the vehicle stationary, the vehicle is held momentarily when you release the brake pedal:

- if you are in first gear or neutral with a manual gearbox,
- if you are in position **E** or **M** with an ETG electronic gearbox.

On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held momentarily when you release the brake pedal.

Operating fault



If a fault in the system occurs, this warning lamp comes on. Contact a CITROËN dealer or a qualified workshop to have the system checked.

Stop & Start (VTi 68 S&S engine)

The Stop & Start system puts the engine temporarily into standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...). The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently. Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

Operation

Going into engine STOP mode



This indicator lamp comes on in the instrument panel and the engine goes into standby automatically:

- when stationary, in neutral, and you release the clutch pedal.

Stop & Start time counters

A partial time counter counts the periods in STOP mode during a journey.

It is displayed in the trip computer once the Stop & Start is operating.

Press one of the "**DISP**" buttons to return to the previous display.

A global time counter counts the periods in STOP mode since the last reset.

When it is displayed, press one of the "**DISP**" buttons to reset the counter.



For smoother operation, during parking manoeuvres STOP mode is not available for a few seconds after coming out of reverse gear. The Stop & Start does not affect the vehicle's systems, such as for example, braking, power steering...



Never refuel with the engine in STOP mode; you must switch off the ignition with the button.

Special cases: STOP mode not available

STOP mode is not invoked principally when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, vehicle stopped on a steep gradient, high altitude...) where the engine is needed to assure control of a system.

Going into engine START mode



This indicator lamp goes off and the engine starts automatically:

- when you **fully** depress the clutch pedal.

Special cases: START invoked automatically

START mode is invoked automatically when:

- you open the driver's door,
- you open the bonnet,
- you unfasten the driver's seat belt,
- some special conditions (battery charge, engine temperature, braking assistance, descending a steep gradient, adjustment of the air conditioning...) where the engine is needed for control of a system.

Operating fault



In the event of a fault with the system, this warning lamp flashes in the instrument panel.

Have it checked by a CITROËN dealer or a qualified workshop.

Maintenance

- ! Before doing anything under the bonnet, deactivate the Stop & Start system to avoid any risk of injury resulting from automatic operation of START mode.



- ! The Stop & Start system requires a 12 V battery of a special specification and technology. All work on this type of battery must be done only by a CITROËN dealer or a qualified workshop. For more information on the 12 V battery, refer to the corresponding section.

Manual deactivation / reactivation



At any time, press this button to deactivate the system.



Deactivation is confirmed by the illumination of this indicator lamp in the instrument panel.

If the system has been deactivated in STOP mode, the engine restarts immediately.

Press this button again.

The system is active again; this is confirmed by the indicator lamp going off in the instrument panel.

The system is reactivated automatically at every new engine start by the driver.

Speed limiter (PureTech 82 engine)

System which prevents the vehicle from exceeding the speed programmed by the driver.

The speed limiter is **switched on** manually: this can be done whatever the speed of the vehicle. However, if you are driving at less than 20 mph (30 km/h), the programmed speed will be fixed at 20 mph (30 km/h).

The speed limiter is **paused** by operation of the control.

The programmed speed can be exceeded temporarily by pressing the accelerator firmly beyond the point of resistance.

To return to the programmed speed, simply release the accelerator pedal until the vehicle returns to the programmed speed limit.

Steering mounted controls



The controls are grouped together on this control stalk at the steering wheel.

1. Speed limiter on / off: by pressing the end of the control stalk.
2. Decrease the setting: by pushing the control stalk down.
3. Increase the setting: by pushing the control stalk up.
4. Speed limiter on / pause: by pulling the control stalk towards you.

Displays in the instrument panel



The information is grouped together in the instrument panel screen.

5. Speed limiter mode selection indication.
6. Speed limiter on / pause indication.
7. Speed value setting.

i The programmed speed remains in the memory when the ignition is switched off.

! The speed limiter cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance on the part of the driver.

Switching on



- ☞ Press the end of the control stalk: the speed limiter mode is selected but is not switched on.
- ☞ Switch the speed limiter on by pulling the control stalk towards you, if the speed displayed is suitable (by default, the last speed programmed).

Pause



- ☞ You can temporarily stop the speed limiter by pulling the control stalk towards you again: the display confirms that it has been stopped (Pause).
- ☞ Pull the control stalk towards you again to restore the speed limiter.

Adjusting the speed limit setting

i You do not have to switch the speed limiter on in order to set the speed.

Once the function is selected, you can modify the speed setting by:

- by pushing the control stalk up to increase the setting,
- by pushing the control stalk down to decrease the setting.

A brief push on the control stalk modifies the speed setting by + or - 1 mph (km/h).

A maintained push on the control stalk modifies the speed setting by + or - 5 mph (km/h).

4

Temporarily exceeding the programmed speed

☞ Press **firmly** on the accelerator pedal, going beyond the **point of resistance**, to exceed the programmed speed limit.

The speed limiter is deactivated temporarily and the displayed programmed speed flashes.

i An audible signal accompanies the flashing of the programmed speed when exceeding the speed is not due to an action by the driver (steep hill...).

As soon as the vehicle's speed returns to the programmed value, the limiter operates again: the display of the programmed speed becomes steady again.

Switching off

☞ Press the end of the control stalk.
The display of information related to the speed limiter disappears.

Operating fault



Illumination of this warning lamp in the instrument panel indicates a fault with the speed limiter.

Have it checked by a CITROËN dealer or a qualified workshop.

! The use of mats not approved by CITROËN may interfere with the operation of the speed limiter. To avoid any risk of jamming of the pedals:

- ensure that the mat is secured correctly,
- do not fit one mat on top of another.

Speed limiter (VTi 68 engine)

System which prevents the vehicle from exceeding the speed programmed by the driver.

The speed limiter is **switched on** manually: this can be done whatever the speed of the vehicle. However, if you are driving at less than 20 mph (30 km/h), the programmed speed will be fixed at 20 mph (30 km/h).

The speed limiter is **paused** by operation of the control.


The programmed speed can be exceeded temporarily by pressing the accelerator firmly beyond the point of resistance.

To return to the programmed speed, simply release the accelerator pedal until the vehicle returns to the programmed speed limit.

i The programmed limit speed is erased when switching off the ignition.

! The speed limiter cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance on the part of the driver.

Steering mounted controls

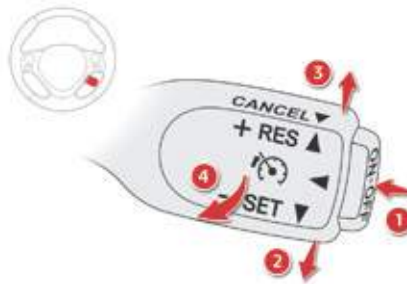

The controls are grouped together on this control stalk at the steering wheel.

1. Speed limiter on / off: by pressing the end of the control stalk.
2. Programming the speed
Decrease the setting: by pushing the control stalk down.
3. Restore speed limiter
Increase the setting: by pushing the control stalk up.
4. Pause speed limiter: by pulling the control stalk towards you.

Displays in the instrument panel




The information is grouped together in the instrument panel screen.

5. Speed limiter on / pause indication.
6. Speed value setting.

If you choose to display other information (trip A for example), the speed limiter information is automatically displayed again after about 6 seconds.

4

Switching on

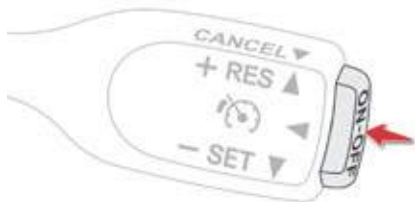


- ☞ Press the end of the control stalk: the speed limiter is switched on.



This indicator lamp comes on in the instrument panel.

- ☞ Accelerate or decelerate to attain the desired speed.
- ☞ Push the control stalk down and release, to programme the speed.
The speed at which the vehicle is running at the moment when you release the control stalk becomes the programmed speed.

Pause

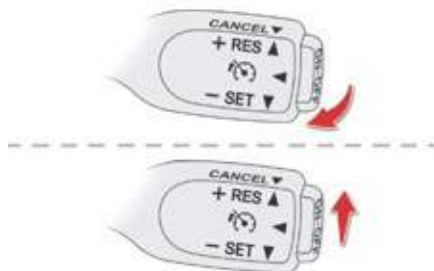

- ☞ You can temporarily stop the speed limiter by pulling the control stalk towards you.
- ☞ Push the control stalk up to restore operation of the speed limiter with the same speed setting.

Adjusting the speed limit setting

Once a speed is programmed, you can modify it by pushing and releasing the control stalk:

- up to increase the speed setting,
- down to reduce the speed setting.

A brief push on the control stalk modifies the speed setting by + or - 1 mph (km/h).

A maintained push on the control stalk modifies the speed setting by + or - 5 mph (km/h).

Temporarily exceeding the programmed speed

☞ Press **firmly** on the accelerator pedal, going beyond the **point of resistance**, to exceed the programmed speed limit.

The speed limiter is deactivated temporarily and the displayed programmed speed flashes.

i An audible signal accompanies the flashing of the programmed speed when exceeding the speed is not due to an action by the driver (steep hill...).

As soon as the vehicle's speed returns to the programmed value, the limiter operates again: the display of the programmed speed becomes steady again.

Switching off

☞ Press the end of the control stalk
The display of information related to the speed limiter disappears.

Operating fault



Illumination of this warning lamp in the instrument panel indicates a fault with the speed limiter.

Have it checked by a CITROËN dealer or a qualified workshop.



The use of mats not approved by CITROËN may interfere with the operation of the speed limiter. To avoid any risk of jamming of the pedals:

- ensure that the mat is secured correctly,
- do not fit one mat on top of another.

Reversing camera

The reversing camera is activated automatically when reverse gear is engaged.



! The reversing camera cannot in any circumstances replace the need for the vigilance on the part of the driver.

The image is provided in the touch screen only, with an indication of the limit of the rear bumpers (red line) and the general direction of the vehicle (blue lines).

The field of vision covered by the camera is limited: objects in the immediate proximity of the bumper or located below it are not visible.

It is normal to be able to see part of the number plate at the bottom of the screen.

The camera's wide-angle lens deforms the image presented in the screen: the distances visible in the screen may be different from the true distances. This deformation varies according to the loading of the vehicle and the slope of the road.

! Never reverse the vehicle looking only at the screen.

! **High pressure jet washing**
When washing your vehicle, do not direct the lance within 30 cm of the camera lens.

i Clean the reversing camera regularly using a soft, dry cloth.

Lane departure warning system

System which detects the unintended crossing of longitudinal traffic lane markings on the ground, using a camera that recognises both solid and broken lines.


To improve your safety, the camera analyses the image and then triggers a warning if the vehicle wanders over a lane marking (speed higher than 30 mph (50 km/h)).

This system is particularly suitable for motorways and dual carriageways.

! The lane departure warning system cannot in any circumstances replace the need for vigilance on the part of the driver. It is necessary to observe driving regulations and take a break every two hours.

i The system should be deactivated when driving with snow chains or the spare wheel fitted.

Activation

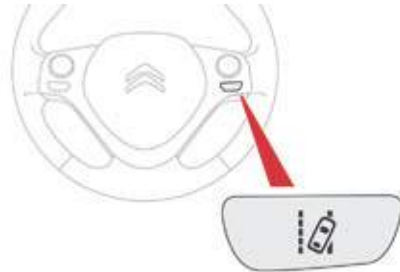

☞ Press this button, located on the steering wheel.




Detection

You are alerted by an audible signal and the display of a warning lamp in the instrument panel.

i No alert is given if the direction indicators are on and for around 20 seconds after they stop flashing.

4

Displays in the instrument panel

Display in the instrument panel	Comments
	The function has been activated (green indicator).
	The system has identified a marking on the ground (green indicator).
	The system is alerting you that a road marking is being crossed (green and orange warning). The display of this warning is accompanied by an audible signal.



The detection may be impeded:

- if the ground markings are worn,
- if there is little contrast between the markings on the ground and the road surface,
- if the windscreen is dirty,
- in certain extreme weather conditions: fog, heavy showers, bright sunlight or direct exposure to the sun (low sun, leaving a tunnel...) and shadows.

Deactivation



☞ Press this button again.

The status of the system remains in the memory when the ignition is switched off.

Operating fault



In the event of a malfunction, this (orange) warning lamp comes on in the instrument panel.

Contact a CITROËN dealer or a qualified workshop without delay.

Under-inflation detection

System which automatically checks the pressures of the tyres while driving.



The system monitors the pressures in the four tyres, once the vehicle is moving. It compares the information given by the four wheel speed sensors with **reference values, which must be reinitialised every time the tyre pressures are adjusted or a wheel changed.**

The system triggers an alert as soon as it detects a drop in the inflation pressure of one or more tyres.

! The under-inflation detection system does not replace the need for vigilance on the part of the driver. This system does not avoid the need to check the tyre pressures (including the spare wheel) every month as well as before a long journey. Driving with under-inflated tyres impairs road holding, extends braking distances and causes premature tyre wear, particularly under arduous conditions (high loading, high speed, long journey).



Driving with under-inflated tyres increases fuel consumption.



The inflation pressures defined for your vehicle can be found on the tyre pressure label.

For more information on the identification markings, refer to the corresponding section.

Tyre pressures should be checked when the tyres are "cold" (vehicle stopped for 1 hour or after a journey of less than 6 miles (10 km) at moderate speeds).

Otherwise (when hot), add 0.3 bar to the pressures shown on the label.

4

Under-inflation alert



This is given by fixed illumination of this warning lamp, accompanied by an audible signal.

- ☞ Reduce speed immediately, avoid excessive steering movements and sudden braking.
- ☞ Stop the vehicle as soon as it is safe to do so.



The loss of pressure detected does not always cause visible bulging of the tyre. Do not satisfy yourself with just a visual check.

- ☞ If you have a compressor (such as the one in the temporary puncture repair kit) check the pressures of the four tyres when cold. If it is not possible to carry out this check straight away, drive carefully at reduced speed.

or

- ☞ In the event of a puncture, use the temporary puncture repair kit or the spare wheel (depending on equipment).



The alert is maintained until the system is reinitialised.

Reinitialisation



It is necessary to reinitialise the system every time one or more tyre pressures are adjusted, and after changing one or more wheels.


A label attached to the middle pillar, driver's side, gives a reminder of this.



Before reinitialising the system, ensure that the pressures of the four tyres are correct for the use of the vehicle and in line with the recommendations on the tyre pressure label.

The under-inflation alert can only be relied on if the reinitialisation of the system has done with the pressures in the four tyres correctly adjusted.

The under-inflation detection system does not give a warning if a pressure is incorrect at the time of reinitialisation.

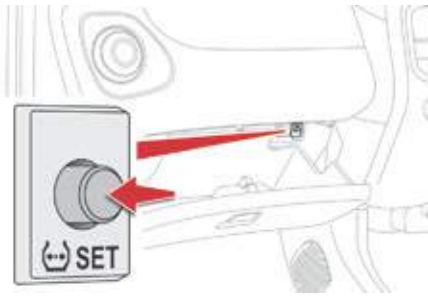

Reinitialisation of the system is done with the **ignition on** (ignition switch in the "**ON**" position or "**ON**" mode) and the vehicle stationary.

- ☞ Open the glove box.
- ☞ Press the reinitialisation button.



- ☞ This warning lamp flashes 3 times in the instrument panel when the reinitialisation is done.

- ☞ Wait a few minutes before switching off the ignition (ignition switch in the "**ACC**" or "**LOCK**" position, or "**OFF**" mode).

The new pressure settings registered are considered to be reference values by the system.

i Snow chains

The system does not have to be reinitialised after fitting or removing snow chains.



The under-inflation alert can only be considered reliable if reinitialisation of the system is done with the four tyre pressures correctly set.

Operating fault



The flashing and then fixed illumination of the under-inflation warning lamp indicates a fault with the system.

In this case, under-inflation monitoring of the tyres is no longer assured. Have the system checked by a CITROËN dealer or a qualified workshop.



Before doing anything to the system, the pressures of the four tyres must be checked and the system reinitialised.

4

Exterior lighting control stalk

Main lighting

The various front and rear lamps of the vehicle are designed to adapt the driver's visibility progressively according to the ambient light level and weather:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear.

Additional lighting


Other lamps are provided to meet the requirements of particular driving conditions:

- a rear foglamp,
- daytime running lamps to be more visible during the day.


i In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

i Travelling abroad

If using your vehicle in a country that drives on the other side of the road, the headlamps must be adjusted to avoid dazzling on-coming drivers. Contact a CITROËN dealer or a qualified workshop.

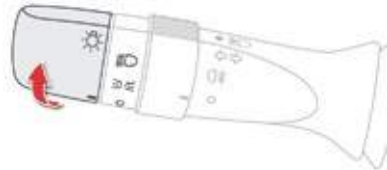

Model without AUTO lighting

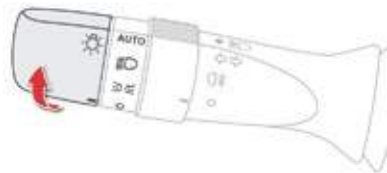

Model with AUTO lighting

Selection ring for main lighting mode

Turn the ring to position the symbol required facing the mark.



Lighting off / Daytime running lamps.




Sidelamps only.



Dipped or main beam headlamps.



Automatic illumination of headlamps.

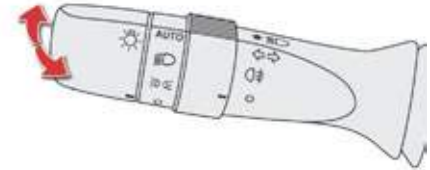

Dipping the headlamps

With dipped beam on, push the control stalk away from you to change to main beam. Pull the stalk toward you change back to dipped beam.

In the lighting off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.

Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms the lighting switched on.



Foglamp selection ring

The foglamp operates with the dipped and main beam headlamps.



Rear foglamp.

- ☞ Turn the ring forward and release to switch on the rear foglamp.

When the lighting is switched off automatically (with AUTO model) or when the dipped beam headlamps are switched off manually, the foglamp and the sidelamps will remain on.

- ☞ Turn the ring rearward and release to switch off all the lamps.

! In good or rainy weather, both day and night, use of the rear foglamp is prohibited. In these situations, the power of its beam may dazzle other drivers. It should only be used in fog or snow.

In these weather conditions, it is your responsibility to switch on the foglamp and dipped beam headlamps manually as the sunshine sensor may detect sufficient light.

Do not forget to switch off the rear foglamp when it is no longer needed.

i Switching off the lamps when the ignition is switched off


On switching off the ignition, all of the lamps turn off immediately, except for dipped beam if guide-me-home lighting is activated.

i Switching on the lamps after the ignition is switched off

To reactivate the lighting control, rotate the ring to the "0" position - lamps off, then to the desired position.

On opening the driver's door a continuous audible signal warns the driver that the lighting is on.

Automatic illumination of headlamps

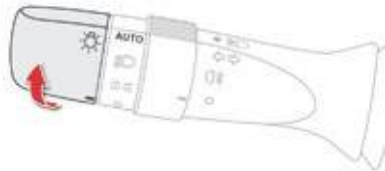

Using a sunshine sensor, if a low level of ambient light level is detected, the sidelamps and dipped beam headlamps come on automatically, without any action by the driver. When the ambient light returns to a sufficient level or the wipers are switched off, the lighting is switched off automatically. The sensor is located at the base of the windscreen.

Switching on

- ☞ Turn the ring to the "AUTO" position.

Switching off

- ☞ Turn the ring to another position.

! In foggy weather or in snow, the sunshine sensor may detect sufficient light. The lighting will not come on automatically. Do not cover the sunshine sensor, the associated functions will no longer be controlled.

Manual guide-me-home lighting*



Temporarily keeping the dipped beam headlamps on after the vehicle's ignition has been switched off makes the exit of the vehicle's occupants easier when the light is poor.

Switching on

- ☞ Place the lighting control stalk in the "lighting off" or "AUTO" position.
- ☞ With the ignition off, "flash" the headlamps using the lighting control stalk.

The lighting comes on for about 30 seconds.


Switching off

The manual guide-me-home lighting switches off immediately if you.

- flash the headlamps again,
- place the lighting control stalk in another position,
- switch the ignition on.

* Depending on version.

Direction indicators

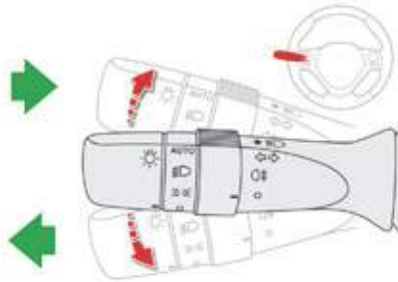


- ☞ Left: lower the lighting stalk passing the point of resistance.
- ☞ Right: raise the lighting stalk passing the point of resistance.

Three flashes of the direction indicators

- ☞ Press briefly upwards or downwards, without going beyond the point of resistance; the direction indicators will flash 3 times.

Headlamp beam height adjustment

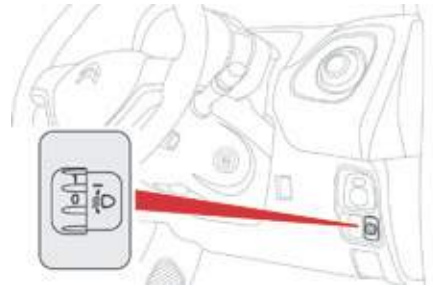

To avoid causing a nuisance to other road users, the height of the headlamp beams should be adjusted according to the load in the vehicle.

- 0.** Driver only.
- 0.5.** Driver + front passenger.
- 1.5.** 4 people.
- 3.** 4 people + maximum authorised load.
- 3.5.** Driver + maximum authorised load.

i The initial setting is position "0".

Wiper control stalk

i In wintry conditions, remove snow, ice or frost present on the windscreen, around the wiper arms and blades and the windscreen seal, before operating the wipers.

! Do not operate the wipers on a dry windscreen. Under extremely hot or cold conditions, ensure that the wiper blades are not stuck to the windscreen before operating the wipers.

Manual controls



The wipers are controlled directly by the driver.

Windscreen wipers

Wiping speed control stalk: raise or lower the stalk to the desired position.



Single wipe.

For a single wipe of the windscreen, raise and release the control stalk.



Park.




Intermittent wipe.



Normal wipe (moderate rain).




Fast wipe (heavy rain).

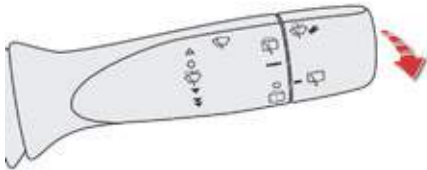

Windscreen wash

Pull the wiper stalk towards you. The windscreen wash, then the windscreen wipers, operate for a pre-determined time.

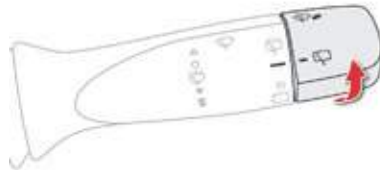


Rear wiper



Turn the ring to this position for a steady wipe.

Pushing the stalk away from you operates the wash during wiping.

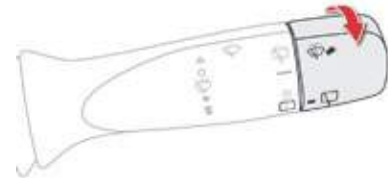

Rear screenwash

Wiper off, turn the control stalk towards you to operate the rear screenwash, accompanied by several sweeps of the rear wiper.

i Do not use the front or rear screenwash when the screenwash reservoir is empty. You risk damaging the pump.

Horn

Audible warning to alert other road users to an imminent danger.




☞ Press one of the steering wheel spokes.



☞ Press the central part of the steering wheel.

! When manoeuvring the vehicle, take care not to operate the horn unintentionally.

Hazard warning lamps

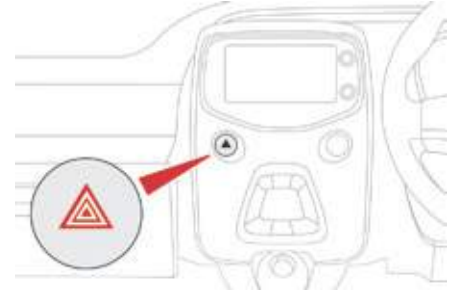

Visual warning with of all the direction indicators flashing to alert other road users to a vehicle breakdown, towing or accident.

☞ Press this button, all of the direction indicators flash.

They can operate with the ignition off.

Electronic stability control (ESC)

Electronic Stability Control (ESC) incorporating the following systems:

- anti-lock braking system (ABS) and the electronic brake force distribution (EBFD),
- emergency braking assistance,
- traction control (TRC),
- dynamic stability control (DSC).

Definitions

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)

These systems improve the stability and manoeuvrability of your vehicle when braking and contribute towards better control in corners, in particular on poor or slippery road surfaces.

The ABS prevents wheel lock in the event of emergency braking.

The electronic brake force distribution system manages the braking pressure wheel by wheel.

Emergency braking assistance

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered according to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

Traction control (TRC)

This system optimises traction in order to limit wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, this system monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

Operation

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)



Illumination of this warning lamp, accompanied by an audible signal, indicates that there is a fault with the ABS system, which could cause loss of control of the vehicle when braking.

Drive carefully at reduced speed, and contact a CITROËN dealer or a qualified workshop.



Illumination of this warning lamp, accompanied by an audible signal, indicates that there is a fault with the electronic brake force distribution (EBFD), which could cause loss of control of the vehicle when braking.

You **must** stop as soon as it is safe to do so. Contact a CITROËN dealer or a qualified workshop as soon as possible.

i When changing wheels (tyres and rims), make sure that these are approved for your vehicle.

Normal operation of the ABS may make itself felt by slight vibration of the brake pedal.

i In emergency braking, press very firmly without releasing the pressure.



Dynamic stability control (DSC) and traction control (TRC)

Activation

These systems are activated automatically each time the vehicle is started.

As soon as they detect a problem of grip or trajectory, these systems act on the operation if the engine and brakes.



Activation of the DSC system is signalled by the flashing of this indicator lamp in the instrument panel, accompanied by an audible signal.



Activation of the TRC system is signalled by the flashing of this indicator lamp in the instrument panel.

Deactivation

In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground...), it may be advisable to deactivate the DSC and TRC systems, so that the wheels can spin freely and regain grip.

However, it is recommended that these systems be reactivated as soon as possible.

Deactivation of the TRC system only



☞ Press this button briefly.



This warning lamp comes on: the TRC system no longer acts on the operation of the engine.

Deactivation of the TRC and DSC systems



☞ **Vehicle stationary**, press this button for at least 3 seconds.



These warning lamps come on: the TRC and DSC systems no longer act on the operation of the engine.

Reactivation

The TRC and DSC control systems are reactivated automatically every time the engine is started.



☞ Press the button again to reactivate it manually.

When the TRC system only is deactivated, it is reactivated as the vehicle's speed increases.

When both the TRC and DSC systems are deactivated, they do not reactivate themselves even if the speed of the vehicle increases.

Operating fault



Illumination of this warning lamp, accompanied by an audible signal, indicates a fault with the system.

Drive carefully at reduced speed and contact a CITROËN dealer or a qualified workshop to have the system checked.



The TRC and DSC systems offer increased safety in normal driving, but should not encourage the driver to take extra risks or drive at high speed.

The correct operation of these systems depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the assembly and repair procedures used by CITROËN dealers.

After an impact, have the system checked by a CITROËN dealer or a qualified workshop.


Active City Brake

Active City Brake is a driving assistance system that aims to avoid a frontal collision or reduce the speed of an impact if the driver does not react or reacts too late (brake application too late).

! This system is designed to improve driving safety. It remains the driver's responsibility to continuously monitor the state of the traffic and to assess the distances and relative speeds of other vehicles. Active City Brake can in no circumstances replace the need for vigilance on the part of the driver.

! Never look at the laser sensor through an optical instrument (magnifying glass, microscope...) at a distance of less than 10 centimetres: risk of eye injury.

Principle

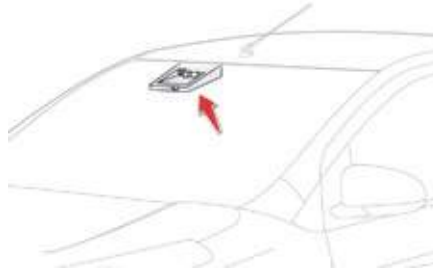

Using a laser sensor and a camera located at the top of the windscreen, this system detects a vehicle running in the same direction or stationary ahead of your vehicle.

When necessary, the vehicle's braking system is operated automatically to reduce the speed of impact or to help avoid a collision with the vehicle ahead.

! Automatic braking occurs later than if done by the driver, so as to intervene only when there is a high risk of collision.

Conditions for activation

Active City Brake only operates if the following conditions are met:

- the engine is running,
- the vehicle is in a forward gear,
- to **trigger the pre-collision alert**:
 - the speed is between 9 and 87 mph (15 and 140 km/h),
 - the difference in speed between your vehicle and the one ahead is more than about 9 mph (15 km/h),
- for **braking assistance**:
 - the speed is between about 18 and 50 mph (30 and 80 km/h),
 - the difference in speed between your vehicle and the one ahead is more than about 18 mph (30 km/h),
- for **automatic pre-collision braking**:
 - the speed is between about 6 and 50 mph (10 and 80 km/h),
 - the difference in speed between your vehicle and the one ahead is more than about 6 mph (10 km/h),
- the braking assistance systems (ABS, EBF, EBA) are not faulty,
- the trajectory control systems (TRC, DSC) are not deactivated or faulty,
- the vehicle is not in a tight corner,
- the system has not been triggered during the previous 10 seconds.

Operation

Three levels of operation are possible:

- **Pre-collision alert:** if a risk of collision with a vehicle is detected, a warning lamp comes on in the instrument panel together with an audible signal to encourage the driver to make an avoiding manoeuvre. The thresholds for triggering the alert can be set.
- **Braking assistance:** increases the braking started by the driver, only if a risk of collision is detected.
- **Automatic pre-collision braking:** when your vehicle is too close to or closing too quickly on the vehicle ahead of you, the system automatically operates the brakes to reduce the speed of impact. A collision can be avoided automatically if the difference in speed between your vehicle and the one ahead is not more than 18 mph (30 km/h).



You are then alerted by the display of this warning lamp, accompanied by an audible signal.


The brake lamps on your vehicle come on to warn other road users.

The automatic braking may bring the vehicle to a complete stop if the situation requires it.



The triggering of the system may cause the engine to stall, unless the driver depresses the clutch pedal quickly enough during automatic braking.

Setting the alert thresholds

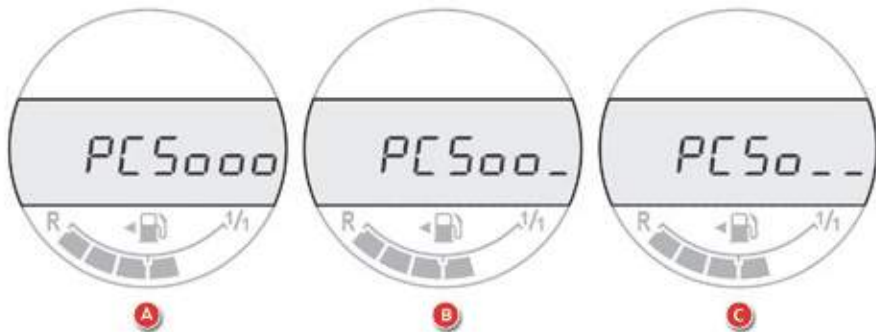

The alert thresholds determine how you want to be warned of the imminent risk of collision with the vehicle ahead of you.


You can choose one of three thresholds:

- A. "Far", to be given early warning (cautious driving).
- B. "Normal".
- C. "Close", for a later warning (sporty driving).



Press this button repeatedly to cycle through the thresholds. The default setting is "Normal".

Deactivation / Reactivation

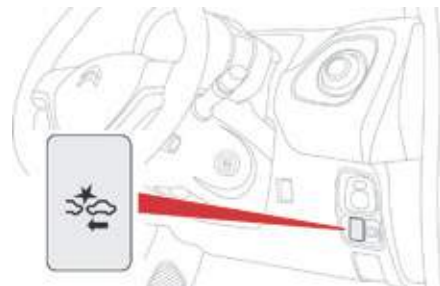

Press this button for more than 3 seconds.



This indicator lamp comes on in the instrument panel and the message "PCS OFF" is displayed.

Press the button again to reactivate the system.



This indicator lamp comes on in the instrument panel.

The system is automatically reactivated every time the engine is started with the key or the "START/STOP" button.

Operating limits

The system only detects **vehicles** (cars, lorries) that are stationary or moving in the same direction as your vehicle.

! It does not detect small vehicles (bicycles, motorcycles), pedestrians or animals, nor non-reflective stationary objects.

The system is not triggered or is interrupted if the driver:

- accelerates strongly (even if the speed limiter is on),
- or turns the steering wheel suddenly (avoiding manoeuvre).

Detection capability is less effective if:

- you are driving on roads with pronounced bends and/or on roads in poor condition,
- your vehicle is excessively loaded, as this changes the horizontal attitude of the vehicle.
- your vehicle skids.

! In difficult weather conditions (very heavy rain, snow, fog, hail...), braking distances increase, which can reduce the ability of the system to avoid a collision.

The driver must therefore remain particularly vigilant.

! Never leave accumulations of snow or any object projecting above the bonnet or in front of the roof: this might fall into the field of vision of the sensor and generate a detection.

Unwanted triggering of the system

It is possible for the system to detect a risk of imminent collision and start working, in the following conditions in particular:

- detection of an object located close to the edge of the road entering a corner (safety barrier, lamp post or road sign),
- detection of a structure located at the top or bottom of a steep slope (advertising hoarding, street lighting),
- detection of reflective objects (central reservation...) in the road,
- detection of the upper bar of a bridge or a traffic light gantry,
- passing a vehicle travelling in the other direction in a corner,
- passing a vehicle traveling in the other direction, at a crossroads, when your vehicle is turning left or right,
- if the vehicle ahead of you sends up water or snow,
- if your vehicle stops very close to an overhanging wall or other vehicles,
- when your vehicle closes rapidly on the vehicle ahead,
- if the vehicle is raised or lowered,
- if the vehicle passes through a plastic curtain,
- if driving through mist or smoke,
- if the sensor is misaligned (following replacement after a collision).

Operating faults

Sensor fault

The operation of the laser sensor may suffer interference from accumulations of dirt or misting of the windscreen or the presence of an object causing an obstruction (e.g.: bonnet open).



In this case you are warned by the display of this flashing warning lamp in the instrument panel.

Use the windscreen demisting and regularly clean the area of the windscreen in front of the sensor.



Do not stick or otherwise fix any object on the windscreen in front of the sensor.

System fault



In the event of a malfunction of the system, you are warned by the display of this flashing warning lamp in the instrument panel.

Have the system checked by a CITROËN dealer or a qualified workshop.



In the event of an impact to the windscreen at the sensor, deactivate the system and contact a CITROËN dealer or a qualified workshop to have your windscreen replaced.



Never try to remove, adjust or test the sensor.
Only a CITROËN dealer or a qualified workshop is able to work on the system.


Seat belts

Front seat belts



The front seat belts are fitted with a pretensioning and force limiting system. This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants. The pretensioning seat belts are active when the ignition is on. The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

Rear seat belts

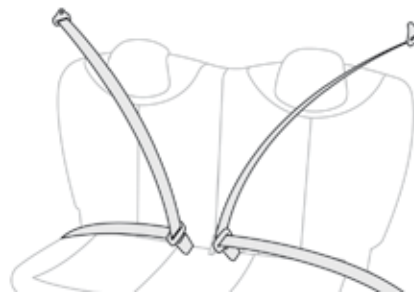

The rear seats are each fitted with a three-point seat belt.



Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.

6



Seat belt not fastened / unfastened warning lamps

1. Front seat belts not fastened / unfastened warning lamp, in the instrument panel.
2. Left hand rear seat belt unfastened warning lamp, in the seat belts and passenger's front airbag display screen.
3. Right hand rear seat belt unfastened warning lamp, in the seat belts and passenger's front airbag display screen.



i If you place a load on the front passenger seat, this may cause the warning lamp to come on.

Front seat belt(s) warning lamp

The warning lamp **1** comes on in the instrument panel if the front seat belt is not fastened or is unfastened.

From about 12 mph (20 km/h) and for about 30 seconds, illumination of the warning lamp is accompanied by an audible signal.

Beyond this time, if the seat belt is still not fastened, the tone of the audible signal changes and remains active for about a further 90 seconds.

Rear seat belt warning lamp(s)

The warning lamp(s) **2** and/or **3** come on in the seat belts and passenger's front airbag warning lamp display screen when one or more rear passengers unfasten their seat belt.

From about 12 mph (20 km/h) and for about 30 seconds, illumination of the warning lamp is accompanied by an audible signal.

Beyond this time, if the seat belt is still not fastened, the tone of the audible signal changes and remains active for about a further 90 seconds.

i Advice

The driver must ensure that passengers use the seat belts correctly and that they are all fastened before setting off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis. The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling the strap firmly and then releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle's seat belts, go to a qualified workshop with the skills and equipment needed, which a CITROËN dealer is able to provide.

Have your seat belts checked regularly by a CITROËN dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by CITROËN dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

For more information on child seats, refer to the corresponding section.

In the event of an impact

Depending on the nature and seriousness of the impact, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a CITROËN dealer or a qualified workshop.

Airbags


Designed to contribute towards the safety of the occupants in the event of violent collisions. The airbags supplement the action of the force-limiting seat belts.

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:

- in the case of a serious impact, the airbags are deployed instantly and contribute towards better protection of the occupants of the vehicle; immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags may not be deployed; the seat belt alone contributes towards providing your protection in these situations.

! The airbags do not operate when the ignition is switched off.

! This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

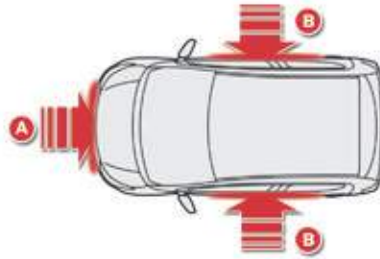


Impact detection zones

- Front impact zone.
- Side impact zone.

i The deployment of an airbag is accompanied by a slight emission of smoke and a noise, due to the detonation of the pyrotechnic charge incorporated in the system. This smoke is not harmful, but sensitive individuals may experience slight irritation. The detonation noise associated with the deployment of an airbag may result in a slight loss of hearing for a short time.

Front airbags

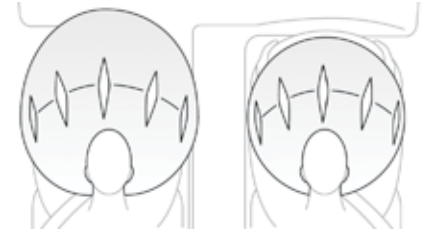


System which protects the driver and front passenger in the event of a serious front impact in order to limit the risk of injury to the head and thorax.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.

Deployment

The airbags are deployed, except the passenger's front airbag if it is deactivated, in the event of a serious front impact to all or part of the front impact zone A, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the thorax and head of the front occupant of the vehicle and the steering wheel, driver's side, and the dashboard, passenger's side to cushion their forward movement.

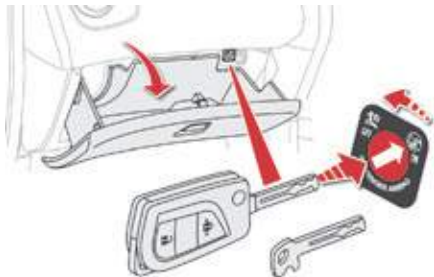

Deactivating the passenger's front airbag

Only the passenger's front airbag can be deactivated.

- ☞ **With the ignition off**, insert the key in the passenger airbag deactivation switch.
- ☞ Turn it to the **"OFF"** position.
- ☞ Remove the key keeping the switch in the new position.



When the ignition is on, this warning lamp comes in the seat belt and passenger's front airbag display screen. It stays on while the airbag is deactivated.



To assure the safety of your child, the passenger's front airbag must be deactivated when you install a rearward facing child seat on the front passenger seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

Reactivating the passenger's front airbag

When you remove a rearward facing child seat, **with the ignition off**, turn the switch to the **"ON"** position to reactivate the airbag and so assure the safety of your front passenger in the event of an impact.



When the ignition is switched on, this warning lamp comes on in the seat belt and passenger's front airbag display screen. It stays on while the front airbag is activated.

Operating fault



Illumination of this warning lamp in the instrument panel indicates a fault with the airbags.

Contact a CITROËN dealer or a qualified workshop without delay to have the system checked. The airbags may no longer be deployed in the event of a serious impact. In this case, do not install a child seat or seat an adult on the front passenger seat.

Lateral airbags




System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest, between the hip and the shoulder.

Each lateral airbag is fitted in the seat backrest frame, door side.

Deployment

They are deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the hip and shoulder of the front occupant of the vehicle and the corresponding door trim panel.

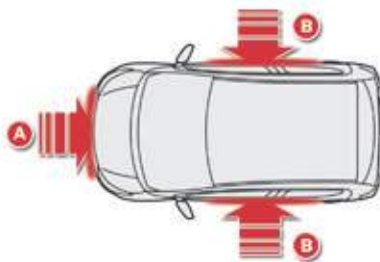

Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

i The lateral airbags may also be deployed during certain front impacts.

Curtain airbags

System which contributes towards the improved protection of the driver and passengers in the event of a serious side impact in order to limit the risk of injury to the side of the head.

Each curtain airbag is built into the pillars and the upper passenger compartment area.

Deployment

It is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

Operating fault



If this warning lamp comes on in the instrument panel, contact a CITROËN dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbags may not be deployed.

In the event of a rear or front collision, none of the lateral airbags is deployed.

! Advice

For the airbags to be fully effective, observe the safety recommendations below:

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...), nor fix or attach anything close to the inflation trajectory of the airbags; this could cause injuries during their deployment.

Never modify the original definition of your vehicle, particularly in the area directly around the airbags.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system must be carried out by a CITROËN dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

Do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Do not fit or attach anything to the steering wheel or dashboard, this could cause injuries with deployment of the airbags.

Lateral airbags

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a CITROËN dealer.

For more information on accessories, refer to the corresponding section.

Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.

Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.

If fitted on your vehicle, do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

General points relating to child seats

Although one of CITROËN's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats**,
- **a child weighing less than 9 kg must travel in the rearward facing position both in the front and in the rear.**

i **CITROËN recommends** that children should travel on the **rear seats** of your vehicle:

- **rearward facing** up to the age of 3,
- **forward facing** over the age of 3.

* The regulations on carrying children are specific to each country. Refer to the legislation in force in your country.


Child seat at the rear

Rearward facing



When a rearward facing child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the rearward facing child seat does not touch the vehicle's front seat.

Forward facing

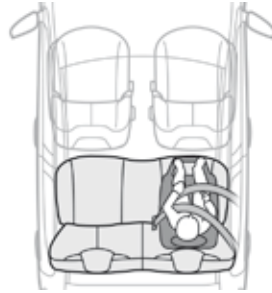

When a forward facing child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the legs of the child in the forward facing child seat do not touch the vehicle's front seat.

i Ensure that the seat belt is correctly tensioned.
For child seats with a support leg, ensure that this is in firm contact with the floor.

Child seat in the front*

Rearward facing



When a rearward facing child seat is installed on the **front passenger seat**, adjust the seat to the fully back position, with the backrest straightened.

The passenger's front airbag must be deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**

Forward facing



When a forward facing child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the fully back position with seat backrest straightened and leave the passenger's front airbag activated.



Passenger seat adjusted to the fully back position.

6

- i** Ensure that the seat belt is correctly tensioned.
For child seats with a support leg, ensure that the support leg is in stable contact with the floor. If necessary, adjust the passenger seat.

* Refer to the current legislation in your country before installing a child seat on this seat.


Deactivating the passenger's front airbag

! Never install a rearward facing child restraint system on a seat protected by an active front airbag. This could cause the death of the child or serious injury.

The warning label present on both sides of the passenger's sun visor repeats this advice. In line with current legislation, the following tables contain this warning in all of the languages required.



Passenger airbag OFF

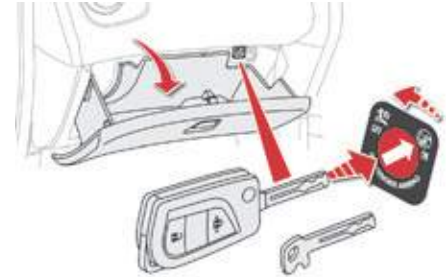




i For information on deactivating the passenger's front airbag, refer to the "Airbags" section.

AR	لا يجب أبدا تركيب نظام لإجلاس الطفل الوجه باتجاه الورااء على مقعد سيارة مجهز بوسادة أمان هوائية أمامية مغلقة، فقد يؤدي هذا إلى التسبب بموت الطفل أو بإصابات خطيرة لديه.
BG	НИКОГА НЕ инсталирайте детско столче на седалка с АКТИВИРАНА предна ВЪЗДУШНА ВЪЗГЛАВНИЦА. Това може да причини СМЪРТ или СЕРИОЗНО НАРАНЯВАНЕ на детето.
CS	NIKDY neumistujte dětské zádržné zařízení orientované směrem dozadu na sedadlo chráněné AKTIVOVANÝM čelním AIRBAGEM. Hrozí nebezpečí SMRTI DÍTĚTE nebo VÁŽNĚHO ZRANĚNÍ.
DA	Brug ALDRIG en bagudvendt barnestol på et sæde, der er beskyttet af en AKTIV AIRBAG. BARNET risikerer at blive ALVORLIGT KVÆSTET eller DRÆBT.
DE	Montieren Sie auf einem Sitz mit AKTIVIERTEM Front-Airbag NIEMALS einen Kindersitz oder eine Babyschale entgegen der Fahrtrichtung, das Kind könnte schwere oder sogar tödliche Verletzungen erleiden.
EL	Μη χρησιμοποιείτε ΠΟΤΕ παιδικό κάθισμα με την πλάτη του προς το εμπρός μέρος του αυτοκινήτου, σε μια θέση που προστατεύεται από ΜΕΤΩΠΙΚΟ αερόσακο που είναι ΕΝΕΡΓΟΣ. Αυτό μπορεί να έχει σαν συνέπεια το ΘΑΝΑΤΟ ή το ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ του ΠΑΙΔΙΟΥ
EN	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur
ES	NO INSTALAR NUNCA un sistema de retención para niños de espaldas al sentido de la marcha en un asiento protegido mediante un AIRBAG frontal ACTIVADO, ya que podría causar lesiones GRAVES o incluso la MUERTE del niño.
ET	Ärge MITTE KUNAGI paigaldage "seljaga sõidusuunas" lapseistet juhi kõrvalistmele, mille ESITURVAPADI on AKTIVEERITUD. Turvapadja avanemine võib last TÕSISELT või ELUOHTLIKULT vigastada.
FI	ÄLÄ KOSKAAN aseta lapsen turvaistuinta selkä ajosuuntaan istuimelle, jonka edessä suojana on käyttöön aktivoitu TURVATYNNY. Sen laukeaminen voi aiheuttaa LAPSEN KUOLEMAN tai VAKAVAN LOUKKAANTUMISEN.
FR	NE JAMAIS installer de système de retenue pour enfants faisant face vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE frontal ACTIVE. Cela peut provoquer la MORT de l'ENFANT ou le BLESSER GRAVEMENT
HR	NIKADA ne postavljati dječju sjedalicu leđima u smjeru vožnje na sjedalo zaštićeno UKLJUČENIM prednjim ZRAČNIM JASTUKOM. To bi moglo uzrokovati SMRT ili TESKU OZLJEDU djeteta.
HU	SOHA ne használnjok menetirányanak háttal beszerelt gyermekülést AKTIVÁLT (BEKAPCSOLT) FRONTLÉGZSÁKKAL védett ülésen. Ez a gyermek HALÁLÁT vagy SÜLYÖS SÉRÜLÉSÉT okozhatja.
IT	NON installare MAI seggiolini per bambini posizionati in senso contrario a quello di marcia su un sedile protetto da un AIRBAG frontale ATTIVATO. Ciò potrebbe provocare la MORTE o FERITE GRAVI al bambino.
LT	NIEKADA neįrengkite vaiko prilaikymo priemonės su atgal atgretžtu vaiku ant sėdynės, kuri saugoma VEIKIANČIOS priekinės ORO PAGALVĖS. Išsiskleidus oro pagalvei vaikas gali būti MIRTINAI arba SUNKIAI TRAUMUOTAS.
LV	NEKAD NEuzstādiet uz aizmuguri vērstu bērnu sēdekli priekšējā pasažiera sēdvietā, kurā ir AKTIVIZĒTS priekšējais DROŠĪBAS GAISA SPILVENS. Tas var izraisīt BĒRNA NĀVI vai radīt NOPIETNUS IEVAINOJUMUS.

MT	Qatt m'ghandek thalli tifel/tifla marbut f'siggu dahru lejn l-Airbag attiva, ghalieix tista' tikkawza korriment serju jew anke mewt lit-tifel/tifla
NL	Plaats NOOIT een kinderzitje met de rug in de rijrichting op een zitplaats waarvan de AIRBAG is INGESCHAKELD. Bij het afgaan van de airbag kan het KIND LEVENSGEVAARLIJK GEWOND RAKEN
NO	Installer ALDRI et barnesete med ryggen mot kjøretretningen i et sete som er beskyttet med en frontal AKTIVERT KOLLISJONSPUTE, BARNET risikerer å bli DREPT eller HARDT SKADET.
PL	NIGDY nie instalować fotelika dziecięcego w pozycji "tyłem do kierunku jazdy" na siedzeniu wyposażonym w CZŁOWĄ PODUSZKĘ POWIETRZNA w stanie AKTYWNYM. Może to doprowadzić do ŚMIERCI DZIECKA lub spowodować u niego POWAŻNE OBRAŻENIA CIAŁA.
PT	NUNCA instale um sistema de retenção para crianças de costas para a estrada num banco protegido por um AIRBAG frontal ACTIVADO. Esta instalação poderá provocar FERIMENTOS GRAVES ou a MORTE da CRIANÇA.
RO	Nu instalati NICIODATA un sistem de retinere pentru copii, dispus cu spatele in directia de mers, pe un loc din vehicul protejat cu AIRBAG frontal ACTIVAT. Aceasta ar putea provoca MOARTEA COPILULUI sau RANIREA lui GRAVA.
RU	ВО ВСЕХ СЛУЧАЯХ ЗАПРЕЩАЕТСЯ использовать обращенное назад детское удерживающее устройство на сиденье, защищенном ФУНКЦИОНИРУЮЩЕЙ ПОДУШКОЙ БЕЗОПАСНОСТИ, установленной перед этим сиденьем. Это может привести к ГИБЕЛИ РЕБЕНКА или НАНЕСЕНИЮ ЕМУ СЕРЬЕЗНЫХ ТЕЛЕСНЫХ ПОВРЕЖДЕНИЙ
SK	NIKDY neinštalujte detské zádržné zariadenie orientované smerom dozadu na sedadlo chránené AKTIVOVANÝM čelným AIRBAGOM. Mohlo by dôjsť k SMRTELNÉMU alebo VÁŽNEMU PORANENIU DIETĀTA.
SL	NIKOLI ne nameščajte otroškega sedeža s hrbtom v smeri vožnje, če je VARNOSTNA BLAZINA pred sprednjim sopotnikovim sedežem AKTIVIRANA. Takšna namestitev lahko povzroči SMRT OTROKA ali HUDE POŠKODBE.
SR	NIKADA ne koristite dečje sedište koje se okreće unazad na sedištu zaštićenim AKTIVNIM VAZDUŠNIM JASTUKOM ispred njega, jer mogu nastupiti SMRT ili OZBILJNA POVREDA DETETA.
SV	Passagerarkrockkudden fram MÅSTE vara avaktiverad om en bakåtvänd bilbarnstol installeras på denna plats. Annars riskerar barnet att DÖDAS eller SKADAS ALLVARLIGT.
TR	KESİNLİKLE HAVA YASTIĞI AKTİF olan ön koltuğa yüzü arkaya dönük bir çocuk koltuğu yerleştirmeyiniz. Bu ÇOCUĞUN ÖLMESİNE veya ÇOK AĞIR YARALANMASINA sebep olabilir.

Child seats recommended by CITROËN

CITROËN offers a range of recommended child seats which are secured using a **three point seat belt**.

Group 0+: from birth to 13 kg	Groups 2 and 3: from 15 to 36 kg	
 <p>L1 "RÖMER Baby-Safe Plus" Installed in the rearward facing position.</p>	 <p>L4 "KLIPPAN Optima" From 22 kg (approximately 6 years), the booster is used on its own.</p>	 <p>L5 "RÖMER KIDFIX" Can be fitted to the vehicle's ISOFIX mountings. The child is restrained by the seat belt.</p>

Installation of child seats attached using the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved (a) in accordance with the weight of the child and the seat in the vehicle.

Weight of the child and indicative age				
Seat	Under 13 kg Groups 0 (b) and 0+ Up to about 1 year	From 9 to 18 kg Group 1 From about 1 to 3 years	From 15 to 25 kg Group 2 From about 3 to 6 years	From 22 to 36 kg Group 3 From about 6 to 10 years
Front passenger seat (c) (e)	U (R)*	U (R)*	U (R)*	U (R)*
Rear seats (d)	U	U	U	U

* On a front seat:

- For the installation of a child seat with a base: if there is interference with the vehicle's seat backrest when fitting a child seat with base, adjust the backrest until there is no longer any interference.
- For the installation of a forward facing child seat: if there is a gap between the child seat and the vehicle seat's backrest, adjust the backrest until the child seat is in contact with the backrest. If the upper seat belt anchorage is in front of the belt guide on the child seat, move the vehicle seat forward.
- For the installation of a booster cushion: if the child is in a too vertical position, adjust the backrest to give a more comfortable position. If the upper seat belt anchorage is in front of the belt guide on the child seat, move the vehicle seat forward.


- a:** Universal child seat: child seat that can be installed in any vehicle using the vehicle's seat belt.
 - b:** Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat.
When installed on the 2nd row, they may prevent the use of the other seats.
 - c:** Refer the legislation in force in your country before installing your child on this seat.
 - d:** To install a child seat on a rear seat, rearward or forward facing, move the vehicle's seats in front forwards and straighten the backrests to leave enough space for the child seat and the child's legs.
 - e:** When a rearward facing child seat is installed **on the front passenger seat**, the passenger's front airbag must be deactivated. Otherwise, **the child would risk being seriously injured or killed during deployment of the airbag.** When a forward facing child seat is installed **on the front passenger seat**, the passenger's front airbag must remain active.
- U:** Seat suitable for the installation of a universally approved child seat secured using a seat belt, rearward facing and/or forward facing, with the passenger seat adjusted to the midway longitudinal position.
- U (R):** same as for **U**, with the vehicle's seat in the fully back position and the backrest straightened.

i Remove and stow the head restraint before installing a child seat with a backrest on a passenger seat. Refit the head restraint once the child seat has been removed.


"ISOFIX" mountings

Your vehicle has been approved in accordance with the **latest ISOFIX regulation**.


The seats, represented below, are fitted with regulation ISOFIX mountings:

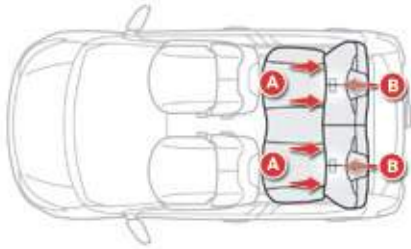

There are three mountings for each seat:

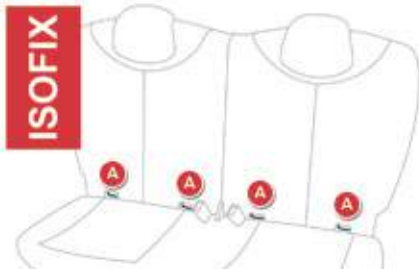

- two mountings **A**, located between the vehicle seat back and cushion, indicated by a marking,

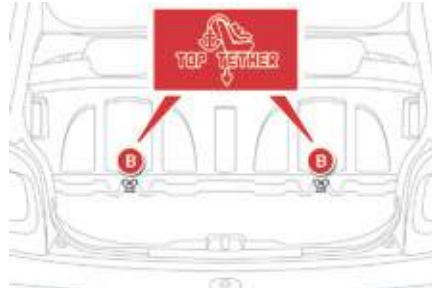

- a mounting **B** behind the seat for fixing the upper strap, referred to as the **TOP TETHER**. It is identified by a marking.

The **TOP TETHER** is used to secure the upper strap of child seats that have one. This arrangement limits the forward tipping of the child seat in the event of a front impact. This **ISOFIX** mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are secured on the two mountings **A**. Some seats also have an **upper strap**, known as the Top Tether, which is attached to mounting **B**.

To secure the child seat to the **TOP TETHER**:

- remove and stow the head restraint before installing the child seat in this seating position (refit it once the child seat has been removed),
- pass the strap of the child seat over the top of the seat backrest, between the apertures for the head restraint rods,
- fix the hook of the upper strap to the anchorage **B**,
- tighten the upper strap.

i The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

! Follow the instructions for fitting child seats contained in the seat manufacturer's installation guide.

For information on the possibilities for installing **ISOFIX** child seats in your vehicle, refer to the summary table.

ISOFIX child seats recommended by CITROËN


CITROËN offers a range of ISOFIX child seats listed and type approved for your vehicle.

Refer also to the child seat manufacturer's fitting instructions for information on installing and removing the seat.

The ISOFIX BABY P2C base must be installed so that on the ISOFIX clamps, the N^{os} 3, 4 and 5 are visible. And the support leg must have 6 holes visible.

"Baby P2C Mini" and its ISOFIX base (size categories: C, D, E)

Group 0+: from birth to 13 kg

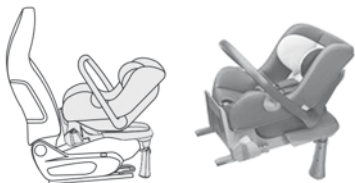

Installed rearward facing using an ISOFIX base which is attached to the anchorage rings **A**.


The base has a support leg, adjustable for height, which sits on the vehicle's floor.

This seat can also be secured with a seat belt.

In this case only the seat shell is used and is attached to the vehicle's seat by the three-point seat belt.

"RÖMER Baby-Safe Plus" and its ISOFIX base (size category: E)

Group 0+: from birth to 13 kg

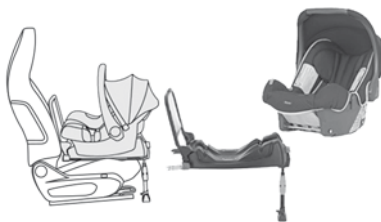

Installed rearward facing using an ISOFIX base which is attached to the rings **A**.

The base has a support leg, adjustable for height, which sits on the vehicle's floor.

This child seat can also be secured with a seat belt. In this case, only the shell is used and attached to the vehicle's seat by the three-point seat belt.

"Baby P2C Midi" and its ISOFIX base
(size categories: D, C, A, B, B1)

Group 1: from 9 to 18 kg



Installed rearward facing using an ISOFIX base which is attached to the anchorage rings **A**.

The base has a support leg, adjustable for height, which sits on the vehicle's floor.

This child seat can also be used forward facing.

This seat can **not** be secured with a seat belt.

We recommend that you use the seat in the rearward facing position up to the age of 3 years.

"RÖMER Duo Plus ISOFIX"
(size category: B1)

Group 1: from 9 to 18 kg



Is installed only in the forward facing position.

Is attached to the anchorage rings **A** and the upper anchorage ring **B**, referred to as the TOP TETHER, using an upper strap.

Three seat body angles: sitting, reclining, lying down.

We recommend the lying down position.

This child seat can also be used on seats not equipped with ISOFIX mountings. In this case, it must be secured to the vehicle's seat by the three-point seat belt. Adjust the position of the vehicle's front seat so that the child's feet are not touching the backrest.

Table of locations for ISOFIX child seats

In accordance with the European regulation, this table indicates the options for the installation of ISOFIX child seats on the vehicle seats fitted with ISOFIX mountings.

In the case of the universal and semi-universal ISOFIX child seats, the child seat's ISOFIX size category, determined by a letter between **A** and **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child / indicative age									
	Less than 10 kg (group 0) Up to about 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to about 1 year			From 9 to 18 kg (group 1) From about 1-3 years				
Type of ISOFIX child seat	Infant carrier		rearward facing			rearward facing		forward facing		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Front passenger seat	Not ISOFIX									
Rear seats	X		IL-SU (2)	IL-SU (1)		IL-SU (2)	IL-SU (1)	IUF IL-SU		

IUF: Seat suitable for the installation of an Universal Isofix seat, Forward facing with the "Top Tether" upper strap.

IL-SU: Seat suitable for the installation of a Semi-Universal ISOFIX seat, that is:

- rearward facing fitted with an upper strap or a support leg
- forward facing fitted with a support leg
- an infant carrier fitted with an upper strap or a support leg.

To attach the upper strap, refer to the "ISOFIX mountings" section.

- (1): The front seat must be adjusted to 9 notches back from the fully forward position.
- (2): The front seat must be adjusted to 4 notches back from the fully forward position.

i Remove and stow the head restraint before installing a child seat with a backrest on a passenger seat. Refit the head restraint once the child seat has been removed.

Recommendations on child seats

! The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Check that there is no seat belt or seat belt buckle under the child seat as this could destabilise it.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For the installation of a child seat using a seat belt, ensure that this is well tensioned on the child seat and that it is holding the child seat firmly against the seat of your vehicle. If your front passenger seat is adjustable, move it forward if necessary.

At the rear seats, always leave sufficient space between the front seat and:

- a rearward facing child seat,
- the feet of a child seated in a forward facing child seat.

For this, move the front seat forward and if necessary straighten its backrest.

For optimum installation of the forward facing child seat, ensure that the back of the child seat is as close as possible to the backrest of the vehicle's seat, or in contact if possible. The head restraint must be removed before installing a child seat with a backrest on the passenger seat.

Ensure that the head restraint is stowed or attached securely so that it is not thrown around the vehicle in the event of sharp braking.

Refit the head restraint as soon as the child seat is removed.

Children at the front

The legislation on carrying a child on the front passenger seat is specific to each country. Refer to the legislation in force in your country.

Deactivate the passenger's front airbag when a rearward facing child seat is installed on the front seat. Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

Installing a booster cushion

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. CITROËN recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, never leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

Child lock



This prevents the opening of the rear doors from the inside.

The controls are located on the edge of each rear door.

☞ Lower the control.

Check the status of this safety device before switching on the ignition.

This system is independent of the central locking.

Fuel tank

The capacity of the fuel tank is approximately 35 litres.

Low fuel level



When the low fuel level is reached, this warning lamp comes on, accompanied by an audible signal.

The message "LO FUEL" is displayed in place of the range.

You have approximately 5 litres remaining.

In certain driving conditions and depending on the engine, the distance which can be travelled with the fuel remaining may be less than 30 miles (50 km).

i If you run out of fuel, the emission control system warning lamp may come on in the instrument panel. It will go off automatically after the engine has been started a few times.

Refuelling


Refuelling must only be done **with the engine stopped and the ignition switched off** (ignition switch in the "LOCK" position or "OFF" mode).

Additions of fuel must be of at least 5 litres to be registered by the fuel gauge. A label on the inside of the flap reminds you which type of fuel to use. There may be an inrush of air when removing the filler cap. This vacuum is perfectly normal and results from the sealing of the fuel system.



To refuel in complete safety:

- ☞ **You must stop the engine and switch off the ignition (ignition in "LOCK" position or "OFF" mode).**
- ☞ Pull the control on the lower dashboard, driver's side, to release the filler flap.
- ☞ Open the fuel filler flap.

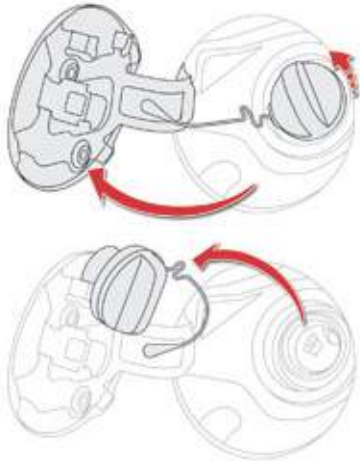

- ☞ Unscrew the filler cap and place it on its carrier (on the filler flap).
- ☞ Insert the filler nozzle as far as it will go, before starting delivery of fuel (risk of blow-back).
- ☞ Keep the nozzle in this position while refuelling.

Once refuelling is complete:

- ☞ Fit and tighten the filler cap until you hear a click.
- When you release the filler cap, it turns slightly in the opposite direction.
- ☞ Push the filler flap to close it.

When you fill the fuel tank, do not continue after the 3rd cut-off of the pump; this could cause malfunctions.

Your vehicle is fitted with a catalytic converter that reduces harmful exhaust emissions. The filler neck has a narrower aperture that only admits nozzles on pumps delivering **unleaded petrol**.

Quality of the fuel used for petrol engines

The petrol engines are compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376. E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

Snow chains

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.



i The snow chains must be fitted only to the front wheels. They must never be fitted to "space-saver" type spare wheels.

i Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.

Use only the chains designed to be fitted to the type of wheel fitted to your vehicle:

Original tyre size	Maximum link size.
165/65 R14	9 mm
165/60 R15	

i For more information on snow chains, contact a CITROËN dealer or a qualified workshop.

i The lane departure warning system should be deactivated when driving with snow chains fitted.

Advice on installation

- i** If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- i** Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- i** Fit the chains following the instructions provided by the manufacturer.
- i** Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- i** Stop your vehicle and check that the snow chains are correctly tightened.

i Avoid driving with snow chains on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.

i It is strongly recommended that before you leave, you practise fitting the snow chains on a level and dry surface.

Electrical energy economy mode*

System which manages the duration of use of certain functions to conserve a sufficient level of charge in the battery.

After the engine has stopped, you can still use functions such as the audio system, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for a maximum combined duration of twenty minutes.

This period may be greatly reduced if the battery is not fully charged.

Switching to economy mode

Once this time has elapsed the active functions are put on standby.

Exiting economy mode

These functions are reactivated automatically next time the vehicle is driven.

To restore the use of these functions immediately, start the engine and let it run for at least 5 minutes.



Let the engine run for the duration specified to ensure that the battery charge is sufficient.

Do not repeatedly and continuously restart the engine in order to charge the battery.

A flat battery prevents the engine from starting.

Refer to the "Battery" section.

* Only on vehicles with the "Keyless Entry and Starting" system.

Accessories

A wide range of accessories and genuine parts is available from the CITROËN dealer network.

These accessories and parts are all suitable for your vehicle and benefit from CITROËN's recommendation and warranty.

"Comfort": door deflectors, insulated module, sun blinds, scented air freshener, portable ashtray, coat hanger fitted to head restraint, reading lamp, front and rear parking sensors, centre armrest, cigarette lighter, ...

"Transport solutions": boot carpet, boot liner, transverse roof bars, bicycle carrier, ski carrier, roof boxes, boot dividers, ...

"Styling": rear diffuser, aluminium gear knob, alloy wheels, exterior expressive stickers, chrome mirror shells, door sill finishers, ...

"Security and safety": anti-theft alarm, vehicle tracking system, snow chains, wheel non-slip covers, wheel security bolts, child seats, first aid kit, warning triangle, high visibility vest, breathalyzer, fire extinguisher, pet seat belt, foglamp kit, seat belt cutter/glass hammer, ...

"Protection": mats, mud flaps, vehicle cover, seat covers, side protective mouldings, bumper protectors, ...

To prevent the mat from becoming caught under the pedals:

- ensure that the mat is secured correctly,
- never fit one mat on top of another.

"Multimedia": audio system, speaker, semi-integral navigation systems, hands-free kit, driving assistance systems, 230 V socket, rear multi-media support, DVD players, portable satellite navigation system, smartphone support, digital radio, ...

i Installation of radio communication transmitters

Before installing any after-market radio communication transmitter, you can contact a CITROËN dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

i Depending on the legislation in force in the country, certain safety equipment may be compulsory: high visibility safety vests, warning triangles, breathalyzers, spare bulbs, spare fuses, fire extinguisher, first aid kit, mud flaps at the rear of the vehicle.

! The fitting of electrical equipment or accessories which are not recommended by CITROËN may result in a failure of your vehicle's electronic system and excessive electrical consumption. Contact a CITROËN dealer for information on the range of recommended equipment and accessories.

Changing a wiper blade

Removing the front wiper blade

- ☞ Raise the wiper arm.
- ☞ Remove the wiper blade, sliding it towards the outside.

Fitting the front wiper blade

- ☞ Put the corresponding new wiper blade in place and fix it.
- ☞ Fold down the wiper arm carefully.

- i** To conserve the effectiveness of the flat-blade type wiper blades, we recommend that they are:
- handled with care,
 - cleaned regularly with soapy water,
 - not used to hold a cardboard sheet against the windscreen,
 - replaced at the first signs of wear.

Fitting roof bars



When fitting transverse roof bars, use the accessories recommended by CITROËN and follow the manufacturer's fitting instructions. For more information, contact a CITROËN dealer or a qualified workshop.

Maximum weight authorised on the bars, for a loading height not exceeding 40 cm (except bicycle carrier): 40 kg.
If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars.

- i** Please refer to national legislation in order to comply with the regulations concerning the transportation of objects which are longer than the vehicle.

TOTAL & CITROËN

Partners in performance and protecting the environment


Innovation in the search for performance

For over 40 years, the TOTAL Research and Development departments have developed lubricants for CITROËN, to match the latest technical innovations on CITROËN vehicles, both for competition and for everyday motoring.

For you, this is an assurance that you will obtain the best performance from your engine.

Optimum protection for your engine

By having your CITROËN vehicle serviced with TOTAL lubricants, you are contributing towards improving the life and performance of your engine, while also protecting the environment.

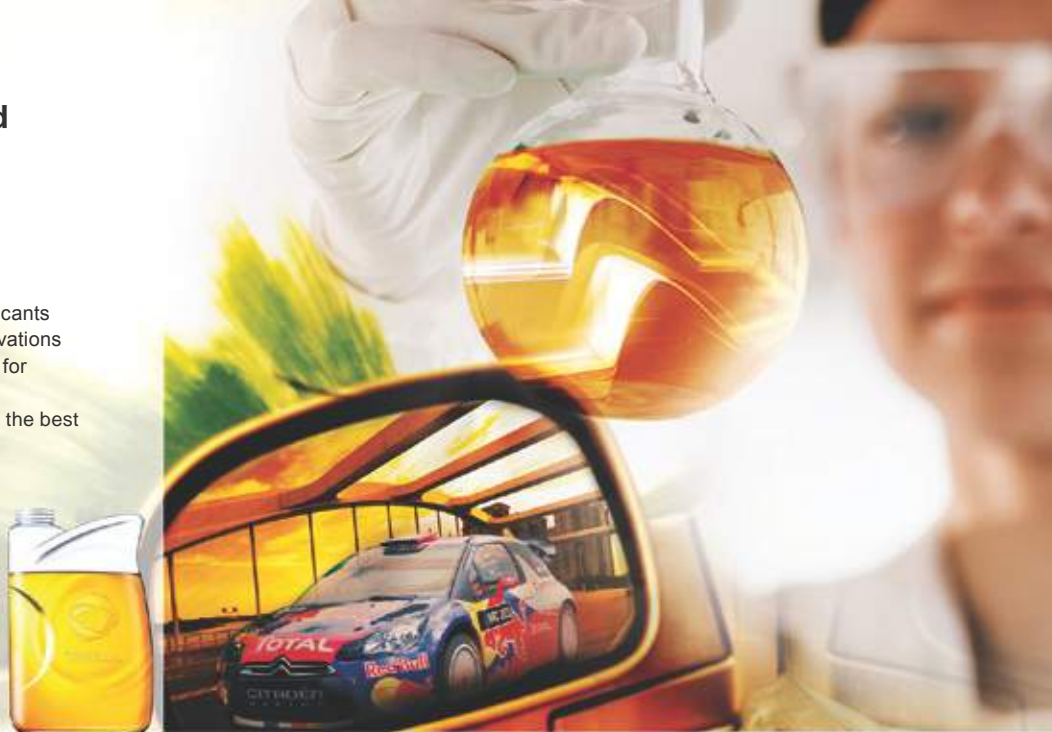


CITROËN prefers **TOTAL**




Bonnet


Opening

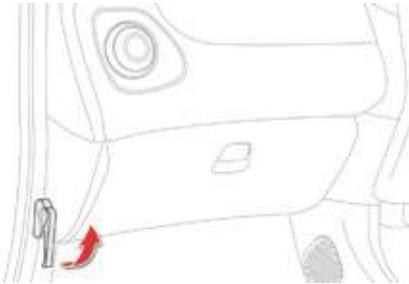

- ☞ Pull towards you the interior release lever, located in the lower dashboard.

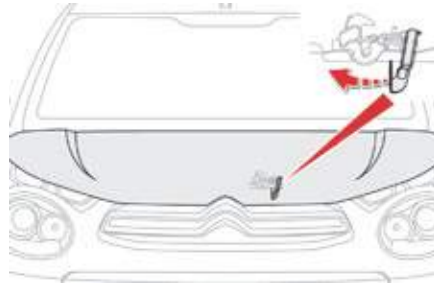

- ☞ Push the exterior safety catch to the left and raise the bonnet.

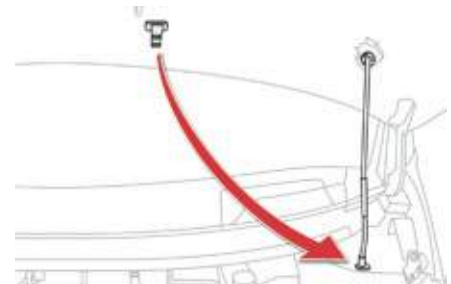

- ☞ Unclip the bonnet stay from its housing.
- ☞ Fix the stay in the notch to hold the bonnet open.

! The cooling fan may start after switching off the engine: take care with articles and clothing that might be caught by the fan blades.

! Do not open the bonnet when there is a very strong wind. When the engine is hot, handle the exterior safety catch and the stay with care (risk of burns).

! Because of the presence of electrical equipment under the bonnet, it is recommended that exposure to water (rain, washing, ...) be limited.


Closing

- ☞ Take the stay out of the support notch.
- ☞ Clip the stay in its housing.
- ☞ Lower the bonnet and release it near the end of its travel.
- ☞ Pull on the bonnet to check that it is fully latched.


Petrol engines

1. Screenwash fluid reservoir.
2. Coolant header tank.
3. Air filter.
4. Brake fluid reservoir.
5. Battery.
6. Fusebox.
7. Engine oil dipstick.
8. Engine oil filler cap.
9. Remote earth point.

i For access to the brake fluid reservoir, unclip the plastic cover at the base of the windscreen, pressing on the two tongues.
Refer to the "Checking levels" section.

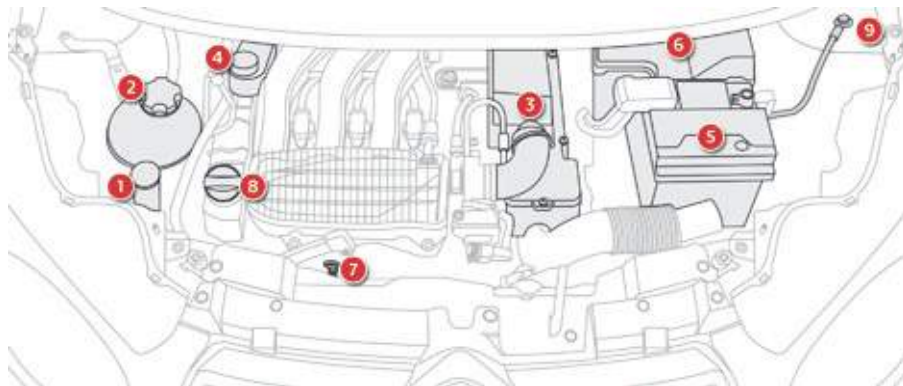

PureTech 82

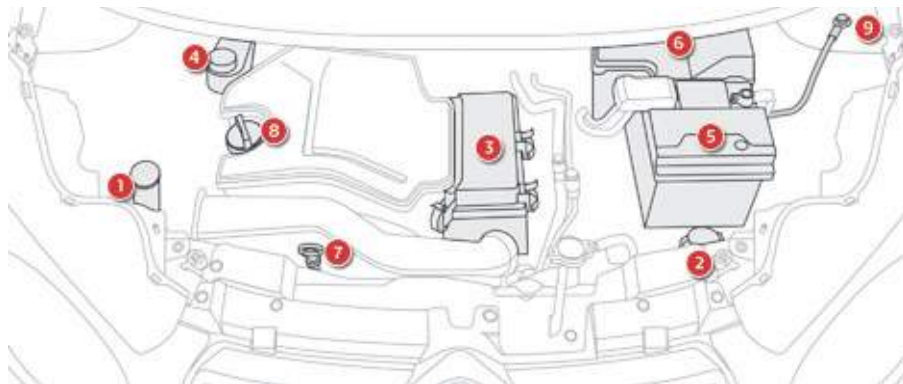

VTi 68

7

Checking levels

Check all of these levels regularly, in line with the manufacturer's service schedule. Top them up if necessary, unless otherwise indicated. If a level drops significantly, have the corresponding system checked by a CITROËN dealer or a qualified workshop.

! Take care when working under the bonnet, as certain areas of the engine may be extremely hot (risk of burns) and the cooling fan could start at any time (even with the ignition off).

Engine oil level



The check of the oil level is carried out with the dipstick, located under the bonnet. For the position of the dipstick, refer to the under-bonnet view on a previous page.

i To ensure the accuracy of the reading, your vehicle must be on a level surface, with the engine off for at least 30 minutes.

It is normal to top up the oil level between two services (or oil changes). CITROËN recommends that you check the level, and top up if necessary, every 3 000 miles (5 000 km).

Checking with dipstick

Refer to the under-bonnet view for the location of the dipstick on your vehicle.

- ☞ Take the dipstick by its coloured grip and pull it out completely.
- ☞ With the end of the dipstick with a clean and non-fluffy cloth.
- ☞ Refit the dipstick and push it fully down, then pull it out again for a visual check of the oil level: the level must be between the two marks **A** and **B**.

If you find that the oil level is above the **A** mark or below the **B** mark, **do not start the engine**.

- If the level is above the **MAX** mark (risk of engine damage), contact a CITROËN dealer or a qualified workshop.
- If the level is below the **MIN** mark, you must top-up the engine oil.



Topping-up the engine oil

Oil grade

The oil must be the correct grade for your engine and conform to the manufacturer's recommendations.

Refer to the under-bonnet view for the location of the oil filler cap on your vehicle.

- ☞ Unscrew the filler cap for access to the filler orifice.
- ☞ Pour in the oil in small quantities, avoiding spills onto the engine (risk of fire).
- ☞ Wait a few minutes before checking the level again using the dipstick.
- ☞ Top-up again if necessary.
- ☞ After checking and topping up, carefully refit the oil filler cap and the dipstick to its housing.

Engine oil change

Refer to the manufacturer's service schedule for details of the interval for this operation. In order to maintain the reliability of the engine and emissions control system, never use additives in the engine oil.

Coolant level



The coolant level must be:

- between the "FULL" or "F" and "LOW" or "L" marks for VTi 68 and VTi 68 S&S engines,
- between the "MIN" and "MAX" marks for the PureTech 82 engine.

When the engine is warm, the temperature of the coolant is regulated by the fan.

The cooling fan may start after switching off the engine: take care with articles and clothing that might be caught by the fan blades.

In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.


Fluid specification

The coolant must conform to the manufacturer's recommendations.

Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.

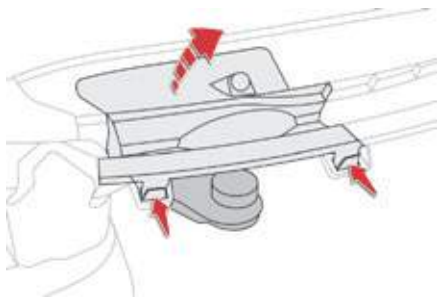

Access to the reservoir

☞ Unclip the plastic cover located below the windscreen, by pressing on the two tongues.

i When unclipping the plastic cover, take care not to remove the seal.

Changing the fluid

Refer to the manufacturer's service schedule for details of the interval for this operation.

Fluid specification

The brake fluid must conform to the manufacturer's recommendations.

Screenwash fluid level



Top up the level when necessary.

Fluid specification

For optimum cleaning and to avoid freezing, this fluid must not be topped up or replaced with plain water.

In wintry conditions, it is recommended that you use an ethyl alcohol or methanol based fluid.

Used products

! Avoid prolonged contact of used oil or fluids with the skin.
Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.
Take used oil to a CITROËN dealer or a qualified workshop (France) or to an authorised waste disposal site.

Checks

Unless otherwise indicated, check these components in accordance with the manufacturer's service schedule and according to your engine. Otherwise, have them checked by a CITROËN dealer or a qualified workshop.

12 V battery



The battery does not require any maintenance. However, check regularly that the terminals are correctly tightened (versions without quick release terminals) and that the connections are clean.

When carrying out any operation on the 12 V battery, refer to the corresponding section for details of the precautions to be taken before starting work.

! Versions equipped with Stop & Start are fitted with a 12 V lead-acid battery of specific technology and specification. Its replacement should be carried out only by a CITROËN dealer or a qualified workshop.

Air filter and passenger compartment filter



Refer to the manufacturer's service schedule for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary.**

A clogged passenger compartment filter may have an adverse effect on the performance of the air conditioning system and generate undesirable odours.

Oil filter



Replace the oil filter each time the engine oil is changed. Refer to the manufacturer's service schedule for details of the replacement interval for this component.

Manual gearbox



The gearbox does not require any maintenance (no oil change). Refer to the manufacturer's service schedule for the checking interval for this component.

Clutch

The clutch is operated mechanically and requires regular adjustment. Refer to the manufacturer's service schedule for information on when the adjustment should be checked.

i In the event of an operating fault (difficulty moving off, for example), contact a CITROËN dealer or a qualified workshop.

ETG gearbox



The ETG gearbox does not require any maintenance (no oil change). Refer to the manufacturer's service schedule for the checking interval for this component.

Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to

have the condition of the brakes checked, even between vehicle services.

Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc wear



For information on checking brake disc wear, contact a CITROËN dealer or a qualified workshop.

Parking brake



If excessive travel or a loss of effectiveness of this system is noticed, the parking brake must be checked, even between two services.

Checking this system must be done by a CITROËN dealer or a qualified workshop.



Only use products recommended by CITROËN or products of equivalent quality and specification. In order to optimise the operation of units as important as those in the braking system, CITROËN selects and offers very specific products. After washing the vehicle, dampness, or in wintry conditions, ice can form on the brake discs and pads: braking efficiency may be reduced. Make light brake applications to dry and defrost the brakes.


To avoid damaging the electrical units, **never use** a high pressure jet wash in the engine compartment.

Temporary puncture repair kit

Comprising a compressor and a sealant cartridge, it allows the **temporary repair** of a tyre so that you can drive to the nearest garage.

It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.


Access to the kit

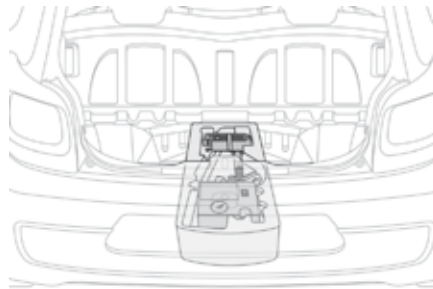

This kit is installed in the storage box, under the boot floor.

i The vehicle's electric system allows the connection of the compressor for long enough to inflate a tyre after a puncture repair.

Composition of the kit

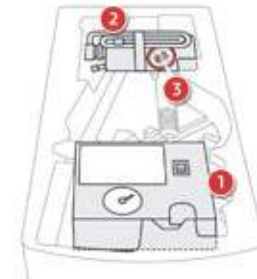

1. 12 V compressor, with integral pressure gauge.
2. Sealant cartridge, with integral hose.
3. Speed limit sticker.

i The speed limit sticker must be secured to the interior of the vehicle in the driver's field of vision, to remind you that a wheel is in temporary use.

! Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.


Repair procedure



- ☞ Switch off the ignition.
- ☞ Secure the speed limit sticker inside the vehicle.




- ☞ Uncoil the pipe stowed under the compressor.
- ☞ Connect the pipe from the compressor to the sealant cartridge.
- ☞ Turn the sealant cartridge and secure it in the cut-out provided on the compressor.

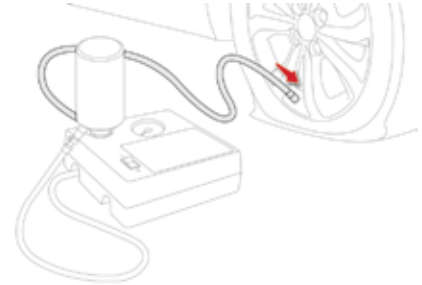


- ☞ Remove the valve cap from the tyre to be repaired, and place it in a clean area.
- ☞ Connect the hose from the sealant cartridge to the valve of the tyre to be repaired and tighten firmly.

i Avoid removing any foreign bodies which have penetrated into the tyre.

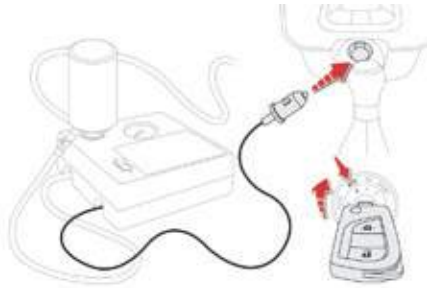


- ☞ Check that the compressor switch is at the "O" position.
- ☞ Uncoil fully the electric cable, stowed under the compressor.
- ☞ Connect the compressor's plug to the vehicle's 12 V socket.
- ☞ Switch on the ignition.

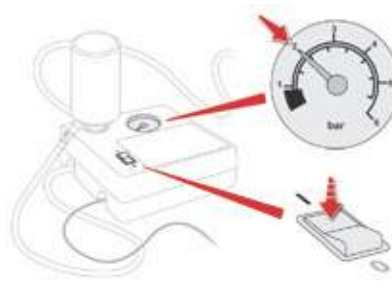

- ☞ Start the compressor by placing the switch at the "I" position and leave it running until the tyre pressure reaches 2.0 bar. The sealant product is injected into the tyre under pressure; do not disconnect the pipe from the valve during this operation (risk of splashing and stains).


i If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a CITROËN dealer or a qualified workshop for assistance.

! Take care, the sealant product is harmful if swallowed and causes irritation to the eyes. Keep this product out of the reach of children. The use-by date is marked on the cartridge. After use, do not discard the cartridge by the roadside, take it to a CITROËN dealer or an authorised waste disposal site. Don't forget to obtain a new sealant cartridge, available from a CITROËN dealer or a qualified workshop.

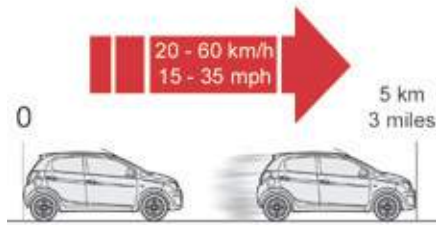


- ☞ Place the switch in the "O" position.
- ☞ Remove the kit.
- ☞ Drive immediately for approximately three miles (five kilometres), at reduced speed (between 15 and 35 mph (20 and 60 km/h)), to plug the puncture.
- ☞ Stop to check the repair and the tyre pressure using the kit.

Checking / adjusting tyre pressures

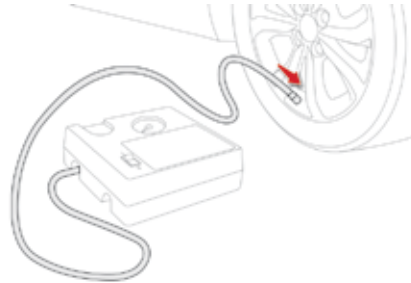


You can also use the compressor, without injecting sealant, to check and if necessary adjust the tyre pressures.

- ☞ Remove the valve cap from the tyre and place it in a clean area.
- ☞ Uncoil the pipe stowed under the compressor.
- ☞ Screw the pipe onto the valve and tighten firmly.

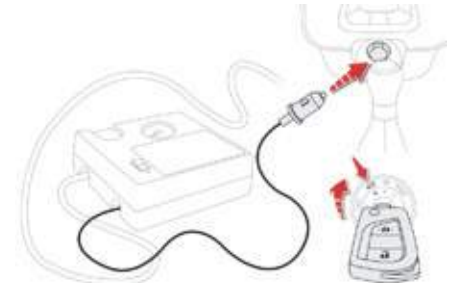

- ☞ Check that the compressor switch is at the "O" position.
- ☞ Uncoil fully the electric cable, stowed under the compressor.
- ☞ Connect the compressor's plug to the vehicle's 12 V socket.
- ☞ Switch on the ignition.

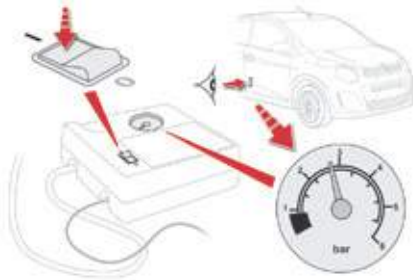

- ☞ Start the compressor by placing the switch at the "I" position and adjust the pressure to the value shown on the vehicle's tyre pressure label.
To deflate: press the black button on the compressor pipe, at the valve connector.
- ☞ Once the correct pressure is reached, put the switch to the "O" position.
- ☞ Remove the kit then stow it.

i Tyre under-inflation detection

After repair of the tyre, the warning lamp will remain on until the system is reinitialised.

For more information on under-inflation detection, refer to the corresponding section.

- ! Should the pressure of one or more tyres be adjusted, it is necessary to reinitialise the under-inflation detection system.
For more information on under-inflation detection, refer to the corresponding section.


Spare wheel

Procedure for replacing a wheel with a damaged tyre by the spare wheel using the tools supplied with the vehicle.

Parking the vehicle




- ☞ As far as possible, immobilise the vehicle on level, stable, non-slippery ground.
- ☞ Apply the parking brake.
- ☞ Switch off the ignition ("OFF" mode for vehicles fitted with "Keyless Entry and Starting").
- ☞ Engage first gear or reverse for a manual gearbox.
- ☞ Place the gear selector at position **N** for an ETG electronic gearbox.

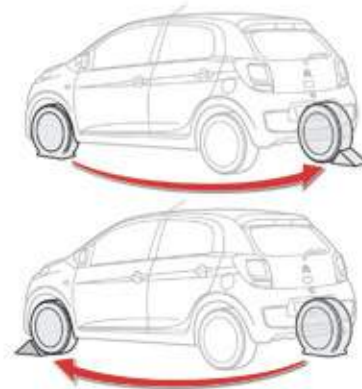

- ☞ If necessary, chock the wheel diagonally opposite the wheel to be changed.
- ☞ You must ensure that the occupants leave the vehicle and wait in a safe location.

Access to the spare wheel and tools

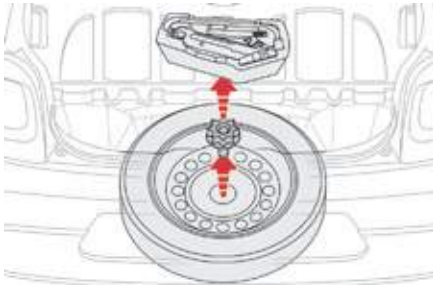

Depending on version, the spare wheel and tools are stowed in the boot under the floor.

- ☞ Remove the boot carpet.
- ☞ Remove the tool carrier.
- ☞ Slacken the central wheel retaining bolt.
- ☞ Remove the wheel.



Tools provided

The following tools are installed in a carrier, located in the centre of the spare wheel:

1. Wheelbrace.
2. Jack with handle.
3. Removable towing eye.


Refer to the "Towing the vehicle" section.

i All of these tools are specific to your vehicle and can vary according to equipment. Do not use them for any other purposes. Never go underneath a vehicle supported only by a jack (use an axle stand). Never use a jack other than the one listed by the manufacturer. If your vehicle does not have one, contact a CITROËN dealer or a qualified workshop to obtain the correct jack for your vehicle.

Tyre pressures

These are indicated on the label affixed to the middle pillar of the left door, driver's side. Refer to the "Identification markings" section.


Removing a wheel

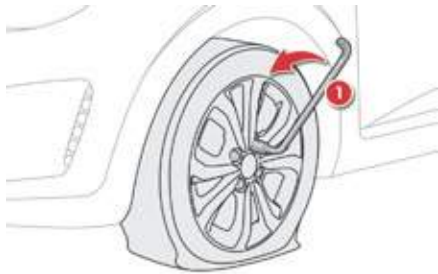

- ☞ Remove the label from the middle of the spare wheel (indicating that a wheel needs repair), and fix it inside the vehicle, where the driver can see it.
- ☞ Remove the wheel trim using the end of the wheelbrace.
- ☞ Slacken the wheel bolts using the wheelbrace 1.




- ☞ Position the foot of the jack 2 on the ground and ensure that it is directly below one of the jacking points A or B located on the underbody, closest to the wheel to be changed.

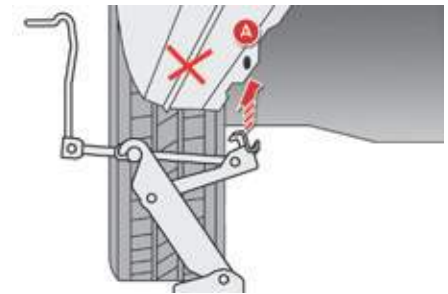


- ☞ Extend the jack 2 until its head is in contact with the jacking point A or B used. The contact area A or B on the vehicle used must engage correctly with the middle of the head of the jack.

- ! Ensure that the jack is stable. If the ground is slippery or loose, the jack may slip or drop - Risk of injury!
Ensure that the jack is positioned only at one of the jacking points A or B under the vehicle, making sure that the vehicle's contact area is centred on the head of the jack. Otherwise there is a risk of damage to the vehicle and/or of the jack dropping - Risk of injury!

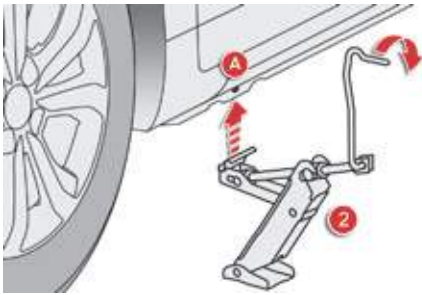

- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground, so that the (not punctured) spare wheel can be easily fitted.

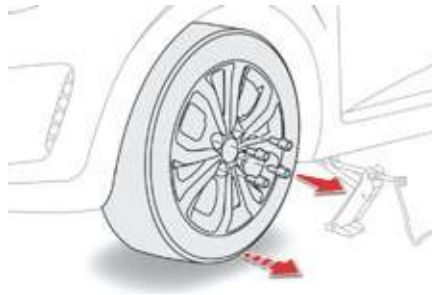


- ☞ Remove the bolts and put them in a clean place.
- ☞ Remove the wheel.

Fitting a wheel




i Fitting the "space-saver" type spare wheel


If your vehicle is fitted with alloy wheels, it is **normal** to notice when tightening the wheel bolts that the washers do not come into contact with the "space-saver" type spare wheel. The wheel is secured by the conical contact surface on each bolt.

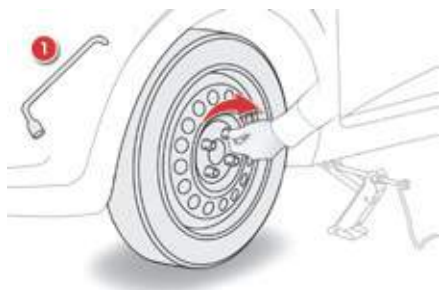

- ☞ Position the wheel on the hub.
- ☞ Screw in the bolts fully by hand.
- ☞ Pre-tighten the bolts using the wheelbrace 1 only.

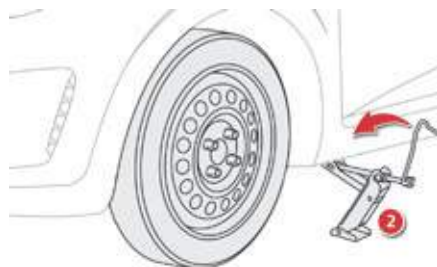

- ☞ Lower the vehicle to the ground.
- ☞ Fold the jack 2 and detach it.

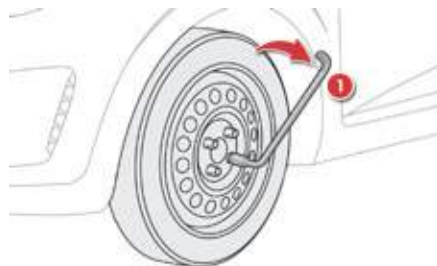

- ☞ Tighten the wheel bolts using the wheelbrace 1.
- ☞ Store the tools and the wheel in the boot.

i After changing a wheel

As soon as possible, have the tightness of the wheel bolts and the pressure of the spare wheel checked by a CITROËN dealer or a qualified workshop.


Have the punctured tyre repaired or replaced and refit it to the vehicle as soon as possible.

! Do not exceed 50 mph (80 km/h) when using the "space-saver" spare wheel.

i The lane departure warning system should be deactivated when driving with a spare wheel fitted.

Changing a bulb

Front lamps

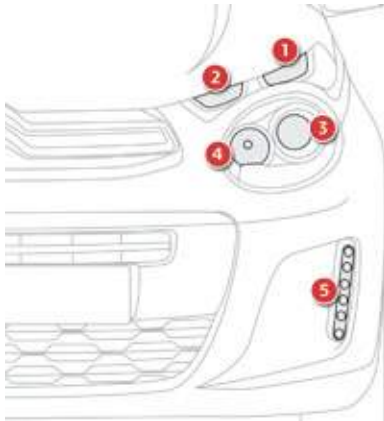

1. Sidelamps (W5W).
2. Direction indicators (PY21W amber).
3. Dipped beam headlamps (H7-55W).
4. Main beam headlamps (H7-55W).
5. LED* daytime running lamps.

* LED: light-emitting diodes.

i In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

! The headlamps have polycarbonate lenses with a protective coating:


- ☞ **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
- ☞ use a sponge and soapy water or a pH neutral product,
- ☞ when using a high pressure washer on persistent marks, do not keep the lance directed towards the lamps or their edges for too long, so as not to damage their protective coating and seals.

Changing a bulb should only be done after the headlamp has been switched off for several minutes (risk of serious burns).

☞ Do not touch the bulb directly with your fingers, use a lint-free cloth.


It is imperative to use only anti-ultraviolet (UV) type bulbs to avoid damaging the headlamp.

Always replace a failed bulb with a new bulb with the same type and specification.

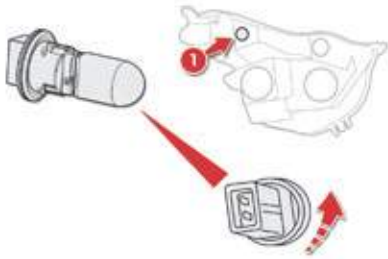


Sidelamps (W5W)

- ☞ Turn the bulb holder one quarter of a turn and remove it.
- ☞ Remove the bulb and change it.

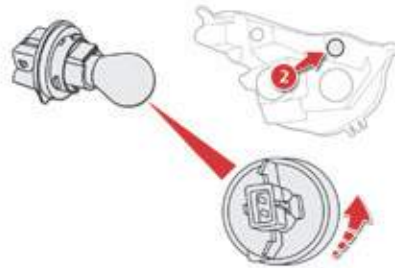

Direction indicators (PY 21W amber)

- ☞ Turn the bulb holder one quarter of a turn and remove it.
 - ☞ Remove the bulb and change it.
- If you encounter any difficulties, contact a CITROËN dealer or a qualified workshop.

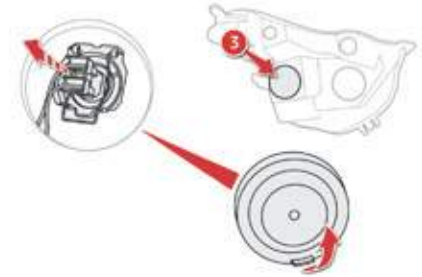


Dipped beam headlamps (H7 - 55W)

- ☞ Remove the protective cover by pulling on the tag.
- ☞ Spread the spring to free the bulb holder.
- ☞ Remove the bulb holder and change the bulb.

To reassemble, carry out these operations in reverse order.

If you encounter any difficulties, contact a CITROËN dealer or a qualified workshop.

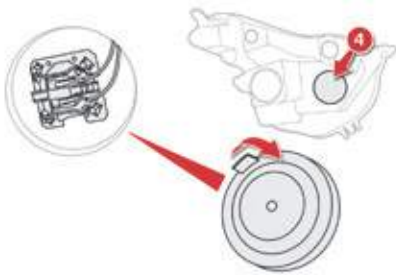


Main beam headlamps (H7-55W)

- ☞ Remove the protective cover by pulling on the tag.
- ☞ Spread the spring to free the bulb holder.
- ☞ Remove the bulb holder and change the bulb.

To reassemble, carry out these operations in reverse order.

If you encounter any difficulties, contact a CITROËN dealer or a qualified workshop.

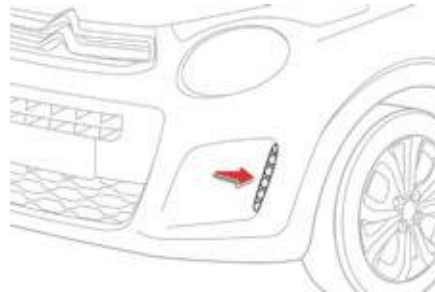


LED daytime running lamps

For the replacement of these lamps, contact a CITROËN dealer or qualified workshop.

Rear lamps




1. Brake lamps (P21/5W)
2. Sidelamps (P21/5W)
3. Direction indicators (PY21W)
4. Reversing lamp (P21W), near side
Foglamp (P21W), offside

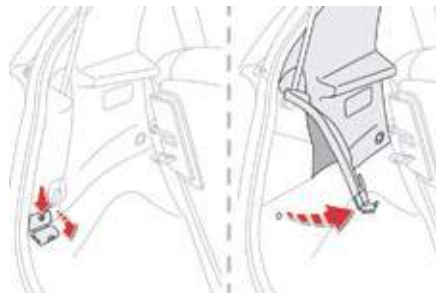

These bulbs are changed by removing the lamp unit:

- ☞ Open the boot.
- ☞ Tip the plastic cover and remove the screw.
- ☞ Move the boot trim firmly aside. Deformation of the trim is normal.
- ☞ Unscrew the nut and remove it (take care not to drop it in the wing).
- ☞ Remove the lamp unit by pulling it firmly outwards.

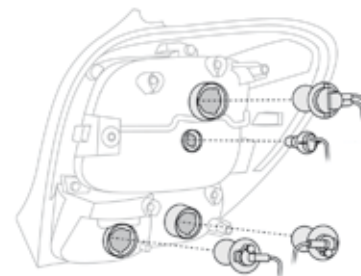

- ☞ At the back of the lamp, remove the failed bulb and change it.


When refitting, proceed in the reverse order, taking care to position the lamp unit correctly.



Number plate lamps (W5W)

- ☞ Insert a thin screwdriver into one of the cutouts in the lens.
- ☞ Push it outwards to unclip it.
- ☞ Remove the lens.
- ☞ Change the faulty bulb.


To refit, press on the lens to clip it in place.

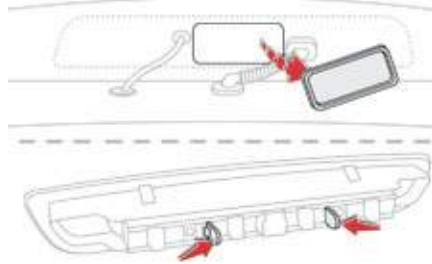

Third brake lamp (4 W5W bulbs)

- ☞ With the boot open, unclip the plastic cover.
- ☞ Press the metal clips to disengage the lamp.
- ☞ Remove the lamp via the exterior of the tailgate.
- ☞ Remove the bulb-holder by squeezing the plastic catches.
- ☞ Change the failed bulb(s).

To refit, carry out these operations in reverse order.

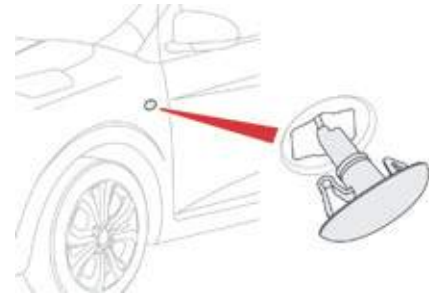


Direction indicator side repeaters (WY 5W amber)

- ☞ Push the repeater forwards or rearwards and detach it by pulling towards you.
- ☞ Disconnect the bulb holder and change it.

Changing a fuse

The fuseboxes are located behind the dashboard in the passenger compartment and next to the battery under the bonnet.

Access to tools

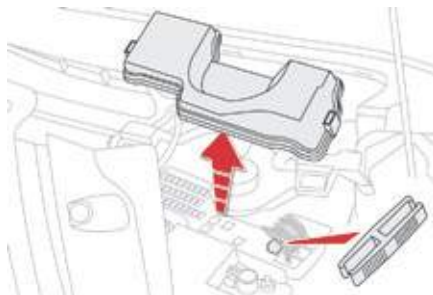

The extraction tweezer is fixed at the front of the underbonnet fusebox.

- ☞ Unclip the fusebox cover by pressing on the lug on the right.
- ☞ Remove the tweezer.

Replacing a fuse


Before changing a fuse, it is necessary to

- ☞ immobilise the vehicle and switch off the ignition,
- ☞ switch off all electrical consumers,
- ☞ identify the failed fuse using the fuse allocation tables and diagrams in the following pages,
- ☞ identify and correct the cause of the problem.

When replacing a fuse, you must always:

- ☞ use the special tweezers to extract the fuse from its holder and check the condition of its element,
- ☞ replace a failed fuse by one of the same rating (same colour); the use of a different rating fuse could cause a fault (risk of fire).

If the problem recurs after replacing the fuse, have the vehicle's electrical system checked by CITROËN dealer or a qualified workshop.

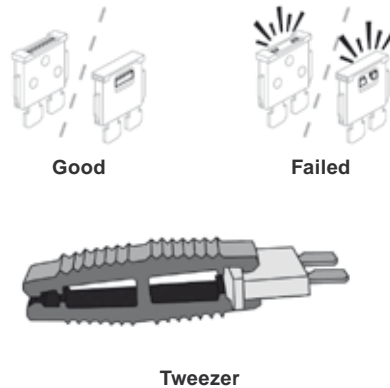

i Installation of electrical accessories

Your vehicle's electrical system is designed to operate with standard or optional equipment. Before installing other electrical equipment or accessories on your vehicle, contact a CITROËN dealer or a qualified workshop.

- !** CITROËN will not accept any responsibility for the costs incurred in repairing your vehicle or for the malfunctions resulting from the installation of auxiliary accessories which were not supplied or recommended by CITROËN and which were not installed in accordance with its instructions, in particular where the current consumption of all the additional equipment connected exceeds 10 milliamps.

Dashboard fuses




The fusebox is located below the dashboard (driver's side).

☞ Unclip the plastic cover for access to the fuses.

When you have finished, carefully refit the cover.



Fuse N°	Rating (A)	Functions
1	5	Reversing lamp - Fuel injection system - Audio system - VSC system
2	15	Front and rear screenwash
3	5	Main distribution unit - Instrument panel - Display screen - Air conditioning - Heated rear screen and door mirror heating - Electric fabric roof - Audio system
4	5	Electric power steering - Stop & Start
5	15	Rear wiper
6	5	Cooling fan - ABS system - VSC system
7	25	Front wiper
8	10	Heated door mirrors
9	15	12 V socket (120 W max)
10	7.5	Door mirrors - Audio system - Stop & Start - Instrument panel - Display screen

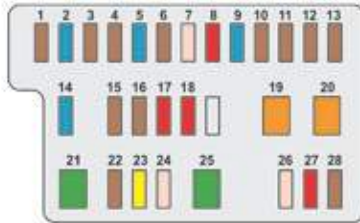

Fuse N°	Rating (A)	Functions
11	5	Steering lock - Fuel injection system - Electronic gearbox
12	7.5	Airbags
13	5	Instrument panel - Display Screen - Stop & Start
14	15**	Steering - Fuel injection system - Brake lamps
	7.5*	
15	7.5**	Fuel injection system - Stop & Start
	10*	
16	7.5	Engine diagnosis
17	10	Brake lamps - Third brake lamp - Fuel injection system - ABS system - VSC system - Electronic gearbox - Keyless Entry and Starting system
18	10	Sidelamps - Number plate lamps - Rear foglamp - Rear lamps - Lighting dimmer
19	40	Air conditioning

* PureTech 82 engine.


** VTi 68 engine.



Fuse N°	Rating (A)	Functions
20	40	Air conditioning - Engine self-diagnosis - Sidelamps - Number plate lamps - Rear foglamp - Rear lamps - Lighting dimmer - Brake lamps - Third brake lamp - Fuel injection system - ABS system - VSC system - Electronic gearbox - "Keyless Entry and Starting" system - Electric windows
21	30	Fuel injection system - Stop & Start - Main distribution unit
22**	7,5	Fuel injection system
23**	20	Fuel injection system - Stop & Start
24	25	Main distribution unit
25	30	Electric windows
26	25	Electric windows
27	10	Air conditioning
28	5	Rear foglamp

** VTi 68 engine.

Fuses under the bonnet

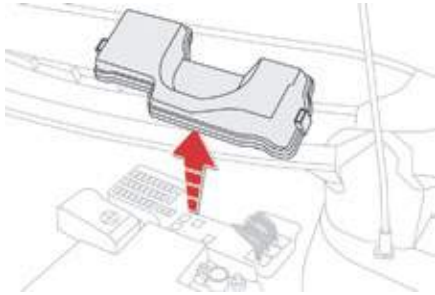

☞ Unclip the fusebox cover by pressing on the lug on the right, for access to the fuses.


When you have finished, carefully refit the cover.

Fuse N°	Rating (A)	Functions
1	10	Right hand dipped beam
2	10	Left hand dipped beam - Headlamp adjustment
3	7.5	Right hand main beam
4	7.5	Left hand main beam
5*	15	Fuel injection system
6*	7.5	Fuel injection system
7*	15	Fuel injection system
8*	7.5	Cooling fan
9	7.5	Air conditioning
10**	7.5	Fuel injection system - Brake lamps - Third brake lamp
11	5	Courtesy lamp - Boot lamp
12	10	Direction indicators - Hazard warning lamps - Instrument panel - Display screen

* PureTech 82 engine.


** VTi 68 engine.

In the event of a breakdown

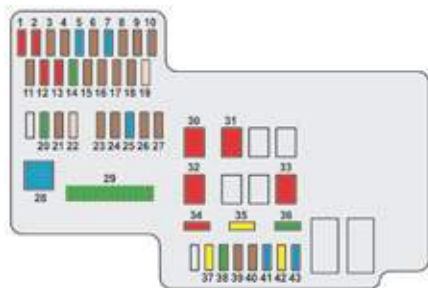

Fuse N°	Rating (A)	Functions
13	10	Horn
14	30	Distribution units
15**	7.5	Electronic gearbox
16	7.5	Fuel injection system
17	7.0	Keyless Entry and Starting system
18**	7.5	Battery
19	25	Fuel injection system - Cooling fan
20	30	Starter motor
21	7.5	Steering lock
22	25	Front lamps
23	7.5	Fuel injection system
24	7.5	Fuel injection system - Starter motor - Electronic gearbox - Stop & Start
25	15	Audio system - "Keyless Entry and Starting" system
26	7.5	Instrument panel - Display screen

** VTi 68 engine.

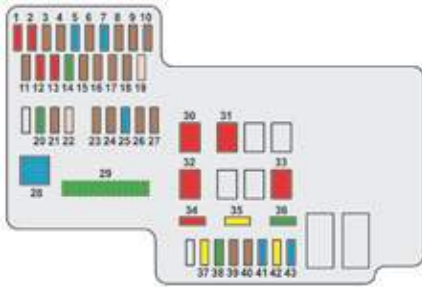


Fuse N°	Rating (A)	Functions
27	7.5	VSC system
28	60	Passenger compartment fusebox
29**	125***	Heated rear screen and door mirror heating - Electric fabric roof - ABS system - VSC system - Cooling fan - LED daytime running lamps
30	50	Electronic gearbox
	40	Stop & Start
31	50	Power steering
32	50*	Cooling fan
	30	
	40	
33	50	ABS system - VSC system
34	10	Spare fuse

* PureTech 82 engine.

** VTi 68 engine.

*** This fuse must be replaced only by a CITROËN dealer or a qualified workshop.

In the event of a breakdown

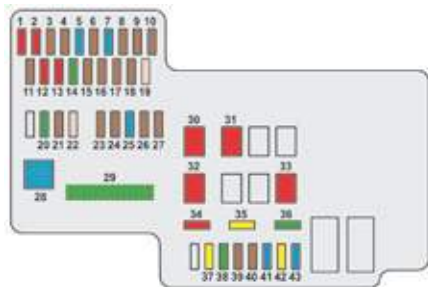

Fuse N°	Rating (A)	Functions
35	20	Spare fuse
36	30	Spare fuse
37	20	Heated rear screen and door mirror heating
38	30	ABS system - VSC system
39	7.5	Instrument panel - Display screen
40	7.5	LED daytime running lamps
41	-	Not used
42	20	Electric fabric roof
43	-	Not used

12 V battery

Procedure for starting the engine using another battery or charging a discharged battery.

General points

Lead-acid starter batteries



Batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste. Take used remote control batteries and vehicle batteries to a special collection point.



Protect your eyes and face before handling the battery. All operations on the battery must be carried out in a well ventilated area and away from naked flames and sources of sparks, so as to avoid the risk of explosion or fire. Wash your hands afterwards.




Before doing any work

Immobilise the vehicle: apply the parking brake, put the gearbox in neutral, then switch off the ignition. Check that all electrical equipment is switched off.



After refitting the battery, the Stop & Start system will only be active after a continuous period of immobilisation of the vehicle, a period which depends on the climatic conditions and the state of charge of the battery (up to about 8 hours).

Access to the battery

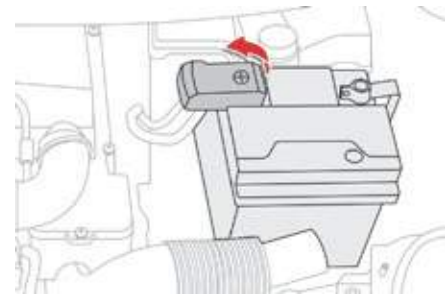

The battery is located under the bonnet.

For access to the (+) terminal:

- ☞ release the bonnet using the interior lever, then the exterior safety catch,
- ☞ raise the bonnet and secure it with its stay,
- ☞ lift the plastic cover for access to the (+) terminal.



Do not push the vehicle to start the engine if you have an ETG electronic gearbox.




The presence of this label, in particular with the Stop & Start system, indicates the use of a 12 V lead-acid battery with special technology and specification; the involvement of a CITROËN dealer or a qualified workshop is essential when replacing or disconnecting the battery.

Starting using another battery

When your vehicle's battery is discharged, the engine can be started using a slave battery (external or on another vehicle) and jump lead cables or a battery booster.

- ! Never try to start the engine by connecting a battery charger. Never use a 24 V or higher battery booster.
- First check that the slave battery has a nominal voltage of 12 V and a capacity at least equal to that of the discharged battery.
- The two vehicles must not be in contact with each other.
- Switch off the electrical consumers on both vehicles (audio system, wipers, lighting, ...).
- Ensure that the jump lead cables do not pass close to moving parts of the engine (cooling fan, belts, ...).
- Do not disconnect the (+) terminal when the engine is running.

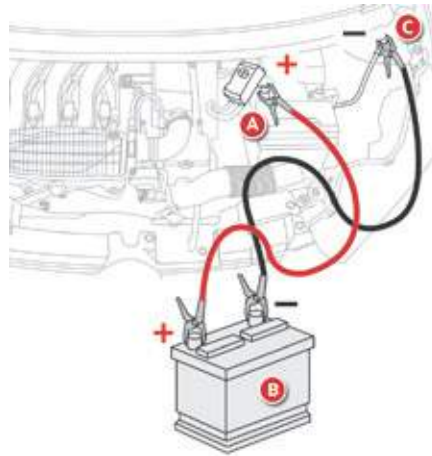

- ☞ Raise the plastic cover on the (+) terminal, if your vehicle has one.
- ☞ Connect the red cable to the positive terminal (+) of the flat battery A (at the metal elbow) then to the positive terminal (+) of the slave battery B or the booster.

- ☞ Connect one end of the green or black cable to the negative terminal (-) of the slave battery B or the booster (or earth point on the other vehicle).
 - ☞ Connect the other end of the green or black cable to the earth point C on the broken down vehicle.
 - ☞ Start the engine of the vehicle with the good battery and leave it running for a few minutes.
 - ☞ Operate the starter on the broken down vehicle and let the engine run.
- If the engine does not start straight away, switch off the ignition and wait a few moments before trying again.
- ☞ Wait until the engine returns to idle then disconnect the jump lead cables in the reverse order.
 - ☞ Refit the plastic cover to the (+) terminal, if your vehicle has one.
 - ☞ Allow the engine to run for at least 30 minutes, by driving or with the vehicle stationary, so that the battery reaches an adequate state of charge.

Before disconnecting the battery

Wait 2 minutes after switching off the ignition before disconnecting the battery.
Close the windows, the fabric roof and the doors before disconnecting the battery.

Following reconnection of the battery

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems. However, if problems remain following this operation, contact a CITROËN dealer or a qualified workshop.

Charging the battery using a battery charger

- ☞ Disconnect the battery from the vehicle.
- ☞ Follow the instructions for use provided by the manufacturer of the charger.
- ☞ Connect the battery starting with the positive terminal (+).
- ☞ Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.


i Some functions, including Stop & Start, are not available if the battery is not sufficiently charged.



Never try to charge a frozen battery. If the battery has been frozen, have it checked by a CITROËN dealer or a qualified workshop, who will check that the internal components have not been damaged and the casing is not cracked, which could cause a leak of toxic and corrosive acid.

Towing the vehicle

! Your vehicle can only be towed from the **front**.

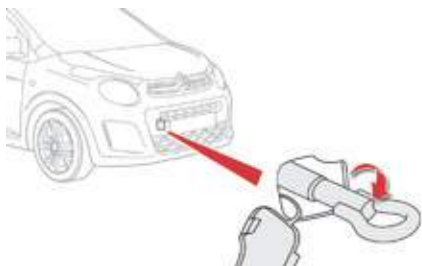

- ☞ Take the removable towing eye stowed in the tool box, under the boot carpet.
- ☞ Unclip the plastic cover, by pressing at the bottom.
- ☞ Fully screw in the towing eye.

- ☞ Install the towing arm.
- ☞ With a manual gearbox: put the gear lever into neutral.
- ☞ With an ETG gearbox: place the selector at position **N**.

Failure to follow this advice may result in damage to certain components (braking, transmission, ...) and the absence of braking assistance when the engine is restarted.

- ☞ Unlock the steering and release the parking brake.
- ☞ Switch on the hazard warning lamps on both vehicles.

! **Never use the radiator crossmember.**

i When being towed, the speed limiter should be deactivated, as well as the "Active City Brake" system (if fitted to your vehicle).



Your vehicle is not designed to tow a trailer or use a towbar.

! General recommendations

Observe the legislation in force in your country.

Ensure that the weight of the towing vehicle is higher than that of the towed vehicle.

The driver must remain at the wheel of the towed vehicle and must have a valid driving licence.

When towing a vehicle with all four wheels on the ground, always use an approved towing arm; rope and straps are prohibited.

The towing vehicle must move off gently. When towing a vehicle with the engine off, there is no longer any power assistance for braking or steering.

In the following cases, you must always call on a professional recovery service:

- vehicle broken down on a motorway or fast road,
- four-wheel drive vehicle,
- when it is not possible to put the gearbox into neutral, unlock the steering, or release the parking brake,
- towing with only two wheels on the ground,
- where there is no approved towing arm available...

Engines

Petrol engine	VTi 68				VTi 68 S&S		PureTech 82	
Gearbox	Manual (5-speed)		ETG electronic (5-speed)		Manual (5-speed)		Manual (5-speed)	
Model code: P...	SCFBB SCFBC	...B1A ...H1A ...P1A ...W1A	SCFBB SCFBC	...B1C ...H1C ...P1C ...W1C	SCFB2 SCFB3	...B1B ...H1B ...P1B ...W1B	AHMTB AHMTC	...B1A ...H1A ...P1A ...W1A
Cubic capacity (cc)	998		998		998		1 199	
Bore x stroke (mm)	71 x 84		71 x 84		71 x 84		75 x 90.5	
EU standard maximum power (kW)*	51		51		51		60	
Max power engine speed (rpm)	6 000		6 000		6 000		5 750	
EU standard max torque (Nm)	95		95		95		118	
Max torque engine speed (rpm)	4 300		4 300		4 300		2 750	
Fuel	Unleaded petrol							
Catalytic converter	Yes							
Engine oil capacity in litres (with filter replacement)	3.2		3.2		3.2		3.25	

...B1: 3-door version.

...P1: 3-door convertible version.

...H1: 5-door version.

...W1: 5-door convertible version.

* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

Weights (in kg)

Engine	VTi 68				VTi 68 S&S		PureTech 82	
Gearbox	Manual (5-speed)		ETG electronic (5-speed)		Manual (5-speed)		Manual (5-speed)	
Model code: P...	SCFBB SCFBC	...B1A ...H1A ...P1A ...W1A	SCFBB SCFBC	...B1C ...H1C ...P1C ...W1C	SCFB2 SCFB3	...B1B ...H1B ...P1B ...W1B	AHMTB AHMTC	...B1A ...H1A ...P1A ...W1A
Kerb weight	840		860		855		865	
Unladen weight*	915		935		930		940	
Gross vehicle weight (GVW)	1 240		1 240		1 240		1 240	
Gross train weight (GTW)	1 240		1 240		1 240		1 240	

...B1: 3-door version.

...H1: 5-door version.

...P1: 3-door convertible version.

...W1: 5-door convertible version.







The design of your vehicle does not permit the fitting of a towbar.

* The unladen weight is equal to the kerb weight + driver (75 kg).

Dimensions (in mm)

These dimensions have been measured on an unladen vehicle.

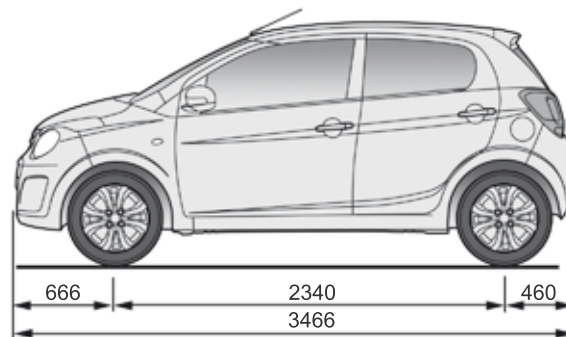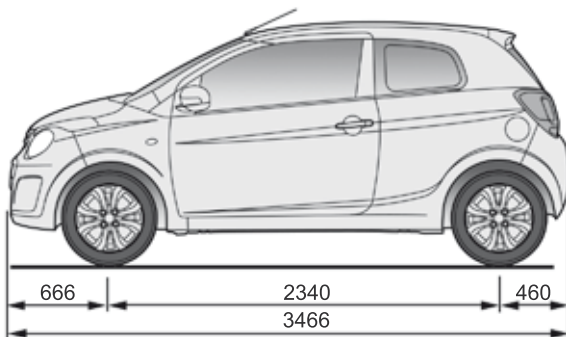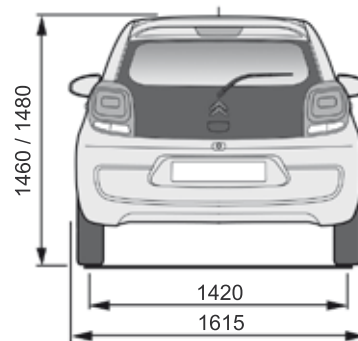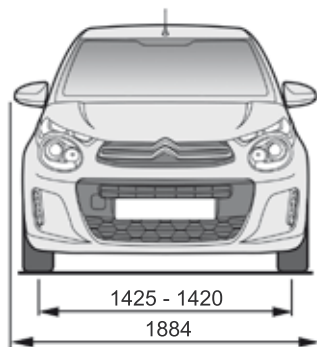

Identification markings

A. Vehicle Identification Number (VIN) on the body.

This number is engraved on the middle door pillar, or the rear door pillar, right hand side.


B. Vehicle Identification Number (VIN) in the passenger compartment.

This is engraved on the crossmember, under the front right seat.


C. Tyre label.

This label on the middle door pillar, driver's side, carries the following information:

- the tyre sizes,
- the tyre pressures.

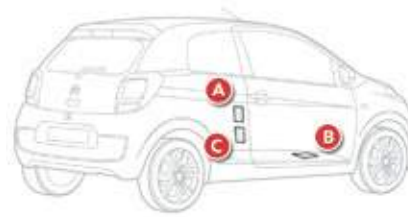

3-door

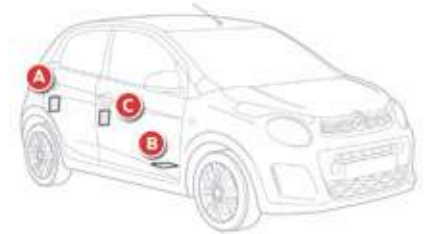

5-door

i The tyre pressures must be checked when cold, at least once a month.

♣ Low tyre pressures increase fuel consumption.

7-inch touch screen tablet

Multimedia system - Bluetooth® telephone - Mirror Screen® - GPS navigation



	Contents
First steps	186
Steering mounted controls	188
Menus	189
Audio source	190
Radio	194
DAB (Digital Audio Broadcasting) radio	196
Media	198
Telephone	202
Configuration	208
Mirror Screen® - iPhone® connections	212
Mirror Screen® - MirrorLink™ connections	216
Navigation	220
Frequently asked questions	231

i The temperature of a telephone may increase when connected by MirrorLink™. In this case, the telephone battery discharges as a safety measure.

! As a safety measure, the driver must carry out operations which require prolonged attention while the vehicle is stationary. To prevent discharging of the battery, the system cuts off following activation of energy economy mode, 20 minutes after switching off the engine on vehicles fitted with the Keyless Entry and Starting system.

First steps

In ACC mode or when starting the vehicle, the system comes on.

Use the button at bottom right of the screen for access to the main menus.

A second press returns the system to the last source activated, then press the virtual buttons in the screen.




i In the event of prolonged exposure to sunlight and very hot conditions, the system may go into stand-by (screen and sound completely off) for at least 5 minutes.

Return to normal operation takes place when the temperature in the passenger compartment drops.




Short-cuts: using virtual buttons in the top bar of the screen, it is possible to go directly to the choice of audio source, telephone functions or "Mirror Screen[®]" mode.

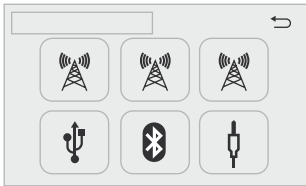

Select audio source (depending on version):

- "FM" / "AM" / "DAB"* radio.
- "USB" player.
- Telephone connected by Bluetooth and with Bluetooth streaming.
- Media player connected to the auxiliary socket (jack, cable not supplied).

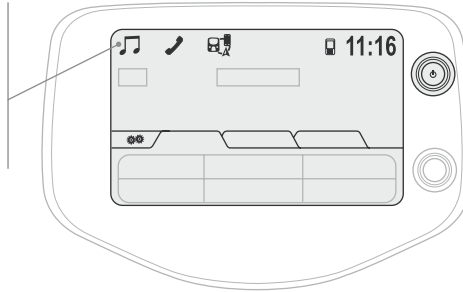

Volume (each source is independent).




Press to mute the sound.
A long press reinitialises the system.

i Pressing with more than one finger is not recognised.
The screen can be used when wearing gloves.

! To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product or a damp cloth.
Do not use pointed objects on the screen.
Do not touch the screen with wet hands.

* Depending on equipment.

Steering mounted controls

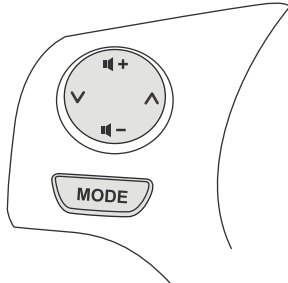

MODE

Change multimedia source.
Press and hold: mute / restore
sound from the radio or pause media
sources.



Radio: change to preset radio
stations in ascending order.
Media: next track.





Radio: change to preset radio
stations in descending order.
Media: previous track.



Increase volume.



Decrease volume.

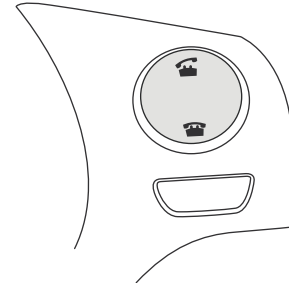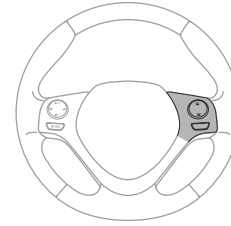

Accept an incoming call.
Other than on a call: press to open
the list of contacts; a second press
opens the calls history.




Reject the incoming call.
End the call in progress.
Other than on a call: press to return
to the radio screen or the clock if the
radio is not active.

Menus



Audio source

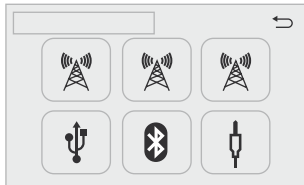

Select an audio source, a radio station, view photos or videos.




Telephone



Connect a telephone by Bluetooth®.




Configuration

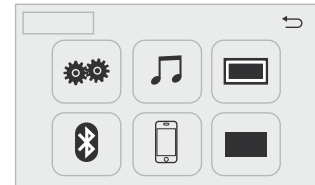

Adjust settings for sounds or brightness and activate or deactivate certain settings according to use.



Connection

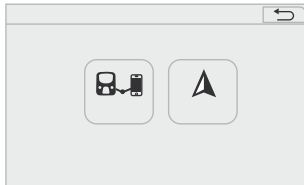


Run certain applications on a your smartphone in the touch screen.

Enter navigation settings and select a destination.






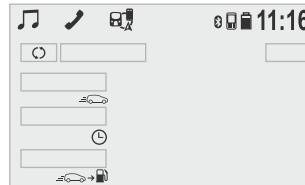



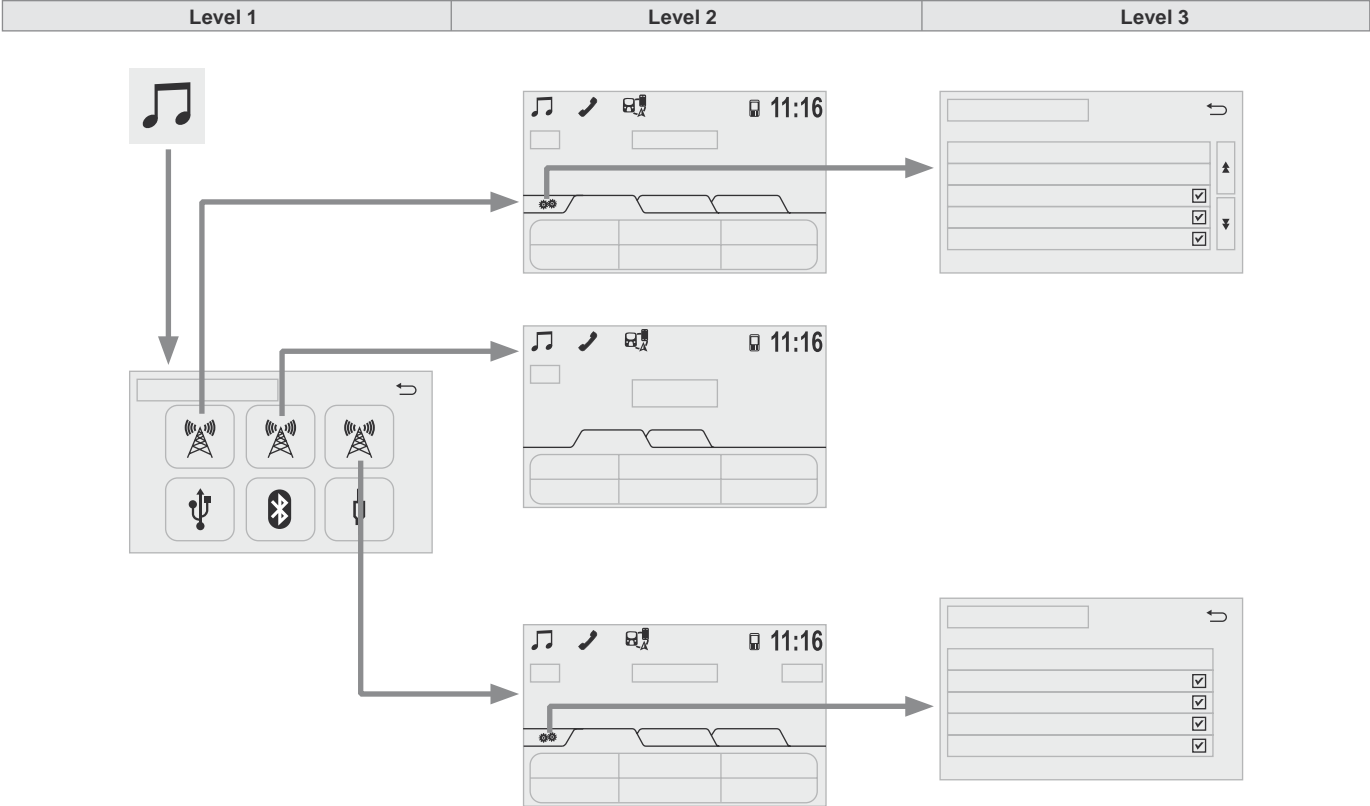

Vehicle information

























Access the trip computer.

Audio source



Level 1		Level 2		Level 3		Comment
 	Audio source ↓ FM	 FM radio configuration		Update the list of stations	Update the list to take account of reception.	
				List of stations	Choose to list by "Broadcaster" or "Alphabetic".	
			<input checked="" type="checkbox"/>	FM traffic announcements	Activate or deactivate options.	
			<input checked="" type="checkbox"/>	FM alternative frequencies		
			<input checked="" type="checkbox"/>	Change regional code		
		<input checked="" type="checkbox"/>	FM radiotext			
	Presets		List of preset stations.			
	Stations		List of radio stations received.			
	Manual		Search for stations step by step or automatically.			
 	Audio source ↓ AM		Presets		List of preset stations.	
			Manual		Search for stations step by step or automatically.	
 	Audio source ↓ DAB	 DAB radio configuration		Update the list of stations	Update the list to take account of reception.	
			<input checked="" type="checkbox"/>	L-Band	Activate or deactivate options.	
			<input checked="" type="checkbox"/>	DAB traffic announcements		
			<input checked="" type="checkbox"/>	DAB alternative frequencies		
		<input checked="" type="checkbox"/>	DAB radiotext			
			Presets		List of preset stations.	
			Stations		List of radio stations received.	
	Manual		Search for stations step by step or automatically.			

Level 1		Level 2		Level 3		Comment
 	Audio source ↓ USB		 Scan			Choose the play setting.
			 Random play			
			 Repeat play			
			 Previous track			
			 Play			
			 Next track			
 	Audio source ↓ Bluetooth audio	 Telephone			First connection, refer to the telephone section.	
		 Audio play	 System configuration			Activate or deactivate options.
			 Random play			Choose the play setting.
			 Repeat play			
			 Previous track			
			 Play			
			 Next track			
 	Audio source ↓ A / V	 Screen format			Choose the most suitable screen format.	
				Normal		
				Stretched		
				Zoom		
		 Full screen			Display in full screen mode.	

Radio

Selecting a station



Press on "**Audio source**" to display the carousel of sound sources.



Select "**FM**".



Select the "**Station**" tab then select a radio station from the stations received.



Select "**FM radio configuration**" then "**Update the list of stations**" to refresh the list.



If necessary, select change of source by pressing on the "**Audio source**" shortcut in the upper bar of the carousel.



Select "**AM**" or "**DAB**".*



The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS alternative frequencies mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

Changing a radio frequency



Press on "**Audio source**" to display the carousel of sound sources.



Select "**FM**".



Select the "**Manual**" tab to search for a station.



Press the step by step buttons to search for frequencies up or down.

OR



Press the automatic buttons to search for frequencies up or down.

OR



Turn the button at bottom right of the screen to search for frequencies up or down.

* Depending on equipment.

Preset a station



Select a radio station or frequency (refer to the "Changing a frequency" section).



Select the "**Presets**" tab then make a long press on one of the numbered preset locations.

Activate/ Deactivate RDS



Press on "**Audio source**" to display the carousel of audio sources.



Select "**FM**".



Select "**FM radio configuration**".




Activate/deactivate "**Change of regional code**".



RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

DAB (Digital Audio Broadcasting) radio

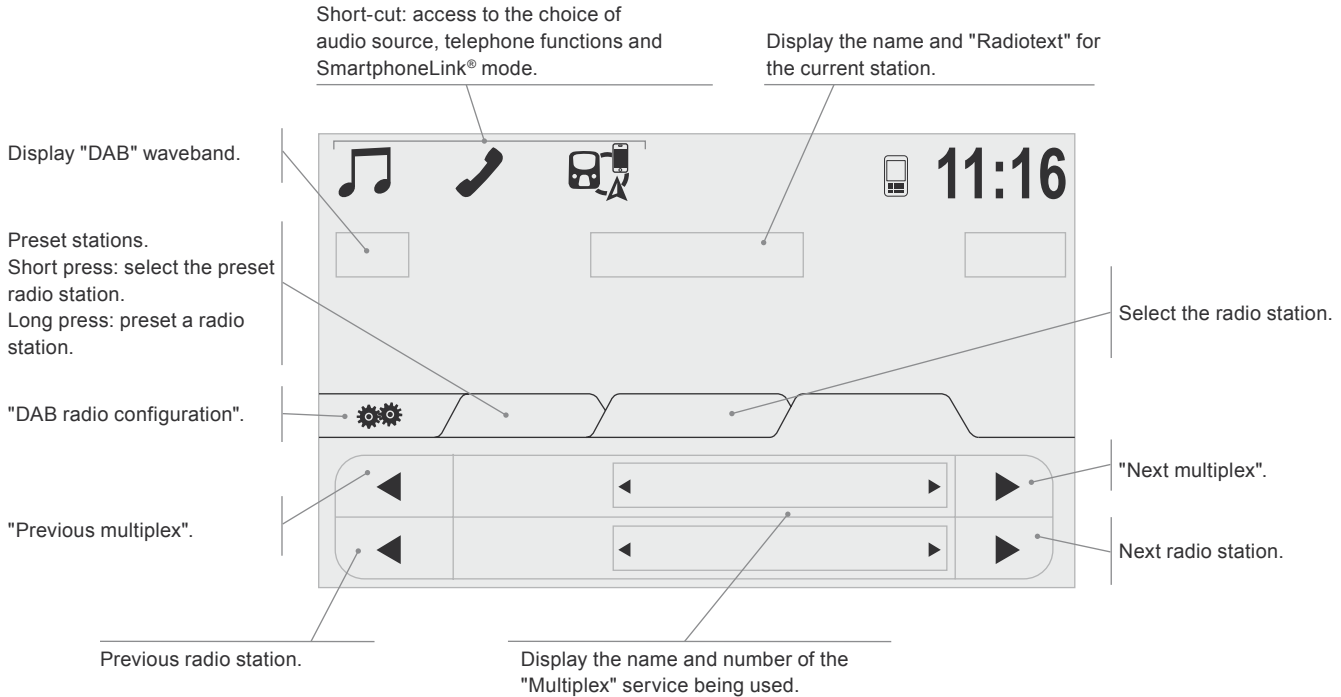

i If the "DAB" radio station being listened to is not available, the "FM" waveband appears in the screen.

Digital radio

! Digital radio provides higher quality reception and also the display of additional information (album artwork...) on the radio station being listened to. Select "DAB" in the carousel of audio sources. The range of multiplexes available is displayed in alphabetical order.



Press on "**Audio source**" to display the carousel of sound sources.



Select "**DAB**".



Select "**DAB radio configuration**".



Activate "**L-band**".



Select the "**Station**" tab then select a station from those received.



Select the "**Manual**" tab to search for a station.



Press on "**Audio source**" to display the carousel of audio sources.



Select "**DAB**".



Select "**DAB radio configuration**".



Activate "**Alternative DAB frequency**".

DAB / FM station tracking

i Digital radio does not cover 100% of the territory. When the digital signal is weak, the "**Alternative DAB frequency**" option makes it possible to continue listening to the same station, by automatically switching to the corresponding "FM" station (if there is one).




If "**Alternative DAB frequency**" tracking is activated, there is a difference of a few seconds when the system switches to the "FM" analogue radio station with sometimes a variation in volume. When the digital signal is restored, the system automatically changes back to "DAB".



If the "DAB" station being listened to is not available, or if "**L-band**" is not activated, the sound will cut out while the digital signal is too weak.

Media

USB player

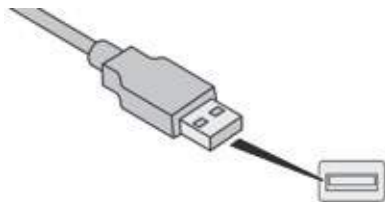

Insert a USB memory stick into the USB port or connect a USB peripheral device to the USB port using a suitable cable (not supplied).

Auxiliary (A/V) input



Connect a portable device (MP3 player...) to the auxiliary JACK socket using an audio cable.

- ! The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection. Reduce the number of non-music files and the number of folders to reduce the waiting time. The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the audio system memorises these lists and if they are not modified, the loading time will be shorter.

Selection of source



Press on "**Audio source**" to display the carousel of audio sources.



Select the "**USB**" auxiliary source.

OR



Select the "**A/V**" auxiliary source.



Use the play settings at the bottom of the screen.



Pressing the "**MODE**" button at the steering mounted controls changes to the next media, available if the source is active.

Information and advice

The audio system plays files with the extension:

".wma", type Ver7 and Ver8 with bit rate between 48 and 192 Kbps and type Ver9 with bit rate between 48 and 320 Kbps.


".aac", with bit rate between 16 and 320 Kbps.

".mp3 - MPEG1" with bit rate between 32 and 320 Kbps and ".mp3 - MPEG2" with bit rate between 8 and 160 Kbps.

The sampling rates supported are 11, 22, 44 and 48 KHz.


Use only USB memory sticks formatted FAT32 (File Allocation Table).


It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.

 The system accepts USB mass storage devices or Apple® players via the USB ports. The adaptor cable is not supplied.

Control of the peripheral device is with the audio system controls.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).

 The system can alternatively read files via the Bluetooth® system and the USB port.

 It is recommended that the USB cable for the portable device is used.

Audio streaming

i Streaming allows audio files on your telephone to be played via the vehicle's speakers.


Connect the telephone: see the "**Telephone**" section, then "**Bluetooth**".
Choose either "**Connect all**" or "**Connect as audio player**" profile.

If play does not start automatically, it may be necessary to start audio play from the telephone.

Control is from the peripheral device or by using the audio system controls.

! Once connected for streaming, the telephone is considered as a media source.
It is recommended that "**Repeat**" mode be activated in the Bluetooth device.

Connecting Apple® players

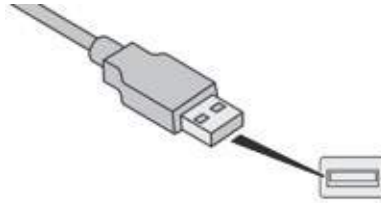


Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.









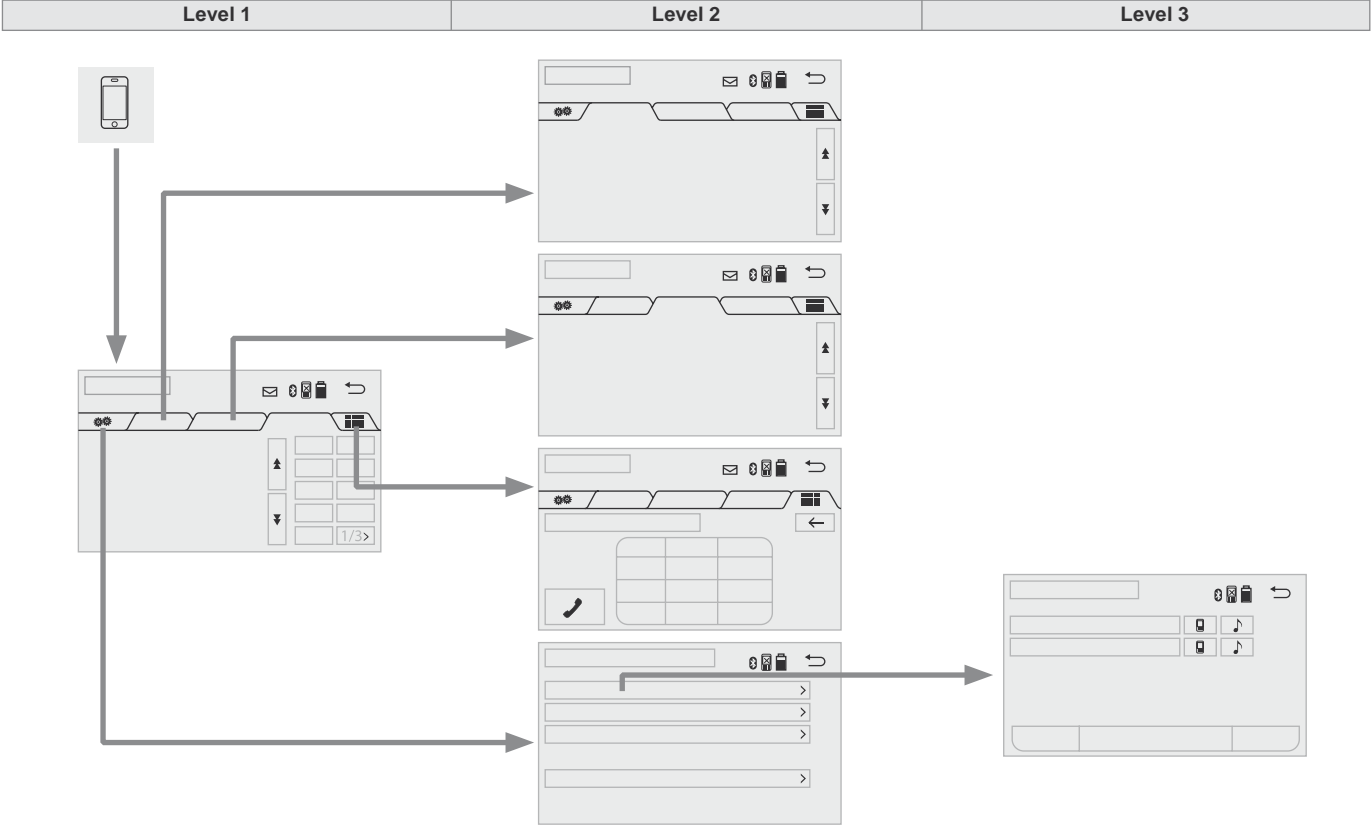





Control is via the audio system.

i The classifications available are those of the portable device connected (artists / albums / genres / tracks / playlists / audio books / podcasts). The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

! The version of software in the audio system may not be compatible with the generation of your Apple® player.

Telephone



Level 1		Level 2		Level 3		Comment		
	Contacts					After making choices, start the call.		
	Favourites							
	Call history							
	Enter a number		Call			Enter a number then start the call.		
		>	Connect the telephone		Telephone	Choose settings, activate or deactivate options.		
					Audio player			
		>	Sounds configuration	>	Ringtone			
							Ringtone volume	
				>	Incoming SMS/MMS tone			
							Incoming SMS/MMS volume	
				>	Incoming e-mail tone			
							Incoming e-mail volume	
							Incoming call volume	
		>	Contacts/ call history configuration	<input checked="" type="checkbox"/>	Automatic transfer			
				>	Update telephone contacts			
				>	Sort contacts by			
				>	Add favourite			
				>	Remove favourite			
		>	Message configuration	>	Display of incoming calls			
<input checked="" type="checkbox"/>	Contacts/call history transfer state							
>	Telephone display configuration	>	Display of incoming calls					
		<input checked="" type="checkbox"/>	Contacts/call history transfer state					

Pairing a Bluetooth® telephone

! As a safety measure and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).



Press on "**Audio source**" to display the carousel of audio sources.



Select "**Bluetooth audio**".



Select "**Bluetooth configuration**".



Select the "**Add**" tab in the system.

A waiting screen is displayed with the Bluetooth settings of the system and a default Bluetooth PIN.

Once detected, select the name of the system in your telephone.

i If the telephone is not detected, it is recommended that you switch the Bluetooth function on your telephone off and then on again.

Enter the PIN code in the telephone then accept the connection (depending on the telephone).

The system displays that the services to be used on the telephone are: "**Telephone**" and "**Audio player**".

The system offers to connect the telephone:

- with "**Connect all**",
- with "**Connect as telephone**" (hands-free kit, telephone only),
- with "**Connect as audio player**" (streaming: wireless play of audio files on the telephone).



To change the connection choice, Select "**Telephone**".



Select the "**Telephone/message configuration**" tab.



Select "**Connect telephone**".

Select the telephone in the list.

Select your choice.



Press "**OK**" to confirm.

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

! The profiles compatible with the system are: HFP, OPP, PBAP, A2DP, AVRCP, MAP.

Automatic reconnection

When the ignition is switched on, the last telephone connected when the ignition was switched off reconnects automatically, if this connection had been activated during the pairing procedure (see previous pages).

Connection is confirmed by the display of a message and the name of the telephone.

Managing paired telephones

i This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press "**Telephone**".



Select "**Telephone/message configuration**".



Select "**Connect telephone**" to display the list of paired devices.

Select "**Remove**" then select the device in the list and confirm.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on this steering mounted button to accept an incoming call.



Press on this steering mounted button to reject a call or to end a call.

Making a call

Calling a new number

! Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.



Press on "**Telephone**".



Press the keypad tab.



Enter the phone number using the keypad then press the telephone button to start the call.

Calling a contact



Press on "**Telephone**".

 
OR



Press this steering mounted button to open the list of contacts.



Select the "**Contacts**" tab.



Select the desired contact from the list offered to start the call.

Calling a recently used number



Press on **"Telephone"**.

 
OR



Press this steering mounted button to open the list of contacts; a second press opens the calls history.



Select the **"Calls history"** tab.



Select the desired contact from the list offered to start the call.

Managing contacts / Entries



Press on **"Telephone"** to display the primary page.



Select **"Telephone/message configuration"**.



Select **"Contacts config./calls history"**.



Select:

- **"Automatic transfer"** to automatically transfer the contacts from your smartphone or telephone.
- **"Update telephone contacts"** to update the list of contacts.
- **"Sort contacts by"** to sort by first or second name.
- **"Add favorites"** to add favorites to the list in the system.
- **"Remove favorite"** to remove favorites from the list in the system.

Ringtones



Press on **"Telephone"**.



Select **"Telephone/message configuration"**.









 
Select **"Sound configuration"** to display the list of audio sources.




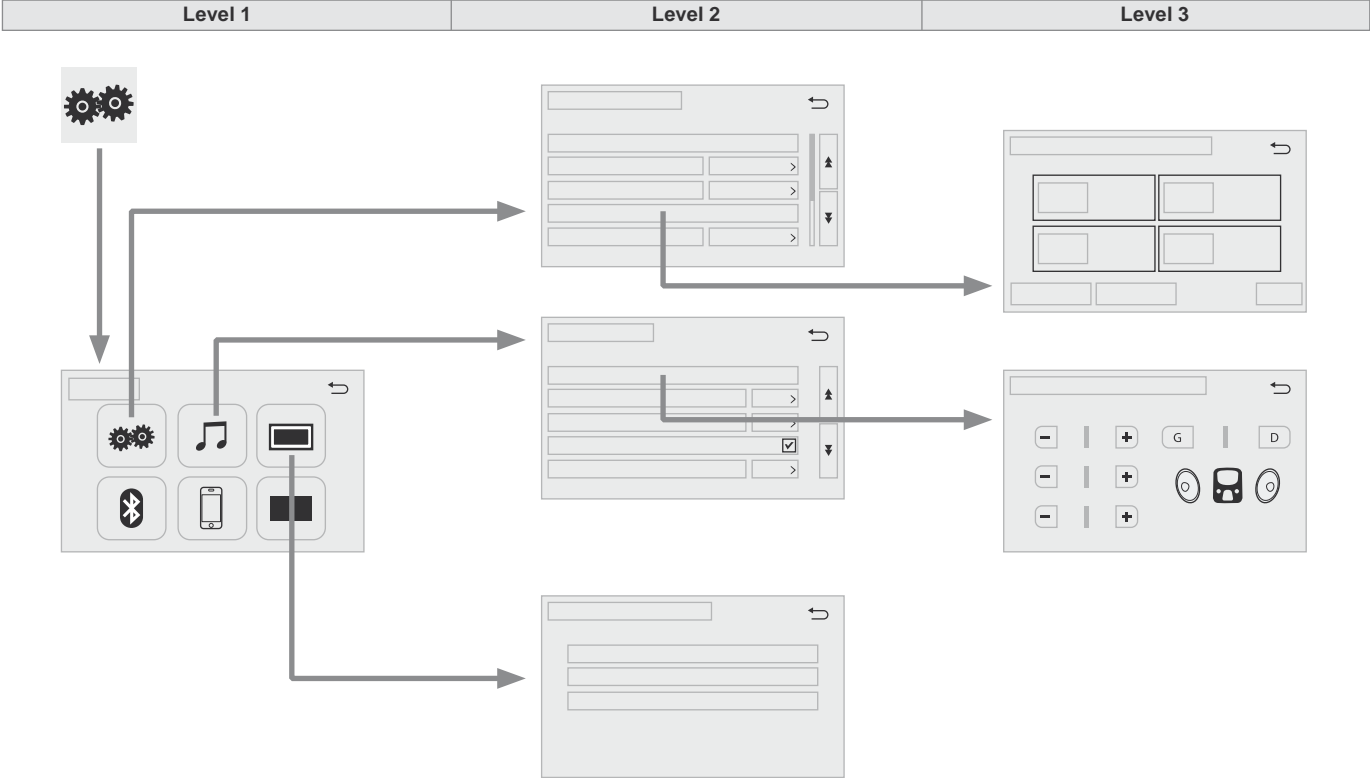







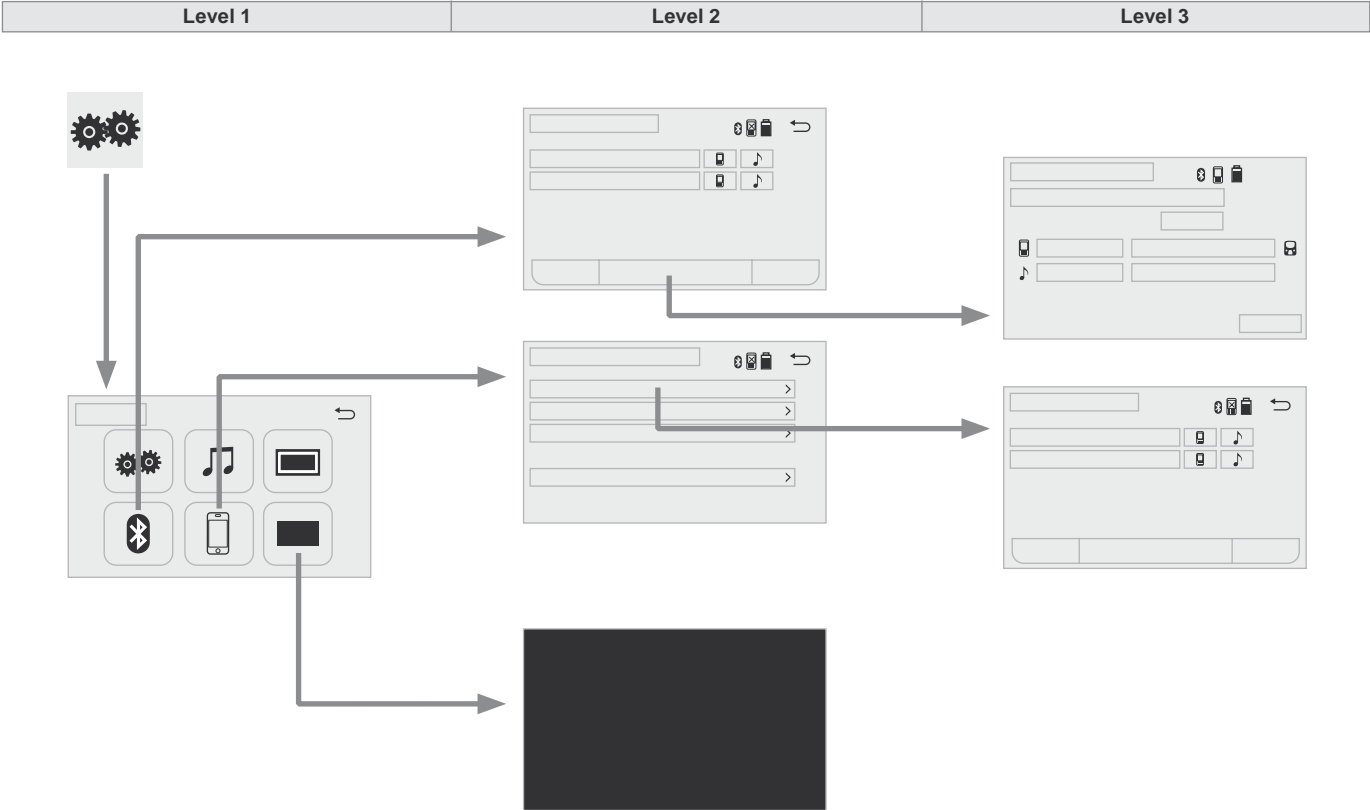

You can select the ringtone used and adjust its volume.

Configuration




Level 1		Level 2		Level 3		Comment	
 	Configuration ↓ General	Clock	OK	OK		Save settings.	
		Language	<input checked="" type="checkbox"/>				Select the language.
		Beep	<input checked="" type="checkbox"/>				Activate or deactivate beep mode.
		Personalise the startup image			Transfer		Store images in a folder initially called "Startupimage", before copying them to the system.
					Delete all		
			OK	OK			Save the settings.
		Animation	<input checked="" type="checkbox"/>				Activate or deactivate animation mode.
		Delete personal data			Delete		Choose settings, activate or deactivate options.
			Do not delete				
Update software							
Software information							
 	Configuration ↓ Audio	Bluetooth audio sound configuration				Choose settings.	
		iPod® sound input	<input checked="" type="checkbox"/>	USB		Activate or deactivate iPod® sound inputs.	
			<input checked="" type="checkbox"/>	AUX			
		Video input mode	<input checked="" type="checkbox"/>	NTSC		Activate or deactivate the video input modes.	
			<input checked="" type="checkbox"/>	PAL			
		<input checked="" type="checkbox"/> Sleeve configuration					Activate or deactivate sleeve configuration.
Automatic sound adjustment	<input checked="" type="checkbox"/>	Off		Activate or deactivate the automatic sound adjustment modes.			
	<input checked="" type="checkbox"/>	Low					
	<input checked="" type="checkbox"/>	Medium					
	<input checked="" type="checkbox"/>	High					
 	Configuration ↓ Display	General				Select the display configuration.	
		Video					



Level 1		Level 2		Level 3		Comment	
 	Configuration ↓ Bluetooth		Telephone			Select the services to use on the peripheral device.	
			Audio player				
			Add				Connect a new peripheral device.
		System configuration		Telephone	Select the services to use on the peripheral device.		
				Audio player			
	Cancel						
	Remove				Disconnect and remove a peripheral device from the list.		
 	Configuration ↓ Telephone		Connect the telephone			See the telephone section.	
			Sounds configuration				
			Contacts/call history configuration				
			Message configuration				
			Telephone display configuration				
 	Configuration ↓ Screen off					Select this mode to switch off the screen, touch the screen to restore.	


Mirror Screen® - iPhone® connections

Using the USB port and JACK auxiliary socket

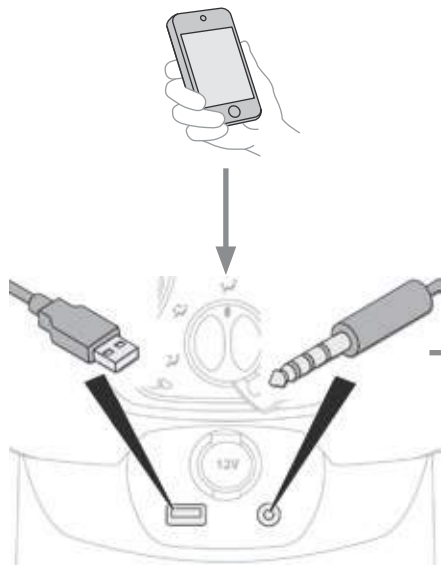

i As a safety measure and because it requires the sustained attention of the driver, using a smartphone while driving is prohibited.
It is preferable to secure the smartphone so that it cannot become a projectile.
Operations must be carried out **with the vehicle stationary**.

! Connection between the system and a smartphone by Mirror Screen allows the driver to operate certain applications on the smartphone in the screen.
The principles and standards are constantly changing; for information on supported smartphones, go to the CITROËN website in your country.
Select MyCITROËN if present.

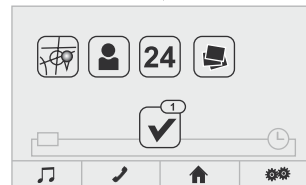



Download the "**AppinCar**"[®] smartphone application available from the App Store[®].
The download of the application must be done **with the vehicle stationary**.

i As a safety measure and for ease of use:

- certain applications on your smartphone are not carried over to the system screen.
- certain applications operate only when the vehicle is stationary.



Connect the smartphone to the USB port or JAKK auxiliary socket using a suitable cable, available as an accessory from CITROËN dealers.



Start the "**AppinCar**"[®] application from your smartphone.



 
Press on "**Connection**" in the system.



Press on "**Smartphone**".



During the procedure, a page showing the terms and conditions for use is displayed.
Accept to start and end the connection.












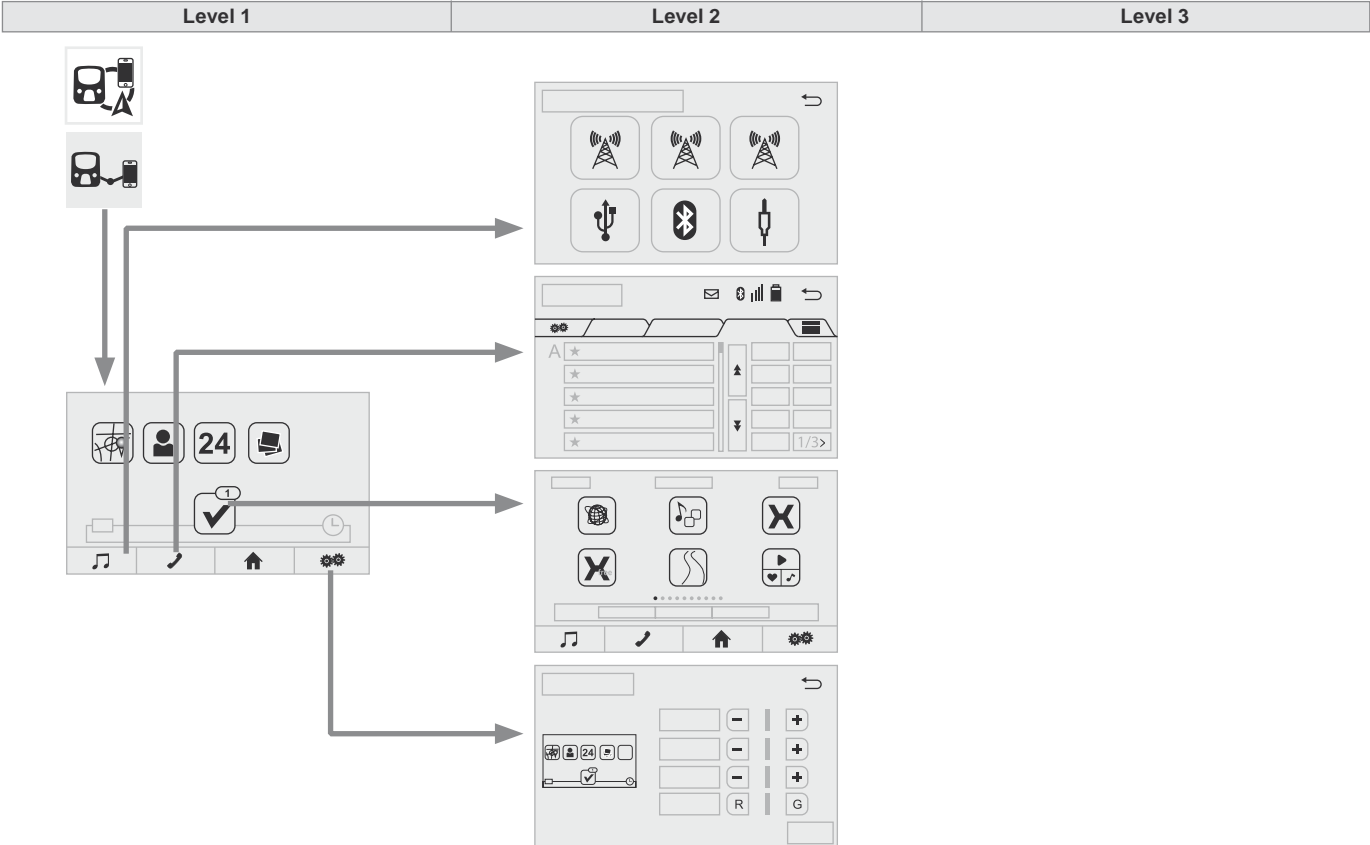









Once connected you can use certain applications on your smartphone as well as the functions of your system: "**Audio source**", "**Telephone**" and configure the "**Display (video)**".



It is recommended that both connections be used: USB / Apple[®] and Bluetooth[®].
The smartphone charges while connected.






Level 1		Level 2		Level 3	Comments
 	Connection ↓ Audio source	 FM			Choose the audio source. Choose settings, activate or deactivate options.
		 AM			
		 DAB			
		 USB			
		 Bluetooth audio			
		 A / V			
 	Connection ↓ Telephone	Contacts			After making choices, start the call. Choose settings, activate or deactivate options.
		Favorites			
		Call history			
		 Enter a number			
		 Telephone/message configuration			
 	Connection ↓ AppinCar®				Use the "AppinCar®" applications via the system.
 	Connection ↓ Home				Return to the "Connection" menu home page.
 	Connection ↓ Display (video)	+ - Brightness			Choose the settings.
		+ - Contrast			
		+ - Tone			
		+ - Color			
		OK OK			Save the settings.


Mirror Screen® - MirrorLink™ connections

Using the USB port

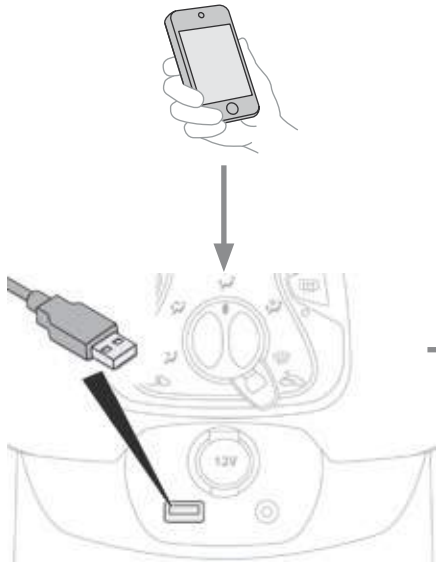

i As a safety measure and because it requires the sustained attention of the driver, using a smartphone while driving is prohibited.
It is preferable to secure the smartphone so that it cannot become a projectile.
Operations must be carried out **with the vehicle stationary**.

! Connection between the system with a smartphone by Mirror Screen allows the driver to operate certain applications on the smartphone in the screen.
The principles and standards are constantly changing; for information on supported smartphones, go to the CITROËN website in your country.
Select MyCITROËN if present.

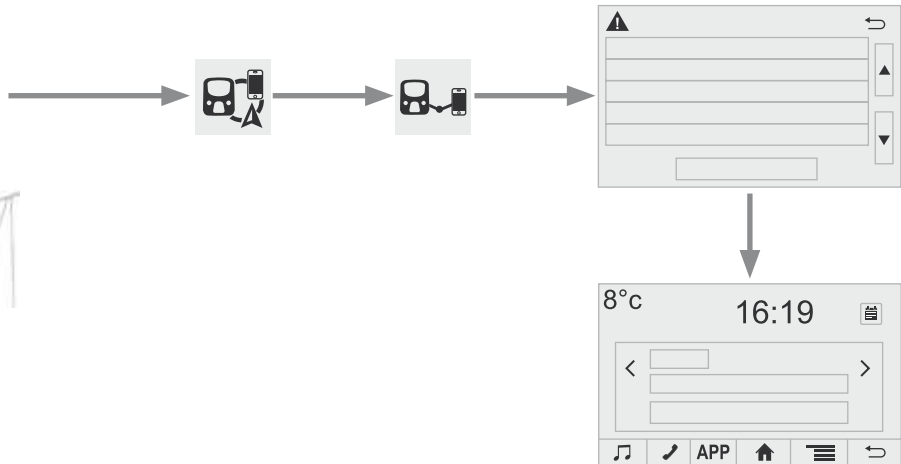



Depending on the model of your smartphone, the manufacturer may require you to first download a dedicated application. The download of the application must be done **with the vehicle stationary**.

i As a safety measure and for ease of use:

- certain applications on your smartphone are not carried over to the system screen.
- certain applications operate only when the vehicle is stationary.



Connect a compatible smartphone to the USB port using the USB supplied with the smartphone.



 
Press on **"Connection"** in the system.



Press on **"Smartphone"**.



During the procedure, a page showing the terms and conditions for use is displayed. Accept to start and end the connection.












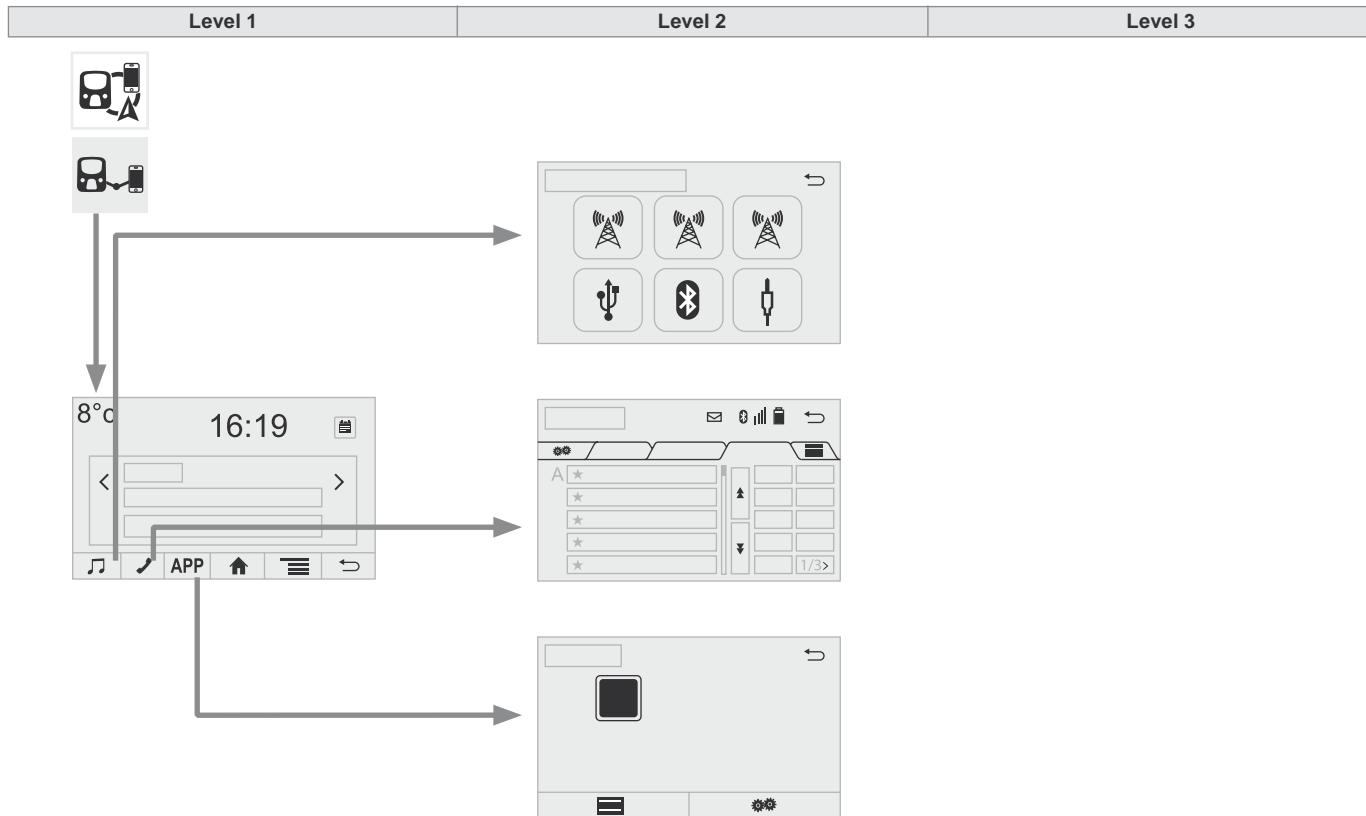





Once connected you can use certain applications on your smartphone as well as the functions of your system: **"Audio source"**, **"Telephone"**.




It is recommended that both connections be used: USB / MirrorLink™ and Bluetooth®. The smartphone charges while connected.









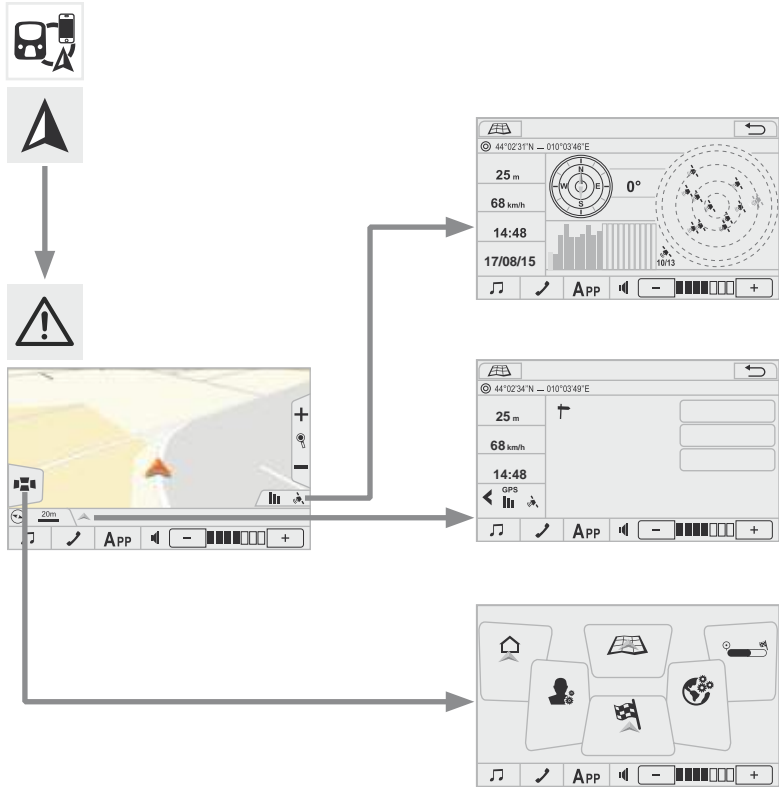










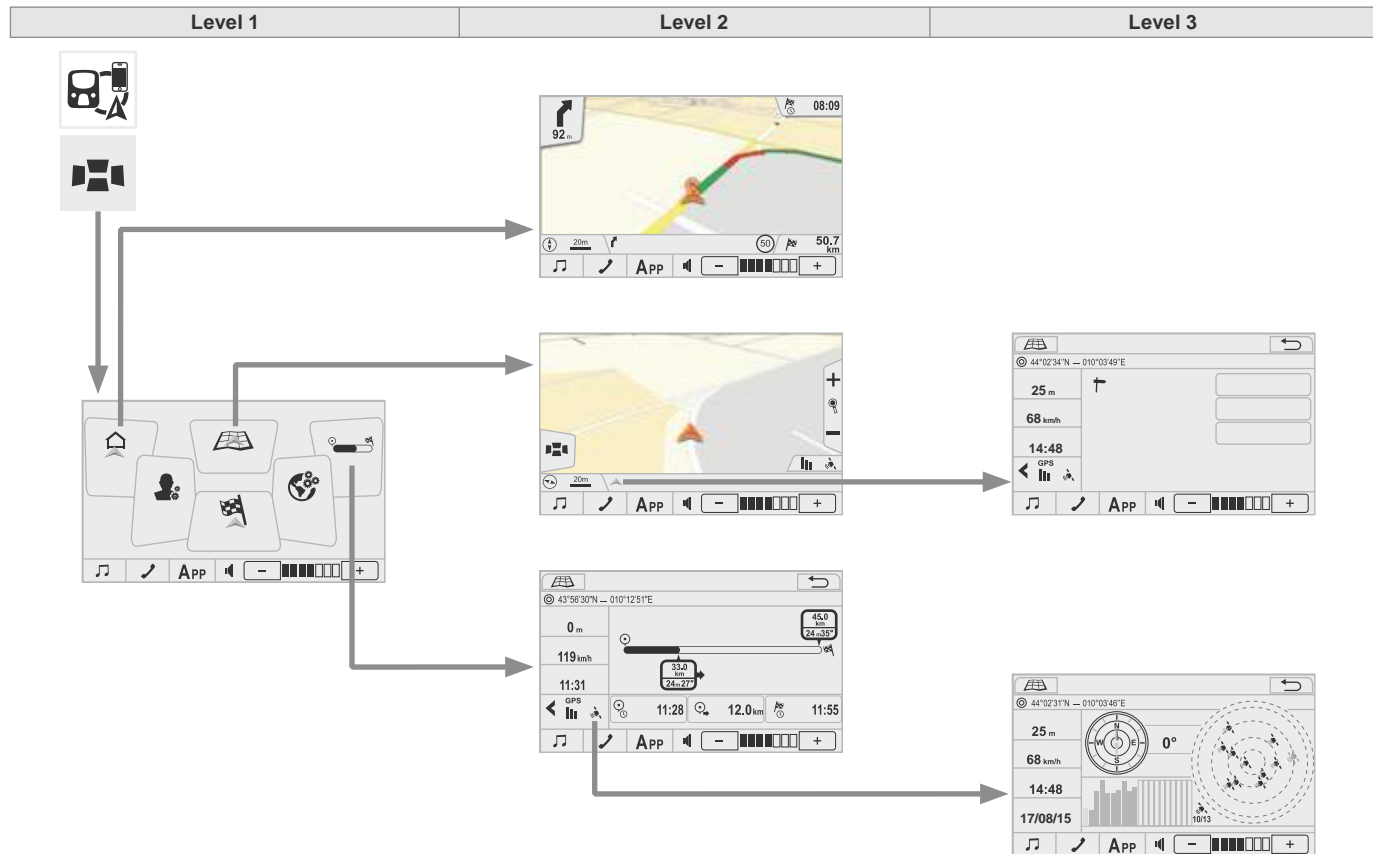


























Level 1		Level 2		Level 3	Comments
 	Connection ↓ Audio source	 FM			Choose the audio source. Choose the settings, activate or deactivate options.
		 AM			
		 DAB			
		 USB			
		 Bluetooth audio			
		 A / V			
 	Connection ↓ Telephone		Contacts		After making choices, start the call. Choose the settings, activate or deactivate options.
			Favorites		
			Call history		
			Enter a number		
			Telephone/message configuration		
	Connection ↓ MirrorLink™				Use the "MirrorLink™" applications via the system.
	Connection ↓ Home				Return to the "Connection" menu home page.


Navigation









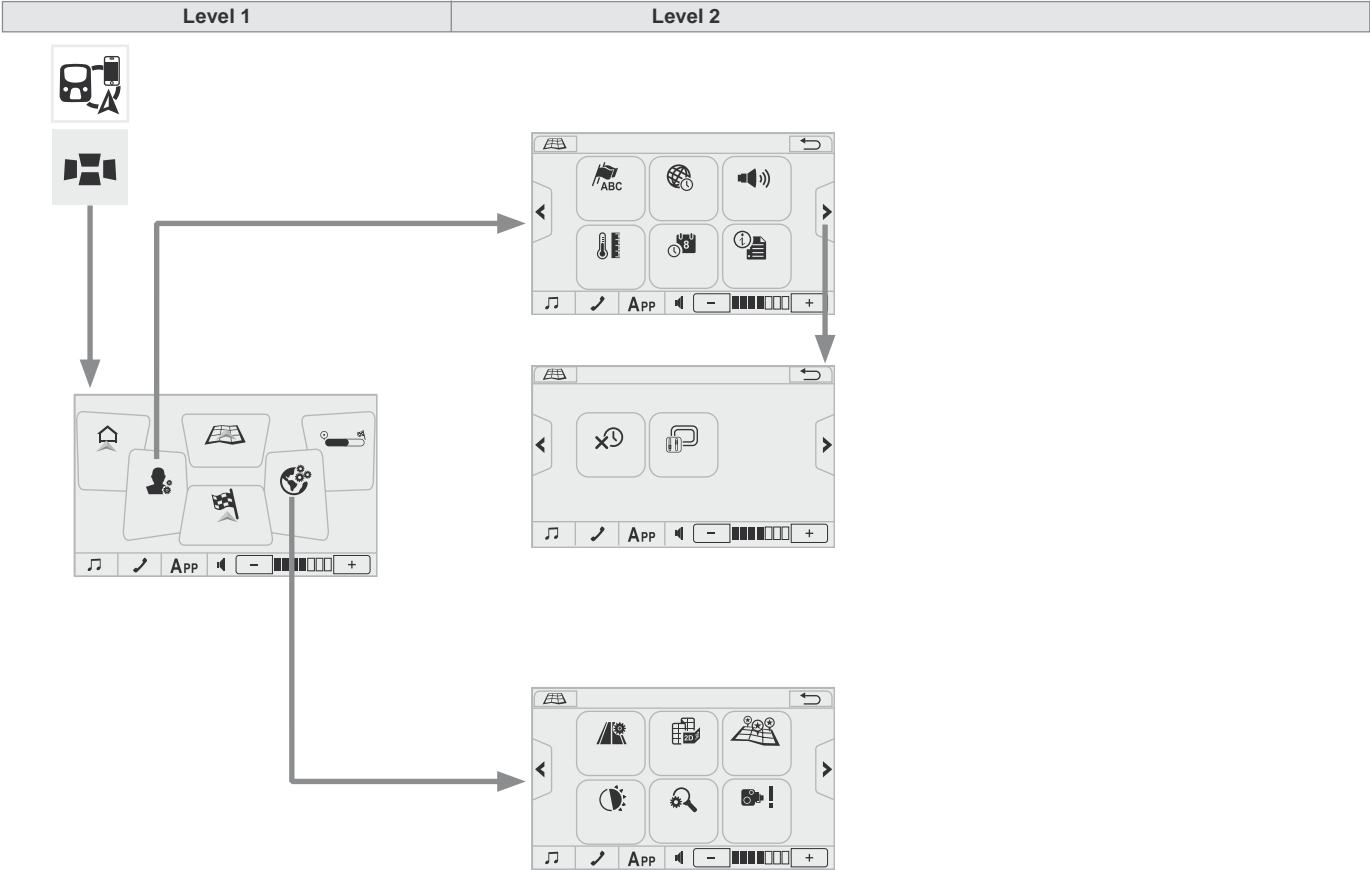












Level 1		Level 2		Comments
 	Connection ↓ GPS			The compass is available only with a fixed position.
		0°		The direction is available only with a fixed position.
				The representation of the sky is facing north, as for the compass.
				The satellite icons are represented in yellow for a weak signal and in green for a strong signal.
				The satellite signal levels are represented in yellow for a weak signal and in green for a strong signal.
 	Connection ↓ Page info		Search for POI nearby	Display the information on your current position and select the desired settings.
			Add to favorites	
			Set as home	
			GPS	
 	Connection ↓ Navigation		Return home	Create a route to a place set as "Home".
			Map	Go directly to the map page.
			Route overview	Display an overview of your route.
			User settings	Display the system preferences (language, units, ...).
			Go to	Search for and set a destination.
			Map settings	Display the route and map display preferences.









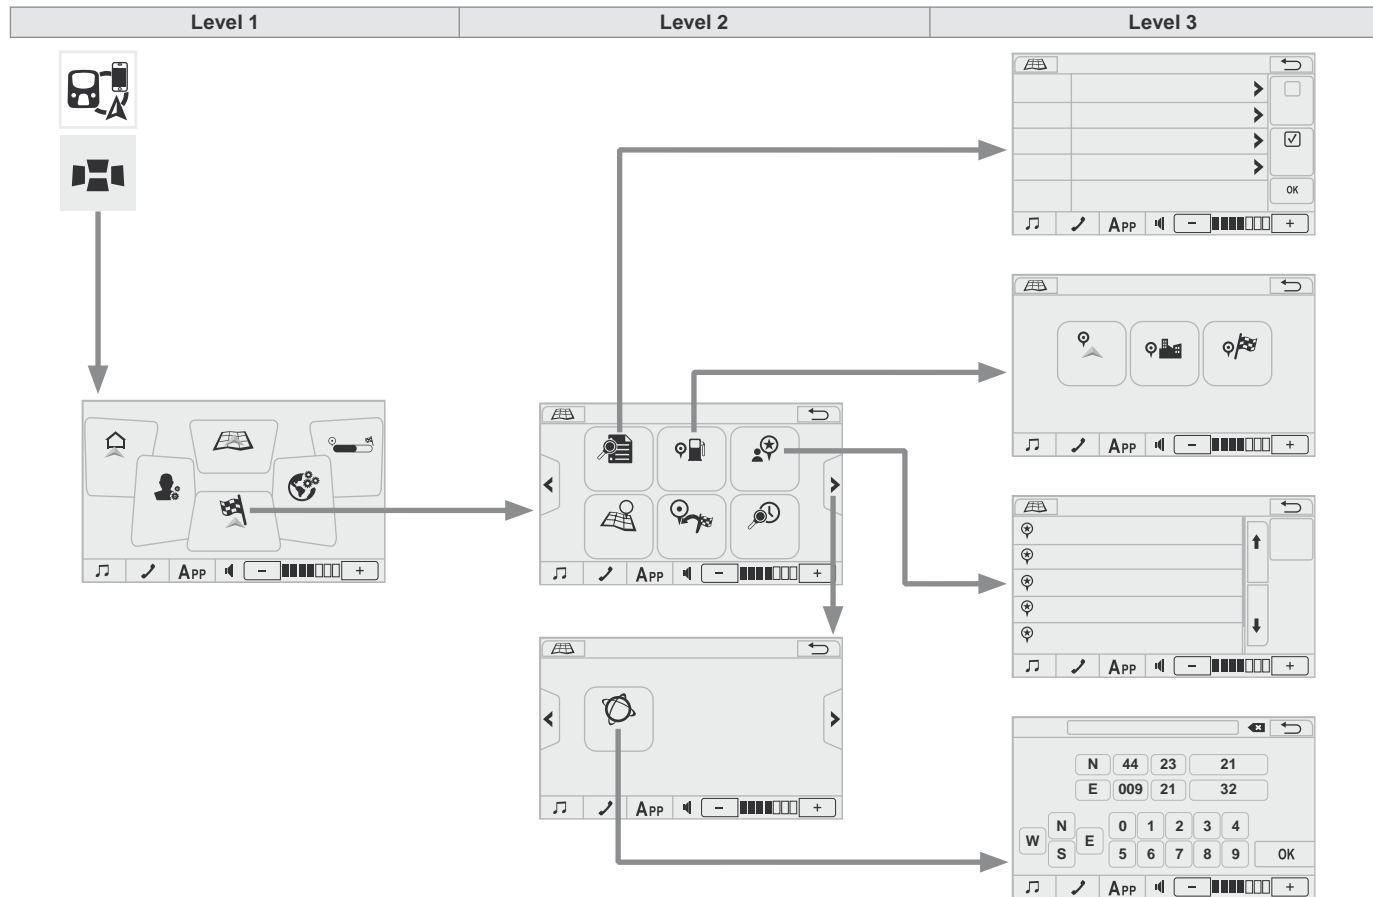





Level 1		Level 2		Level 3		Comments
 	Navigation ↓ Return home					Press the change of direction indicator to open the list of changes of direction.
						Press the time information area to alternate the information displayed: estimated time of arrival / remaining time.
						Press the distance information area to alternate the information displayed: remaining distance / distance travelled.
 	Navigation ↓ Map					Go directly to the navigation menu.
						Map orientation and scale.
						Press to zoom in.
						Press to zoom out.
						Indicates the strength of the GPS signal.
					Search for POIs nearby	Display the information on your current position and select the desired settings.
			Add to favourites			
			Set as home			
 	Navigation ↓ Route overview					Point of departure
						Display the distance and information on the duration of the journey.
						Display the total distance and information on the total duration of the journey.
						Point of arrival.
						Departure time.
						Distance travelled.
						Estimated time of arrival.



Level 1		Level 2		Comments
  Navigation ↓ User settings		Language	Display the list of text languages available.	
		Time zone	Display the list of time zones.	
		Volume	Set the volume for voice instructions, with "Test" and "Mute" (off) buttons.	
		Units	Change between metric and imperial units for distance and altitude.	
		Date and time format	dd/mm/yyyy or mm/dd/yyyy 12.00 (midday) + 12.00 (midnight) or 24.00.	
		Regarding	Display information on the navigation system: mapping software version.	
		Delete recent items	Delete recent destinations.	
		Reinitialisation	Return the navigation system to the default settings. This does not affect your list of "Favorites".	
  Navigation ↓ Map settings		Route settings	Route calculation options: this allows certain types of roads to be avoided, such as toll roads or pedestrianised areas.	
		Map display	Display options: north up in 2D, vehicle direction up in 2D or 3D.	
		Icons on the map	Hide or display icons for POIs on the map.	
		Colours	Map colour options: daylight or night view.	
		Automatic zoom	Activate or deactivate the automatic zoom option.	
		Speed check	Activate or deactivate the speed check alert.	



Level 1		Level 2		Level 3		Comments
  Navigation ↓ Go to		Address or postcode			Select settings and enter the destination address.	
		POI		Nearby	Select settings and enter the destination address.	
				Near city	Allows a town or city to be entered using a virtual keypad.	
				Near destination	Available only with an active route.	
		Favorites			Displays the list of favorites. At first use, the list is empty.	
		Select on map			Allows the map to be explored and an item to be set as the destination.	
		Return to the point of departure			Allows a route to be calculated back to the last point of departure.	
		Recent items			Displays the list of recent destinations.	
	Coordinates		Latitude	Allows a destination to be set using its latitude and longitude coordinates.		
			Longitude			

Choosing a new destination

Towards a new destination



Press on "**Connection**" in the system.



Select "**NAVI**".



 
Select "**Navigation**".



Select "**Go to**".



Select "**Address or postcode**".



Select the "**Country**" from the list offered, then in the same way, the "**City**" or its "**Postcode**".



 
Enter the "**Street**" and the "**House number**".
Press "**OK**" to confirm.



Once the address has been entered, press "**OK**" to confirm.



In the contextual menu, press the "**Go to**" button.



Select your route from the list offered.



Press "**OK**" to start navigation.

Towards a recent destination



Press on "**Connection**" from the system.



Select "**NAVI**".



 
Select "**Navigation**".



Select "**Go to**".



Select "**Recent items**".



Scroll through the list using the arrows and select the desired address.

Towards points of interest (POI)

Points of Interest (POI) are listed under different categories.



Press on **"Connection"** from the system.



Select **"NAVI"**.



Select **"Navigation"**.



Select **"Go to"**.



Select **"POI"**.

Choose the search option and select the POI in the list of categories:



"Nearby",

or



"Near city",

or



"Near destination",

or

Enter a name using the virtual keypad, with the **"Search by name"** option.



Press **"OK"** to confirm.

Towards a point on the map



Press on "**Connection**" from the system.



Select "**NAVI**".



Select "**Navigation**".



Select "**Go to**".



Select "**Select on map**".



Move around the map by dragging with a finger.

Tap the desired item to place the cursor on it.



Press the "**Go to**" button on the left of the map.



Select your route from the list offered.



Press "**OK**" to start navigation.

Towards GPS coordinates



Press on "**Connection**" from the system.



Select "**NAVI**".



Select "**Navigation**".



Select "**Go to**".



Press on the secondary page.

Select "**Coordinates**".



Tap on each field (Degrees, Minutes, Seconds) to modify it, entering the values using the virtual keypad.



Press "**OK**" to confirm.

Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

Telephone, Bluetooth®

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at www.citroen.co.uk (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode on your telephone does not permit sending SMS text messages to the system.	

USB, portable player

QUESTION	ANSWER	SOLUTION
There is a long waiting period following the connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example). The system interprets this information as the name of the station.	

Settings, configuration

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, USB...).	For optimum sound quality, the audio settings (Volume, Treble, Medium, Bass) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, USB...).	Check that the audio settings are adapted to the sources listened to. It is advisable to select automatic sound adjustment (Low, Medium, High). Check the quality and format of your recording.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system changes to economy mode and switches off to preserve the state of charge of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

Audio system



	Contents
Audio system glossary	236
First steps	239
Steering mounted controls	241
Radio	242
DAB (Digital Audio Broadcasting) radio	243
Media	245
Telephone	247
Bluetooth®	249
Settings	250
Frequently asked questions	251

! As a safety measure, the driver must only carry out operations which require prolonged attention while the vehicle is stationary. To preserve the state of charge of the battery, on vehicle fitted with "Keyless Entry and Starting" the audio system switches off following activation of energy economy mode, 20 minutes after stopping the engine.

Audio system glossary

Menu item	Significance / Corresponding action
Add contacts	Add a contact.
Add SD	Associate a button with a contact.
All calls	All calls: incoming, outgoing, missed.
ASL Mid/Low/High/Off	Adjust the audio ambience (mid / low / high).
AUX On/Off	Activate or deactivate AUX (Auxiliary) mode.
Back	Return to previous step.
Balance	Adjust the audio balance.
Bass	Adjust the bass level.
Bluetooth info	Information related to Bluetooth in the system.
BT Power On/Off	Activate or deactivate automatic Bluetooth connection mode.

Menu item	Significance / Corresponding action
BTA	Bluetooth audio.
BTA - BT audio player not found	The system does not recognise the audio player via Bluetooth.
Call volume	Adjust the telephone volume.
Car device info	System information.
Clock	Set the time.
Delete	Delete.
Delete call history	Delete the history of calls.
Delete contact	Delete a contact in the directory.
Delete phonebook	Delete a directory.
Device address	Address of the system.

Menu item	Significance / Corresponding action
Device name	Name of the system.
DAB	Digital radio.
Dial by number	Enter a telephone number.
Disconnect	Disconnect your telephone.
Display Setting	Activate or deactivate automatic display of connections.
Enter new passkey	Enter a new password.
FM AF On/Off	Activate or deactivate FM AF mode.
FM List	Display the list of FM stations.
FM TA On/Off	Activate or deactivate FM TA mode - alert messages.
HF Sound Setting	High frequency sound setting.

Menu item	Significance / Corresponding action
Incoming calls	Incoming calls.
List Audio	Display the list of registered audio devices.
List Phone	Display the list of registered telephones.
Missed calls	Missed calls.
No entry	No data available.
No history	No history available.
Not connected	Not connected.
Outgoing calls	Outgoing calls.
Overwrite all	Replace all.
Pairing	Connect a device by Bluetooth.

Menu item	Significance / Corresponding action
Passkey	Change the password.
Phonebook	Phone directory.
Radio	Display radio mode.
Region Code	Activate or deactivate RDS mode.
Reset	Reset settings.
Reset all	Reset all.
Ringtone	Choose a ringtone
Ringtone volume	Adjust the ringtone volume.
Searching	Searching...
Select	Select.

Menu item	Significance / Corresponding action
Setup	Settings.
Skip	Go to the next step.
Sound Setting	Display the sound settings.
Speed dials	Speed dialling.
TA	Traffic announcements.
TEL	Display the list of telephone settings.
Transfer history	Transfer the calls history.
Treble	Adjust the treble level.
Update	Update the list.
Updating	Updating...

First steps

Audio system with Bluetooth®



On/Off.
Volume (each source is independent).



Accept an incoming call.



Reject an incoming call.
End call.



AM radio buttons 1 to 6: select a preset radio station.

FM buttons 1 to 5: select a preset radio station.

FM list: display the radio stations received.

Press and hold: preset a radio station.

Back: abandon current operation, up on level in the menu.

MENU

Display menu and set options.

Rotate: scroll through a list or change radio station.

Press: confirm the option displayed in the screen.

MODE

Select AM, FM and DAB* wavebands.

Select the BTA (Bluetooth Audio) and AUX (auxiliary) source.



Select:

- the next radio frequency up automatically.
- the next line in a list or a menu.
- the next media folder.



Select:

- the next radio frequency down automatically.
- the previous line in a list or a menu.
- the previous media folder.

* Depending on equipment.

Audio system



On/Off.
Volume (each source is independent).



AM radio buttons 1 to 6: select a preset radio station.
FM radio buttons 1 to 5: select a preset radio station.
FM list: display the radio stations received.
Press and hold: preset a radio station.
Back: abandon the current operation, go up one level in a menu.

SEEK FILE

Select:

- the next radio frequency up/down automatically.
- the previous/next line in a list or a menu.

MENU

Display menu and set options.
Rotate: scroll through a list or change radio station.
Press: confirm the option displayed in the screen.


MODE

Select AM and FM wavebands.
Select the BTA (Bluetooth Audio) and AUX (Auxiliary) source.

FOLDER

Select previous/next media folder.

Steering mounted controls

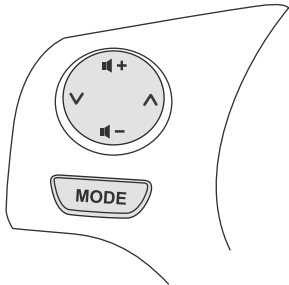

MODE

Select AM and FM wavebands and BTA (Bluetooth Audio) and / or AUX (Auxiliary) sources.
 Press and hold: Mute / restore sound from the radio or pause media sources.



Radio: change to preset radio stations in ascending order.
 Media: next track.





Radio: change to preset radio stations in descending order.
 Media: previous track.



Increase volume.



Decrease volume.

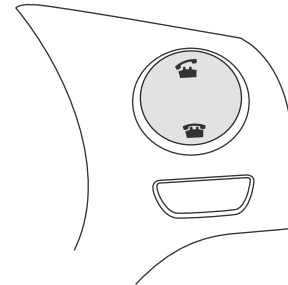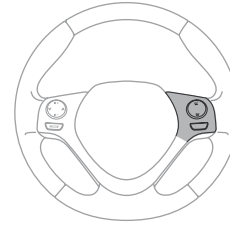

Accept an incoming call.





Reject the incoming call.
 End the call in progress.


Radio


Selecting a station


MODE Press on "**MODE**" to select the FM or AM waveband.

 Briefly press one of the buttons to carry out an automatic search down/up for radio stations.

 Turn the dial to carry out a manual search down/up for radio stations.


 In FM mode, press the "**List**" button to display the list of stations received locally.


 Press one of the buttons to select the chosen radio station then confirm.

 Press on "**Update**" to refresh the list.

Presetting a station

MODE Press on "**MODE**" to select the FM or AM waveband.

 Briefly press one of these buttons to start an automatic search up/down for frequencies.


 Press and hold one of the buttons to preset the current radio station. The name of the station is displayed and an audible signal confirms the preset.


i The surroundings (hills, buildings, tunnel, parking, under ground...) may prevent reception, including RDS alternative frequencies, frequency search. This phenomenon is normal in the propagation of radio waves and does not in any way imply a fault with the audio system.


Alternative frequencies (AF) / RDS

i When alternative frequencies (AF) is activated, the system selects the best RDS frequency (Region code) for the station being listened to. However, in certain conditions, tracking of a station is not available throughout the whole country, as radio stations do not cover 100% of the country. When reception becomes poor, the frequency changes to a regional station.

MENU Press on "**MENU**" to display the list.

 Turn the knob to select "**Radio**" then press to confirm.

 Turn the knob to select "**FM AF**" then press to activate or deactivate the frequency.

 Turn the knob the select "**Region Code**" then press to activate or deactivate.

DAB (Digital Audio Broadcasting) radio

Receiving TA messages

i The TA (Traffic Announcement) function gives priority to playing alert messages on the state of the traffic. To be active, this function requires good reception of a radio station that broadcasts this type of message. As soon as traffic information is broadcast, the media playing is interrupted automatically to transmit the TA message. Normal play of the media is restored after transmission of the message.

MENU

Press on "**MENU**" to display the list.



Turn the knob to select "**Radio**", press to confirm.



Select "**FM AF**", press to switch traffic announcements on or off.

Digital radio

i Digital radio provides higher quality reception and also additional categories of traffic announcements (TA INFO). The range of multiplexes (sets of analogue messages and digital data combined in a single signal) available is displayed in alphabetical order.

MODE

Press on "**MODE**" to select the DAB waveband.



Briefly press one of the buttons to automatically search down/up for stations.



Turn the knob to manually search down/up for stations.



In DAB mode, press the "**Text**" button to display RadioText (TXT) for the current station.



Press and hold a button to preset (save) the station being listened to. The name of the station is displayed and an audible signal confirms the preset.

DAB / FM station tracking

i Digital radio does not cover 100% of the country. When the digital signal is weak, the alternative DAB frequency option, "**DAB AF**", makes it possible to continue listening to the same station, by automatically switching to the corresponding "FM" station (if there is one).

MENU

Press on **MENU** to display the list.



Turn the knob to select "**Radio**" then press to confirm.




Turn the knob to select "**DAB AF**", press to activate or deactivate the frequency.

i If "**DAB AF**" tracking is activated, there is a difference of a few seconds when the system switches to the "FM" analogue radio station with sometimes a variation in volume. When the digital signal is restored, the system automatically changes back to "DAB".

i If the "DAB" station being listened to is not available, or if "**DAB AF**" is not activated, the sound will cut out while the digital signal is too weak.

Media

USB player

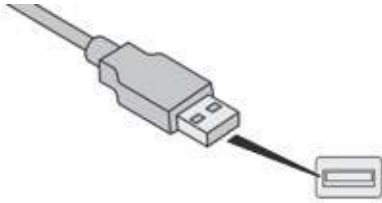

Insert a USB memory stick into the USB port or connect a USB peripheral device to the USB port using a suitable cable (not supplied).

Auxiliary (AUX) socket



Connect a portable device (MP3 player...) to the auxiliary JACK socket using an audio cable.

Information and advice

The audio system plays files with the extension: ".wma", type Ver7 and Ver8 with bit rate between 48 and 192 Kbps and type Ver9 with bit rate between 48 and 320 Kbps. ".aac", with bit rate between 16 and 320 Kbps. ".mp3 - MPEG1" with bit rate between 32 and 320 Kbps and ".mp3 - MPEG2" with bit rate between 8 and 160 Kbps. The sampling rates supported are 11, 22, 44 and 48 KHz.

Use only USB memory sticks formatted FAT 32 (File Allocation Table).

It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.

! The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection. Reduce the number of non-music files and the number of folders to reduce the waiting time. The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the audio system memorises these lists and if they are not modified, the loading time will be shorter.

The system accepts USB mass storage devices or Apple® players via the USB ports. The adaptor cable is not supplied.

Control of the peripheral device is with the audio system controls.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).

The system can alternatively read files via the Bluetooth® system and the USB port.

i It is recommended that the USB cable for the portable device is used.

Audio streaming

Streaming allows audio files on your telephone to be played via the vehicle's speakers.

Connect the telephone: see the "**Telephone**" section.



Select "Bluetooth", then "**Pairing**".

You can also view, activate or deactivate system settings related to the Bluetooth function.




Press on "**MENU**" to display the list.



Turn the knob to select "Bluetooth", press to display the list.

i Once connected for streaming, the telephone is considered as a media source. If play does not start automatically, it may be necessary to start audio play from the telephone.

Connecting Apple® players

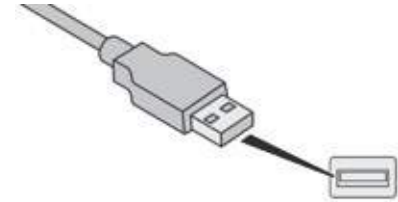

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

The classifications available are those of the portable device connected (artists / albums / genres / tracks / playlists / audio books / podcasts).

The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.

Telephone

Pairing a Bluetooth® telephone

! As a safety measure and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

Switch on the Bluetooth function of your telephone and ensure that it is "visible to all" (telephone configuration).

MENU

Press on "**MENU**" to display the list.



Turn the knob to select "**Bluetooth**", press to display the list.



Turn the knob to select "**Pairing**", press to display the system name and code.

Using the telephone's keypad, enter the PIN displayed in the screen of the system or confirm in the telephone the PIN displayed.

i If the operation fails, we recommend switching the Bluetooth function of your telephone off and then on again.

Information on progress is displayed during the operation. Once the procedure has been successfully completed, a list appears with the "**TEL**" option. You can then enter the settings for each of these functions*.

MENU

Press on "**MENU**" to display the list.



Turn the knob to select "**TEL**", press to display the list.



Turn the knob to select "**Phonebook**", press to confirm.



Turn the knob to select "**Add contacts**", press to confirm.



Turn the knob to select "**Overwrite all**", press to confirm.



Select "**YES**" to save the settings.



Press this button to navigate through the telephone menu.



You can quit at any time by pressing this button.

* If your telephone is fully compatible.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Press this button to accept the incoming call.

Making a call



Press this button to navigate in the telephone menu.



Select "**Phonebook**" to go to your contacts, then navigate using the knob.



To dial a number, select "**Enter a phone num**" in the list.

Ending a call



To reject or end a call, press this button.

List of telephone menus

MENU Press on **MENU**, turn the knob to select "**TEL**", then press to display the list and move through the menus using this knob.

Level 1	Level 2	Level 3	Corresponding action
TEL	Phonebook	Add contacts	Add a contact.
		Add SD	Associate a button with a contact.
		Delete call history	Delete the history of calls.
		Delete contact	Delete a contact in the directory.
		Delete phonebook	Delete the directory.
	HF Sound Setting	Call volume	Adjust the volume for calls.
		Ringtone volume	Adjust the ringtone volume.
		Ringtone	Choose the ringtone.
	Transfer history	Overwrite all	Replace all.

Bluetooth®

List of Bluetooth® menus

MENU Press on **MENU**, turn the knob to select "**Bluetooth**", then press to display the list and move through the menus using this knob.

Level 1	Level 2	Level 3	Corresponding action
Bluetooth	Pairing	-	Connect a portable device by Bluetooth.
	List Phone	-	Display the list of registered telephones.
	List Audio	-	Display the list of audio devices registered.
	Passkey	Enter new passkey	Change or enter a password.
	BT Power	-	Activate or deactivate automatic Bluetooth connection mode.
	Bluetooth info	Device name Device address	Information related to Bluetooth in the system.
	Display Setting	-	Activate or deactivate automatic display of connection.
	Reset	Reset all Sound Setting Car device info	Reset settings.

Settings

System settings



Press on "**MENU**" to display the list of options.



Turn the dial to select "**Bluetooth**", press to display the list of Bluetooth settings.



Turn the knob to select "**Pairing**", press to display the list.



Press the corresponding button to change or confirm the options.

Audio settings



Press on "**MENU**" to display the list of options.



Turn the knob to select "**Sound Setting**", press to display the list of settings for activating or deactivating options:

- "**Bass**"
- "**Treble**"
- "**Balance**"
- "**ASL**"



The audio settings are different and independent for each audio source.

Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

Telephone, Bluetooth®

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at www.citroen.co.uk (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode on your telephone does not permit sending SMS text messages to the system.	

USB, portable player

QUESTION	ANSWER	SOLUTION
There is a long waiting period following the connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example). The system interprets this information as the name of the station.	

Settings, configuration

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, USB...).	For optimum sound quality, the audio settings (Volume, Treble, Medium, Bass) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, USB...).	Check that the audio settings are adapted to the sources listened to. It is advisable to select automatic sound adjustment (Low, Medium, High). Check the quality and format of your recording.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system changes to economy mode and switches off to preserve the state of charge of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

A

ABS 107, 108
 Accessories 142
 Access to rear seats (3-door) 47
 Active City Brake 110
 Adjusting seats 46
 Adjusting the air distribution 54, 55, 58
 Adjusting the air flow 54, 55, 58
 Adjusting the temperature 54, 55, 57, 58
 Adjusting the time 29, 30
 Advice on care and maintenance 152
 Advice on driving 70
 Airbags 18, 118
 Airbags, curtain 121, 122
 Airbags, front 118, 122
 Airbags, lateral 120, 122
 Air conditioning 9, 53
 Air conditioning, automatic 57
 Air conditioning, manual 55
 Air intake/recirculation 56, 58
 Air vents 52
 Anti-lock braking system (ABS) 107, 108
 Audible warning 106
 Audio streaming (Bluetooth) 201, 246
 Audio system 235
 Auxiliary 65, 198, 245

B

Battery 151, 177-179
 Battery, charging 179
 Battery, electronic key 37
 Battery, remote control 33

Bluetooth (telephone) 204, 247
 Bonnet 146
 Boot 39
 Brake discs/pads 152
 Brake lamps 166
 Bulbs (changing) 163

C

Cable, audio 198, 245
 Capacity, fuel tank 138
 CD 199
 Central locking 32, 34, 38
 Changing a bulb 163
 Changing a fuse 168
 Changing a wheel 158
 Changing a wiper blade 144
 Changing the electronic key battery 37
 Changing the remote
 control battery 33
 Checking the levels 148-150
 Checking tyre pressures
 (using the kit) 156
 Checks 147, 152
 Children 117, 119, 123-127
 Child lock 137
 Child seats,
 general 123-125
 Child seats,
 conventional 129
 Child seats, ISOFIX 133
 Closing the boot 39

Closing the doors 35
 Clutch 151
 Connection, iPhone 212
 Connection, MirrorLink 216
 Control, emergency
 boot release 40
 Control stalk,
 lighting 98
 Control stalk, wipers 104
 Courtesy lamp 62
 Cup holder 63

D

DAB (Digital Audio Broadcasting) -
 Digital radio 196, 243
 Daytime running lamps 99, 163
 Deactivating
 the passenger airbag 119
 Demisting/defrosting, front 60
 Demisting/defrosting, rear 61
 Dimensions 183
 Dipstick 148
 Direction indicators 103, 164, 166
 Display screen,
 instrument panel 13
 Door pockets 63
 Doors 38
 Driving economically 9
 Dynamic stability
 control (DSC) 17, 24, 107-109

E

Eco-driving	9
Electronic brake force distribution (EBFD)	107, 108
Emergency braking assistance (EBA)	107
Emergency warning lamps	106
Energy economy mode	141
Engine compartment	147
Engine	139, 147, 181, 182
Environment	9, 33, 47, 53, 61, 95, 150, 179

F

Filling the fuel tank	138, 139
Filter, air	151
Filter, oil	151
Filter, passenger compartment	151
Fitting a wheel	161
Fittings, boot	68
Fittings, interior	63
Flashing indicators	103, 164, 166, 167
Foglamp, rear	100, 166
Folding the rear seat backrest	48
Folding/unfolding the door mirrors	50
Frequency (radio)	194, 242
Fuel	26, 138, 139
Fuel consumption	9, 28
Fusebox, dashboard	170
Fusebox, engine compartment	173
Fuses	168

G

Gauge, fuel	13, 26, 138
Gearbox, ETG	9, 77, 152
Gearbox, manual	9, 76, 83, 151
Gear efficiency indicator	81
Gear lever, manual gearbox	76
Glossary, audio system	236
Glove box	63, 64

H

Hazard warning lamps	106
Headlamp adjustment	103
Headlamps, automatic illumination	99, 101
Headlamps	98, 164
Head restraints, rear	49
Heating	54, 55, 57
Hill start assist	82
Hooks	69
Horn	106

I

Identification	184
Immobiliser, electronic	75
Indicator lamps, operation	21
Indicators, direction	103

J

Jump starting	178
---------------------	-----

K

Key	31, 71
Key, electronic	34
Keyless Entry and Starting	34, 72
Kit, hands-free	204, 247
Kit, temporary puncture repair	69, 153

L

Lamp, boot	62
Lamps, front	163, 164

Lamps, rear	166
Lane Departure Warning System (LDWS)	93
Level, brake fluid	150
Level, engine coolant	149
Level, engine oil	148
Levels and checks	147-150
Level, screenwash fluid	150
Lighting dimmer	27
Lighting, guide-me home	102
Loading	9
Locating your vehicle	32
Locking/unlocking a door from the inside	38
Low fuel level	17, 26, 138

M

Maintenance, routine	9, 148
Manual mode	77
Mat	66
Menu (touch screen tablet)	189, 190, 202, 208, 220
Mirror, rear view	51
Mirrors, door	50
Mirror, vanity	64
Mode, driving	77
Mode, easy (automatic mode)	77
Mountings, Isofix	132

N

Navigation	220
Number plate lamps	167

O

Opening the bonnet	146
Opening the boot	34, 39
Opening the doors	34

P

Pads, brake	152
Parcel shelf, rear	67
Parking brake	76, 152
Pedal, clutch	151
Plates, identification	184
Port, USB	63, 65, 198, 245
Power steering	18
Pressures, tyres	157, 184
Pre-tensioning seat belts	117
Protecting children	117, 119, 123-127
Puncture	153

R

Radio	194, 242
Radio, digital (Digital Audio Broadcasting - DAB)	196, 243
RDS	195, 242
Rear screen, demisting	61
Recharging the battery	179
Recirculation, air	56, 58
Reinitialisation of the under-inflation detection system	96
Reminder, lighting on	100
Remote control	32, 37
Removing and fitting a fuse	168
Removing a wheel	158
Removing the mat	66
Replacing bulbs	163
Replacing the air filter	151
Replacing the oil filter	151
Replacing the passenger compartment filter	151
Reservoir, screenwash	150
Reversing camera	92
Reversing lamps	166
Roof bars	144
Roof, electric fabric	42

S

Safety, children	117, 119, 123-127
Screen, touch	185
Screen menu map	190, 202, 208, 220

Screenwash	105
Seat belts	48, 115-117, 129
Seats, front	46
Seats, rear	47, 48
Selector, gear	77
Servicing	9
Sidelamps	98, 164, 166
Side repeater	167
Snow chains	140
Socket, 12 V accessory	63, 64
Sockets, audio	63, 65, 198, 245
Speed limiter	86, 89
Speedometer	11, 12
Starting the vehicle	71, 72, 74
Starting using another battery	178
Station, radio	194, 242
Steering mounted controls, audio	188, 241
Steering wheel adjustment	51
Stopping the vehicle	71, 72, 75
Stop & Start	28, 83, 85, 151, 177
Storage	63, 64
Sun visor	63, 64

Towing	69, 180
Traffic information (TA)	191, 243
TRC (traction control)	17, 24, 107-109
Trip computer	27, 28
Trip distance recorder	26
Tyre under-inflation detection	19, 95, 157

Weights	182
Wheel, spare	158
Window controls	41
Windows, rear quarter	41
Wiper blades (changing)	144
Wipers	104

U

Under floor storage	69
Under-inflation (detection)	19, 95, 157
Unlocking	32, 34
USB	63, 65, 198, 245

V

Ventilation	52, 54, 55, 58
Visibility	52

T

Tables of fuses	168
Tank, fuel	26, 138
Telephone	204, 247
Third brake lamp	167
Three flashes (direction indicators)	103
Time (setting)	29, 30
Tools	159
Touch screen tablet	185
Touch screen tablet (Menus)	189

W

Warning and indicator lamps	15-25
Washing (advice)	152



Declaration of Conformity (DoC)

Hereby, Panasonic Corporation, declares that this Bluetooth Module ASSY [YEP0PTA605] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The latest original "DECLARATION of CONFORMITY"(DoC) is available at the address below.
<http://www.ptc.panasonic.de/>

(To see the DoC for the product's component, input the product search number: YEP0PTA605)

С настоящето, Panasonic Corporation, декларира, че YEP0PTA605 е в съответствие със съществени те изисквания и другите приложими разпоредби на Директива 1999/5/EC.
Panasonic Corporation timito prohiša juje, že tento YEP0PTA605 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Undertegnede Panasonic Corporation erklærer herved, at følgende udstyr YEP0PTA605 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hierbij verklaart Panasonic Corporation dat het toestel YEP0PTA605 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Hereby, Panasonic Corporation, declares that this YEP0PTA605 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Käesolevaga kinnitab Panasonic Corporation seadme YEP0PTA605 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Panasonic Corporation vakuuttaa täten että YEP0PTA605 tyyppinen laite on direktiivin 1999/5/EY olleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Par la présente Panasonic Corporation déclare que l'appareil YEP0PTA605 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Hiermit erklart Panasonic Corporation, dass sich das Gerät YEP0PTA605 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ ΠΑΝΑΧΟΝΙΚΟΝ ΔΗΛΩΝΕΙ ΟΤΙ ΥΕΡ0ΡΤΑ605 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Allírofti, Panasonic Corporation nyilatkozik, hogy a YEP0PTA605 megfelel a vonatkozó alapelvű követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Con la presente Panasonic Corporation dichiara che questo YEP0PTA605 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Ar šo Panasonic Corporation deklarē, ka YEP0PTA605 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un ciliem ar to saistītajiem noteikumiem.
Šuo Panasonic Corporation deklaruoja, kad šis YEP0PTA605 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktivos nuostatas.
Hawnehkk, Panasonic Corporation, jiddikjara li dan YEP0PTA605 jikkonforma mal-nigijiet essenzejali u ma provedimentit ohvaj relevanti li hemm fid-Direttiva 1999/5/EC.
Niniejszym Panasonic Corporation oświadcza, że YEP0PTA605 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Panasonic Corporation declara que este YEP0PTA605 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Prin prezenta, Panasonic Corporation, declară că aparatul YEP0PTA605 este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.
Panasonic Corporation týmto vyhlasuje, že YEP0PTA605 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Panasonic Corporation izjaviļa, da je ta YEP0PTA605 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Por medio de la presente Panasonic Corporation declara que el YEP0PTA605 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Härmed intygar Panasonic Corporation att denna YEP0PTA605 står i överensstämmelse med de vä sentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Hér með lýsir Panasonic Corporation yfir því að YEP0PTA605 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í liðskipun 1999/5/EF.
Panasonic Corporation erklærer herved at udstyret YEP0PTA605 er i samsvar med de grundlæggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Ovim, Panasonic Corporation, izjavljuje da ovaj YEP0PTA605 je uskladen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.
Nepermjet kesaj, Panasonic Corporation, deklarar qe ky YEP0PTA605 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.
Ovim Panasonic Corporation, izjavljuje da je YEP0PTA605 u skladu s bitnim zahtjevima drugim relevantnim odredbama Direktive 1999/5/EC.
Овим, Panasonic Corporation, изјављује да је овај YEP0PTA605 је у складу са основним захтевима и другим битним одредбама Директиве 1999/5/ЕЦ.

Labels are fitted in various areas of your vehicle. They carry safety warnings as well as vehicle identification information. Do not remove them: they form an integral part of your vehicle.

Automobiles CITROËN declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this document is prohibited without written authorisation from Automobiles CITROËN.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a CITROËN dealer is able to provide.

We draw your attention to the following points:

- The fitting of electrical equipment or accessories not listed by CITROËN may cause faults and failures with the electrical system of your vehicle. Contact a CITROËN dealer for information on the range of recommended accessories.
- As a safety measure, access to the diagnostic socket, used for the vehicle's electronic systems, is reserved strictly for CITROËN dealers or qualified workshops, equipped with the special diagnostic tool required (risk of malfunctions of the vehicle's electronic systems that could cause breakdowns or serious accidents). The manufacturer cannot be held responsible if this advice is not followed.
- Any modification or adaptation not intended or authorised by Automobiles CITROËN or carried out without meeting the technical requirements defined by the manufacturer would lead to the suspension of the legal and contractual warranties.

Printed in the EU
Anglais
01-16

Automobiles CITROËN

Siège social : 6, rue Fructidor 75017 Paris - France

Tél. : +33 (0) 1 58 79 79 79 - www.citroen.com

Société anonyme au capital de 159 000 000 € - R.C.S. : 642 050 199 R.C.S. Paris - SIRET : 642 050 199 00990 - APE : 7010Z



* Subject to official publication of the results by the FIA.

2016 – DOCUMENTATION DE BORD

4Dconcept

Diadeis

Interak

CRÉATIVE TECHNOLOGIE



16.C1.0030
Anglais

Compatibility of fuels

Fuel used for petrol engines

The petrol engines are compatible with bio-fuels that conform to current and future European standards and can be obtained from filling stations.

E5 Petrol that meets the EN228 standard, mixed with a bio-fuel meeting the EN15376 standard.

E10

i The only petrol additives authorised for use are those that meet the B715001 standard.

Fuel used for Diesel engines

The Diesel engines are compatible with bio-fuels that conform to current and future European standards and can be obtained from filling stations.

B7 Diesel fuel that meets standard EN590 mixed with a biofuel that meets standard EN14214 (possibly containing up to 7% Fatty Acid Methyl Ester).

E5

E10

B7

B10

XTL

B20

B30

B10 Diesel fuel that meets standard EN16734 mixed with a biofuel that meets standard EN14214 (possibly containing up to 10% Fatty Acid Methyl Ester).

XTL Paraffinic Diesel fuel that meets standard EN15940 mixed with a biofuel that meets standard EN14214 (possibly containing up to 7% Fatty Acid Methyl Ester).

B20 The use of B20 or B30 fuel meeting standard EN16709 is possible in your Diesel engine. However, this use, even occasional, requires strict application of the special servicing conditions referred to as "Arduous conditions".

B30

For more information, contact a dealer of the brand or a qualified workshop.

! The use of any other type of (bio) fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

i The only Diesel additives authorised for use are those that meet the B715000 standard.

Diesel fuel at low temperature

In temperatures below 0°C (+32°F), the formation of paraffins in the summer diesel fuels may result in abnormal operation of the fuel supply system. To avoid this, the use of winter diesel fuels is recommended, keeping the tank topped up to more than 50% of its capacity.

If in spite of this you experience difficulties starting the engine in temperatures below -15°C (+5°F), simply leave the vehicle in a garage or a heated workshop for a while.

i Travelling abroad

Certain fuels could damage the engine of your vehicle. In certain countries, the use of a particular fuel may be required (specific octane rating, specific sales name...) to ensure correct operation of the engine.

For any additional information, contact your dealer.




16CAR.A040


"ISOFIX" mountings

Your vehicle has been approved in accordance with the **latest** ISOFIX regulation.


The seats, represented below, are fitted with ISOFIX compliant anchorages:

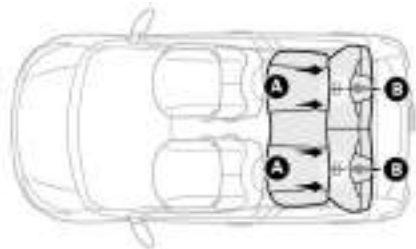

There are three anchorages for each seat:

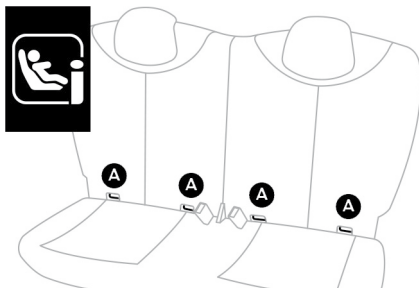

- two anchorages **A**, located between the backrest and cushion of the vehicle seat, indicated by a marking,

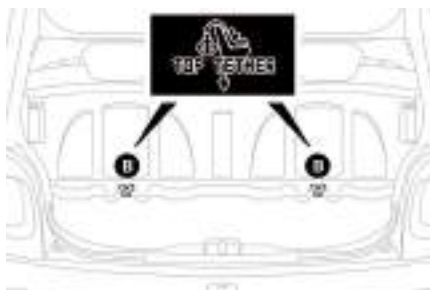

- an anchorage **B** behind the seat for fixing the upper strap, referred to as the **TOP TETHER**. It is indicated by a marking.

The **TOP TETHER** secures the upper strap of child seats that have them. In case of frontal impact, this device limits the tilting of the child seat forward.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

ISOFIX child seats are equipped with two latches that are secured at the two anchorages **A**.

Some seats also feature an **upper strap** that is attached to the anchorage **B**.

To secure the child seat at the **TOP TETHER**:

- remove and store the head restraint before installing the child seat in this seat (replace it once the child seat has been removed),
- pass the strap of the child seat behind the top of the backrest, centring it between the holes for the head restraint rods,
- secure the clip of the upper strap to the anchorage **B**,
- tighten the upper strap.

i The incorrect installation of a child seat in a vehicle compromises the protection of the child in the event of an accident.

! Strictly follow the fitting instructions provided in the user guide supplied with the child seat.

For information on the possibilities for installing **ISOFIX** child seats in your vehicle, refer to the summary table.

Summary table for locations of i-Size child seats

The i-Size child seats have two latches that engage on the two rings **A**.

The i-Size child seats also have:

- either an upper strap which is attached to the ring **B**
- or a support leg resting on the vehicle floor, compatible with the approved i-Size seat position, the role of which is to prevent the child seat from tipping forward in the event of a collision.

In accordance with the new European regulations, this table indicates the options for installing i-Size child seats on seats in the vehicle fitted with ISOFIX mountings and approved for i-Size.

For more information on ISOFIX child seats, notably the mountings and the rings, refer to the corresponding section.

		i-Size child seat
1 st row	Front passenger seat	Not i-Size
2 nd row	Outer rear seats (a)	i-U

- i-U:** suitable for i-Size restraints of the "universal" category, forward facing or rearward facing.
- (a)** to install a child seat at the rear, rearward or forward facing, move the front seat forward, then straighten the backrest to allow enough room for the child seat and the child's legs.

- Remove and stow the head restraint before installing a child seat on a passenger seat. Refit the head restraint once the child seat has been removed.



Compatibility of fuels

Fuel used for petrol engines

The petrol engines are compatible with bio-fuels that conform to current and future European standards and can be obtained from filling stations.

E5 Petrol that meets the EN228 standard, mixed with a bio-fuel meeting the EN15376 standard.

E10

i The only petrol additives authorised for use are those that meet the B715001 standard.

Fuel used for Diesel engines

The Diesel engines are compatible with bio-fuels that conform to current and future European standards and can be obtained from filling stations.

B7 Diesel fuel that meets standard EN590 mixed with a biofuel that meets standard EN14214 (possibly containing up to 7% Fatty Acid Methyl Ester).

E5

E10

B7

B10

XTL

B20

B30

B10 Diesel fuel that meets standard EN16734 mixed with a biofuel that meets standard EN14214 (possibly containing up to 10% Fatty Acid Methyl Ester).

XTL Paraffinic Diesel fuel that meets standard EN15940 mixed with a biofuel that meets standard EN14214 (possibly containing up to 7% Fatty Acid Methyl Ester).

B20 The use of B20 or B30 fuel meeting standard EN16709 is possible in your Diesel engine. However, this use, even occasional, requires strict application of the special servicing conditions referred to as "Arduous conditions".

B30

For more information, contact a dealer of the brand or a qualified workshop.

! The use of any other type of (bio) fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

i The only Diesel additives authorised for use are those that meet the B715000 standard.

Diesel fuel at low temperature

In temperatures below 0°C (+32°F), the formation of paraffins in the summer diesel fuels may result in abnormal operation of the fuel supply system. To avoid this, the use of winter diesel fuels is recommended, keeping the tank topped up to more than 50% of its capacity.

If in spite of this you experience difficulties starting the engine in temperatures below -15°C (+5°F), simply leave the vehicle in a garage or a heated workshop for a while.

i Travelling abroad

Certain fuels could damage the engine of your vehicle. In certain countries, the use of a particular fuel may be required (specific octane rating, specific sales name...) to ensure correct operation of the engine.

For any additional information, contact your dealer.



16CAR.A040