

CITROËN C-Elysée

HANDBOOK



Access to the Handbook



MOBILE APPLICATIONS

Install the **MyCitröen App** application (content available offline).

Also available in the **Scan MyCitröen** application.



ONLINE

View or download the handbook at the following address:

<http://service.citroen.com/ACddb/>



Scan this QR Code for direct access.

Select:

- the language,
- the vehicle and body style,
- the issue period of the handbook corresponding to the date of 1st registration of the vehicle.



This symbol indicates the latest information available.

Welcome

Thank you for choosing Citroën C-Elysée.


This document contains the key information and recommendations you will need to be able to explore your vehicle in complete safety. We strongly recommend familiarising yourself with it, as well as the Maintenance and Warranty Guide.

Your vehicle will be fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.

The descriptions and illustrations are for guidance only.

Automobiles CITROËN reserves the right to modify the technical specifications, equipment and accessories without having to update this document.

If ownership of your vehicle is transferred, please ensure this **Handbook** is passed on to the new owner.

 For any work on your vehicle, contact a member of the Manufacturer's dealer network, hereinafter referred to as a 'dealer', or a qualified workshop.

Key



Safety warning



Additional information



Environmental protection feature



Location of equipment/button indicated using a black area

<hr/>		Overview ■	Interior fittings	30	Driving and manoeuvring aids -	
<hr/>			Courtesy lamps	32	General recommendations	62
<hr/>		Eco-driving ■	<hr/>		Speed limiter	63
<hr/>			Lighting and visibility 4		Cruise control - Specific recommendations	64
<hr/>		Dashboard instruments 1	Exterior lighting control stalk	33	Cruise control	65
Instrument panel	7		Direction indicators	34	Rear parking sensors	66
Warning and indicator lamps	7		Headlamp beam height adjustment	35	Reversing Camera	67
Indicators	11		Wiper control stalk	35	<hr/>	
Distance recorders	13		Changing a wiper blade	36	Practical information 7	
Setting the date and time	14		<hr/>		Compatibility of fuels	69
Trip computer	14		Safety 5		Refuelling	69
<hr/>		Access 2	General safety recommendations	37	Misfuel prevention (Diesel)	70
Remote control / Key	17		Hazard warning lamps	37	AdBlue® (BlueHDi)	70
Central locking	18		Horn	38	Snow chains	73
Back-up procedures	19		Electronic stability control (ESC)	38	Energy economy mode	73
Doors	20		Seat belts	39	Towing device	74
Boot	20		Airbags	41	Very cold climate screen	74
Alarm	21		Child seats	43	Roof bars	75
Electric windows	22		Deactivating the front passenger airbag	45	Bonnet	75
<hr/>		Ease of use and comfort 3	ISOFIX child seats	47	Engine compartment	76
Front seats	23		Child lock	50	Checking levels	77
Rear bench seat	24		<hr/>		Checks	79
Steering wheel adjustment	25		Driving 6		Free-wheeling	80
Mirrors	25		Driving recommendations	51	Advice on care and maintenance	81
Heating and Ventilation	26		Starting-switching off the engine	53	<hr/>	
Air conditioning, manual (without display screen)	27		Parking brake	54	In the event of a breakdown 8	
Electronic air conditioning (with display screen)	28		Hill start assist	54	Warning triangle	83
Front demisting - defrosting	29		5-speed manual gearbox	55	Running out of fuel (Diesel)	83
Demisting/de-icing the rear screen			6-speed manual gearbox	55	Tool kit	83
and/or the door mirrors	30		6-speed automatic gearbox	56	Spare wheel	84
			Gear shift indicator	58	Changing a bulb	87
			Stop & Start	58	Fuses	91
			Tyre under-inflation detection	60	12 V battery	92
					Towing the vehicle	95

<hr/>			
	Technical data	9	
Engine technical data and towed loads		97	Connected navigation 132
Petrol engines		98	Applications 134
Diesel engines		99	Radio 137
Dimensions		100	DAB (Digital Audio Broadcasting) radio 138
Identification markings		100	Media 139
			Telephone 140
			Settings 143
			Frequently asked questions 145
<hr/>			
	Bluetooth® audio system	10	
Menus		103	
Radio		103	
Media		104	
Telephone		106	
Audio settings		109	
Frequently asked questions		110	
<hr/>			
	CITROËN Connect Radio	11	
First steps		112	
Steering mounted controls		113	
Menus		114	
Applications		115	
Radio		115	
DAB (Digital Audio Broadcasting) radio		117	
Media		117	
Telephone		118	
Settings		121	
Frequently asked questions		123	
<hr/>			
	CITROËN Connect Nav	12	
First steps		125	
Steering mounted controls		126	
Menus		127	
Voice commands		128	
Navigation		130	
<hr/>			
			Vehicle data recording and privacy
			13
<hr/>			
			Alphabetical index
			■
<hr/>			
			Appendix
			■

Presentation

These illustrations and descriptions are intended as a guide. The presence and location of some components varies according to the version, trim level and country of sale.

Instruments and controls



1. Bonnet release
2. Dashboard fuses
3. Horn
4. Instrument panel
5. Audio and telematics systems
6. Warning lamp display for seat belts and front passenger airbag
Courtesy lamps
Rear view mirror

7. Emergency warning lamps
Locking/unlocking from the inside
8. Adjusting the date/time
9. Heating, ventilation
Manual air conditioning (without display screen)
Electronic air conditioning (with display screen)
Front demisting/defrosting
Rear screen demisting/defrosting
Heated windshield
10. Manual gearbox
Automatic gearbox (EAT6)
Gear shift indicator
11. USB socket
12 V accessory socket / Cigar lighter
12. Parking brake
13. Electric windows deactivation

Steering-mounted controls



1. External lighting/direction indicators control stalk
Voice recognition activation button

2. Speed Limiter/Cruise Control
3. Audio system setting controls
4. Wiper/screenwash/trip computer control stalk

Side control bar



1. Manual headlamp beam height adjustment
2. DSC/ASR systems
3. Stop & Start
4. Boot lid opening
5. Alarm
6. Door mirrors adjustment

Labels

"Lighting and visibility - Exterior lighting control stalk" and "In the event of a breakdown - Changing a bulb" sections:



"Safety - Child seats - Deactivating the front passenger airbag" section:



"Safety - ISOFIX mountings" section:



"Driving - Stop & Start" section:



"Driving - Tyre under-inflation detection" section:



"Practical information - Compatibility of fuels" section:



"Practical information - Bonnet" section:



"In the event of a breakdown - Spare wheel" section:



"In the event of a breakdown - 12 V battery/ Accessory batteries" section:

Eco-driving

Eco-driving refers to a range of everyday practices that allow the motorist to optimise the vehicle's energy consumption (fuel and/or electricity) and CO₂ emissions.

Optimise your use of the gearbox

With a manual gearbox, move off gently and change up promptly. While accelerating, change up early.

With an automatic gearbox, favour automatic mode. Do not depress the accelerator pedal heavily or suddenly.

The gear shift indicator prompts you to engage the most suitable gear. Whenever this indication is displayed on the instrument panel, follow it straight away.

With an automatic gearbox, this indicator appears only in manual mode.

Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal and press the accelerator gradually. These practices help to save on energy consumption, reduce CO₂ emissions and decrease general traffic noise.

When the traffic is flowing smoothly, select the cruise control.

Control the use of electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

At speeds above 31 mph (50 km/h), close the windows and leave the air vents open.

Consider using equipment that can help keep the temperature in the passenger compartment down (e.g. sunroof blind, window blinds).

Unless automatically regulated, switch off the air conditioning as soon as the desired temperature has been reached.

Switch off the demisting and defrosting functions, if they are not managed automatically.

Switch off the heated seat as soon as possible.

Adapt your use of the headlamps and/or foglamps to the level of visibility, in accordance with current legislation in the country in which you are driving.

Avoid running the engine before moving off, particularly in winter (other than in severe wintry conditions: temperature below -23°C). The vehicle will warm up much faster while driving.

As a passenger, avoid connecting your multimedia devices (e.g. film, music, video game) to help reduce the consumption of energy. Disconnect all portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle. Place the heaviest items in the boot as close as possible to the rear seats.

Limit the loads carried in the vehicle and minimise wind resistance (e.g. roof bars, roof rack, bicycle carrier, trailer). Preferably, use a roof box.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit summer tyres.

Comply with the servicing instructions

Check tyre pressures regularly, with the tyres cold, referring to the label in the door aperture on the driver's side.

Carry out this check in particular:

- before a long journey.
- at each change of season.
- after a long period out of use.

Do not forget the spare wheel and, where applicable, the tyres on your trailer or caravan.

Have your vehicle serviced regularly (e.g. engine oil, oil filter, air filter, passenger compartment filter, etc.). Observe the schedule of operations in the manufacturer's service schedule.

With a BlueHDi Diesel engine, if the SCR system has a fault, your vehicle will emit pollution. Visit a CITROËN dealer or a qualified workshop as soon as possible to restore your vehicle's nitrogen oxide emissions to legal levels.

When filling the fuel tank, do not continue after the third cut-out of the nozzle, to avoid overflow.


You will only see the fuel consumption of your new vehicle settle down to a consistent average after the first 1,900 miles (3,000 kilometres).

Instrument panel



1. Rev counter (x 1,000 rpm)
2. Display screen
3. Speedometer (km/h)
4. Control button
 - Momentary information reminder:
 - on servicing
 - remaining driving range with the emissions fluid (AdBlue®)
 - Resetting the selected function to zero (trip distance recorder or service indicator).
 - Setting the time.

Display screen

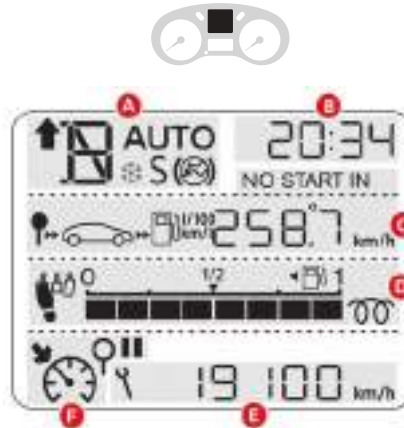

- A. Automatic gearbox information
Gear shift indicator
- B. Time
- C. Range related to the fuel or the AdBlue® and the SCR system (km)
or
Trip distance recorder
- D. Fuel gauge / Diesel preheater
- E. Service indicator (km)
then,
Odometer
These two functions are displayed successively when switching on the ignition.
- F. Cruise control or speed limiter instructions

Warning and indicator lamps

Displayed as symbols, the warning and indicator lamps inform the driver of the occurrence of a malfunction (warning lamps) or of the operating status of a system (operation or deactivation indicator lamps). Certain lamps light up in two ways (fixed or flashing) and/or in several colours.

Associated warnings

The illumination of a lamp may be accompanied by an audible signal and/or a message displayed in a screen.

Relating the type of alert to the operating status of the vehicle allows you to determine whether the situation is normal or whether a fault has occurred: refer to the description of each lamp for further information.

When the ignition is switched on

Certain red or orange warning lamps come on for a few seconds when the ignition is switched on. These warning lamps should go off as soon as the engine is started.

For more information on a system or a function, refer to the corresponding section.

Persistent warning lamp

If a red or orange warning lamp comes on, there may be a fault which needs further investigation.

If a lamp remains lit

The references **(1)**, **(2)** and **(3)** in the warning and indicator lamp description indicate whether you should contact a qualified professional in addition to the immediate recommended actions.

(1): You must stop the vehicle.

Stop as soon as it is safe to do so and switch off the ignition.


(2): Contact a CITROËN dealer or a qualified workshop.

(3): Visit a CITROËN dealer or a qualified workshop.

List of warning and indicator lamps

Red warning/indicator lamps


STOP

 Fixed, associated with another warning lamp.



A serious fault with the engine, braking system, power steering or automatic gearbox or a major electrical fault has been detected.

Carry out (1) and then (2).




Parking brake

 Fixed.
The parking brake is applied or not properly released.


Braking

  Fixed.
The brake fluid level in the braking circuit has dropped significantly.

Carry out (1), then top up with fluid that complies with the manufacturer's recommendations. If the problem persists, carry out (2).


   Fixed.
The electronic brake force distribution (EBFD) system is faulty.
Carry out (1) and then (2).

Seat belts not fastened/unfastened

 Fixed or flashing, accompanied by an increasing audible signal.


The driver has not fastened or has unfastened their seat belt. The front passenger has unfastened their seat belt.

12 V battery charge


 Fixed.
The battery charging circuit is faulty (e.g. dirty terminals, loose or severed alternator belt).

Clean and tighten the terminals. If the warning lamp does not go off when the engine is started, carry out (2).

Engine oil pressure


 Fixed.
There is a fault with the engine lubrication system.
Carry out (1) and then (2).

Maximum coolant temperature



 Fixed.
The temperature of the cooling system is too high.

Carry out (1), then wait until the engine has cooled down before topping up the level, if necessary. If the problem persists, carry out (2).

Door or boot open



 Fixed.
An audible signal supplements the alert if the speed is higher than 6 mph (10 km/h).
A door, the boot, the tailgate or the opening rear screen is still open (depending on version).
Close whichever access is open.

Engine self-diagnostics system


  Fixed.
A major engine fault has been detected.
Carry out (1) and then (2).

Orange warning/indicator lamps

Engine self-diagnostics system

  Fixed.
A minor engine fault has been detected.
Carry out (3).

Low fuel level

 Fixed, with the reserve level shown in red.
When it first comes on, you have **approximately 5 litres of fuel** remaining in the tank (reserve).

Until the fuel level is topped up, this alert will be repeated every time the ignition is switched on, with increasing frequency as the fuel level decreases and approaches zero.
Refuel without delay to avoid running out of fuel.

Never drive until completely empty, as this could damage the emissions control and injection systems.

Engine self-diagnostic system



Flashing.

The engine management system has a fault.

There is a risk that the catalytic converter will be destroyed.

You **must** carry out (2).



Fixed.

The emissions control system has a fault. The warning lamp should go off when the engine is started.

Carry out (3) without delay.

Engine preheating (Diesel)



Temporarily on

(up to approximately 30 seconds in severe weather conditions).

When switching on the ignition, if the weather conditions and the engine temperature make it necessary.

Wait until the warning lamp goes off before starting.

When the warning lamp goes off, starting will occur immediately if you press and hold:

- the clutch pedal with a manual gearbox.
- the brake pedal with an automatic gearbox.

If the engine does not start, make the engine starting request again, while keeping your foot on the pedal.

Under-inflation



Fixed, accompanied by an audible signal and a message.

The pressure in one or more tyres is too low. Check the pressure of the tyres as soon as possible.

Reinitialise the detection system after adjusting the pressure.



Under-inflation warning lamp flashing then fixed and Service warning lamp fixed.

The tyre pressure monitoring system is faulty. Under-inflation detection is no longer monitored. Check the tyre pressures as soon as possible and carry out (3).

Anti-lock braking system (ABS)



Fixed.

The anti-lock braking system has a fault. The vehicle retains conventional braking. Drive carefully at moderate speed, then carry out (3).

Airbags



Fixed.

One of the airbags or seat belt pyrotechnic pretensioners is faulty. Carry out (3).

Front passenger airbag (ON)



Fixed.

The front passenger airbag is activated. The control is set to the "ON" position.

In this case, do not install a "rearward facing" child seat on the front passenger seat - risk of serious injury!

Front passenger airbag (OFF)



Fixed.

The front passenger airbag is deactivated. The control is set to the "OFF" position.

A "rearward facing" child seat can be installed, unless there is a fault with the airbags (Airbags warning lamp on).

Dynamic stability control (DSC)/Anti-slip regulation (ASR)



Flashing.

DSC/ASR system regulation is activated in the event of a loss of grip or trajectory.



Fixed.

The DSC/ASR system has a fault. The indicator lamp in the corresponding button is off.

Carry out (3).



Fixed.

The system is deactivated. The DSC/ASR system is reactivated automatically when the vehicle is started, and at speeds above approximately 31 mph (50 km/h). At speeds below 31 mph (50 km/h), it can be reactivated manually.

Hill start assist



Fixed.

The system has a fault. Carry out (3).

Power steering



Fixed.

The power steering has a fault.

Drive carefully at moderate speed, then carry out (3).

AdBlue® (BlueHDi)



On for around 30 seconds when starting the vehicle, accompanied by a message indicating the driving range.

The driving range is between 1,500 and 500 miles (2,400 and 800 km).

Top up the AdBlue®.



Fixed, on switching on the ignition, accompanied by an audible signal and a message indicating the driving range.

The driving range is between 500 and 62 miles (800 and 100 km).

Promptly top up the AdBlue®, or carry out (3).



Flashing, accompanied by an audible signal and a message indicating the driving range.

The driving range is less than 62 miles (100 km).

You **must** top up the AdBlue® to **avoid engine starting being prevented**, or carry out (3).



Flashing, accompanied by an audible signal and a message indicating that starting is prevented.

The AdBlue® tank is empty: the legally required engine immobiliser system prevents the engine from starting.

To restart the engine, top up the AdBlue® or carry out (2).

It is **essential** to add at least 10 litres of AdBlue® to the tank.

SCR emissions control system (BlueHDi)



Fixed when the ignition is switched on, accompanied by an audible signal and a message.

A malfunction of the SCR emissions control system has been detected.

This alert disappears once the exhaust emissions return to normal levels.



Flashing AdBlue® warning lamp on switching on the

ignition, with the Service and Engine self-diagnostics warning lamps on fixed, accompanied by an audible signal and a message indicating the driving range.

Depending on the message displayed, it is possible to drive for up to 685 miles (1,100 km) before the engine immobiliser is triggered.

Carry out (3) without delay, to **avoid starting being prevented**.



Flashing AdBlue® warning lamp on switching on the

ignition, with the Service and Engine self-diagnostics warning lamps on fixed, accompanied by an audible signal and a message indicating that starting is prevented.

The engine immobiliser prevents the engine from restarting (the permitted driving limit has been exceeded after confirmation of a malfunction of the emissions control system).

To start the engine, carry out (2).

Service



Temporarily on.

One or more minor faults, for which there is/are no specific warning lamp(s), have been detected.

Identify the cause of the fault using the message displayed on the instrument panel.

You may be able to deal with some faults yourself, such as changing the battery in the remote control.

For other faults, such as with the tyre under-inflation detection system, carry out (3).



Fixed.

One or more major faults, for which there is/are no specific warning lamp(s), have been detected.

Identify the cause of the fault using the message displayed on the instrument panel, then carry out (3).

Rear foglamp



Fixed.

The lamp is on.

Green warning/indicator lamps

Stop & Start



Fixed.

When the vehicle stops, the Stop & Start system puts the engine into STOP mode.



Flashing temporarily.

STOP mode is momentarily unavailable or START mode is automatically triggered.

For more information, refer to the **Driving** section.

Front foglamps



Fixed.

The front foglamps are on.

Direction indicators



Flashing with audible signal.



The direction indicators are on.

Dipped beam headlamps



Fixed.

The lamps are on.

Blue warning/indicator lamps



Fixed.

The lamps are on.

Black/white warning lamps



Foot on the clutch

Fixed.

Stop & Start: the change to START mode

is rejected because the clutch pedal is not fully depressed.

Fully depress the clutch pedal.

Foot on the brake



Fixed.

Insufficient or no pressure on the brake

pedal.

With an automatic gearbox, with the engine running, before releasing the parking brake, to move out of position **P**.

Indicators

Service indicator

The servicing information is expressed in terms of distance (miles or kilometres) and time (months or days).

The alert is given at whichever of these two terms is reached first.

The servicing information is displayed in the instrument panel. Depending on the version of the vehicle:

- The distance recorder display line indicates the distance remaining before the next service is due, or the distance travelled since it was due preceded by the "-" sign.
- An alert message indicates the distance remaining, as well as the period before the next service is due or how long it is overdue.

i The value indicated is calculated according to the distance covered and the time elapsed since the last service. The alert may also be triggered close to a due date.

Service spanner



On temporarily when the ignition is switched on.

Between 620 and 1,860 miles (1,000 and 3,000 km) remain before the next service is due.



Fixed, when the ignition is switched on. The next service is due in less than 620 miles (1,000 km).

Have your vehicle serviced very soon.

Service spanner flashing



Flashing then fixed, when the ignition is switched on.

(With BlueHDi Diesel engines, associated with the Service warning lamp.)

The servicing interval has been exceeded.

Have your vehicle serviced as soon as possible.

Resetting the service indicator

After each service, the service indicator must be reset to zero.



The procedure for resetting to zero is as follows:

- ▶ Switch off the ignition.
- ▶ Press and hold the trip distance recorder reset button.
- ▶ Switch the ignition on; the distance recorder display starts a countdown.
- ▶ When the display indicates "=0", release the button; the spanner disappears.

i Following this operation, if you wish to disconnect the battery, lock the vehicle and wait at least five minutes for the zero reset to be taken into account.

Reminder of the servicing information

You can access the servicing information at any time.

► Press the trip distance recorder reset button. The servicing information is displayed for a few seconds, then disappears.

AdBlue® range indicators (BlueHDI)

The Diesel BlueHDI engines are equipped with a system that associates the SCR (Selective Catalytic Reduction) emissions control system and the Diesel particle filter (DPF) for the treatment of exhaust gases. They cannot function without AdBlue® fluid.

When the level of AdBlue® falls below the reserve level (between 1,500 and 0 miles (2,400 and 0 km)), a warning lamp lights up when the ignition is switched on and an estimate of the distance that can be travelled before engine starting is prevented is displayed in the instrument panel.


! The engine starting prevention system required by regulations is activated automatically once the AdBlue® tank is empty. It is then no longer possible to start the engine until the minimum level of AdBlue® has been topped up.



Actions required related to a lack of AdBlue®

The following warning lamps light up when the quantity of AdBlue® is below the reserve level: driving range of 1,500 miles (2,400 km). Together with the warning lamps, messages regularly remind you of the need to top up to avoid engine starting being prevented. Refer to the **Warning and indicator lamps** section for details of the messages displayed.

i For more information on **AdBlue® (BlueHDI)** and in particular on topping up, refer to the corresponding section.

With BlueHDI engines

Warning/indicator lamps on	Action	Remaining range
	Top up.	Between 1,500 miles and 500 miles (2,400 km and 800 km)
	Top up as soon as possible.	Between 500 miles and 62 miles (800 km and 100 km)

Warning/indicator lamps on	Action	Remaining range
	A top-up is vital , there is a risk that the engine will be prevented from starting.	Between 62 miles and 0 miles (100 km and 0 km)
	To be able to restart the engine, add at least 10 litres of AdBlue® to the tank.	0 miles (km)

i **Taking into account of top-up**
Top-up detection may not be instantaneous after addition. It may take a few minutes of driving before the top-up detection is effective.

Malfunction of the SCR emissions control system

Malfunction detection

AdBlue



If a malfunction is detected, these warning lamps come on, accompanied by an audible signal and the display of an **"Emissions control fault"** or **"NO START IN"** message.

The alert is triggered while driving when the fault is detected for the first time, and thereafter when switching on the ignition for subsequent journeys, for as long as the cause of the fault persists.

If the fault is temporary, the alert disappears during the next journey, after self-diagnostic checks of the SCR emissions control system.

Malfunction confirmed during the permitted driving phase (between 685 miles and 0 miles (1,100 km and 0 km))

If the fault indication is still displayed permanently after 31 miles (50 km) of driving, the fault in the SCR system is confirmed.

The AdBlue warning lamp flashes and a message is displayed (**"Emissions control fault: starting prevented in X miles (kms)"** or **"NO START IN X miles (kms)"**),

indicating the driving range in miles or kilometres.

While driving, the message is displayed every 30 seconds. The alert is repeated when switching on the ignition.

You can continue driving for up to 685 miles (1,100 km) before the **engine starting prevention** system is triggered.

! Have it checked by a CITROËN dealer or a qualified workshop.

Starting prevented

Every time the ignition is switched on, the message **"Emissions control fault: Starting prevented"** or **"NO START IN"** is displayed.

! **To restart the engine**
Contact a CITROËN dealer or a qualified workshop.

Distance recorders

Total distance recorder

System which measures the total distance travelled by the vehicle during its life.



The total and trip distances are displayed for thirty seconds when the ignition is switched off, when the driver's door is opened and when the vehicle is locked or unlocked.

Trip distance recorder

System which measures a distance travelled during a day or another period since it was reset by the driver.



► With the ignition on, press the button until zeros appear.

Setting the date and time

With instrument panel



Use the left-hand button on the instrument panel to carry out the operations in the following order:

- ▶ Press the button for more than two seconds: the minutes flash.
- ▶ Press the button to increase the minutes.
- ▶ Press the button for more than two seconds: the hours flash.
- ▶ Press the button to increase the hours.
- ▶ Press the button for more than two seconds: 24H or 12H is displayed,
- ▶ Press the button to select 24H or 12H.
- ▶ Press the button for more than two seconds to complete the adjustments.

After approximately 30 seconds with no action, the display returns to normal.

Audio system/Bluetooth

Use the audio system buttons to carry out the operations in the following order:



- ▶ Press the "MENU" button.



- ▶ Using the arrows, select the "Personalisation - Configuration" menu then confirm by pressing the dial.
- ▶ Using the arrows, select the "Screen configuration" menu then confirm.
- ▶ Using the arrows, select the "Set date and time" menu then confirm.
- ▶ Select the setting then confirm.
- ▶ Modify the setting then confirm again to save the change.
- ▶ Adjust the settings one by one, confirming each time.
- ▶ Select the "OK" tab on the screen then confirm to exit the "Set date and time" menu.

i For more information on setting the date and time with the **CITROËN Connect Radio** or **CITROËN Connect Nav**, refer to the corresponding sections.

Trip computer

Displays information related to the current trip (range, fuel consumption, average speed, etc.).


Instrument panel screen



Monochrome screen C




Data displays

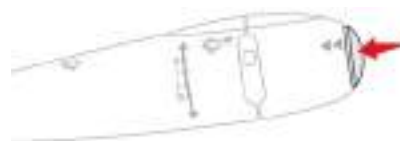

- ▶ Press the button at the end of the **wiper stalk** to display successively the different trip computer data. The trip computer data is as follows:
 - Range.
 - Current fuel consumption.
 - Distance travelled.
 - Average fuel consumption.
 - Average speed.
- ▶ The next press then returns you to the normal display.

Reset

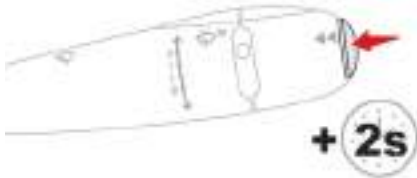

- ▶ Hold the control down for more than two seconds to reset the distance travelled, the average fuel consumption and the average speed.

Touch screen



The information is accessible via the **Driving/Vehicle**.

Display of information on the touch screen



Permanent display:

With CITROËN Connect Radio

- ▶ Select the "**Applications**" menu, then "**Trip computer**".

With CITROËN Connect Nav

- ▶ Select the "**Applications**" menu, then the "**Vehicle apps**" tab, then "**Trip computer**".

The trip computer information is displayed in tabs.

- ▶ Press one of the buttons to display the desired tab.

Temporary display in a specific window:

- ▶ Press the end of the wiper control stalk to access the information and display the different tabs.

The current information tab with:

- The range.
- The current fuel consumption.
- The Stop & Start time counter.

The trip "1" tab with:

- The average speed for the first trip.
- The average fuel consumption.
- The distance travelled.

The trip "2" tab with:

- The average speed for the second trip.
- The average fuel consumption.
- The distance travelled.

Trip reset



- ▶ When the desired trip is displayed, press the reset button or on the end of the wiper control stalk.

Trips "1" and "2" are independent and are used identically.

For example, trip "1" can be used for daily figures and trip "2" for monthly figures.

Definitions

Range



(km)

The number of kilometres which can be covered with the fuel remaining in the tank.

Related to the average fuel consumption over the last few kilometres travelled.

i This value may vary following a change in the driving style or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed if it exceeds 60 miles (100 km).

i If dashes are displayed continuously while driving instead of the digits, contact a CITROËN dealer or a qualified workshop.

Current fuel consumption



(l/100 km or km/l)

Calculated over the last few seconds.

i This function is only displayed from 18 mph (30 km/h).

Average fuel consumption



(l/100 km or km/l)

Calculated since the last time the trip was reset.

Average speed



(km/h)

Calculated since the last time the trip was reset.

Distance travelled



(km)

Calculated since the last time the trip was reset.

Stop & Start time counter



(minutes/seconds or hours/minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on.

Remote control / Key

Remote control function



The remote control can be used to perform the following remote functions (depending on version):

- Unlocking/Locking the vehicle.
- Unlocking and partial opening of the boot.
- Activating/Deactivating the alarm.
- Locating the vehicle.
- Activating the vehicle's electronic immobiliser.

The remote control includes a conventional key that allows the central unlocking/locking of the vehicle using the door lock, as well as starting and switching off the engine.

Back-up procedures allow the vehicle to be locked/unlocked in the event of a failure of the remote control, the central locking, the battery, etc. For more information on the **Back-up procedures**, refer to the corresponding section.

Built-in key

Using the remote control built-in key, you can perform the following operations (depending on version):

- Unlocking/Locking the vehicle.
- Activation/Deactivation of the manual child lock.
- Activation/Deactivation of the front passenger airbag.
- Back-up Unlocking/Locking of the doors.
- Switching on the ignition and starting/switching off the engine.

Unfolding / Folding the key



- ▶ Press this button to unfold or fold the key.

! The remote control may be damaged if you do not press the button.

! Once the built-in key is ejected, always keep it with you to be able to carry out the corresponding back-up procedures.

Unlocking the vehicle



Complete unlocking is activated by default.



With the audio system, the setting for complete or selective boot unlocking is made in the **Personalisation-Configuration** menu.



With the touch screen, selective unlocking can be configured from the **Driving/Vehicle** menu.

Complete unlocking

- ▶ Press the unlocking button.

Selective unlocking

Driver's door

- ▶ Press the unlocking button.
- ▶ Press it **again** to unlock the other doors and the boot.

Complete or selective unlocking, and alarm deactivation (depending on version), is confirmed by the flashing of the direction indicators.

Unlocking and partial opening of the boot



- ▶ Press this button for more than one second to unlock the boot. The boot opens slightly.

This action unlocks the vehicle first.

Locking the vehicle



Normal locking

- ▶ Press the locking button.

The locking, and the activation of the alarm depending on version, is confirmed by the lighting of the direction indicators.

- i** An access (door or boot) that is not properly closed prevents locking of the vehicle. However, if the vehicle is fitted with an alarm, it will be activated after 45 seconds. If the vehicle is unlocked but the doors or boot are not subsequently opened, the vehicle will automatically lock itself again after about 30 seconds. If the vehicle is fitted with an alarm, it will be reactivated automatically.

Locating your vehicle

This function allows you to identify your vehicle from a distance, particularly in poor light. Your vehicle must be locked.



- ▶ Press the closed padlock button on the remote control.

This will switch on the courtesy lights and the direction indicators will flash for a few seconds.

Advice

! Remote control

The remote control is a sensitive, high-frequency device; avoid handling it in your pocket, due to the risk of unintentionally unlocking the vehicle.

Avoid pressing the remote control buttons while out of range of the vehicle, due to the risk of rendering the remote control inoperative. It would then be necessary to reset it.

The remote control does not work when the key is in the ignition switch, even when the ignition is switched off.

! Anti-theft protection

Do not modify the electronic vehicle immobiliser, as this might result in malfunctions.

! Locking the vehicle

Driving with the doors locked could make it more difficult for the emergency services to enter the passenger compartment in an emergency.

As a safety precaution, remove the key from the ignition when leaving the vehicle, even for a short time.

i Purchasing a second-hand vehicle

Have the key codes memorised by a CITROËN dealer, to ensure that the keys in your possession are the only ones able to start the vehicle.

Central locking



Manual

- ▶ Press this button to lock/unlock the vehicle (doors and boot) from inside the passenger compartment.

- !** Central locking does not take place if any of the doors are open.

i When locking from the outside

When the vehicle is locked from the outside, the button is deactivated.

- ▶ After normal locking, pull one of the interior door controls to unlock the vehicle.

Automatic (anti-intrusion security)

The doors and boot lock automatically while driving (speed above 6 mph (10 km/h)).

To deactivate/reactivate this function (activated by default):

- ▶ Press the button until an audible signal is heard and/or a message appears on the screen.

Back-up procedures

Lost keys, remote control

Go to a CITROËN dealer with the vehicle's registration certificate, your personal identification documents and if possible, the label bearing the key code.

The CITROËN dealer will be able to retrieve the key code and the transponder code, enabling a new key to be ordered.

Complete unlocking/locking of the vehicle with the key

Use this procedure in the following situations:

- Remote control battery discharged.
- Remote control malfunction.
- Vehicle battery discharged.
- Vehicle in an area subject to strong electromagnetic interference.

In the first case, change the remote control battery.

In the second case, reinitialise the remote control.


Refer to the corresponding sections.

Driver's door

Insert the key in the door lock to lock or unlock the door.

Passenger doors

- ▶ On the rear doors, check that the child lock is not on.

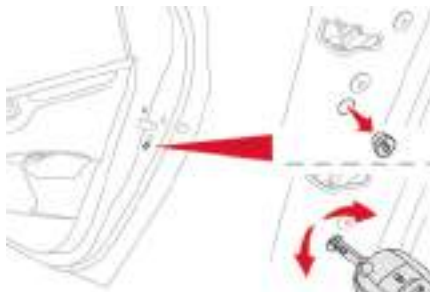

- ▶ Remove the black cap on the edge of the door, using the key.
- ▶ Insert the key into the opening without forcing and then turn the assembly.
- ▶ Remove the key and refit the cap.


i In the event of a fault with the central locking system, it is essential to disconnect the battery to lock the boot and so ensure complete locking of the vehicle.

Changing the battery



If the battery is flat, this warning lamp comes on, accompanied by an audible signal and the display of a message.

Battery type: CR2032/3 volts.

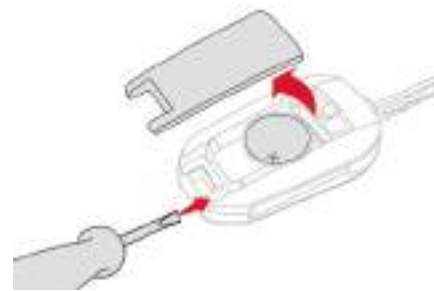

- ▶ Unclip the cover by inserting a small screwdriver in the slot and lift the cover.
 - ▶ Remove the flat battery from its housing.
 - ▶ Put the new battery in place, respecting the polarity. Start by inserting it into the contacts located in the corner, then clip the cover onto the unit.
 - ▶ Reinitialise the remote control.
- For more information on **Reinitialising the remote control**, refer to the corresponding section.



Do not throw remote control batteries away, as they contain metals that are harmful to the environment. Take them to an approved disposal point.

! This equipment contains a button type battery.

Do not swallow the battery. Risk of chemical burns!

Swallowing the battery can cause serious internal burning in only 2 hours and can be fatal.

If batteries have been swallowed or inserted into a part of the body, seek immediate medical advice.

Keep new and used batteries out of the reach of children.

If the battery compartment does not close properly, stop using the product and keep it out of the reach of children.

! Risk of explosion if the battery is replaced with an incorrect type!

Replace the battery with the same type.


! Risk of explosion or leaking of inflammable liquid or gas!

Do not use in/store in/place in an environment where the temperature is extremely high or where the pressure is extremely low due to very high altitude.

Do not try to burn, crush or cut a used battery.

Reinitialising the remote control

Following replacement of the battery or in the event of a fault, it may be necessary to reinitialise the remote control.

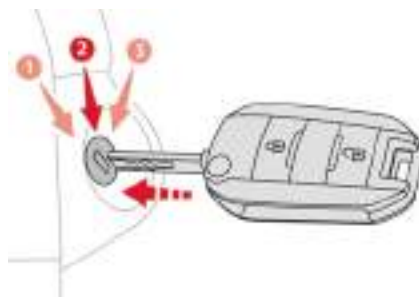

- ▶ Switch the ignition off.
- ▶ Turn the key to position **2 (Ignition on)**.
- ▶ Immediately press the closed padlock button for a few seconds.
- ▶ Switch off the ignition and remove the key from the ignition switch.

The remote control is now fully operational again.

Doors

Opening

From outside

▶ After unlocking the vehicle using the remote control or the key, pull the door handle.

From inside

▶ Pull the interior opening control of a door; this unlocks the vehicle completely.

i The interior opening control on a rear door does not work if the child lock is on. For more information on the **Child Lock**, refer to the corresponding section.

Boot

Opening

Releasing the boot from the inside



- ▶ Press the boot opening button located on the left of the dashboard.
The boot lid is released and opens slightly.

Opening the boot

- ▶ Raise the boot lid to its fully open position.

Closing

- ▶ Lower the boot lid using one of the interior grab handles.
- ▶ Then press the boot to close it.


! In the event of a malfunction or if you experience difficulty opening or closing the tailgate, have it checked by a CITROËN dealer or a qualified workshop without delay, to avoid the issue deteriorating and prevent any risk of the tailgate dropping, potentially causing serious injury.

Back-up release

System for mechanically unlocking the boot in the event of a battery or central locking fault.

Unlocking

- ▶ Fold the rear seats to gain access to the lock from inside the boot.

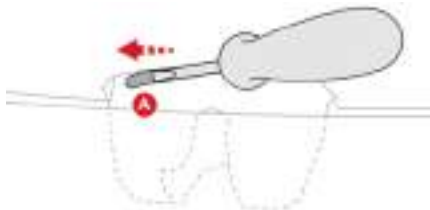

- ▶ Insert a small screwdriver into hole **A** of the lock to unlock the boot.
- ▶ Move the latch to the left.

Alarm



System which protects and provides a deterrent against theft and break-ins. It provides perimeter protection and an self-protection function.

Perimeter protection

The system checks for opening of the vehicle. The alarm is triggered if anyone tries to open a door, the boot, the bonnet...

! Self-protection function

The system checks for the putting out of service of its components. The alarm is triggered if the battery, the central control or the siren wiring are put out of service or damaged.

i For all work on the alarm system, contact a CITROËN dealer or a qualified workshop.

Locking the vehicle with alarm

Activation

- ▶ Turn the vehicle off and exit.
 - ▶ Press the locking button on the remote control.
- The alarm is activated: an indicator light in the switch panel to the left of the steering wheel flashes once per second.

The perimeter protection is activated 5 seconds after pressing the locking button on the remote control.

If an opening (door, boot...) is not closed fully, the vehicle is not locked but the alarm is activated.

Deactivation

- ▶ Press the unlocking button on the remote control.



The alarm is deactivated: the indicator lamp goes off.

Triggering of the alarm

This is indicated by sounding of the siren and flashing of the direction indicators for thirty seconds.



When the vehicle is unlocked using the remote control, rapid flashing of the indicator lamp informs you that the alarm was triggered during your absence. Upon ignition, this flashing stops immediately.

Locking the vehicle without activating the alarm

- ▶ Lock the vehicle using the key.

Failure of the remote control

To deactivate the monitoring functions:

- ▶ Unlock the vehicle using the key.
- ▶ Open the door; this sets off the alarm.
- ▶ Switch on the ignition; this stops the alarm.

Malfunction

When the ignition is switched on, the fixed lighting of the red indicator lamp in the button indicates a system malfunction.

Have it checked by a CITROËN dealer or a qualified workshop.

Electric windows



Model with front window controls



Model with front and rear window controls

1. Left-hand front
2. Right-hand front
3. Right-hand rear
4. Left-hand rear

5. Deactivating the rear electric window controls.

Deactivating the rear controls for the rear electric windows



For your children's safety, press control 5 to deactivate the controls for the rear electric windows, irrespective of their positions. The red indicator lamp in the button comes on. The rear electric windows can still be controlled using the driver's controls.

Correct driving position

! For safety reasons, adjustments must only be made when the vehicle is stationary.

Before taking to the road and to make the most of the ergonomic layout of the instruments and controls, carry out these adjustments in the following order:

- head restraint height.
- seat backrest angle.
- seat cushion height.
- longitudinal seat position.
- steering wheel height.
- rear view mirror and door mirrors.



! Once these adjustments have been made, check that the instrument panel can be viewed correctly from your driving position.

Front head restraints

Adjusting the height



Upwards:

► Pull the head restraint up to the desired position; you can feel the head restraint clicking into position.

Downwards:

► Press lug **A** to lower the head restraint.

i The head restraint is correctly adjusted when its upper edge is level with the top of the occupant's head.

Removing a head restraint

- Pull the head restraint fully up.
- Press lug **A** to release the head restraint and raise it fully.
- Stow the head restraint securely.

Refitting a head restraint

- Insert the head restraint rods into the guides in the corresponding seat backrest.
- Push the head restraint fully down.
- Press the lug **A** to release the head restraint and push it down.
- Adjust the height of the head restraint.

! Never drive with the head restraints removed; they should be in place and adjusted for the occupant of the seat.

Front seats

Longitudinal



- Raise the control bar and slide the seat forwards or backwards.
- Release the control bar to lock the seat in position on one of the notches.

! Before moving the seat backwards, ensure that there is no person or object that might prevent the full travel of the seat. There is a risk of trapping or pinching passengers if present in the rear seats or of

jamming the seat if large objects are placed on the floor behind the seat.


Tilting the backrest



- ▶ Push the control backwards to adjust the backrest.

Height

(driver only)

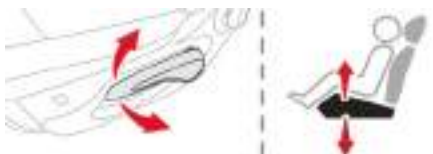

- ▶ Pull the control upwards to raise or push it downwards to lower, until you obtain the position required.

Rear bench seat


Bench seat with fixed one-piece cushion and split folding backrest (2/3-1/3) with adjustable head restraints.

i The rear seat cushion remains fixed. To increase the boot loading volume, tilt the bench seat backrest.

Folding the backrests

! Manoeuvring the backrests should only be done when the vehicle is stationary.

First steps:

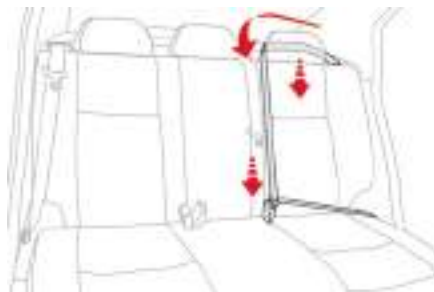


- ▶ Lower the head restraints.
- ▶ If necessary, move the front seats forward.
- ▶ Check that no person or object might interfere with the folding of the backrests (e.g. clothing, luggage).
- ▶ Position the corresponding seat belt against the backrest and fasten it.



- ▶ Pull the strap **1** firmly to release the backrest.
- ▶ Guide the backrest **2** down to the horizontal position.

Repositioning the backrests

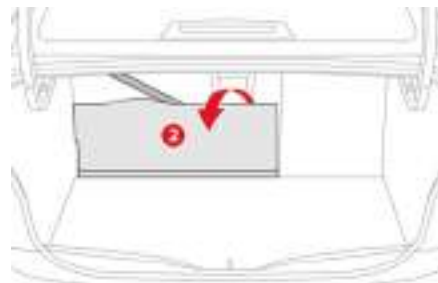

- ▶ Put the backrest **2** in the upright position and push it firmly to latch it home.
- ▶ Unbuckle and reposition the seat belt on the side of the backrest.

! Please note: an incorrectly latched backrest compromises the safety of passengers in the event of sudden braking or an accident.

When repositioning the seat backrest, take care not to trap the seat belts.

The contents of the boot may be thrown forwards - risk of serious injury!

Adjustable head restraints

These have just one position for use (up) and one position for storage (down).

They can be removed and are interchangeable side to side.


To remove a head restraint:



- ▶ Pull it upwards as far as possible.
- ▶ Press on lug **A**.

! Never drive with the headrests removed; they must be fitted and correctly adjusted.

Steering wheel adjustment

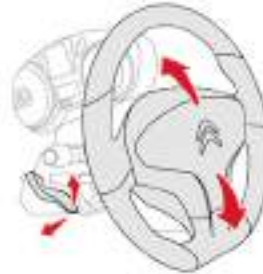

- ▶ When stationary, lower the control to release the steering wheel.
- ▶ Adjust the height and reach to suit your driving position.
- ▶ Pull the control to lock the steering wheel.

! For safety reasons, these adjustments must only be carried out with the vehicle stationary.

Mirrors


Door mirrors

! As a safety measure, the mirrors should be adjusted to reduce the "blind spots".

The objects that you see in the mirrors are in fact closer than they appear. Take this

into account in order to correctly judge the distance of vehicles approaching from behind.

Manual adjustment

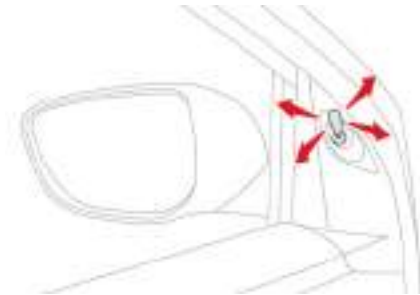

- ▶ Move the adjustment lever in any of the four directions to position the mirror.
- When the vehicle is parked, the door mirrors can be folded in manually.

If the mirror unit has popped out of its initial position, with the vehicle stationary, push it back into place manually or use the electric folding control.

There is no risk of breakage, even in frosty weather.

Electric adjustment



- ▶ Turn control **A** to the right or to the left to select the corresponding mirror.
- ▶ Move the control in any of the four directions to adjust.
- ▶ Return the control to the central position.

Manual folding

You can manually fold the mirrors (parking obstruction, narrow garage, etc.)

- ▶ Turn the mirror towards the vehicle.

Demisting/Defrosting



The demisting/defrosting of the door mirrors works with the demisting/defrosting of the rear screen.

For more information on **Demisting/Defrosting the rear screen and/or the door mirrors**, refer to the corresponding section.

Interior rear view mirror

Equipped with an anti-dazzle system, which darkens the mirror glass and reduces the nuisance to the driver caused by the sun, headlamps of other vehicles, etc.

Day/night position



- ▶ Pull the lever to change to the anti-dazzle "night" position.
- ▶ Push the lever to change to the normal "day" position.

Adjustment

- ▶ Set the mirror to the normal "day" position.

Heating and Ventilation

Advice

i Using the ventilation and air conditioning system

- ▶ To ensure that air is distributed evenly, keep the external air intake grilles at the base of the windscreen, the nozzles, the vents, the

air outlets and the air extractor in the boot free from obstructions.

- ▶ Do not cover the sunshine sensor located on the dashboard; this sensor is used to regulate the automatic air conditioning system.
 - ▶ Operate the air conditioning system for at least 5 to 10 minutes once or twice a month to keep it in good working order.
 - ▶ If the system does not produce cold air, switch it off and contact a CITROËN dealer or a qualified workshop.
- When towing a large load on a steep gradient in high temperatures, switching off the air conditioning increases the available engine power, enhancing the towing capacity.

! Avoid driving for too long with the ventilation off or with prolonged operation of interior air recirculation. Risk of misting and deterioration of the air quality!



If the interior temperature is very high after the vehicle has stood for a long time in the sunshine, air the passenger compartment for a few moments. Put the air flow control at a setting high enough to quickly change the air in the passenger compartment.

i Condensation created by the air conditioning results in a discharge of

water underneath the vehicle. This is perfectly normal.

i Servicing the ventilation and air conditioning system


- ▶ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly. We recommend using a composite passenger compartment filter. Its specific active additive helps protect against polluting gases and bad smells.
- ▶ To ensure correct operation of the air conditioning system, have it checked according to the recommendations in the Manufacturer's service schedule.

i Stop & Start

The heating and air conditioning systems only operate when the engine is running. Temporarily deactivate the Stop & Start system to maintain a comfortable temperature in the passenger compartment. For more information on the **Stop & Start** system, refer to the corresponding section.

Air conditioning, manual (without display screen)

This system operates only with the engine running.

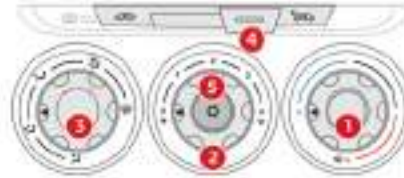

1. Temperature
2. Air flow
3. Air distribution
4. Air intake / Air recirculation
5. Air conditioning

Temperature

- ▶ Turn the dial 1 from blue (cold) to red (hot) to adjust the temperature to your liking.






Air flow

- ▶ Turn the dial 2 to obtain a comfortable air flow.

Deactivation

If you put the air flow control in the **0** position, the temperature is no longer controlled. A slight flow of air can still be felt, resulting from the forward movement of the vehicle.

Air distribution



-  Windscreen and side windows.
-  Windscreen, side windows and footwells.
-  Footwells.
-  Central and side air vents, footwells.
-  Central and side air vents.

The air distribution can be adapted by placing the dial **3** to an intermediate notch or by closing the air vents.

Air intake/Air recirculation

Recirculation of the interior air isolates the passenger compartment from exterior odours and fumes.

Return to exterior air intake as soon as possible to avoid deterioration of the air quality and the formation of mist.

-  ▶ Move manual control 4 to the left for the "Recirculation of interior air" position.
-  ▶ Move manual control 4 to the right to return to the "Exterior air intake" position.

Air conditioning

The air conditioning is designed to operate efficiently in all seasons, with the windows closed.

It allows you:

- in summer, to lower the temperature,
- increase the effectiveness of the demisting in winter, above 3°C.

Switching on

- ▶ Press button **5** to activate/deactivate the air conditioning.

The control lights up when the system is activated.

i The air conditioning does not operate when the air flow adjustment dial is in position "0".

Faster cool air

When the air conditioning is activated, to obtain cool air more quickly, you can use recirculation of the interior air for a few moments.



- ▶ Move manual control **4** to the left for the "Recirculation of interior air" position.
- ▶ Then, move manual control **4** to the right to return to the "Exterior air intake" position.

Switching off

- ▶ Press button **5** again, the associated indicator lamp goes off.

Switching the system off could result in discomfort (humidity, misting).

Electronic air conditioning (with display screen)

This system only operates with the engine running.



1. Temperature.
2. Air flow.
3. Air distribution.
4. Air intake/Air recirculation.
5. Air conditioning.
6. Faster air conditioning.

Air intake/Air recirculation

Recirculation of the interior air isolates the passenger compartment from exterior odours and fumes.

! Avoid the prolonged use of interior air recirculation (risk of misting and deterioration of air quality).

- ▶ Press button **4** to cut off the intake of exterior air and recirculate the interior air.
- ▶ Press button **4** again to allow the intake of exterior air.

The activation of recirculation of the interior air is confirmed by the lighting of the indicator lamp on the display.

Temperature

- ▶ Press buttons **1** (red for hot and blue for cold) to adjust the temperature to your requirements. The temperature bars come on or go off progressively on the display.

Air conditioning

On/Off

- ▶ Press button **5** to activate/deactivate the air conditioning. Its indicator lamp illuminates on the display when the system is active.

Faster air conditioning

This button activates rapid cooling of the air in the passenger compartment.

On/Off

- ▶ Press button **6** to activate/deactivate the rapid air conditioning. Its indicator lamp illuminates on the display when the system is active.

Air distribution

- ▶ Press button **3** successively to direct the air flow towards:

- windscreen and side windows (demisting or defrosting),
- the windscreen, side windows and air vents,
- the windscreen, side windows, air vents and footwells,
- the windscreen, side windows and footwells,
- the footwells,
- the air vents and footwells,
- the air vents.

Air flow

- ▶ Press one of the buttons **2** to increase/decrease the air flow.
- The air flow bars light up/go off gradually.

Deactivating the system

- ▶ Press the "small fan" button **2** until all the bars in the display are off.
- This action deactivates all functions of the air conditioning system. Temperature is no longer regulated. A slight flow of air can still be felt, resulting from the forward movement of the vehicle.
- Pressing the "small fan" button **2** again reactivates the system.

! Avoid driving for long periods with the system deactivated (risk of misting and deterioration of air quality).

Front demist - defrost



These markings on the control panel indicate the control positions for rapid demisting or defrosting of the windscreen and side windows.

With the manual air conditioning system (without screen)



- ▶ Put the temperature and air flow controls to the dedicated marked position.



- ▶ Put the air intake control to the "Exterior air intake" position (manual control moved to the right).



- ▶ Put the air distribution control to the "Windscreen" position.



- ▶ Switch on the air conditioning by pressing the appropriate button; the lighting of the associated control comes on.

With the electronic air conditioning system (with screen)



- ▶ Press this button to activate/deactivate the system.


The lighting of the indicator lamp in the button indicates that the system is activated.



With Stop & Start, when demisting has been activated, STOP mode is not available.

Heated windscreen base

(Depending on country of sale.)

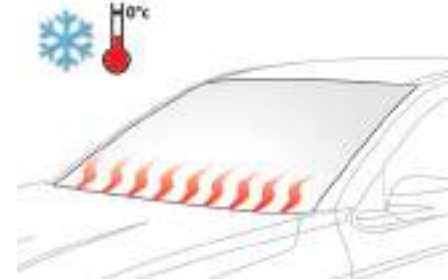


In cold conditions, the heated rear window switch also allows the lower windscreen to be heated, so as to free the wiper blades when frozen to the glass by frost or snow.




The function is active when the ambient temperature is below 0°C.

 Switching on/off



- ▶ With the engine running, press this button to activate/deactivate the function.

 Demisting/de-icing the rear screen and/or the door mirrors



- ▶ Press this button to switch on/off rear screen and door mirror demisting/de-icing (depending on version).

The indicator lamp in the button comes **on** when the function is **activated**.

Demisting/de-icing switches off automatically to prevent excessive power consumption.



Switch off demisting/de-icing as soon as you no longer consider it necessary, as decreased power consumption in turn reduces energy consumption.



Demisting/de-icing only operates with the engine running.

Interior fittings

Sun visor

The passenger's sun visor is fitted with a vanity mirror with concealing flap and a card holder (or ticket holder).

Glove box

Depending on version, it may have a lid. In this case:

- ▶ To open the glove box, pull the handle towards you.




It contains the front passenger airbag deactivation switch.



Never drive with the glove box open when a passenger is at the front. It may cause injury during sharp deceleration!

Removable ashtray

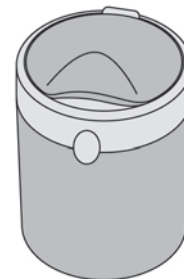

- ▶ Raise the cover to open the ashtray.
- ▶ To empty it, with the cover raised, pull the ashtray upward.




To avoid any problem of interference or risk of overturning, do not place the ashtray near the gear lever.


Front armrest

It includes a storage space.

Storage compartments

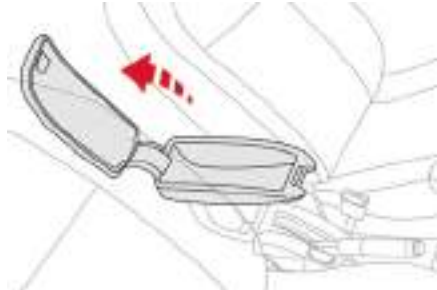

- For access to the closed storage box, lift the lever to open the lid.

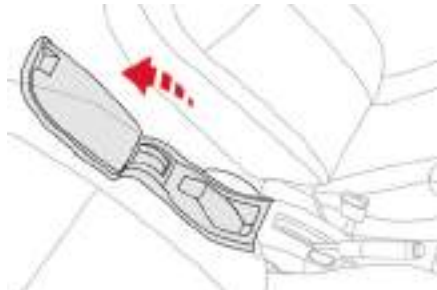

- To access the open storage under the armrest, lift the armrest fully backward.

USB socket



A USB port is located on the central console. It allows the connection of portable devices or USB memory sticks.

It reads the audio files and sends them to your audio system to be played through the vehicle's speakers.

You can manage these files using the audio system control panel and display them in the screen.

When the USB port is used, the portable device charges automatically.

While charging, a message is displayed if the current drawn by the portable device exceeds the power rating of the vehicle's port.


Cigarette lighter/12 V accessory socket(s)



- To use the cigarette lighter, press it in and wait a few seconds until it pops out automatically.
- To use a 12 V accessory (max. power: 120 W), remove the cigarette lighter and connect a suitable adaptor. You can use this socket to connect a telephone charger, a bottle warmer, etc. After use, put the cigarette lighter back into place straight away.

! The connection of an electrical device not approved by CITROËN, such as a USB charger, may adversely affect the operation of vehicle electrical systems, causing faults such as poor radio reception or interference with displays in the screens.

Courtesy lamps

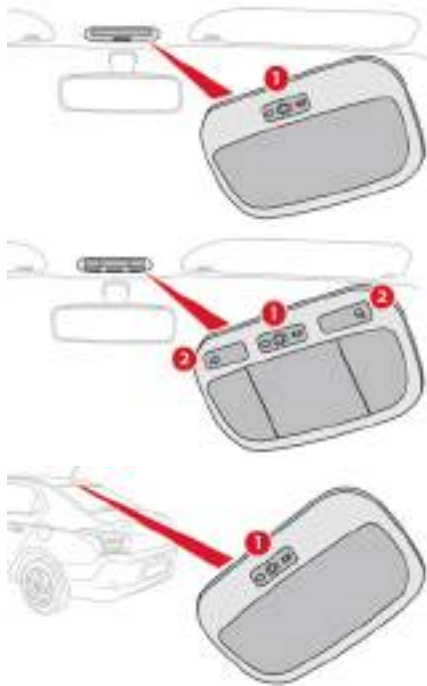

1. Courtesy lamps
2. Front reading lamps

Front and rear courtesy lamps



In this position, the courtesy lamp comes on gradually:

- when the vehicle is unlocked.
- when the key is removed from the ignition switch.
- when a door is opened.
- when the remote control locking button is activated, in order to locate the vehicle.

It switches off gradually:

- when the vehicle is locked.
- when the ignition is switched on.
- 30 seconds after the last door is closed.



Permanently off.



Permanent lighting.

In "Permanent lighting" mode, the lighting time varies according to the circumstances:

- With the ignition off, approximately 10 minutes.
- In energy saving mode, approximately 30 seconds.
- With the engine running, unlimited.

Reading lamps



▶ With the ignition on, operate the corresponding switch.



Do not place anything against the courtesy lamps.

Exterior lighting control stalk

Main lighting



0	Lamps off (ignition off) Daytime running lamps (engine running)
	Sidelamps only
	Dipped or main beam headlamps

Headlamp dipping



- ▶ Pull the lighting control stalk to switch between dipped and main beam headlamps. In lamps off and sidelamps modes, pull the lighting control stalk to switch the main beam headlamps on directly ("headlamp flash").

Display

Illumination of the corresponding indicator lamp on the instrument panel confirms that the selected lighting is on.



A fault with a lamp is signalled by the permanent illumination of this warning lamp, accompanied by the display of a message and an audible signal.

Rear foglamp



They only work if the dipped or main beam headlamps are on.



- ▶ Rotate the ring forwards/backwards to turn it on/off.

Front foglamps/Rear foglamp



They operate with the dipped or main beam headlamps on.



- ▶ Rotate the ring forwards:
 - once to switch on the front foglamps,
 - a second time to switch on the rear foglamp.
- ▶ Turn in the opposite direction to switch off.
- ▶ Rotate the ring backwards to switch the foglamps off; the sidelamps will then switch off.

! Switching on the foglamps is prohibited in clear weather or in rain, both day and night. In these situations, the power of their beams may dazzle other drivers. They must only be used in fog or falling snow (rules may vary depending on country). Do not forget to switch off the foglamps when they are no longer necessary.

i Switching off of the lighting when the ignition is switched off

When the ignition is switched off, all of the lamps turn off immediately, except for the dipped beam headlamps if automatic guide-me-home lighting is activated.

i Switching on the lamps after switching off the ignition

To reactivate the lighting control, rotate the ring to the "0" position - lamps off, then to the desired position.

If the driver's door is opened, a temporary audible signal warns the driver that the lamps are on.

The lamps, with the exception of the sidelamps, switch off automatically after a maximum duration of 30 minutes to avoid draining the battery.

They will go off automatically after a period of time that depends on the level of charge in the battery (entering energy economy mode).

i In some weather conditions (e.g. low temperature or humidity), misting on the internal surface of the glass of the headlamps and rear lamps is normal, and will disappear after the lamps have been on for a few minutes.

! Never look too closely at the light beam of LED technology lamps - risk of serious eye injury!



i Travelling abroad

Vehicles equipped with halogen headlamps:

If planning to use your vehicle in a country that drives on the other side of the road, the dipped beam headlamps must be adjusted to avoid dazzling oncoming drivers. Contact a CITROËN dealer or a qualified workshop.

Daytime running lamps/ Sidelamps

(Depending on version)

These LED lamps at the front of the vehicle light up automatically when the engine starts.

They perform the following functions:

- Daytime running lamps (lighting control stalk at position "0" with adequate ambient light).

i In daytime running lamps mode, the diodes are brighter.


Guide-me-home lighting



- ▶ With the ignition off, pull the lighting control stalk toward you ("headlamp flash") to activate/deactivate the function.

Manual guide-me-home lighting goes off automatically after a period of time.

Direction indicators

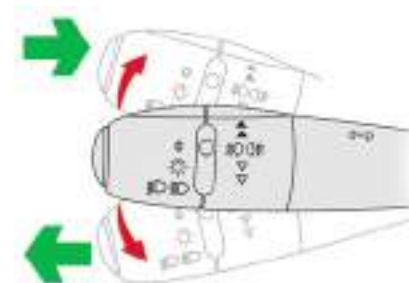

- ▶ Left or right: lower or raise the lighting control stalk, beyond the point of resistance.

Three flashes

- ▶ Press briefly upwards or downwards, without going beyond the point of resistance; the direction indicators will flash 3 times.

Headlamp beam height adjustment



To avoid causing a nuisance to other road users, the height of the headlamp beams should be adjusted according to the load in the vehicle.

0. (Initial adjustment)

Driver only or driver + front passenger

- Driver + front passenger + rear passengers
- 1. Driver + front passenger + rear passengers + load in the boot
- Driver + front passenger + rear passengers + load in the boot
- 2. Driver only + maximum authorised load in the boot


Wiper control stalk

i Before operating the wipers in wintry conditions, clear any snow, ice or frost from the windscreen and around the wiper arms and blades.

! Do not operate the wipers on a dry windscreen. In extremely hot or cold weather, check that the wiper blades are not stuck to the windscreen before operating the wipers.

i After using an automatic car wash, you may temporarily notice abnormal noises and poorer wiping performance. You do not need to replace the wiper blades.

Front wipers

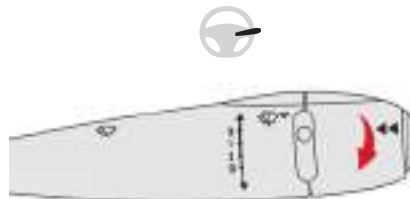

Raise or lower the control to the desired position to change the wiping speed.

2 Fast wiping (heavy rain).

- 1** Normal wiping (moderate rain).
- I** Intermittent wiping (proportional to the speed of the vehicle).
- 0** Off.
- ↓** Single wipe (press down and release).

Windscreen wash

- ▶ Pull the wiper control stalk towards you and hold.

The screenwash then the windscreen wipers operate for a pre-determined time.

i The screenwash jets are not adjustable. Do not handle them (risk of damage).

! To avoid damaging the wiper blades, do not operate the screenwash if the screenwash reservoir is empty. Only operate the screenwash if there is no risk of the fluid freezing on the windscreen and hindering visibility. During the winter period, use "very cold climate" rated products. Never top up with water.


Special position of the windscreen wipers

This maintenance position is used while cleaning or replacing the wiper blades. It can also be

useful, in wintry weather (ice, snow), to release the wiper blades from the windscreen.

- i** To maintain the effectiveness of the flat wiper blades, it is advisable to:
 - handle them with care.
 - clean them regularly using soapy water.
 - avoid using them to hold cardboard on the windscreen.
 - replace them at the first signs of wear.

Before removing a windscreen wiper blade

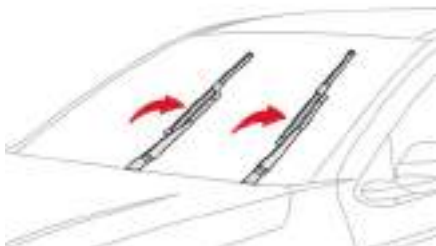

Operating the wiper control stalk immediately after switching off the ignition will place the wiper blades in a vertical position.


- ▶ Proceed with the desired operation or the replacement of the wiper blades.

After refitting a windscreen wiper blade

- ▶ To return the wiper blades to their initial position after the operation, switch on the ignition and operate the wiper control stalk.

Changing a wiper blade

Removing/Refitting at the front

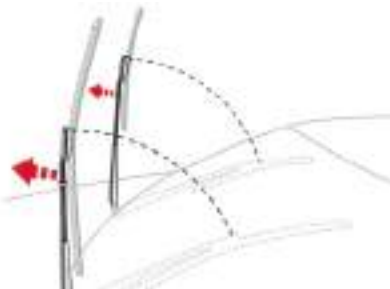

- ▶ Carry out these wiper blade replacement operations from the driver's side.
- ▶ Starting with the wiper blade farthest from you, hold each arm by the rigid section and raise it as far as possible.

! Take care not to hold the arms at the jet locations.

Do not touch the wiper blades - risk of irreparable deformation.

Do not release them while moving them. Risk of damaging the windscreen!

- ▶ Clean the windscreen using screenwash fluid.

i Do not apply "Rain X" type water-repellent products.

- ▶ Unclip the worn wiper blade closest to you and remove it.
- ▶ Install the new wiper blade and clip it to the arm.
- ▶ Repeat the procedure for the other wiper blade.
- ▶ Starting with the wiper blade closest to you, once again hold each arm by the rigid section, then guide it carefully onto the windscreen.

General safety recommendations

! Do not remove the labels attached in different places on your vehicle. They include safety warnings as well as identification information for the vehicle.

! For all work on your vehicle, use a qualified workshop that has the technical information, skills and equipment required, all of which a CITROËN dealer is able to provide.

! Depending on country regulations, certain safety equipment may be mandatory: high visibility safety vests, warning triangles, breathalysers, spare bulbs, spare fuses, fire extinguisher, first aid kit, mud flaps at the rear of the vehicle, etc.

! **Installing electrical accessories:**

- The fitting of electrical equipment or accessories not approved by CITROËN may cause excessive current consumption and faults and failures with the electrical system of your vehicle. Contact a CITROËN dealer for information on the range of approved accessories.
- As a safety measure, access to the diagnostic socket, used for the vehicle's electronic systems, is reserved strictly for

CITROËN dealers or qualified workshops, equipped with the special tools required (risk of malfunctions of the vehicle's electronic systems that could cause breakdowns or serious accidents). The Manufacturer cannot be held responsible if this advice is not followed.

- Any modification or adaptation not intended or authorised by CITROËN or carried out without meeting the technical requirements defined by the Manufacturer will result in the suspension of the commercial warranty.

! Installation of accessory radio communication transmitters

Before installing a radio communication transmitter with an external aerial, you must without fail contact a CITROËN dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

i Declarations of conformity for radio equipment

The relevant certificates are available on the brand website:
<http://service.citroen.com/ACddb/>

Hazard warning lamps



► Pressing this red button causes all the direction indicators to flash. They can work with the ignition switched off.

Automatic operation of hazard warning lamps

When braking in an emergency, depending on the rate of deceleration, the hazard warning lamps come on automatically. They switch off automatically when you next accelerate. They can be switched off by pressing the button.

Horn



- ▶ Press the central part of the steering wheel.

Electronic stability control (ESC)

The electronic stability control programme includes the following systems:

- Anti-lock braking system (ABS) and Electronic brake force distribution (EBFD).
- Emergency braking assistance (EBA).
- Anti-slip regulation (ASR).
- Dynamic stability control (DSC).

Anti-lock braking system (ABS)/Electronic brake force distribution (EBFD)

These systems enhance the vehicle's stability and handling during braking, and enable greater

control while cornering, particularly on poor or slippery road surfaces.

ABS prevents wheel locking in the event of emergency braking.

Electronic brake force distribution (EBFD) manages overall braking pressure on each individual wheel.

▶ **When braking in an emergency, depress the pedal very firmly and maintain this pressure.**

i Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.



The fixed illumination of this warning lamp signals that there is a fault with the ABS. The vehicle retains conventional braking. Drive carefully at a moderate speed.

Have it checked by a CITROËN dealer or a qualified workshop.



This warning lamp, when lit together with the **STOP** and ABS warning lamps, accompanied by a message and an audible signal, indicates an EBFD malfunction.

You must stop the vehicle.

Stop as soon as it is safe to do so and switch off the ignition.

Contact a CITROËN dealer or a qualified workshop.



When changing wheels (tyres and rims), ensure that these are approved for your vehicle.



After an impact

Have it checked by a CITROËN dealer or a qualified workshop.

Emergency braking assistance (EBA)

This system reduces the emergency stopping distance, by optimising the braking pressure.

It is triggered in relation to the speed at which the brake pedal is depressed. The effect of this is a reduction in the resistance of the pedal and an increase in braking efficiency.

Anti-slip regulation (ASR) / Dynamic stability control (DSC)

Anti-slip regulation (or traction control) optimises traction by using engine braking and by applying the brakes on the driving wheels to avoid one or more wheels spinning. It also enhances the vehicle's directional stability.

If there is a difference between the vehicle's trajectory and the path desired by the driver, the dynamic stability control system automatically uses engine braking and the brakes on one or more wheels to return the vehicle to the desired path, within the limits of the laws of physics.

These systems are activated automatically every time the vehicle is started.



These systems are activated in the event of a problem with grip or trajectory

(confirmed by this warning lamp flashing on the instrument panel).

Deactivation / Reactivation


In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground, etc.), it may be advisable to deactivate the ASR system, so that the wheels can turn freely and regain grip.

Reactivate the system as soon as the level of grip permits.



► Press this button to deactivate / reactivate the function.

The button indicator lamp is on when the function is deactivated.

 Deactivation is confirmed by the illumination of this indicator lamp in the instrument panel.

The ASR system is reactivated automatically every time the ignition is switched back on or from 31 mph (50 km/h).

Below 31 mph (50 km/h), you can reactivate it manually.

Malfunction



In the event of a malfunction, this warning lamp lights up on the instrument panel, accompanied by the display of a message and an audible signal.

Have it checked by a CITROËN dealer or a qualified workshop.

! ASR/DSC

These systems enhance safety during normal driving, but should not encourage the driver to take extra risks or drive at high speed.

It is in conditions of reduced grip (rain, snow, ice) that the risk of loss of grip increases. It is therefore important for your safety to keep these systems activated in all conditions, and particularly in difficult conditions.

Correct operation of these systems depends on compliance with the manufacturer's recommendations relating to the wheels (tyres and rims), braking and electronic components, as well as the assembly and repair procedures provided by CITROËN dealers.

In order to ensure that these systems remain effective in wintry conditions, the use of snow or all-season tyres is recommended. All four wheels must be fitted with tyres approved for your vehicle.

All tyre specifications are listed on the tyre/paint label. For more information

on **Identification markings**, refer to the corresponding section.

Seat belts

Front seat belts

The front seat belts are fitted with a pyrotechnic pretensioning system and a force limiting system.


This system improves safety in the front seats in the event of a front or side impact.

Depending on the severity of the impact, the pyrotechnic pretensioning system instantly tightens the seat belts against the body of the occupants.

The pyrotechnic pretensioning seat belts are enabled when the ignition is on.

The force limiter reduces the pressure of the seat belt on the chest of the occupant, thus improving their protection.

Rear seat belts

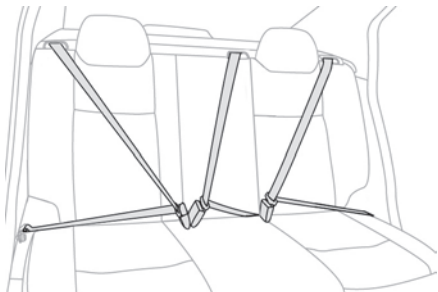

Each of the rear seats has a three-point seat belt with inertia reel.

Fastening



- ▶ Pull the strap, then insert the tongue into the buckle.
- ▶ Check that the seat belt is fastened correctly by pulling on the strap.

Unfastening

- ▶ Press the red button on the buckle.
- ▶ Guide the seat belt as it is reeled in.

Seat belt not fastened/ unfastened alerts



1. Front left seat belt warning lamp
2. Front right seat belt warning lamp
3. Rear left seat belt warning lamp
4. Rear centre seat belt warning lamp
5. Rear right seat belt warning lamp

Not fastened at the front

When the ignition is switched on, the warning lamp and the corresponding indicator lamps light up if the driver and/or the front passenger have not fastened their seat belts.

At a speed greater than 12 mph (20 km/h), these warning lamps flash, accompanied by an increasing audible signal for approximately two minutes. After two minutes, these warning lamps remain on as long as the front seatbelts are not fastened.

Not fastened at the rear

When the ignition is switched on and with the engine running or the vehicle moving at a speed below 12 mph (20 km/h), the warning lamp and the corresponding indicator lamps light up for 1 minute, if one or more rear seat belts are not fastened.

Unfastened

After the ignition is switched on, the warning lamp and the corresponding indicator lamps light up if the driver and/or one or more passengers unfasten their seat belts.

At a speed greater than 12 mph (20 km/h), these warning lamps flash, accompanied by an audible signal for approximately two minutes. After this time, these warning lamps remain on as long as the seatbelts are not refastened.

Advice

- ! The driver must ensure that passengers use the seat belts correctly and that they are all fastened before setting off.

Wherever seated in the vehicle, you must always fasten the seat belt, even for short journeys.

Do not invert the seat belt buckles, as they will not fulfil their role properly.

To ensure the proper functioning of the belt buckles, make sure that there are no foreign bodies present (e.g. a coin) before fastening.

Before and after use, ensure that the seat belt is reeled in correctly.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

! Installation

The lower part of the strap must be positioned as low as possible over the pelvis. The upper part must be positioned in the hollow of the shoulder.

At the front, adjusting the position of the seat belt may require the seat height to be adjusted.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible.
- be pulled in front of you with a smooth movement, checking that it is not twisted.
- must only be used to secure one person.
- not show signs of tearing or fraying.
- not be changed or modified, in order to avoid affecting its performance.

! Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than 1.5 metres.

Never use the same seat belt to secure more than one child.

Never carry a child on your lap.

For more information on **Child seats**, refer to the corresponding section.

! Maintenance

In accordance with current safety regulations, for all work on your vehicle's seat belts, contact a qualified workshop with the skills and equipment needed, which a CITROËN dealer is able to provide.

Have the seat belts checked regularly by a CITROËN dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by CITROËN dealers.

Airbags

General information

This system is designed to improve the safety of the occupants of the front seats and the rear outer seats in the event of a violent collision. The airbags supplement the action of the seat belts equipped with a force limiting system.

Electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:

- In the event of violent impact, the airbags deploy instantly and help better protect the occupants of the vehicle; immediately after the

impact, the airbags deflate rapidly in order not to hinder the visibility or the possible exit of the occupants.


– In the event of a slight impact, a rear impact and under certain rollover conditions, the airbags may not deploy; only the seat belt helps to protect you in these situations.

The seriousness of the impact depends on the nature of the obstacle and the speed of the vehicle at the moment of collision.

! The airbags do not operate when the ignition is switched off.

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

Impact detection zones

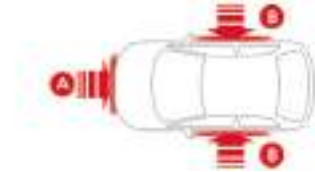


A. Front impact zone

B. Side impact zone

i When one or more airbags are deployed, the detonation of the pyrotechnic charge

incorporated in the system makes a noise and releases a small quantity of smoke. This smoke is not harmful, but sensitive individuals may experience irritation. The detonation noise associated with the deployment of one or more airbags may result in a slight loss of hearing for a short time.

Front airbags

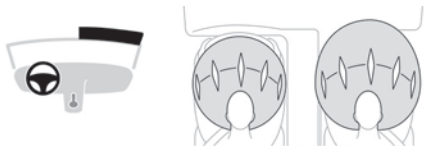


This system protects the driver and front passenger in the event of a serious front impact, limiting the risk of head and chest injury. The driver's airbag is fitted in the centre of the steering wheel; the front passenger airbag is fitted in the dashboard above the glove box.

Deployment

They are deployed, except for the front passenger airbag if it is deactivated*, in the event of a violent front impact applied to all or part of front impact zone **A**. The front airbag inflates between the chest and head of the front occupant of the vehicle and the steering wheel, on the driver's side, and the

dashboard, on the passenger's side, to cushion their forward movement.

Lateral airbags

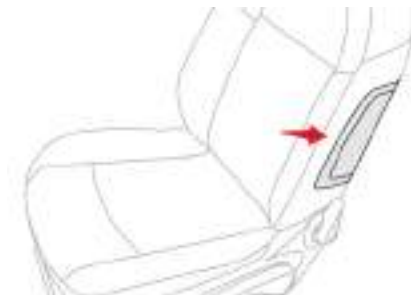

This system protects the driver and front passenger in the event of a serious side impact, limiting the risk of injury to the chest, between the hip and the shoulder. Each lateral airbag is fitted in the seat backrest frame, on the door side.

Deployment

The lateral airbags are deployed on one side in the event of a serious side impact applied to all or part of the side impact zone **B**. The lateral airbag inflates between the chest of the vehicle's occupant and the corresponding door panel.

Malfunction



In the event of a malfunction, this warning lamp lights up on the instrument panel. Contact a CITROËN dealer or a qualified workshop to have the system checked. The airbags may not be deployed in the event of a serious impact.



In the event of a minor impact or bump at the side of the vehicle or if the vehicle rolls over, the airbags may not be deployed. In the event of a rear or front collision, none of the lateral airbags are deployed.

Advice



For the airbags to be fully effective, observe the safety recommendations below.

Adopt a normal and upright sitting position. Fasten your seat belt and position it correctly. Do not place anything between the occupants and the airbags (e.g. child, animal, object), do not fix or attach anything near or in the path of the airbags, as this could cause injuries when they are deployed. Never modify the original definition of the vehicle, particularly in the area directly around the airbags. Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to

* For more information on Deactivating the front passenger airbag, refer to the corresponding section.

the head, chest or arms cannot be ruled out when an airbag is deployed. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time, discharging the hot gas via openings provided for this purpose.

After an accident or if the vehicle has been stolen, have the airbag systems checked. All work must be carried out only by a CITROËN dealer or a qualified workshop

! Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

Do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Do not fix or attach anything to the steering wheel or dashboard, as this could cause injuries when the airbags are deployed.

! Lateral airbags

Use only approved seat covers compatible with the deployment of these airbags. For information on the range of seat covers suitable for your vehicle, contact a CITROËN dealer.

Do not fix or attach anything to the seat backrests (e.g. clothing) as this could cause injuries to the chest or arm when the airbag is deployed.

Do not sit with the upper part of the body any nearer to the door than necessary.

The vehicle's front door panels include side impact sensors.

A damaged door or any unauthorised or incorrectly executed work (modification or repair) on the front doors or their interior trim could compromise the operation of these sensors - risk of malfunction of the lateral airbags!

All work must be carried out only by a CITROËN dealer or a qualified workshop

Child seats

i The regulations on carrying children are specific to each country. Refer to the legislation in force in your country.

For maximum safety, please observe the following recommendations:

– In accordance with European regulations, **all children under the age of 12 or less than 1.5 metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings.

– **Statistically, the safest seats in your vehicle for carrying children are the rear seats.**

– **Children weighing less than 9 kg must travel in the "rearward facing" position, whether in the front or rear of the vehicle.**

i It is recommended that children travel on the **rear seats** of the vehicle:

- "rearward facing" up to the age of 3,
- "forward facing" over the age of 3.

! Make sure that the seat belt is correctly positioned and tightened.
For child seats with a support leg, ensure that the support leg is in firm and steady contact with the floor.

! An incorrectly installed child seat in a vehicle compromises the child's safety in the event of an accident.

Ensure that there is no seat belt or seat belt buckle under the child seat, as this could destabilise it.

Remember to fasten the seat belts or the child seat harness keeping the slack relative to the child's body to a minimum, even for short journeys.

When installing a child seat using the seat belt, ensure that the seat belt is tightened correctly on the child seat and that it secures the child seat firmly on the vehicle seat. If

the passenger seat is adjustable, move it forwards if necessary.

Remove the head restraint before installing a child seat with a backrest on a passenger seat.

Ensure that the head restraint is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking. Refit the head restraint once the child seat has been removed.

! Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. Use a booster seat with a backrest, equipped with a belt guide at shoulder level.

! Additional protections

To prevent accidental opening of the doors and rear windows, use the "Child lock". Take care not to open the rear windows by more than one third.

To protect young children from the sun's rays, fit side blinds on the rear windows.

As a safety measure, do not leave:

- A child alone and unsupervised inside a vehicle.
- A child or an animal in a vehicle which is exposed to the sun, with the windows closed.

– The keys within reach of children inside the vehicle.

Child seat at the rear

Forward-facing or rearward-facing



▶ Move the vehicle's front seat forward and straighten the backrest so that the legs of the child in the forward-facing or rearward-facing child seat itself do not touch the vehicle's front seat.

▶ Check that the backrest of the forward-facing child seat is as close as possible to the backrest of the vehicle's rear seat, and ideally in contact with it.

Centre rear seat

A child seat with a support leg must never be installed on the **centre rear passenger seat**.

Child seat at the front



▶ Adjust the front passenger seat to the **intermediate longitudinal position, with the backrest straightened**.

"Forward facing"



! You must leave the front passenger airbag active.

"Rearward facing"



! The front passenger airbag must be deactivated before installing a rearward facing child seat. Otherwise, **the child risks being seriously injured or killed if the airbag is deployed.**



Warning label - Front passenger airbag



You must comply with the following instruction, as reminded by the warning label on both sides of the passenger sun visor:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Deactivating the front passenger airbag



Passenger airbag OFF


! To ensure the safety of the child, the front passenger airbag **MUST** be deactivated when a "rearward facing" child seat is installed on the front passenger seat. Otherwise, the child risks being seriously injured or killed in the event of deployment of the airbag.

! Vehicles not equipped with a deactivation/reactivation control

Installing a "rearward facing" child seat on the front passenger seat is strictly prohibited - risk of death or serious injury in the event of airbag deployment!

Deactivating/Reactivating the front passenger airbag

For vehicles on which it is fitted, the switch is located inside the glove box.

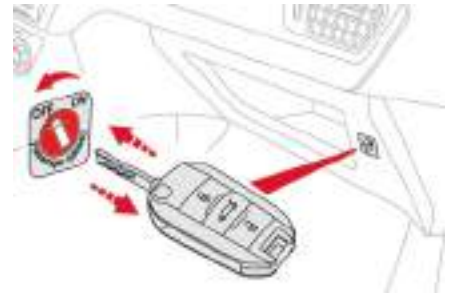

With the ignition off:

- ▶ To deactivate the airbag, turn the key in the switch to the "OFF" position.
- ▶ To reactivate it, turn the key to the "ON" position.

When the ignition is switched on:



This warning lamp comes on and remains lit to signal deactivation.

Or



This warning lamp comes on for about 1 minute to signal activation.

Recommended child seats

Range of child seats secured using a **three-point seat belt**.

Group 0+: from birth to 13 kg



L1
"RÖMER Baby-Safe Plus"
Installed in the "rearward facing" position.

Groups 2 and 3: from 15 to 36 kg






Groups 2 and 3: from 15 to 36 kg

L5
"RÖMER KIDFIX XP"
Can be fitted to the vehicle's ISOFIX mountings.
The child is restrained by the seat belt.
Only suitable for installation on the side rear seats.
The head restraint on the vehicle seat must be removed.

Installing a child seat attached with the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved **(a)** according to the weight of the child and the seating position in the vehicle.

Seat		Weight of the child/ indicative age			
		Under 13 kg (groups 0 (b) and 0+) Up to about 1 year	9-18 kg (group 1) 1 to 3 years approx	15-25 kg (group 2) 3 to 6 years approx	22-36 kg (group 3) 6 to 10 years approx
Front passenger seat without height adjuster (c) (e)		U	U	U	U
Rear side seats (d)		U	U	U	U
Centre rear seat		X	X	X	X


- (a) Universal child seat: child seat which can be installed in all vehicles using the seat belt.
 - (b) Group 0: birth to 10 kg. Carrycots and car beds cannot be installed in the front passenger seat.
 - (c) Refer to the current legislation in your country before putting your child in this seat.
 - (d) When installing a child seat on a rear seat in a rearward or forward-facing position, move the front seat forward then adjust the backrest to an upright position to allow enough room for the child seat and the child's legs.
 - (e) When a rearward facing child seat is installed on the **front passenger seat**, it is essential to deactivate the passenger's airbag. Otherwise, **the child would risk being seriously injured or killed if the airbag were deployed**. When a forward facing child seat is installed on the **front passenger seat**, the passenger's airbag must remain activated.
- U** Seat suitable for the installation of a child seat secured using a seat belt and universally approved, rearward facing and/or forward facing.
- X** Seat position not suitable for installation of a child seat for the weight class indicated.

! Remove and stow the head restraint before installing a child seat with backrest on a passenger seat. Refit the head

restraint once the child seat has been removed.

"ISOFIX" mountings

The seats shown below are fitted with ISOFIX compliant mountings:

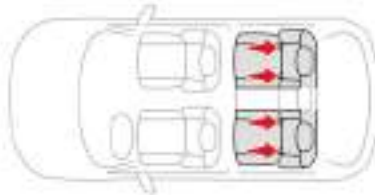


The mountings comprise three rings for each seat, indicated by a marking:

- Two rings **A**, located between the vehicle seat backrest and cushion.



The 2 latches on **ISOFIX child seats** are secured to them.

- One ring **B**, located under a cover on the back of the top of the seat backrest, called the **TOP TETHER** for attaching seats fitted with an upper strap. It is indicated by a marking.

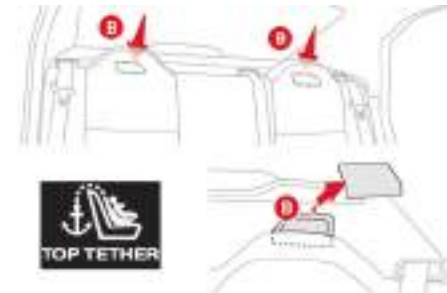

This system prevents the child seat from tipping forwards in the event of a front impact.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in the vehicle.

To secure the child seat to the **TOP TETHER**:

- ▶ Pass the strap of the child seat over the centre of the vehicle's seat backrest.
- ▶ Lift the TOP TETHER cover.
- ▶ Secure the upper strap hook to ring **B**.
- ▶ Tighten the upper strap.

i When fitting an ISOFIX child seat to the left-hand rear seat of the bench seat, before fitting the seat, first move the centre rear seat belt towards the middle of the vehicle, so as to avoid the seat interfering with the operation of the seat belt.

! An incorrectly installed child seat in a vehicle compromises the child's safety in the event of an accident. Strictly observe the fitting instructions provided in the user guide supplied with the child seat.

i For information about the options for fitting ISOFIX child seats in your vehicle, refer to the summary table.

Recommended ISOFIX child seats

i Also consult the user guide from the child seat's manufacturer to find out how to install and remove the seat.

"RÖMER Baby-Safe and its ISOFIX base" (size category: E)

Group 0+: from birth to 13 kg



Installed "rearward facing" using an ISOFIX base which is attached to rings **A**. The base has a support leg, height-adjustable, which rests on the vehicle's floor. This child seat can also be secured with a seat belt. In this case, only the shell is used and attached to the vehicle seat using the three-point seat belt.

"RÖMER Duo Plus ISOFIX" (size category: B1)

Group 1: from 9 to 18 kg



Suitable for forward-facing installation only. Attached to rings **A** and ring **B**, referred to as TOP TETHER, using an upper strap. Three seat body angles: sitting, reclining, lying down. This child seat can also be used in seat positions not equipped with ISOFIX mountings. In this case, it must be secured to the vehicle's seat by the three-point seat belt. Adjust the front seat of the vehicle so that the child's feet do not touch the backrest.

Summary table of locations for ISOFIX child seats

In line with European regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings. In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child/ indicative age				
	Less than 10 kg (group 0) Up to about 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to about 1 year		
Type of ISOFIX child seat	Carry-cot*		rearward facing		
ISOFIX size category	F	G	C	D	E
ISOFIX child seats universal and semi-universal which can be installed on the rear outer seats	X		IL-SU		

	Weight of the child/ indicative age						
	From 9 to 18 kg (group 1) From about 1 to 3 years						
Type of ISOFIX child seat	rearward facing		forward facing				
ISOFIX size category	C	D	A	B	B1	B2	B3
ISOFIX child seats universal and semi-universal which can be installed on the rear outer seats	IL-SU		IUF IL-SU				

IUF Seat suitable for the installation of an Isofix Universal seat, "Forward facing", secured using the top tether.

* Carry-cots and car beds cannot be installed in the front passenger seat.

- IL-SU** Seat suitable for the installation of an Isofix **Semi-Universal** seat which is either:
- "rearward facing" fitted with a top tether or a support leg,
 - "forward facing" fitted with a support leg.

For advice on securing of the upper strap, refer to the "ISOFIX mountings" section.

- X** Seat which is not suitable for the installation of an ISOFIX seat of the size category indicated.

► To activate the child lock, turn the built-in key in the **red** control as far as possible:

- To the right on the left-hand rear door.
- To the left on the right-hand rear door.

► To deactivate the child lock, turn the key in the opposite direction.


! Do not confuse the child lock control, which is red, with the back-up locking control, which is black.

Manual child lock

The system prevents a rear door from being opened using its interior handle.

The control is located on the edge of each rear door.

Activation/Deactivation

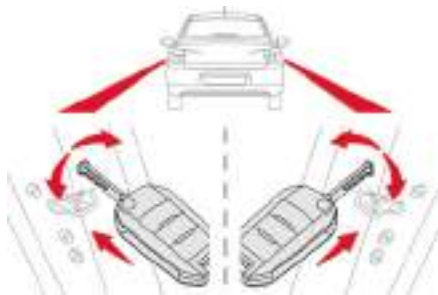

Driving recommendations

- ▶ Observe the driving regulations and remain vigilant whatever the traffic conditions.
- ▶ Monitor your environment and keep your hands on the wheel to be able to react to anything that may happen any time.
- ▶ Drive smoothly, anticipate the need for braking and maintain a longer safety distance, especially in bad weather.
- ▶ Stop the vehicle before performing operations that require sustained attention (e.g. settings).
- ▶ During long trips, take a break every 2 hours.

Important!

! Never leave the engine running in a closed space without sufficient ventilation. Internal combustion engines emit toxic exhaust gases such as carbon monoxide. Danger of poisoning and death!

! In very severe wintry conditions (temperature below -23°C), let the engine run for 4 minutes before moving off, to ensure the correct operation and durability of the mechanical components of your vehicle (engine and gearbox).

! Never drive with the parking brake applied. Risk of overheating and damaging the braking system!

! Never park the vehicle and never leave the engine running on a flammable surface (e.g. dry grass, dead leaves). The vehicle exhaust system is very hot, even several minutes after the engine stops. Risk of fire!

! Never drive on surfaces covered with vegetation (e.g. tall grass, accumulated dead leaves, crops, debris) such as a field, a country lane overgrown with bushes or a grassy verge.

This vegetation could come into contact with the vehicle's exhaust system or other systems which are very hot. Risk of fire!

! Make sure you do not leave any item in the passenger compartment which could act like a magnifying glass under the effect of the sun's rays and cause a fire. Risk of fire or damage to interior surfaces!

! Never leave the vehicle unattended, with the engine running. If you have to leave your vehicle with the engine running, apply the parking brake and put the automatic gearbox into position **N** or **P**.

! Never leave children inside the vehicle unsupervised.

On flooded roads

We strongly advise against driving on flooded roads, as this could cause serious damage to the engine or gearbox, as well as to your vehicle's electrical systems.



If the vehicle absolutely must drive through a flooded section of road:

- ▶ Check that the depth of the water does not exceed 15 cm, taking account of waves that might be generated by other users.
 - ▶ Deactivate the Stop & Start function.
 - ▶ Drive as slowly as possible without stalling. In all cases, do not exceed 6 mph (10 km/h).
 - ▶ Do not stop and do not switch off the engine.
- On leaving the flooded road, as soon as safety conditions allow, make several light brake applications to dry the brake discs and pads. If in doubt about the state of your vehicle, contact a CITROËN dealer or a qualified workshop.

Towing

! Driving with a trailer places greater demands on the towing vehicle and particular care must be taken.

i Do not exceed the maximum towable weights.

At altitude: reduce the maximum load by 10% per 1,000 metres of altitude; the lower air density at high altitudes decreases engine performance.

! **New vehicle:** do not tow a trailer until the vehicle has driven at least 620 miles (1,000 kilometres).

i If the outside temperature is high, let the engine idle for 1 to 2 minutes after the vehicle comes to a stop, to help it to cool.

Before setting off

Nose weight

► Distribute the load in the trailer so that the heaviest items are located as close as possible to the axle, and the nose weight (at the point where it joins your vehicle) approaches the maximum permitted, without exceeding it.

Tyres

► Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.

Lighting

► Check the electrical signalling on the trailer and the headlamp beam height of your vehicle.

i If a genuine CITROËN towing device is used, the rear parking sensors will be deactivated automatically to avoid activating the audible signal.

When driving

Cooling

Towing a trailer uphill causes the coolant temperature to increase. The maximum towable load depends on the gradient and the exterior temperature. The fan's cooling capacity does not increase with engine speed.

► Reduce speed and lower the engine speed to limit the amount of heating produced.

► Pay constant attention to the coolant temperature.



If this warning lamp and the **STOP** warning lamp come on, stop the vehicle and switch off the engine as soon as possible.

Brakes

Using the engine brake is recommended to limit the overheating of the brakes. Braking distances are increased when towing a trailer.

Side wind


Bear in mind that the vehicle will be more susceptible to wind when towing.

Anti-theft protection

Electronic immobiliser


The remote control contains an electronic chip which has a special code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

A few seconds after switching off the ignition, this system locks the engine control system, therefore preventing the engine from being started in the event of a break-in.

 In the event of a fault, you are informed by illumination of this warning lamp, an audible signal and a message on the screen. The vehicle will not start; contact a CITROËN dealer as soon as possible.

Starting-switching off the engine

Key ignition switch

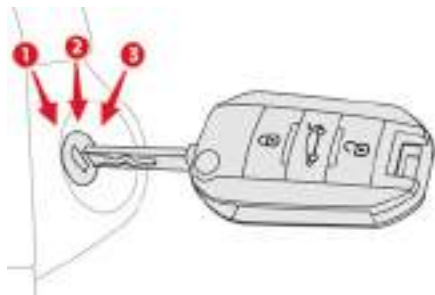

It has 3 positions:

1. Stop

Inserting/removing the key, steering column locked.

2. Ignition on

Steering column unlocked, ignition on, preheating (Diesel), switching the engine on.

3. Starting

i Avoid attaching heavy objects to the key or the remote control. This would weigh down on its shaft in the ignition switch and could cause a malfunction.

Ignition on position

It allows the use of the vehicle's electric equipment or the charging of accessories. Once the state of charge of the battery drops to the reserve level, the system switches to energy economy mode. The power supply is cut off automatically to preserve the remaining battery charge.

i Avoid attaching heavy objects to the key or the remote control, which would weigh down on its blade in the ignition switch and could cause a malfunction.

Starting the engine

With the parking brake applied:

- ▶ With a **manual gearbox**, place the gear lever in neutral then fully depress the clutch pedal.
- ▶ With an **automatic gearbox**, place the gear selector in mode **N** or **P** then depress the brake pedal.
- ▶ Insert the key into the ignition switch; the system recognises the code.
- ▶ Unlock the steering column by simultaneously turning the steering wheel and the key.

i In certain cases, you may need to apply significant force to move the steering wheel (e.g. wheels turned to full lock).

- ▶ With a **petrol engine**, operate the starter motor by turning the key to position **3** without pressing the accelerator pedal, until the engine

starts. Once the engine has started, release the key and allow it to return to position **2**.

i Petrol engines

After a cold start, preheating the catalytic converter can cause noticeable engine vibrations, for anything up to 2 minutes (accelerated idle speed).

- ▶ With a **Diesel engine**, turn the key to position **2**, to activate the engine preheating system.



Wait until this warning lamp goes off on the instrument panel, then turn the key to position **3** without pressing the accelerator pedal, to operate the starter motor. Once the engine has started, release the key and allow it to return to position **2**.

i In wintry conditions, the warning lamp may stay on for a longer period. When the engine is hot, the warning lamp does not come on.

In mild conditions, do not leave the engine to warm up while stationary, but move off straight away and drive at moderate speed.

! If the engine does not start straight away, switch off the ignition. Wait a few seconds before operating the starter motor again. If the engine does not start after a few attempts, do not keep trying - risk of damaging the starter motor and the engine! Contact a CITROËN dealer or a qualified workshop.

Switching off the engine

- ▶ Immobilise the vehicle.
- ▶ With the engine at idle, turn the key to position 1.
- ▶ Remove the key from the ignition switch.
- ▶ To lock the steering column, turn the steering wheel until it locks.

i To facilitate unlocking of the steering column, it is recommended that the wheels be returned to the straight ahead position before switching off the engine.

! Never switch off the ignition before the complete immobilisation of the vehicle. With the engine off, the braking and steering assistance systems are also cut off - risk of loss of control of the vehicle!

i Check that the parking brake is correctly applied, particularly on sloping ground. When leaving the vehicle, keep the key in your possession and lock the vehicle.

Energy economy mode

After the engine has stopped (position 1. **Stop**), for a maximum combined duration of 30 minutes, you can still use functions such as the audio and telematics system, courtesy lamps or dipped beam headlamps.

i For more information on **Energy economy mode**, refer to the corresponding section.

i **Key left in**
When the driver's door is opened, a message is displayed, accompanied by an audible signal, if the key has been left in the ignition switch in position 1. If the key has been left in the ignition switch in position 2, the ignition will be switched off automatically after one hour. To switch the ignition back on, turn the key to position 1, then back to position 2.

Parking brake

Release



- ▶ Pull the parking brake lever up slightly, press the release button, then lower the lever fully.

(!) When driving the vehicle, if this warning lamp and the **STOP** warning lamp come on, accompanied by an audible signal and the

display of a message, this means that the parking brake is still applied or has not been fully released.

Application

- ▶ Pull the parking brake lever up to immobilise the vehicle.

! When parking on a slope, turn the wheels against the kerb, apply the parking brake, engage a gear and switch off the ignition.

Hill start assist

(Depending on engine.)

This system keeps the vehicle briefly stationary (for approximately 2 seconds) when making a hill start, while you transfer your foot from the brake pedal to the accelerator pedal.

The system is only active when:


- The vehicle is completely stationary, with your foot on the brake pedal.
- Certain slope conditions are met.
- The driver's door is closed.

! Do not leave the vehicle while it is being held temporarily by hill start assist.

If someone needs to get out of the vehicle with the engine running, apply the parking brake manually. Then check that the parking brake indicator lamp is on fixed on the instrument panel.


! The hill start assist function cannot be deactivated. However, using the parking brake to immobilise the vehicle interrupts its operation.

Operation

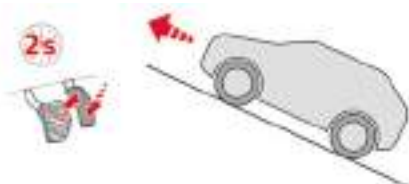

Facing uphill, with the vehicle stationary, the vehicle is held for a short time when the driver releases the brake pedal:

- If first gear or neutral is engaged on a manual gearbox.
- If mode **D** or **M** is selected on an automatic gearbox.

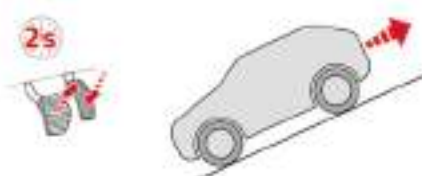

Facing downhill, with the vehicle stationary and reverse gear engaged, the vehicle is held for a short time when the driver releases the brake pedal.

Malfunction



If the event of a malfunction, these warning lamps light up on the instrument panel, accompanied by the display of a message.

Have it checked by a CITROËN dealer or a qualified workshop.

5-speed manual gearbox

Engaging reverse gear



- ▶ With the clutch pedal fully depressed, you must place the gear lever in neutral.
- ▶ Move the gear lever to the right, then pull it back.

! Only engage reverse gear when the vehicle is stationary with the engine at idle.

i As a safety precaution and to facilitate engine starting:

- always select neutral,
- depress the clutch pedal.

6-speed manual gearbox

Engaging 5th or 6th gear

- ▶ Move the gear selector fully to the right to engage 5th or 6th gear.

! Failure to follow this instruction could cause permanent damage to the gearbox (inadvertent engagement of 3rd or 4th gear).

Engaging reverse gear



- ▶ Raise the ring under the knob and move the gear selector to the left, then forwards.

! Only engage reverse gear when the vehicle is stationary with the engine at idle.

i As a safety precaution and to facilitate engine starting:

- ▶ Always select neutral.
- ▶ Press the clutch pedal.

6-speed automatic gearbox

6-speed automatic gearbox which offers a choice between the comfort of automatic operation or manual gear changing.

Two driving modes are available:

- **Automatic** operation for electronic management of the gears by the gearbox:
 - With the **Sport** programme for a more dynamic driving style.
 - Or the **Snow** programme to improve driving in the event of poor grip.*
- **Manual** operation for sequential changing of the gears by the driver.

Gear selector module



1. Gear selector
2. **Sport** programme
3. **Snow** programme
- P. Park
 - Vehicle immobilised, parking brake applied or released.
 - Engine starting.
- R. Reverse
 - Reversing manoeuvres, vehicle stationary, engine at idle.
- N. Neutral
 - Vehicle immobilised, parking brake applied.
 - Engine starting.
- D. Automatic operation
- M. +/- Manual operation
 - ▶ To shift up/down through the gears, push the control backwards/forwards.

Information displayed on the instrument panel

When a position is selected in the grid with the gear selector, the corresponding indicator lamp lights up on the instrument panel.

- P. Park
- R. Reverse
- N. Neutral
- D. Drive (automatic operation)
- S. **Sport** programme
- *. **Snow** programme
- 1...6. Gear engaged during manual operation
- . Instruction not accepted during manual operation

Foot on the brake



- ▶ Depress the brake pedal when this warning lamp is displayed on the instrument panel (e.g. when starting the engine).

Starting the vehicle



- ▶ With your foot on the brake pedal, select position **P** or **N**.

- ▶ Start the engine.


If the conditions are not met, you will hear an audible signal, accompanied by the display of a message.


- ▶ With the engine running, depress the brake pedal.

* Snow programme: depending on the country of sale.

- ▶ Release the parking brake.
- ▶ Select position **R**, **D** or **M**.
- ▶ Gradually release the brake pedal.

The vehicle moves off immediately.

 If position **N** is selected inadvertently while driving, allow the engine to return to idle, then select position **D** to accelerate.

 When the engine is running at idle with the brakes released, if position **R**, **D** or **M** is selected, the vehicle moves off even without the accelerator being pressed. Never leave children unattended in the vehicle when the engine is running. When carrying out maintenance with the engine running, apply the parking brake and select position **P**.


Automatic operation

- ▶ Select position **D** for **automatic** changing of the six gears.

The gearbox then operates in auto-adaptive mode, without any intervention on the part of the driver. It continuously selects the most suitable gear according to the driving style, the road profile and the load in the vehicle.

For maximum acceleration without touching the selector, press the accelerator fully down (kick-down). The gearbox changes down automatically or holds the gear selected until the maximum engine speed is reached.

When braking, the gearbox changes down automatically to provide effective engine braking. If you release the accelerator sharply, the gearbox will not shift to a higher gear for safety reasons.


 Never select position **N** while the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is completely stationary.

Creeping (moving without using the accelerator)

This function facilitates manoeuvring of the vehicle at low speed (when parking, in traffic jams, etc.).

When the engine is at idle, with the parking brake released and gear position **D**, **M** or **R** selected, the **vehicle begins to creep forward** as soon as you take your foot off the brake pedal (even without pressing the accelerator).

 As a safety precaution, never leave the vehicle with the engine running and the doors closed.

"Sport" and "Snow" programmes

These two special programmes supplement automatic operation in specific conditions of use.


"Sport"

 ▶ Press this button once the engine has started.

"S" appears on the instrument panel.


The gearbox automatically favours a dynamic driving style.

"Snow"

 ▶ Press this button once the engine has started.

The gearbox adapts to driving on slippery roads. This programme improves starting and traction when grip is poor.

Manual operation

 To limit fuel consumption during an extended standstill with the engine running (for example, in a traffic jam), set the gear selector to **N** and apply the parking brake.

- ▶ Selecting position **M** enables sequential shifting between the six gears.
- ▶ To shift up/down through the gears, push the control forwards/backwards.


The gearbox only changes gear if the vehicle speed and engine speed conditions allow; otherwise, the rules for automatic operation are temporarily applied.

D disappears, and the gears engaged appear in succession on the instrument panel.

If the engine speed is too low or too high, the selected gear flashes for a few seconds, then the gear actually engaged is shown.

It is possible to change from position **D** to position **M** at any time.


When the vehicle is stationary or moving very slowly, the gearbox selects gear **1** automatically. The **Sport** and **Snow** programmes are inactive in manual operation.

 This symbol is displayed if a gear is not engaged correctly (gear selector between two positions).

Switching off the vehicle

Before switching off the engine, it is possible to engage position **P** or **N** to place the gearbox in neutral.

In both cases, apply the parking brake to immobilise the vehicle.

 If the gear selector is not in position **P**, when the driver's door is opened or approximately 45 seconds after the ignition is switched off, an audible signal sounds and a message appears.

▶ Return the gear selector to **P**; the audible signal stops and the message disappears.

Malfuction




In the event of a malfunction, this warning lamp comes on accompanied by an

audible signal and a message is displayed, when the ignition is switched on.

In this case, the gearbox goes into back-up mode and is locked in 3rd gear. You may feel a significant jolt (without risk to the gearbox) when changing from **P** to **R** and from **N** to **R**.

Do not exceed 62 mph (100 km/h), local speed restrictions permitting.

Have it checked by a CITROËN dealer or a qualified workshop.

 There is a risk of damaging the gearbox:

- If the accelerator and brake pedals are depressed simultaneously.
- In the event of a battery failure, forcing the selector from position **P** to another position.

Gear shift indicator

(Depending on engine)


This system is designed to reduce fuel consumption by recommending the most suitable gear.

Operation

Depending on the driving situation and the vehicle's equipment, the system may recommend skipping one or more gears. Gear engagement recommendations are not to be considered mandatory. Indeed, the configuration of the road, the traffic density and safety remain determining factors when choosing the best gear. Therefore, the driver remains


responsible for deciding whether or not to follow the system's advice.

The system cannot be deactivated.

 With an automatic gearbox, the system is only active in manual operation.



The information appears on the instrument panel, in the form of an arrow and the recommended gear.

 The system adapts the gear change instructions according to the driving conditions (e.g. slope, load) and driving style (e.g. power demand, acceleration, braking). The system never suggests:

- engaging first gear.
- engaging reverse gear.

Stop & Start

The Stop & Start function puts the engine temporarily into standby - STOP mode - during phases when the vehicle is stationary (e.g. red lights, traffic jams). The engine automatically restarts - START mode - as soon as the driver indicates the intention of moving off again. Primarily designed for urban use, the function is intended to reduce fuel consumption and exhaust emissions as well as the noise level when stationary.

The function does not affect the functionalities of the vehicle, in particular the braking.

Deactivation/Reactivation

The function is **activated** by default when the ignition is switched on.

To deactivate/reactivate the function:

With the dashboard button



► Press the button.

A message on the instrument panel confirms the change of status.

When the function is deactivated, the orange indicator lamp is lit; if the engine was in standby, it restarts immediately.

With the touch screen button




The settings are changed via the **Driving/Vehicle** touch screen menu.

A message on the instrument panel confirms the change of status.

When the function is deactivated, if the engine was in standby, it restarts immediately.

Associated indicator lamp

 Function activated: engine on standby (STOP mode).

! Opening the bonnet

Before doing anything under the bonnet, deactivate the Stop & Start system to avoid any risk of injury caused by the engine restarting automatically.



! Driving on flooded roads

Before entering into a flooded area, it is strongly recommended that you deactivate the Stop & Start system.

For more information on **Driving recommendations**, particularly on flooded roads, refer to the corresponding section.

Operation

Main conditions for operation

- The driver's door must be closed.
- The driver's seat belt must be fastened.
- The level of charge in the battery must be sufficient.
- The temperature of the engine must be within its nominal operating range.
- The outside temperature must be between 0°C and 35°C.

Putting the engine into standby (STOP mode)

The engine automatically enters standby mode as soon as the driver indicates their intention to stop:

With a **manual gearbox**: at speeds below 12 mph (20 km/h) or with the vehicle stationary (depending on engine), with the gear lever in neutral and the clutch pedal released.

With an **automatic gearbox**: with the brake pedal depressed or the gear selector in position **N**, with the vehicle stationary.


Time counter

A time counter adds up the time spent in standby during the journey. It is reset to zero every time the ignition is switched on.

Special cases

The engine will not go into standby if the conditions for operation are not met and in the following cases:

- Vehicle has not exceeded 6 mph (10 km/h) since the last engine start.
- Needed to maintain a comfortable temperature in the passenger compartment.
- Demisting active.
- Braking assistance being used.

 In these cases, this indicator lamp flashes for a few seconds, then goes off.

i After the engine has restarted, STOP mode is not available until the vehicle has reached a speed of 5 mph (8 km/h).

i During parking manoeuvres, STOP mode is not available for a few seconds after coming out of reverse gear or turning the steering wheel.

Restarting the engine (START mode)

The engine automatically restarts as soon as the driver indicates the intention of moving off again:

With a manual gearbox: with the clutch pedal fully depressed.

With an automatic gearbox:

- With the selector in mode **D** or **M**: with the brake pedal released.
- With the selector in mode **N** and the brake pedal released: with the selector at **D** or **M**.
- With the selector in mode **P** and the brake pedal depressed: with the selector at **R**, **N**, **D** or **M**.
- With reverse gear engaged.

Special cases

The engine will restart automatically if the conditions for operation are met again and in the following case:

- Some specific conditions (braking assistance, air conditioning setting, etc.).



In these cases, this indicator lamp flashes for a few seconds, then goes off.

Malfunctions



In the event of a system malfunction, the warning lamp in this button flashes for a moment, then illuminates continuously. Have it checked by a CITROËN dealer or a qualified workshop.

The vehicle stalls in STOP mode

All of the instrument panel warning lamps come on if there is a fault.

- ▶ Switch off the ignition then start the engine again.

! 12 V battery

The Stop & Start system requires a 12 V battery of specific technology and specification. All work must be carried out only by a CITROËN dealer or a qualified workshop

Tyre under-inflation detection

This system alerts the driver if one or more tyres suffer a drop in pressure.

The alert is raised when the vehicle is moving, not when stationary.

It compares the information given by the wheel speed sensors with **reference values, which must be reinitialised every time the tyre pressures are adjusted or a wheel changed.**

It takes into account the last values stored during the reinitialisation request. It is therefore essential that the tyre pressure is correct during the operation. This operation is the driver's responsibility.

! The tyre under-inflation detection cannot, in any circumstances, replace the need for vigilance on the part of the driver. This system does not avoid the need to regularly check the tyre pressures (including the spare wheel), especially before a long journey.

Driving with under-inflated tyres, particularly in adverse conditions (heavy load, high speed, long journey):

- worsens road-holding.
- lengthens braking distances.
- causes premature wear of the tyres.
- increases energy consumption.

i The inflation pressures defined for the vehicle can be found on the tyre pressure label.

For more information on the **Identification markings**, refer to the corresponding section.

! Checking tyre pressures

This check should be done monthly when the tyres are "cold" (vehicle stopped for 1 hour or after a journey of less than 6 miles (10 km) at moderate speeds).

Otherwise, add 0.3 bar to the pressures shown on the label.

i Snow chains

The system does not have to be reinitialised after fitting or removing snow chains.

Under-inflation alert



This is signalled by the fixed illumination of this warning lamp, accompanied by an audible signal and the display of a message.

- ▶ Reduce speed immediately, avoid excessive steering movements and avoid sudden braking.
- ▶ Stop the vehicle as soon as it is safe to do so.

! The loss of pressure detected may not always cause visible deformation of the tyre.

Do not rely on just a visual check.

- ▶ Using a compressor, such as the one in the temporary puncture repair kit, check the pressures of all four tyres when cold.
- ▶ If it is not possible to carry out this check immediately, drive carefully at reduced speed.
- ▶ In the event of a puncture, use the temporary puncture repair kit or the spare wheel (depending on equipment).

! Driving too slowly may not ensure optimum monitoring.

The alert is not immediately triggered in the event of a sudden loss of pressure or tyre blow-out. This is because analysis of the values read by the wheel's speed sensors can take several minutes.

The alert may be delayed at speeds below 25 mph (40 km/h), or when adopting a sporty driving mode.

i The alert is kept active until the system is reinitialised.

 
Reinitialisation

▶ The system must be reinitialised after any adjustment to the pressure of one or more tyres, and after changing one or more wheels.

! Before reinitialising the system, make sure that the pressures of the four tyres are correct for the conditions of use of the vehicle and conform to the values written on the tyre pressure label.

Check the pressures of the four tyres before performing the reinitialisation.

The system does not advise if a pressure is incorrect at the time of reinitialisation.



Without audio system

- ▶ Open the glove box.



- ▶ Hold this button down.

Reinitialisation is confirmed by a low-pitched audible signal.

A high-pitched audible signal indicates that the reinitialisation has not been carried out.

The new pressure parameters saved are treated as reference values by the system.

With audio system

- ▶ Press the **MENU** button for access to the main menu.

▶ Press the "«" or "»" button to select the "**Personalisation-configuration**" menu and confirm by pressing the central button.

▶ Press the "«" or "»" button to select the "**Define the vehicle parameters**" menu and confirm by pressing the central button.

▶ Press the "«" or "»" button to select the "**Driving assistance**" category and confirm by pressing the central button.

► Press the "◀◀" or "▶▶" button to select "**Tyre pressures**", then "**Reinitialisation**", then confirm by pressing the central button. A message confirms the reinitialisation.

With touch screen



The request to reinitialise the system is made in the

Driving/Vehicle menu.

Malfunction



In the event of a malfunction, these warning lamps light up on the instrument panel.

A message appears, accompanied by an audible signal.

In this case, the tyre under-inflation monitoring function is no longer performed.

Have it checked by a CITROËN dealer or a qualified workshop.

Non-standard or 'space-saver' spare wheel

The use of this type of spare wheel may suspend tyre pressure monitoring. In this case, the malfunction warning lamp comes on and disappears once the wheel has been replaced by one of uniform size (the same as the others), the pressure readjusted and the reinitialisation carried out.

Driving and manoeuvring aids - General recommendations

i Driving and manoeuvring aids cannot, in any circumstances, replace the need for vigilance on the part of the driver.

The driver must comply with the Highway Code, must remain in control of the vehicle in all circumstances and must be able to retake control of it at all times. The driver must adapt the speed to climatic conditions, traffic and the state of the road.

It is the driver's responsibility to constantly monitor traffic conditions, assess the distance and relative speed of other vehicles, and anticipate their manoeuvres before using the direction indicator and changing lanes.

These systems do not make it possible to exceed the laws of physics.

Driving aids

i You should hold the steering wheel with both hands, always use the door and interior mirrors, always leave your feet close to the pedals and take a break every 2 hours.

Manoeuvring aids

i The driver must always check the surroundings of the vehicle before and during

the whole manoeuvre, in particular using the mirrors.

Other cameras

i The images from the camera(s) displayed on the touch screen or on the instrument panel may be distorted by the terrain.

In the presence of areas in shade, or in conditions of bright sunlight or inadequate lighting, the image may be darkened and with lower contrast.

Obstacles may appear further away than they actually are.

Sensors

! The operation of the sensors, as well as any associated functions, may be disrupted by noise pollution such as that emitted by noisy vehicles and machinery (e.g. lorries, pneumatic drills), by the accumulation of snow or dead leaves on the road or in the event of damaged bumpers and mirrors.

When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty.

A front or rear impact to the vehicle can upset the sensors' settings, which is not always detected by the system: distance measurements may be distorted.

The sensors do not systematically detect obstacles that are too low (pavements, studs) or too thin (trees, posts, wire fences). Certain obstacles located in the sensors' blind spots may not be detected or may no longer be detected during the manoeuvre. Certain materials (fabrics) absorb sound waves: pedestrians may not be detected.

i Maintenance

Clean the bumpers and door mirrors and the field of vision of the cameras regularly. When washing your vehicle at high pressure, direct the spray from at least 30 cm away from the radar, sensors and cameras.

! Mats/Pedal trims

The use of mats or pedal trims not approved by CITROËN may interfere with the operation of the speed limiter or cruise control.

To avoid any risk of jamming the pedals:

- Ensure that the mat is secured correctly.
- Never fit one mat on top of another.

i Units of speed


Ensure that the units of speed displayed on the instrument panel (mph or km/h) are those for the country you are driving in. If this is not the case, when the vehicle is stationary, set the display to the required

units of speed so that it complies with what is authorised locally.

In case of doubt, contact a CITROËN dealer or a qualified workshop.


Speed limiter

! For more information, refer to the **General recommendations on the use of driving and manoeuvring aids.**

 This system prevents the vehicle from exceeding the speed programmed by the driver (speed setting).

The speed limiter is switched on manually. The minimum speed setting is 19 mph (30 km/h). The speed setting remains in the system memory when the ignition is switched off.

Steering-mounted control

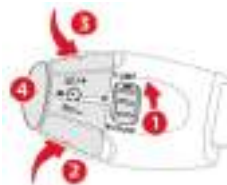

1. ON (**LIMIT** position)/OFF (position **0**)
2. Reduce the speed setting
3. Increase the speed setting
4. Pause/resume speed limiter with the speed setting previously stored

Displays in the instrument panel



5. Speed limiter on/off indication
6. Speed limiter mode selection indication
7. Programmed speed value

Switching on/Pausing

- ▶ Turn thumbwheel **1** to the "**LIMIT**" position to select speed limiter mode; the function is paused.
- ▶ If the speed limit setting is suitable (most recent speed setting programmed in the system), press button **4-II** to switch the speed limiter on.

► Pressing **4-II** again temporarily pauses the function (pause).

Adjusting the limit speed setting

You do not have to switch the speed limiter on in order to set the speed.

To modify the limit speed setting based on the vehicle's current speed:

- For steps of +/- 1 mph (1 km/h), briefly press **2-SET-** or **3-SET+** repeatedly.
- For steps of +/- 5 mph (5 km/h), press and hold **2-SET-** or **3-SET+**.

Temporarily exceeding the speed setting

► Fully depress the accelerator pedal.

The speed limiter is temporarily deactivated and the displayed speed setting flashes.

► Release the accelerator pedal to return to below the speed setting.

When exceeding the speed is not due to the driver's action (e.g. in case of a steep slope), an audible signal is triggered immediately.

! On a steep descent or in the event of sharp acceleration, the speed limiter will not be able to prevent the vehicle from exceeding the speed setting.
If necessary, apply the brakes to control your vehicle's speed.

When the vehicle speed returns to the speed setting level, the speed limiter operates again: the speed setting display becomes fixed again.

Switching off

► Turn the thumbwheel **1** to the "OFF" position: speed limiter information is no longer displayed.

Malfunction

In the event of a malfunction, dashes are displayed flashing and then fixed instead of the speed setting.

Have it checked by a CITROËN dealer or a qualified workshop.

Cruise control - Specific recommendations

! The cruise control function does not guarantee compliance with the maximum authorised speed and the safety distance between vehicles, the driver remains responsible for their driving.

In the interest of public safety, only use cruise control if the traffic conditions enable vehicles to drive at a steady speed and maintain an adequate safety distance.

Remain vigilant while cruise control is activated. If you press and hold one of the speed setting modification buttons, your vehicle may change speed very abruptly.

When **descending a steep hill**, the cruise control system cannot prevent the vehicle from exceeding the set speed. Brake if necessary to control the vehicle speed.
On **steep climbs** or when towing, the set speed may not be reached or maintained.

i Exceeding the programmed speed setting

You can **temporarily** exceed the speed setting by pressing the accelerator pedal (the programmed speed flashes).

To return to the speed setting, release the accelerator pedal (when the set speed is reached again, the displayed speed stops flashing).

! Operating limits

Never use the system in the following situations:

- In an urban area with the risk of pedestrians crossing the road.
- In heavy traffic (except versions with the Stop & Go function).
- On winding or steep roads.
- On slippery or flooded roads.
- In poor weather conditions.
- In the event of restricted visibility for the driver.
- Driving on a speed circuit.
- Driving on a rolling road.

- When using a 'space-saver' type spare wheel.
- When using snow chains, non-slip covers or studded tyres.

Cruise control

! For more information, refer to the **General recommendations on the use of driving and manoeuvring aids** and the **Specific recommendations on cruise control**.



This system automatically maintains the vehicle's speed at the value programmed by the driver (speed setting), without the use of the accelerator pedal.

Cruise control is switched on manually.

It requires a minimum vehicle speed of 25 mph (40 km/h).


With a manual gearbox, fourth gear must be engaged.

With an automatic gearbox, mode **D** or second gear or higher in mode **M** must be engaged.

i Cruise control remains active after changing gear on engines fitted with a manual gearbox and the Stop & Start function.

i Switching off the ignition cancels any speed setting.

Steering-mounted control

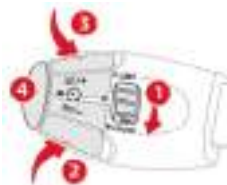

1. ON (**CRUISE** position)/OFF (position 0)
2. Activate cruise control at the current speed/ decrease speed setting
3. Activate cruise control at the current speed/ increase speed setting
4. Pause/resume cruise control with the speed setting previously saved

Information displayed on the instrument panel



5. Cruise control pause/resume
6. Cruise control mode selection
7. Speed setting value

Switching on/pausing

- ▶ Turn thumbwheel 1 to the "**CRUISE**" position to select cruise control mode; the function is paused.
- ▶ Press button **2-SET-** or **3-SET+** to activate cruise control and save a speed setting when the vehicle has reached the desired speed; the vehicle's current speed is saved as the speed setting.
- ▶ Release the accelerator pedal.
- ▶ Pressing button **4-||** temporarily pauses the function (pause).
- ▶ Pressing button **4-||** again resumes operation of the cruise control (ON).

- i** Cruise control can also be paused temporarily:
- by pressing the brake pedal.
 - automatically, if the electronic stability control (ESC) system is triggered.

Changing the cruise speed setting

The cruise control must be active.

To change the cruise speed setting, based on the vehicle's current speed:

- ▶ For steps of +/- 1 mph (1 km/h), briefly press **2-SET-** or **3-SET+** repeatedly.
- ▶ For steps of +/- 5 mph (5 km/h), press and hold **2-SET-** or **3-SET+**.

- !** Pressing and holding **2-SET-** or **3-SET+** results in a rapid change in the speed of the vehicle.

- !** As a precaution, we recommend setting a cruise speed fairly close to the current speed of your vehicle, to avoid any sudden acceleration or deceleration of the vehicle.

Switching off

- ▶ Turn the thumbwheel **1** to the **"OFF"** position: the cruise control information disappears from the screen.


Malfunction

In the event of a malfunction, dashes are displayed flashing and then fixed instead of the speed setting.

Have it checked by a CITROËN dealer or a qualified workshop.

Rear parking sensors


- !** For more information, refer to the **General recommendations on the use of driving and manoeuvring aids.**

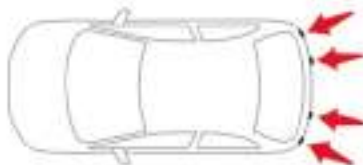

This system detects and signals the proximity of obstacles (e.g. pedestrian, vehicle, tree, gate) entering the field of detection of sensors located in the bumper.

Due to blind spots, obstacles of certain types (posts, roadworks cones, etc.) which were detected initially won't be any longer by the end of the operation.

Audible assistance

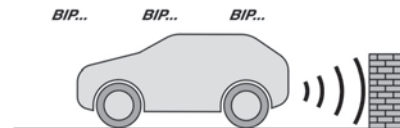


The system signals the presence of obstacles within the sensors' detection zone.

The proximity information is given by an intermittent audible signal, the frequency of which increases as the vehicle approaches the obstacle.

When the distance between the vehicle and the obstacle becomes less than about thirty centimetres, the audible signal becomes continuous.

The sound emitted by the speaker (right or left) indicates the side on which the obstacle is located.

 Visual assistance





This supplements the audible signal by displaying bars on the screen whose location represents the distance between the obstacle and the vehicle (white: more distant, orange: close, red: very close).

When the obstacle is very close, the "Danger" symbol is displayed on the screen.

Deactivation/Activation

The function is deactivated or activated via the vehicle configuration menu.

With audio system



The parking sensors can be configured in the **"Personalisation - Configuration"** menu.

With touch screen



The parking sensors can be configured in the **Driving/Vehicle** menu.

i The function will be deactivated automatically if a trailer is being towed or a bicycle carrier is fitted (vehicle fitted with a tow bar or bicycle carrier recommended by CITROËN).

Malfunction




In the event of a malfunction when changing into reverse gear, this warning lamp lights up on the instrument panel and/or a message appears in the screen, accompanied by an audible signal (short beep).

Have it checked by a CITROËN dealer or a qualified workshop.

Reversing Camera


! For more information, refer to the **General recommendations on the use of driving and manoeuvring aids.**

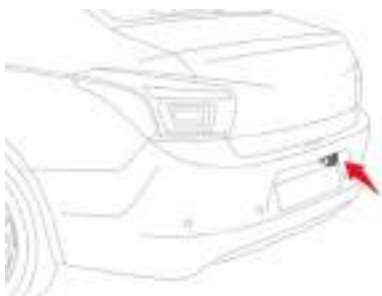

The reversing camera is automatically activated when reverse gear is engaged.

The image is displayed on the touch screen.

i The reversing camera function may be supplemented with parking sensors.

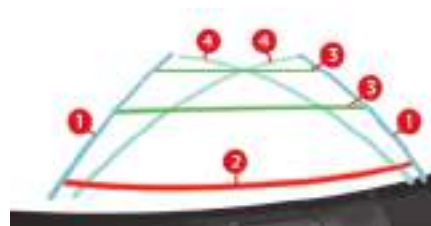

The representation with overlaid lines helps with the manoeuvre.

i They are represented as lines marked "on the ground" and do not indicate the position of the vehicle in relation to tall obstacles (e.g. other vehicles). Some distortion of the image is normal. It is normal to have a part of the number plate showing at the bottom of the screen.

The blue lines **1** represent the general direction of the vehicle (the gap represents the width of your vehicle without the mirrors).

The red line **2** represents a distance of about 30 cm beyond the edge of your vehicle's rear bumper.

The green lines **3** represent distances of about 1 and 2 metres beyond the edge of your vehicle's rear bumper.

The turquoise blue curves **4** represent the maximum turning circle.

i Opening the tailgate causes the display to disappear.

CITROËN prefers TotalEnergies



FILL UP WITH CONFIDENCE WITH QUARTZ LUBRICANTS

Partners for more than 50 years, Citroën & TotalEnergies share common values: technology, creativity, innovation. TotalEnergies equips Citroën vehicles with **Quartz lubricants** from their first filling in the factory to approved maintenance networks to guarantee them optimal performance on a daily basis. Especially designed for Citroën vehicles, Quartz lubricants make them even more powerful, more fuel efficient and more environmentally friendly. For your car maintenance, fill up with confidence with Quartz lubricants!

Keep your engine younger for longer!

Quartz Ineo Xtra First 0W-20 is a very high performance lubricant resulting from the joint work of the Citroën and TotalEnergies R&D teams. Its innovative technology extends your engine's life while reaching significant fuel savings and thus limiting CO₂ emissions. The product is now available in new packaging* made of 50% recycled material and 100% recyclable.

Compatibility of fuels

E5 **E10**

Petrol fuels conforming to the EN228 standard containing up to 5% and 10% ethanol respectively.

B7 **B10** **B20** **B30**

Diesel fuels conforming to the EN590, EN16734 and EN16709 standards and containing up to 7%, 10%, 20% and 30% fatty acid methyl ester respectively. The use of B20 or B30 fuels, even occasionally, imposes special maintenance conditions referred to as "Arduous conditions".

XTL

Paraffinic Diesel fuel conforming to the EN15940 standard.

! The use of any other type of (bio) fuel (e.g. pure or diluted vegetable or animal oils, domestic fuel) is strictly prohibited - risk of damaging the engine and fuel system!

i The only fuel additives authorised for use are those that meet the B715001 (Petrol) or B715000 (Diesel) standards.

Diesel at low temperature

At temperatures below 0 °C (+32 °F), the formation of paraffins in summer-type Diesel

fuels could prevent the engine from operating correctly. In these temperature conditions, use winter-type Diesel fuel and keep the fuel tank more than 50 % full.

At temperatures below -15 °C (+5 °F) to avoid problems starting, it is best to park the vehicle under shelter (heated garage).

Travelling abroad

Certain fuels could damage your vehicle's engine.

In certain countries, the use of a particular fuel may be required (specific octane rating, specific trade name, etc.) to ensure correct operation of the engine.

For all additional information, consult a dealer.

Refuelling

Fuel tank capacity: approximately 50 litres.

Reserve level: approximately 5 litres.

Low fuel level

! When the low fuel level is reached, this warning lamp lights up on the instrument panel. When it first comes on, **about 5 litres** of fuel remain.

You must refuel as soon as possible to avoid running out of fuel.

For more information on **Running out of fuel (Diesel)**, refer to the corresponding section.

i A small arrow by the warning lamp indicates which side of the vehicle the fuel filler flap is located on.


! **Stop & Start**
Never refuel with the engine in STOP mode; you must switch off the ignition.

Refuelling


Additions of fuel must be of at least 5 litres, in order to be registered by the fuel gauge. Opening the filler flap may create a noise caused by an inrush of air. This vacuum is entirely normal, resulting from the sealing of the fuel system.

To refuel in complete safety:


► **You must switch off the engine.**

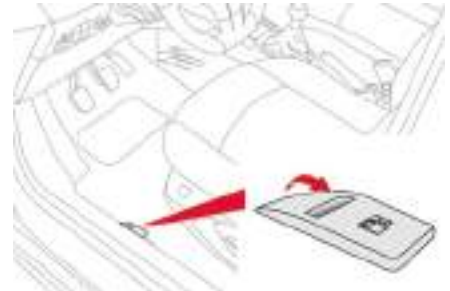

► Raise the lever.

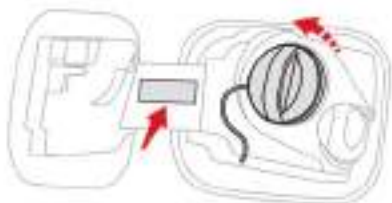

- ▶ Take care to select the pump that delivers the correct fuel type for the vehicle's engine (see a reminder label on the inside of the filler flap).
- ▶ Open the filler cap by turning it a 1/4 turn to the left.

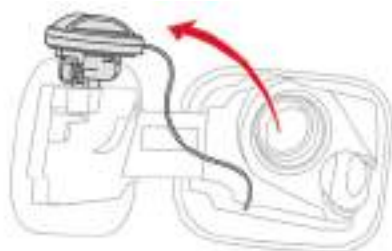

- ▶ Remove the filler cap and hang it on its carrier (on the filler flap).
- ▶ Introduce the filler nozzle and push it in as far as possible before starting to refuel (risk of blowback).
- ▶ Fill the tank.

Do not continue past the 3rd cut-off of the nozzle; as this may cause malfunctions.

- ▶ Push the filler flap to close it.

The vehicle is fitted with a catalytic converter, a device which helps to reduce the level of harmful emissions in the exhaust gases.

For petrol engines, you must use unleaded fuel.

The filler neck is narrower, allowing only unleaded petrol nozzles to be introduced.

! If you have put in the wrong fuel for the vehicle, you must have the fuel tank drained and filled with the correct fuel before starting the engine.


Misfuel prevention (Diesel)

(Depending on country of sale.)

This mechanical device prevents filling the tank of a Diesel vehicle with petrol.

Located in the filler neck, the misfuel prevention device is visible when the filler cap is removed.

Operation

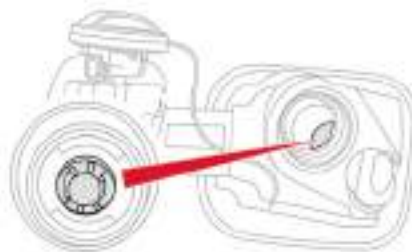

When a petrol filler nozzle is introduced into the fuel filler neck of a Diesel vehicle, it comes into contact with the flap. The system remains closed and prevents filling.

Do not persist but introduce a Diesel type filler nozzle.

i The misfuel prevention device does not prevent filling with a jerrycan, regardless of the fuel type.

i Travelling abroad

As Diesel fuel pump nozzles may be different in other countries, the presence of the misfuel prevention device may make refuelling impossible.

Before travelling abroad, it is advisable to check with a CITROËN dealer if the vehicle is suitable for the distribution equipment of the countries visited.

AdBlue® (BlueHDi)

To respect the environment and ensure compliance with the Euro 6 standard, without adversely affecting the performance or fuel consumption of its Diesel engines, CITROËN has taken the decision to equip its vehicles with a system that combines SCR (Selective Catalytic Reduction) with a Diesel Particle Filter (DPF) for the treatment of exhaust gases.

SCR system

Using a liquid called AdBlue® that contains urea, a catalytic converter turns up to 85% of the nitrogen oxides (NOx) into nitrogen and water, which are harmless to health and the environment.



The AdBlue® is contained in a **special tank** holding about 17 litres.

Its capacity allows a driving range of approximately 5,500 miles (9,000 km), **which may vary considerably** depending on your driving style.

An alert system is triggered once the reserve level is reached: it is then possible to drive for a further 1,500 miles (2,400 km) before the tank is empty and the vehicle is immobilised.

During each scheduled service of your vehicle by a CITROËN dealer or a qualified workshop, the AdBlue® tank is refilled in order to allow normal operation of the SCR system.

If the estimated distance travelled by the vehicle between two services is greater than 12,500 miles (20,000 km), it will be necessary to top up the AdBlue.

i For more information on the **Warning and indicator lamps** and the associated alerts, or the **Indicators**, please refer to the corresponding sections.

! Once the AdBlue® tank is empty, a device required by law prevents the engine from being restarted.

If the SCR system is faulty, the level of emissions from the vehicle will no longer meet the Euro 6 standard and the vehicle starts polluting the environment.

In the event of a confirmed SCR system malfunction, it is essential to visit a CITROËN dealer or a qualified workshop as soon as possible. After 685 miles (1,100 km), a device is automatically activated to prevent the engine from starting.

In both cases, a range indicator indicates the distance that can be travelled before the vehicle is immobilised.

i **Freezing of the AdBlue®**
AdBlue® freezes at temperatures below around -11°C.

The SCR system includes a heater for the AdBlue® tank, allowing you to continue driving in very cold conditions.

Supply of AdBlue®

It is recommended that the AdBlue® be topped up as soon as the first alert is issued indicating that the reserve level has been reached.

! For the correct operation of the SCR system:

- Use only AdBlue® fluid that meets the ISO 22241 standard.
- Never transfer AdBlue® to another container as it would lose its purity.
- Never dilute AdBlue® with water.

You can obtain AdBlue® from a CITROËN dealer or a qualified workshop.

i You can also visit a service station equipped with AdBlue® pumps specially designed for passenger vehicles.

! Never top up from an AdBlue® dispenser reserved for heavy goods vehicles.

Recommendations on storage

AdBlue® freezes at about -11°C and deteriorates above +25°C. Containers should be stored in a cool area and protected from direct sunlight. Under these conditions, the fluid can be kept for at least a year.

If the fluid has frozen, it can be used once it has completely thawed out at room temperature.

! Never store AdBlue® containers in your vehicle.

Precautions for use

AdBlue® is a urea-based solution. This fluid is non-flammable, colourless and odourless (when kept in a cool place).

In the event of contact with the skin, wash the affected area with soap and running water. In the event of contact with the eyes, immediately rinse the eyes with large amounts of water or with an eye wash solution for at least 15 minutes. Seek medical attention if you feel a persistent burning sensation or irritation.

If swallowed, immediately wash out the mouth with clean water and then drink plenty of water. In certain conditions (high temperature, for example), the risk of release of ammonia cannot be excluded: do not inhale the fluid. Ammonia vapours have an irritant effect on mucous membranes (eyes, nose and throat).

- ! Store AdBlue® out of the reach of children, in its original container.

Procedure

Before starting the top-up procedure, ensure that the vehicle is parked on a flat and level surface. In wintry conditions, ensure that the temperature of the vehicle is above -11°C. Otherwise the AdBlue® may be frozen and so cannot be poured into the tank. Park the vehicle in a warmer area for a few hours to allow the top-up to be carried out.

- ! Never pour the AdBlue® into the Diesel fuel tank.


- i For specific information about how to access the AdBlue tank, refer to the detailed descriptions below.

- ! If any AdBlue® is splashed, or if there are any spillages on the bodywork, rinse immediately with cold water or wipe with a damp cloth. If the fluid has crystallised, clean it off using a sponge and hot water.

- ! Important: **in the event of a top-up after an AdBlue breakdown**, you must wait about 5 minutes before switching on the ignition, **without opening the driver's door, unlocking the vehicle or bringing the electronic key into the passenger compartment.**

Switch on the ignition, then wait for 10 seconds before starting the engine.

- ▶ Switch off the ignition and remove the key from the switch to switch off the engine.

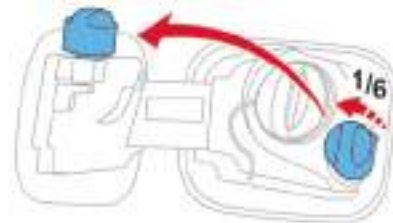

- ▶ Turn the blue cap of the AdBlue® tank anti-clockwise and remove it.

Filling up

- ▶ With a bottle or container of AdBlue®: after checking the expiry date, read the instructions on the label carefully before pouring the contents into the vehicle's AdBlue® tank.
- ▶ With an AdBlue® pump: insert the nozzle and fill the tank until the nozzle automatically cuts out.

- ! In order not to overfill the AdBlue® tank:
 - Add between 10 and 13 litres using AdBlue® containers.
 - Stop after the nozzle's first automatic cut-out, if you are refilling at a service station. The system only registers AdBlue® intermediate top-ups of 5 litres or more.

- ! If the AdBlue® tank is completely empty
 - which is confirmed by the message

“Top up AdBlue: Starting impossible” – it is essential to add at least 10 litres. Top-up detection may not be instantaneous after addition. It may take a few minutes of driving before the top-up detection is effective.



Do not dispose of AdBlue® bottles or containers in the household waste. Place them in a container reserved for this purpose or take them back to where you purchased them.

Snow chains

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.



Snow chains must be fitted only to the front wheels. They must never be fitted to "space-saver" type spare wheels.



Observe the legislation in force in your country relating to the use of snow chains and maximum authorised speeds.

Use only the chains designed to be fitted to the type of wheel fitted to your vehicle :

Original tyre size	Maximum link size
185/65 R15	9 mm
195/55 R16	

For more information on snow chains, contact a CITROËN dealer or a qualified workshop.

Installation tips

- ▶ To fit the snow chains during a journey, stop the vehicle on a flat surface at the side of the road.
- ▶ Apply the parking brake and position any wheel chocks under the wheels to prevent movement of the vehicle.
- ▶ Fit the snow chains following the instructions provided by the manufacturer.
- ▶ Move off gently and drive for a few moments, without exceeding 31 mph (50 km/h).
- ▶ Stop the vehicle and check that the snow chains are correctly tightened.



It is strongly recommended that you practise fitting the snow chains on a level and dry surface before setting off.



Avoid driving with snow chains on roads that have been cleared of snow to avoid damaging the vehicle's tyres and the road surface. If the vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.

Energy economy mode

This system manages the duration of use of certain functions, in order to conserve a sufficient level of charge in the battery with the ignition off. After switching off the engine and for a maximum cumulative period of around 30 minutes, you can continue to use functions such as the audio and telematics system, dipped beam headlights or courtesy lamps.

Selecting the mode

A confirmation message is displayed when energy economy mode is entered, and the active functions are placed on standby.



If a telephone call is in progress at the time, it will be maintained for around 10 minutes via the audio system's hands-free system.

Exiting the mode

These functions are automatically reactivated the next time the vehicle is used.

To restore the use of these functions immediately, start the engine and let it run:

- For less than 10 minutes, to use the equipment for approximately 5 minutes.
- For more than 10 minutes, to use the equipment for approximately 30 minutes.

Let the engine run for the specified duration to ensure that the battery charge is sufficient.

To recharge the battery, avoid repeatedly or continuously restarting the engine.

! A flat battery prevents the engine from starting.

For more information on the **12 V battery**, refer to the corresponding section.

Load reduction mode

This system manages the use of certain functions according to the level of charge remaining in the battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning and the heated rear screen.

The deactivated functions are reactivated automatically as soon as conditions permit.

Towing device

Load distribution

► Distribute the load in the trailer so that the heaviest items are as close as possible to the axle, and the nose weight approaches the maximum permitted without exceeding it. Air density decreases with altitude, thus reducing engine performance. The maximum towable load must be reduced by 10% per 1,000 metres of altitude.

i Use genuine towing devices and wiring harnesses approved by CITROËN. We recommend having them fitted by a CITROËN dealer or a qualified workshop.

If not fitted by a CITROËN dealer, they must still be fitted in accordance with the vehicle manufacturer's instructions.

Certain driving or manoeuvring aid functions are automatically deactivated while an approved towing system is in use.

For more information about driving with a towing device fitted to a trailer and associated with the **Trailer stability assist**, refer to the corresponding section.

! Comply with the maximum authorised towable weight, as indicated on your vehicle's registration certificate, on the manufacturer's label and in the **Technical data** section of this guide.

! If using accessories attached to the towing device (e.g. bicycle carriers, tow boxes):

- Comply with the maximum authorised nose weight.
- Do not transport more than 4 conventional bicycles or 2 electric bicycles.

When loading bicycles onto a bicycle carrier on a towball, be sure to place the heaviest bicycles as close as possible to the vehicle.

! Observe the legislation in force in the country where you are driving.

Very cold climate screen

(Depending on country of sale)

This removable device prevents the accumulation of snow around the radiator cooling fan.

i **In case of difficulty with installation/removal**


Contact a CITROËN dealer or a qualified workshop.

! Before any operation, ensure that the engine is off and the cooling fan has stopped.

! It is essential to remove them when:

- the outside temperature exceeds 10°C.
- recovery is in progress.
- the speed is above 75 mph (120 km/h).

Fitting/Removing

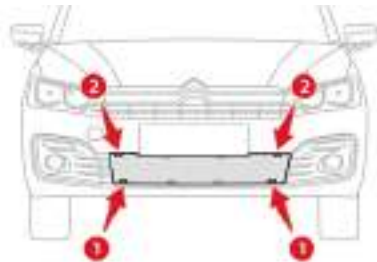

- ▶ Place the screen in front of the front bumper.
 - ▶ Insert the two lower fixing brackets **1** into the bumper.
 - ▶ Tilt the screen upwards, press on the two upper fixing brackets **2** and insert them into the bumper.
 - ▶ Check that the unit is firmly held by pressing its edge.
- To remove it, carry out these operations in reverse order.

Roof bars

! As a safety measure and to avoid damaging the roof, it is essential to use transverse roof bars approved for your vehicle. Observe the instructions on fitting and use contained in the guide supplied with the roof bars.

! Maximum load distributed over the transverse roof bars, for a loading height not exceeding 40 cm (except bicycle carrier): **75 kg**.

As this value may change, please verify the maximum load quoted in the guide supplied with the roof bars.

If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the vehicle.

Be sure to refer to national legislation in order to comply with the regulations for transporting objects that are longer than the vehicle.

! Recommendations

Distribute the load uniformly, taking care to avoid overloading one of the sides.

Arrange the heaviest part of the load as close as possible to the roof.


Secure the load firmly.

Drive gently: the vehicle will be more susceptible to the effects of side winds and its stability may be affected.

Regularly check the security and tight fastening of the roof bars, at least before each trip.

Remove the roof bars once they are no longer needed.

Direct fitting on roof

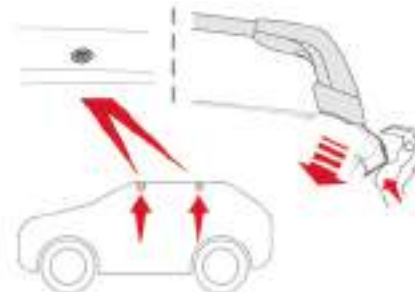

The transverse bars must only be fixed at the four anchorage points located on the roof frame. These points are concealed by the vehicle doors when the doors are closed.

The roof bar fixings have a stud which must be inserted into the opening of each anchorage point.

Bonnet

! Stop & Start

Before doing anything under the bonnet, you must switch off the ignition to avoid any risk of the engine restarting automatically. Take care with objects or clothing that could be caught in the blades of the cooling fan

or in certain moving components - risk of strangulation and serious injury!



i The location of the interior bonnet release lever prevents the bonnet being opened when the left-hand front door is closed.

! When the engine is hot, handle the exterior safety catch and the bonnet stay with care (risk of burns), using the protected area.


When the bonnet is open, take care not to damage the safety catch.

Do not open the bonnet under very windy conditions.

! **Cooling of the engine when stopped**
The engine cooling fan may start after the engine has been switched off.
Take care with objects or clothing that could be caught in the blades of the fan!

Opening

- ▶ Open the left-hand front door.

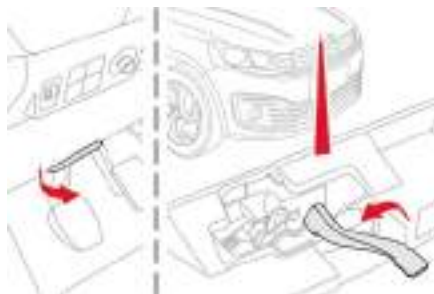

- ▶ Pull the interior release lever, located at the bottom of the dashboard, towards you.
- ▶ Tilt the exterior safety catch to the left and raise the bonnet.



- ▶ Unclip the stay from its housing and place it in the support slot to hold the bonnet open.

Closing

- ▶ Hold the bonnet and pull out the stay from the support slot.
- ▶ Clip the stay in its housing.

- ▶ Lower the bonnet and release it near the end of its travel.
- ▶ Pull on the bonnet to check that it is locked correctly.

! Because of the presence of electrical equipment under the bonnet, it is strongly recommended that exposure to water (rain, washing, etc.) be limited.

Engine compartment

The engine shown here is an example for illustrative purposes only.

The locations of the following components may vary:

- Engine oil dipstick.
- Engine oil filler cap.
- Priming pump.

Petrol engine



Diesel engine



1. Screenwash fluid reservoir
2. Engine coolant reservoir
3. Brake fluid reservoir
4. Battery
5. Remote earth point (-)
6. Fusebox
7. Air filter
8. Engine oil filler cap
9. Engine oil dipstick
10. Priming pump*

! Diesel fuel system

This system is under very high pressure. All work must be carried out only by a CITROËN dealer or a qualified workshop

Checking levels

Check all of the following levels regularly in accordance with the manufacturer's service

schedule. Top them up if required, unless otherwise indicated.

If a level drops significantly, have the corresponding system checked by a CITROËN dealer or a qualified workshop.

! The fluids must comply with the manufacturer's requirements and with the vehicle's engine.

! Take care when working under the bonnet, as certain areas of the engine may be extremely hot (risk of burns) and the cooling fan could start at any time (even with the ignition off).

Used products

! Avoid prolonged contact of used oil or fluids with the skin.

Most of these fluids are harmful to health and very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.

Empty used oil into the containers reserved for this purpose at a CITROËN dealer or a qualified workshop.

Engine oil



The level is checked, with the engine having been switched off for at least 30 minutes and on level ground, using the dipstick. It is normal to top up the oil level between two services (or oil changes). It is recommended that you check the level, and top up if necessary, every 3,000 miles (5,000 km).

! In order to maintain the reliability of the engine and emissions control system, never use additives in the engine oil.

Checking using the dipstick

For the location of the dipstick, please refer to the illustration of the corresponding engine compartment.

- ▶ Grasp the dipstick by its coloured grip and pull it out completely.
- ▶ Wipe the end of the dipstick using a clean, lint-free cloth.



- ▶ Reinsert the dipstick and push fully down, then pull it out again to visually check the oil

* Depending on engine.

level: the correct level is between marks **A (max)** and **B (min)**.

Do not start the engine if the level is:

- above mark **A**: contact a CITROËN dealer or a qualified workshop.
- below mark **B**: top up the engine oil immediately.

! Oil grade

Before topping up or changing the engine oil, check that the oil is suitable for your engine and complies with the recommendations in the service schedule supplied with the vehicle (or available from your CITROËN dealer or qualified workshop). Use of non-recommended oil may invalidate your warranty in the event of engine failure.

Topping up the engine oil level

For the location of the engine oil filler cap, please refer to the corresponding engine compartment illustration.

- ▶ Add oil in small quantities, avoiding any spills on engine components (risk of fire).
- ▶ Wait a few minutes before checking the level again using the dipstick.
- ▶ Top up the level if necessary.
- ▶ After checking the level, carefully screw the oil filler cap back on and replace the dipstick in its tube.

Brake fluid



The level of this fluid should be close to the "**MAX**" mark. If not, check the brake pads for wear.

To know how often the brake fluid should be replaced, refer to the manufacturer's servicing schedule.



Clean the cap before removing it to refill. Use only DOT4 brake fluid from a sealed container.

Engine coolant



It is normal to top up this fluid between two services.

The check and top-up must only be done with the engine cold.

A level of coolant that is too low risks causing major damage to the engine; the coolant level must be close to the "**MAX**" mark without ever going above it.

If the level is close to or below the "**MIN**" mark, it is essential to top it up.

When the engine is hot, the temperature of the coolant is regulated by the fan.

As the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

In order to avoid the risk of scalding if you need to top up in an emergency, wrap a cloth around the cap and unscrew the cap by two turns to allow the pressure to drop.

Once the pressure has dropped, remove the cap and top up to the required level.

Screenwash fluid



Top up to the required level when necessary.

Fluid specification

The fluid must be topped up with a pre-mixed product.

In winter (temperatures below zero), a fluid containing an anti-freeze agent which is appropriate for the temperature conditions must be used in order to protect the system's components (pump, tank, ducts, jets).



Filling with pure water is prohibited in all circumstances (risk of freezing, limescale, etc.).

Diesel fuel additive (Diesel with particle filter)



On reaching the minimum level in the particle filter additive tank, this warning lamp comes on fixed, accompanied by an audible signal and a warning message.

Topping up

The topping up of this additive must be carried out quickly.

Visit a CITROËN dealer or a qualified workshop.

AdBlue® (BlueHDi)

An alert is triggered when the reserve level is reached.

For more information on the **Indicators** and in particular the AdBlue range indicators, refer to the corresponding section.

To avoid the vehicle being immobilised in accordance with regulations, you must top up the AdBlue tank.

For more information on **AdBlue® (BlueHDi)**, and in particular the supply of AdBlue, refer to the corresponding section.

Checks

Unless otherwise indicated, check these components in accordance with the manufacturer's service schedule and according to your engine.

Otherwise, have them checked by a CITROËN dealer or a qualified workshop.

! Only use products recommended by CITROËN or products of equivalent quality and specification.

In order to optimise the operation of components as important as those in the braking system, CITROËN selects and offers very specific products.

12 V battery



The battery does not require any maintenance.

Check regularly that the terminals are correctly tightened (versions without quick-release terminals) and that the connections are clean.

i For more information on the precautions to take before any work on the **12 V battery**, refer to the corresponding section.

! Versions equipped with Stop & Start are fitted with a 12 V lead-acid battery with special technology and specifications. Its replacement should be carried out only by a CITROËN dealer or a qualified workshop.

Air filter



Depending on the environment and the use of the vehicle (e.g. dusty atmosphere, city driving), **change it twice as often, if necessary.**

Passenger compartment filter



Depending on the environment and the use of the vehicle (e.g. dusty atmosphere, city driving), **change it twice as often, if necessary.**

i A clogged passenger compartment filter can adversely affect air conditioning

system performance and generate undesirable odours.

Oil filter



Change the oil filter each time the engine oil is changed.

Particle filter (Diesel)



The start of clogging of the particle filter is indicated by the temporary lighting of this warning lamp, accompanied by an alert message.

As soon as traffic conditions allow, regenerate the filter by driving at a speed of at least 37 mph (60 km/h), with an engine speed above 2,500 rpm, for about 15 minutes (until the warning lamp goes out).

If it is not possible to reach 37 mph (60 km/h), leave the engine running at idle for about 15 minutes, then drive with an engine speed above 2,500 rpm for 15 minutes.

! Do not switch off the engine until the filter is fully regenerated; repeated intervals can degrade the engine oil prematurely. Regenerating the filter while the vehicle is stationary is not recommended.

i Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice water vapour coming from the exhaust while

accelerating. These emissions have no impact on the vehicle's behaviour and the environment.

i New vehicle

During the first few particle filter regeneration operations, you may notice a "burning" smell. This is perfectly normal.

Manual gearbox



The gearbox does not require any maintenance (no oil change).

Automatic gearbox



The gearbox does not require any maintenance (no oil change).

Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the condition of the brakes checked, even between vehicle services.

Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

i After washing the vehicle, moisture, or in wintry conditions, ice can form on the brake discs and pads: braking efficiency may be reduced. Gently dab the brakes to dry and defrost them.

Brake disc wear



For information on checking brake disc wear, contact a CITROËN dealer or a qualified workshop.

Manual parking brake



If you notice excessive brake lever travel or decreased effectiveness, the parking brake must be adjusted, even between two services.

This system must be checked by a CITROËN dealer or a qualified workshop.

Wheels and tyres



The inflation pressure of all tyres, including the spare wheel, must be checked on "cold" tyres.

The pressures indicated on the tyre pressure label are valid for "cold" tyres. If you have driven for more than 10 minutes or more than 6 miles (10 kilometres) at over 31 mph (50 km/h), add 0.3 bar (30 kPa) to the values indicated on the label.



Under-inflation increases energy consumption. Non-compliant tyre pressures cause tyres to wear prematurely and have an adverse effect on the vehicle's road holding - risk of accident!

Driving with worn or damaged tyres reduces the braking and road holding performance of the vehicle. Regularly check the condition of the

tyres (tread and sidewalls) and rims as well as the presence of the valve caps.

When the wear indicators no longer appear set back from the tread, the depth of the grooves is less than 1.6 mm; replace the tyres as soon as possible.

Using different size wheels and tyres from those specified can affect the lifetime of tyres, wheel rotation, ground clearance, the speedometer reading and have an adverse effect on road holding.

Fitting different tyres on the front and rear axles can cause the ESC to mistime.

Always mark the direction of rotation on the tyres that will be stored when fitting winter or summer tyres. Store them in a cool, dry place and away from direct exposure to the sun's rays.



Winter or 4-seasons tyres can be identified by this symbol on their sidewalls.

Free-wheeling

In certain situations, it is necessary to put the vehicle into free-wheeling mode (e.g. towing, on a rolling road, automatic car wash (Wash mode), rail or sea transport).



Never leave the vehicle unattended with the vehicle into free-wheeling mode.

With manual or automatic gearbox and manual parking brake



To release them

- ▶ With the vehicle stationary and engine running, depress the brake pedal.
- ▶ With a manual gearbox, place the gear lever into neutral.
- ▶ With an automatic gearbox, place the gear selector to mode **N**.
- ▶ Release the parking brake.
- ▶ Release the brake pedal, then switch off the engine.

Reverting to normal operation

- ▶ Apply the parking brake.
- ▶ With an automatic gearbox, place the gear selector to mode **P**.

Advice on care and maintenance

General recommendations

Observe the following recommendations to avoid damaging the vehicle.

Exterior

! Never use a high-pressure jet wash in the engine compartment - risk of damaging the electrical components!
Do not wash the vehicle in bright sunshine or extremely cold conditions.

i When washing the vehicle in an automatic roller-brush car wash, be sure to lock the doors and, depending on version, move the electronic key away.
When using a pressure washer, keep the jet nozzle at a minimum distance of 30 cm from the vehicle (particularly when cleaning areas containing chipped paint, sensors or seals). Promptly clean up any stains containing chemicals liable to damage the vehicle's paintwork (including tree resin, bird droppings, insect secretions, pollen and tar). Depending on the environment, clean the vehicle frequently to remove salty deposits (in coastal areas), soot (in industrial areas) and mud/salts (in wet or cold areas). These substances can be highly corrosive. Contact a CITROËN dealer or a qualified workshop for advice on removing stubborn stains requiring special products (such as tar or insect removers). Preferably, have paint touch-ups performed by a CITROËN dealer or a qualified workshop.

Interior

! When washing the vehicle, never use a water hose or high-pressure jet to clean the interior.
Liquids carried in cups or other open containers can spill, presenting a risk of damage to the instruments and controls and the controls located on the centre console. Be vigilant!
To clean instrument panels, touch screens or other displays, wipe gently with a soft, dry cloth. Do not use products (e.g. alcohol, disinfectant) or soapy water directly on these surfaces - risk of damage!

Bodywork

High-gloss paint

! Do not use abrasive products, solvents, petrol or oil to clean the bodywork.
Never use an abrasive sponge to clean stubborn stains - risk of scratching the paintwork!
Do not apply polish in strong sunshine, or to plastic or rubber parts.

i Use a soft cloth and soapy water or a pH neutral product.
Gently wipe the bodywork with a clean microfibre cloth.
Apply polish with the vehicle clean and dry.

Comply with the instructions for use stated on the product.

Decals

(Depending on version)

! Do not use a high-pressure washer to clean the vehicle - risk of damaging or detaching the decals!

i Use a high-flow hose (temperature between 25°C and 40°C).

Place the jet of water perpendicular to the surface to be cleaned.

Rinse the vehicle with demineralised water.

Textile

The dashboard, door panels and seats may contain parts made of textile material.

Maintenance

! Do not use aggressive cleaning products (e.g. alcohol, solvent or ammonia).

Do not use steam-cleaning systems - risk of affecting the adhesion of the fabrics!

i Remove dust from the textile parts regularly with a dry cloth, soft brush or vacuum cleaner.

Rub down the textile parts once per year with a clean, damp cloth. After leaving overnight to dry, brush with a soft-bristled brush.

Stain removal

! Do not rub the stain or it may spread or you may cause the substance to penetrate the surface.

i Act quickly by reducing the stain from its edges inwards.

Remove as much substance or solids as possible using a spoon or spatula, and remove as much liquid as possible using absorbent paper.

i **Product/Procedure to use depending on the type of stain:**

- Grease, oil and ink: clean with a pH-neutral detergent.
 - Vomit: clean with sparkling mineral water.
 - Blood: spread flour over the stain and allow to dry; remove with a slightly damp cloth.
 - Mud: allow to dry and then remove with a slightly damp cloth.
 - Cake, chocolate, ice cream: clean with lukewarm water.
 - Sugary and/or alcoholic drinks: clean with lukewarm water, or lemon juice if the stain is persistent.
 - Hair gel, coffee, tomato sauce, vinegar: clean with lukewarm water and lemon juice.
- For solid substances, then use a soft brush or vacuum cleaner.

For liquid substances, then use a damp microfibre cloth and then dry with another cloth.

Leather

Leather is a natural product. Appropriate regular care is essential for its durability.

It must be protected and nourished using a specific leather product, to keep it supple and preserve its original appearance.

! Do not use maintenance products which are not suitable for cleaning leather (e.g. solvent, detergent, petrol, pure alcohol). Do not use bleaching or colour-removal products (e.g. perchloroethylene). When cleaning items partly made from leather, take care not to damage the other materials with the specific leather product.

i Before cleaning greasy stains or liquids, quickly mop up any surplus.

Before cleaning, wipe off any residues liable to scuff the leather, using a cloth that has been dampened with demineralised water and thoroughly wrung out.

Clean the leather, without rubbing too vigorously, using a soft cloth moistened with soapy water or a pH-neutral product. Dry with a soft, dry cloth.


Warning triangle

This reflective and dismantable device is to be installed on the side of the road when a vehicle is broken down or damaged.

! Before getting out of the vehicle

Turn on the hazard warning lamps, then put on the safety vest to assemble and install the triangle.

Assembling and placing the triangle

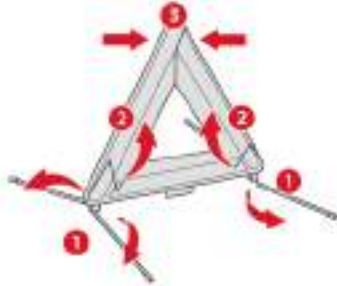

For versions supplied with a triangle as original equipment, refer to the illustration above.

For other versions, refer to the assembly instructions provided with the triangle.

► Put the triangle in place behind the vehicle, as required by local legislation.

Running out of fuel (Diesel)

With Diesel engines, the fuel system must be primed if you run out of fuel.

Before starting to prime the system, it is essential to put at least 5 litres of Diesel into the fuel tank.

i For more information on **Refuelling** and on **Misfuel prevention (Diesel)**, refer to the corresponding section.

For non-BlueHDi versions, the fuel system components are located in the engine compartment; this may be under a removable cover.

i For more information on the **Engine compartment**, in particular the location of these components under the bonnet, refer to the corresponding section.

1.6 HDi engines

► Open the bonnet and then, if necessary, unclip the cover to access the priming pump.



► Operate the priming pump repeatedly until resistance is felt (resistance may be felt at the first press).

► Operate the starter motor to start the engine (if the engine does not start at the first attempt, wait around 15 seconds before trying again).

- If the engine does not start after a few attempts, operate the priming pump again, then the starter motor.
- Put the cover back in place and clip it in, then close the bonnet.

1.5 BlueHDi engines

- Switch on the ignition (without starting the engine).
 - Wait around 1 minute and switch off the ignition.
 - Operate the starter motor to start the engine.
- If the engine does not start at the first attempt, do not keep trying, but restart the procedure.

Tool kit

Set of tools supplied with the vehicle.

Access to the tools

The tool kit is stored in the boot, under the floor.




In the event of a breakdown

► Lift the floor and remove it to access the tools.

! These tools are specific to the vehicle and may vary according to the level of equipment.
Do not use them for any other purpose.

! The jack must only be used to change a wheel with a damaged or punctured tyre.
Do not use any jack other than the one supplied with the vehicle.
If the vehicle does not have its original jack, contact a CITROËN dealer or a qualified workshop to obtain the one that was intended by the manufacturer.
The jack meets European standards, as defined in the Machinery Directive 2006/42/CE.
The jack does not require any maintenance.

List of tools

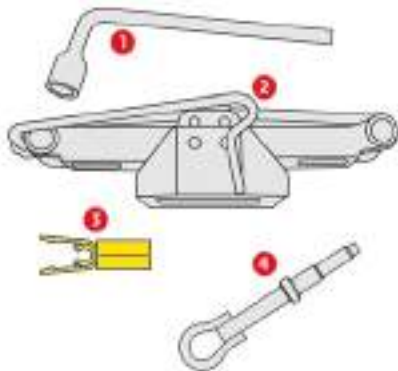

These tools are specific to your vehicle and may vary according to the level of equipment. Do not use them for any purpose other than those detailed below.

1. Wheelbrace
For removing the wheel trim and the wheel bolts.
2. Jack with integrated handle
To raise the vehicle.
3. Wheel bolt cap removal tool
For removing the wheel bolt head finishers on alloy wheels.
4. Removable towing eye

For more information on **Towing the vehicle** and using the removable towing eye, refer to the corresponding section.


Spare wheel

i Visit this link to view explanatory videos:
<http://q-r.to/bagGI9>



i For more information on the **Tool kit**, refer to the corresponding section.


Accessing the spare wheel

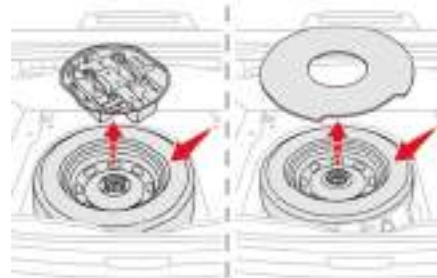

The spare wheel is stored in the boot, under the floor.
To access the spare wheel, first refer to the **Tool kit** section.

i Depending on engine, the spare wheel may be a standard steel or 'space-saver' wheel (BlueHDi 100).

Removing the spare wheel

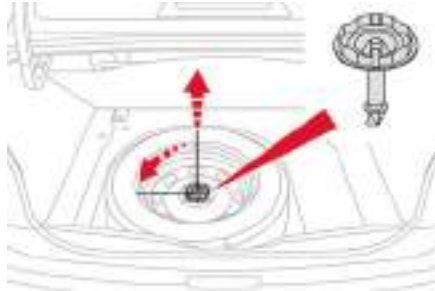

- ▶ Unclip the tool storage box (standard spare wheel).
- ▶ Slacken the central nut.
- ▶ Remove the fastening device (nut and bolt).
- ▶ Lift the spare wheel towards you from the rear.
- ▶ Take the wheel out of the boot.

Putting the spare wheel back in place

! The punctured wheel cannot be put under the boot floor.



- ▶ Put the spare wheel back in place in its housing.
- ▶ Slacken the nut on the bolt by a few turns.
- ▶ Position the fastening device (nut and bolt) in the middle of the wheel.
- ▶ Tighten the central nut sufficiently to retain the wheel correctly.
- ▶ Put the tool box back in place in the middle of the wheel and clip it in place.

Removing a wheel

! Parking the vehicle

Immobilise the vehicle where it does not obstruct traffic: the ground must be level, stable and non-slippery.

With a manual gearbox, engage first gear to lock the wheels, apply the parking brake, unless it is set to automatic mode, and switch off the ignition.

With an automatic gearbox, select mode **P** to lock the wheels, apply the parking brake,

unless it is set to automatic mode, and switch off the ignition.

Check that the parking brake indicator lamps on the instrument panel are on fixed.


The occupants must get out of the vehicle and wait where they are safe.

If necessary, place a chock under the wheel diagonally opposite the wheel to be changed. Never go underneath a vehicle raised using a jack; use an axle stand.

i Wheel with wheel trim

When removing the wheel, first remove the wheel trim by pulling at the valve aperture using the wheelbrace.

When refitting the wheel, refit the wheel trim, starting by placing its aperture in line with the valve and then pushing it into place all round its edge with the palm of your hand.

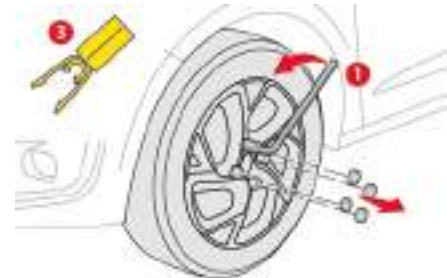




- ▶ Remove each wheel bolt cover using the tool 3 (alloy wheels).
- ▶ Slacken the other bolts using the wheelbrace 1 only.



- ▶ Place the foot of jack 2 on the ground and ensure that it is directly below the front A or rear B jacking point on the underbody, whichever is closest to the wheel to be changed.

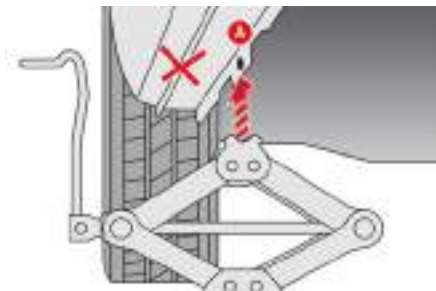

- ▶ Extend jack 2 until its head comes into contact with jacking point A or B; contact area A

or B on the vehicle must be properly inserted into the central part of the head of the jack.

- ▶ Raise the vehicle until there is sufficient space between the wheel and the ground to easily admit the spare (not punctured) wheel.


! Ensure that the jack is stable. If the ground is slippery or loose, the jack may slip or collapse - risk of injury! Take care to position the jack strictly at one of the jacking points A or B under the vehicle, ensuring that the head of the jack is centred under the contact area on the vehicle. Otherwise, there is a risk of damage to the vehicle and/or of the jack collapsing - risk of injury!



- ▶ Remove the bolts and store them in a clean place.
- ▶ Remove the wheel.

Fitting a wheel

- i** Fitting a steel or "space-saver" type spare wheel

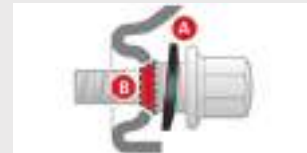


If the vehicle is fitted with alloy wheels, the washers A do not make contact with the steel or "space-saver" type spare wheel. The wheel is held in place by the conical contact surface B of each bolt.



- ▶ Fit the wheel on the hub.
- ▶ Screw in the bolts by hand as far as possible.
- ▶ Pre-tighten the bolts using the wheelbrace 1 only.



- ▶ Lower the vehicle again fully.
- ▶ Fold jack 2 and remove it.

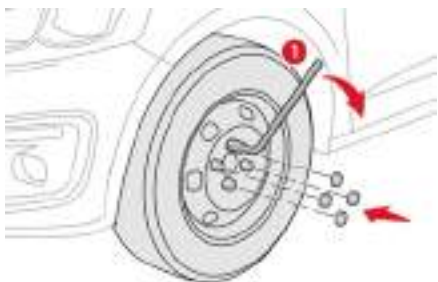

- ▶ Tighten the bolts using the wheelbrace 1 only.
- ▶ Refit the bolt covers to each of the bolts (depending on equipment).
- ▶ Store the tools.

After changing a wheel

Store the punctured wheel in the boot or, depending on version, remove the central cover

first to store it beneath the floor in place of the spare wheel.

! With a non-standard or 'space-saver' spare wheel



Do not exceed the maximum authorised speed of 50 mph (80 km/h) or the maximum distance of 50 miles (80 km).

Driving with more than one spare wheel of this type is prohibited.

The wheel trim from the replaced wheel must not be refitted.

! Visit a CITROËN dealer or a qualified workshop.

Have the tightening of the spare wheel's bolts and its tyre pressure checked.

Have the punctured tyre examined. After inspection, the technician will advise you on whether the tyre can be repaired or if it must be replaced.

Changing a bulb

i In some weather conditions (e.g. low temperature or humidity), misting on the internal surface of the glass of the headlamps

and rear lamps is normal, and will disappear after the lamps have been on for a few minutes.

! Never look too closely at the light beam of LED technology lamps - risk of serious eye injury!



! The headlamps have polycarbonate lenses with a protective coating:
– **Do not clean them with a dry or abrasive cloth, nor with detergent or solvent products.**

- Use a sponge and soapy water or a pH neutral product.
- When using a high-pressure washer on persistent marks, do not keep the lance directed towards the headlamps, lamps or their edges for too long, so as not to damage their protective coating and seals.

! Changing a bulb must only be done with the ignition off and after the headlamp /

lamp has been switched off for several minutes - risk of serious burns!
Do not touch the bulb directly with your fingers; use a lint-free cloth.
It is essential only to use anti-ultraviolet (UV) type bulbs, so as not to damage the headlamp.
Always replace a failed bulb with a new bulb of the same type and specification. To avoid lighting imbalance, replace the bulbs in pairs.

i Refitting the lamp units

Perform the operations in the reverse order to dismantling.

Light-emitting diode (LED) headlamps and lamps

Depending on version, the affected types of headlamps/lamps are:


– Daytime running lamps/sidelamps.

! If you need to replace this type of bulb, you must contact a CITROËN dealer or a qualified workshop.

Do not touch the LED technology bulbs - risk of electrocution!


Front lamps

Halogen headlamps

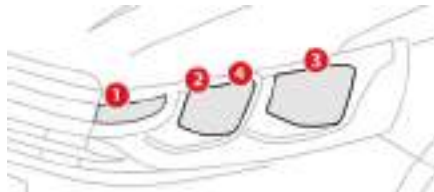

1. Direction indicators (PY21W)
2. Main beam headlamps (H1)
3. Dipped beam headlamps (H7LL)
4. Sidelamps (W5W)

Halogen lamps with daytime running lamps and front foglamps

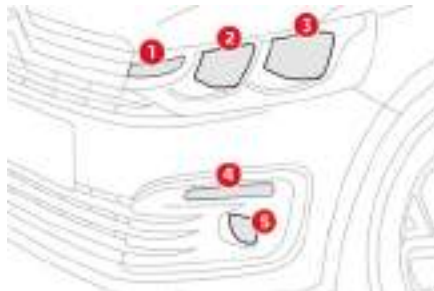


1. Direction indicators (PY21W)
2. Main beam headlamps (H1)
3. Dipped beam headlamps (H7LL)

4. Daytime running lamps/Sidelamps (LED)
5. Front foglamps (H11)

Direction indicators


i Rapid flashing of the direction indicator lamp (left or right) indicates that one of the bulbs on the corresponding side has failed.

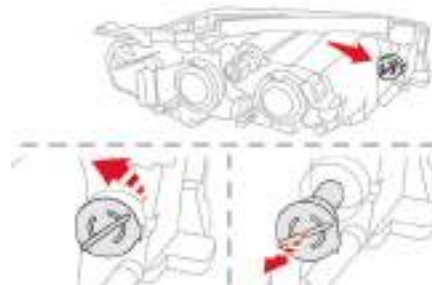

- ▶ Turn the connector a quarter turn anti-clockwise.
- ▶ Pull the bulb connector.
- ▶ Remove the bulb and replace it.


i Amber coloured bulbs, such as the direction indicators, must be replaced by bulbs with identical colour and specifications.

Main beam headlamps

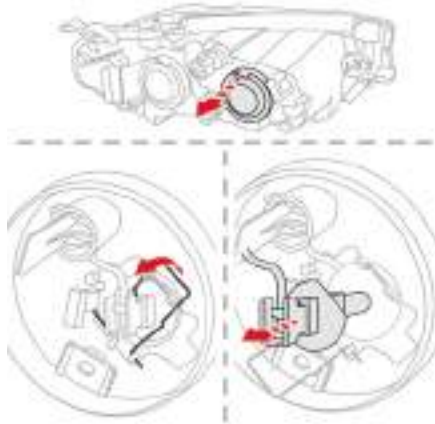


- ▶ Remove the protective cover by pulling on the tab.
 - ▶ Unclip the module support unit.
 - ▶ Remove the bulb connector.
 - ▶ Remove the bulb and replace it.
- To reassemble it, reposition the unit in the housing and clip it back.
Make sure to replace the protective cover with the tab facing upward.

Dipped beam headlamps

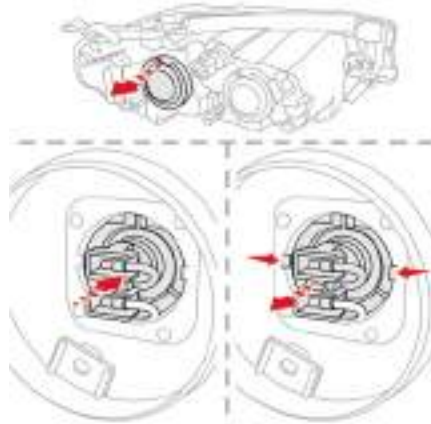

- ▶ Remove the protective cover by pulling the tab.
 - ▶ Push the entire module relative to the support to unclip one of the two tabs.
 - ▶ Once the first tab is unclipped, release the second tab.
 - ▶ Remove the bulb connector.
 - ▶ Remove the bulb and replace it.
- To reassemble it, position the unit in the housing and push until the two tabs "clip".
Make sure to replace the protective cover with the tab facing upward.

Sidelamps

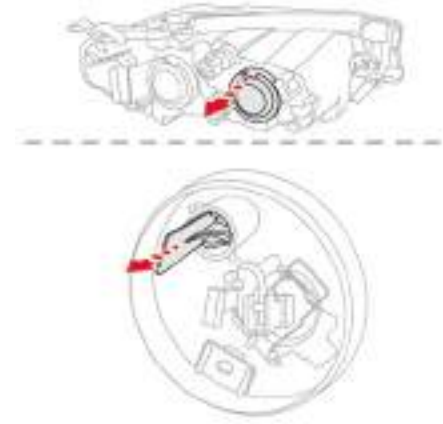


- ▶ Remove the protective cover by pulling on the tab.
 - ▶ Remove the bulb connector.
 - ▶ Remove the bulb and replace it.
- Make sure to replace the protective cover with the tab facing upward.


Front foglamps



- ▶ Insert a flat screwdriver between the lamp and the cover.
- ▶ Pull and lever to unclip the cover.

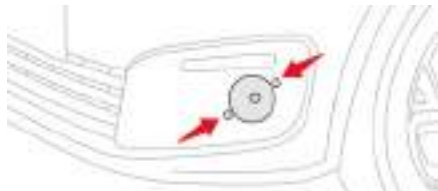

- ▶ Remove the two fastening screws of the module.
- ▶ Remove the module from its housing.

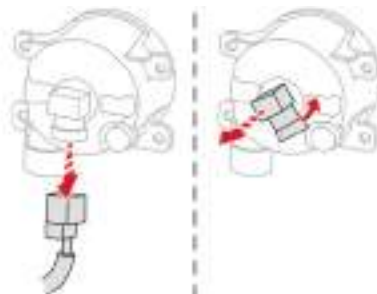

- ▶ Press the locking clip and disconnect the connector.
- ▶ Turn the bulb holder a quarter turn anti-clockwise.
- ▶ Remove the bulb holder.
- ▶ Remove the bulb and replace it.

i If you experience any difficulty in replacing these bulbs, you can also contact a CITROËN dealer or a qualified workshop.


Direction indicator side repeaters



- ▶ Insert a screwdriver towards the centre of the repeater, between the repeater and the base of the bodywork.
- ▶ Lever with the screwdriver to extract the repeater and pull it out.
- ▶ Disconnect the connector from the repeater.
- ▶ Replace the module.

i Contact a CITROËN dealer or a qualified workshop to obtain the module.

Rear lamps

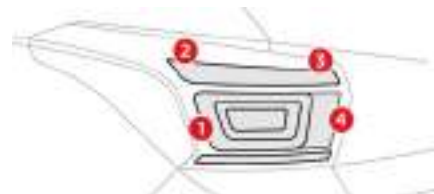


1. Brake lamps/Sidelamps (P21/5W)
2. Direction indicators (PY21W)
3. Reversing lamps (W16W)
4. Foglamp (P21/5W)

These bulbs are changed from inside the boot:

- ▶ Open the boot.
- ▶ Remove the access grille from the corresponding side trim panel.
- ▶ Disconnect the lamp connector.



- ▶ Loosen and remove the nut.
- ▶ From the outside, cautiously remove the lamp unit straight from its housing.

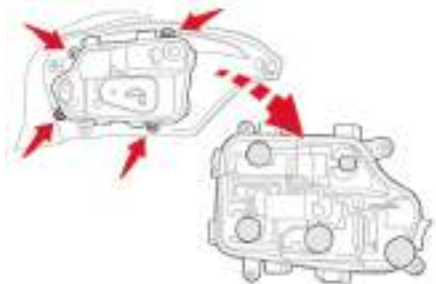

- ▶ Remove the four screws and lift off the bulb holder.
- ▶ Turn the failed bulb a quarter of a turn and replace it.

For reassembly, take care to engage the lamp unit in its guides, while keeping it in line with the vehicle.

Tighten sufficiently to ensure sealing, but without damaging the lamp.


Third brake lamp

(W5W)

From the rear bench seat, you must access the unit located on the rear shelf:



- ▶ Pull the unit's cover towards you and up to disengage it.
- ▶ Disconnect the lamp unit connector.

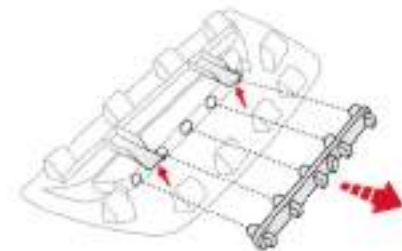


- ▶ Unclip the bulb holder by lifting the two lugs and remove it.
- ▶ Replace the faulty bulb.

To refit, carry out these operations in reverse order.

- ! Check that the unit's cover is positioned correctly on its support before clipping it on.

Number plate lamps

(W5W)

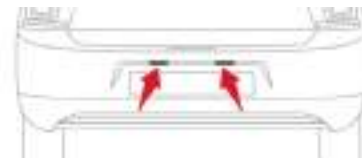

- ▶ Insert a thin screwdriver into one of the exterior holes of the transparent lens.
 - ▶ Push it outwards to unclip it and remove it.
 - ▶ Remove the defective bulb and replace it.
- To refit, carry out these operations in reverse order.

Fuses

! Changing a fuse

All work must be carried out only by a CITROËN dealer or a qualified workshop. The replacement of a fuse by a third party could cause a serious malfunction of the vehicle.

I Installing electrical accessories

The vehicle's electrical system is designed to operate with standard or optional equipment.

Before fitting other electrical equipment or accessories to your vehicle, contact a CITROËN dealer or a qualified workshop.

! CITROËN accepts no responsibility for the cost incurred in repairing the vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied or not recommended by CITROËN and not installed in accordance with its recommendations, in particular when the combined power consumption of all of the additional equipment connected exceeds 10 milliamperes.

12 V battery

Lead-acid starter batteries



These batteries contain harmful substances (sulphuric acid and lead). They must be disposed of in accordance with regulations and must never under any circumstances be discarded with household waste. Dispose of used batteries at a designated collection point.

! Protect your eyes and face before handling the battery.

All operations on the battery must be carried out in a well ventilated area and away from naked flames and sources of sparks, to avoid any risk of explosion or fire. Wash your hands afterwards.

! Electronic control units/LED technology headlamps

Never connect the negative jump lead to the metal part of the electronic control units or at the back of the headlamps. Risk of destroying the electronic control units and/or headlamps! Connect to the remote earth point provided for this purpose.

! Frozen battery

Never try to charge a frozen battery - risk of explosion! If the battery has frozen, have it checked by a CITROËN dealer or by a qualified workshop, who will verify that the internal components have not been damaged and that the case has not cracked, which could lead to a risk of leakage of toxic and corrosive acid.

! Automatic gearbox

Never try to start the engine by pushing the vehicle.

Symbols



No sparks or naked flames, no smoking.



Always protect your eyes. Explosive gases can cause blindness and injury.



Keep the vehicle's battery out of the reach of children.



The vehicle's battery contains sulphuric acid which can make you go blind or cause severe burns.



For more information, refer to the handbook.




Explosive gases can be present close to the battery.

Procedure for starting the engine using another battery or for charging a discharged battery.

Accessing the battery

The battery is located under the bonnet.

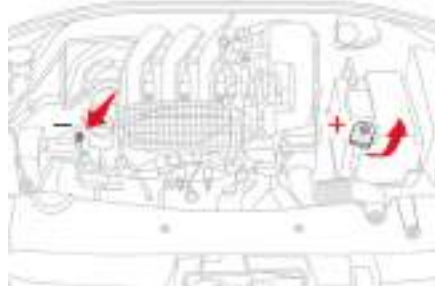

For access to the (+) terminal:

► Release the bonnet by pulling the internal release lever, then the external safety catch.

► Raise the bonnet.

(+) Positive terminal with a quick-release terminal.

(-) Negative terminal.

As the battery's negative terminal is not accessible, a remote earth point is located on the engine.

Starting using another battery

If the vehicle's battery is flat, the engine can be started using a backup battery (either external or from another vehicle) and jump leads or using a battery booster.

! Never start the engine by connecting a battery charger.


Never use a 24 V or higher battery booster. Check beforehand that the backup battery has a nominal voltage of 12 V and a capacity at least equal to that of the discharged battery.

The two vehicles must not be in contact with each other.

Switch off all electricity-consuming equipment on both vehicles (audio system, wipers, lighting, etc.).

Make sure that the jump leads are well away from the engine's moving parts (fan, belt, etc.).

Do not disconnect the (+) terminal while the engine is running.

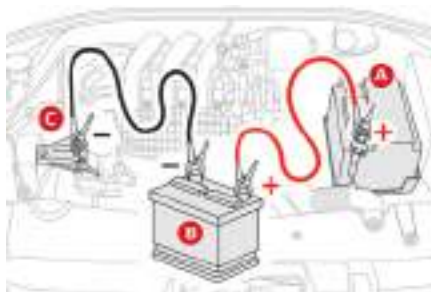

► Lift the plastic cover on the (+) terminal, if the vehicle has one.

► Connect the red cable to the (+) terminal of flat battery **A** (at the metal elbow), then to the (+) terminal of the backup battery **B** or of the booster.

► Connect one end of the green or black cable to the (-) terminal of the backup battery **B** or of the booster (or to an earth point on the assisting vehicle).

► Connect the other end of the green or black cable to the earth point **C**.

► Start the engine on the assisting vehicle and leave it running for a few minutes.

► Operate the starter on the broken down vehicle and let the engine run.

If the engine does not start immediately, switch off the ignition and wait a few moments before trying again.

► Wait for it to return to idle.

► Disconnect the jump leads **in reverse order**.

► Refit the plastic cover to the (+) terminal, if the vehicle has one.

► Allow the engine to run for at least 30 minutes, with the vehicle stationary, so that the battery reaches an adequate state of charge.

! Driving immediately without having reached a sufficient level of charge may affect some of the vehicle's functions (e.g. Stop & Start).

Charging the battery using a battery charger

For optimum service life of the battery, it is essential to maintain an adequate state of charge.

In some circumstances, it may be necessary to charge the battery:

– When using the vehicle mainly for short journeys.

– If the vehicle is to be taken off the road for several weeks.


Contact a CITROËN dealer or a qualified workshop.

! To charge the vehicle's battery yourself, use only a charger compatible with lead-acid batteries with a nominal voltage of 12 V.

! Follow the instructions provided by the manufacturer of the charger. Never reverse polarities.


i It is not necessary to disconnect the battery.

- ▶ Switch the ignition off.
- ▶ Switch off all electrical consumers (audio system, lighting, wipers, etc.).

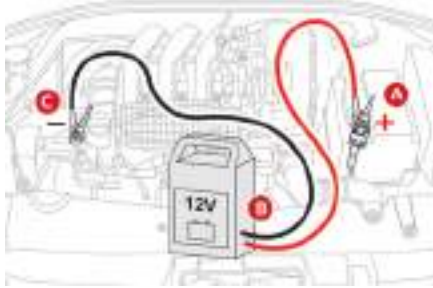

- ▶ Switch off charger **B** before connecting the cables to the battery, so as to avoid any dangerous sparks.
- ▶ Ensure that the charger cables are in good condition.
- ▶ Lift the plastic cover on the (+) terminal, if the vehicle has one.
- ▶ Connect the cables of charger **B** as follows:
 - the positive (+) red cable to the (+) terminal of battery **A**.
 - the negative (-) black cable to earth point **C** on the vehicle.
- ▶ At the end of the charging operation, switch off charger **B** before disconnecting the cables from battery **A**.

! If this label is present, use only a 12 V charger to avoid causing irreversible damage to the electrical components.

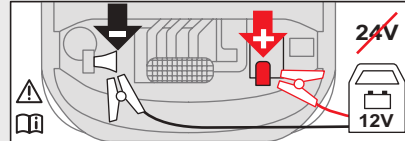

Disconnecting/reconnecting the battery

In order to maintain an adequate state of charge for starting the engine, we recommend disconnecting the battery if the vehicle is to be unused for an extended period.


Before disconnecting the battery:

- ▶ Close all openings (doors, tailgate, windows).
- ▶ Switch off all electricity-consuming devices (audio system, wipers, lamps, etc.).
- ▶ Switch off the ignition and wait for 4 minutes.

After accessing the battery, it is only necessary to disconnect the (+) terminal.


Quick-release terminal clamp

Disconnecting the (+) terminal

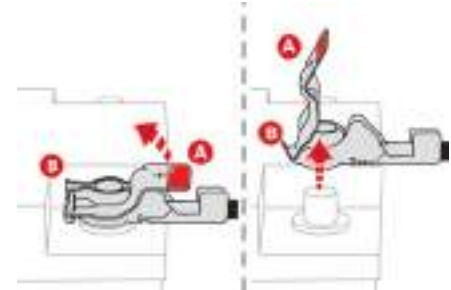

- ▶ Depending on equipment, lift the plastic cover on the (+) terminal.
- ▶ Raise lever **A** fully to release clamp **B**.
- ▶ Remove clamp **B** by lifting it off.

Reconnecting the (+) terminal

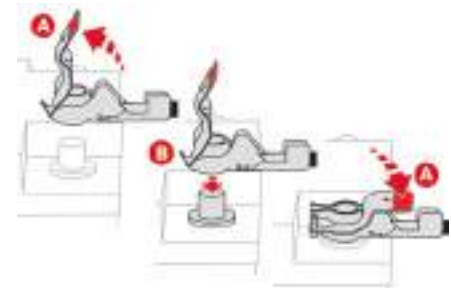

- ▶ Raise lever **A** fully.
- ▶ Refit open clamp **B** on the (+) terminal.

- ▶ Push clamp **B** fully down.
- ▶ Lower lever **A** to lock clamp **B**.
- ▶ Depending on equipment, lower the plastic cover on the **(+)** terminal.

! Do not force the lever when pressing on it, as if the clamp is not positioned correctly, locking will then not be possible. Start the procedure again.

i The Stop & Start system may not be operational during the trip following the first engine start. In this case, the system will only be available again after a continuous period with the vehicle immobilised, the duration of which depends on the exterior temperature and the state of charge of the battery (up to about 8 hours).

Following reconnection

After reconnecting the battery, turn on the ignition and wait 1 minute before starting the engine, to enable the electronic systems to initialise.

If minor problems nevertheless persist following this operation, contact a CITROËN dealer or a qualified workshop.

Referring to the relevant section, reinitialise certain equipment:

- Remote control key.
- Electric windows.
- Date and time.
- Preset radio stations.

Towing the vehicle

i General recommendations

Observe the legislation in force in the country where you are driving. Check that the towing vehicle is heavier than the towed vehicle.

The driver must remain at the wheel of the towed vehicle and must have a valid driving licence.

When towing a vehicle with all four wheels on the ground, always use an approved towbar; ropes and straps are prohibited.

The towing vehicle must move off gently. When the vehicle is towed with its engine off, there is no longer braking and steering assistance.

! A professional recovery service must be called in the following cases:

- broken down on a motorway or main road;
- not possible to put the gearbox into neutral, unlock the steering, or release the parking brake;
- not possible to tow a vehicle with an automatic gearbox, with the engine running;
- towing with only two wheels on the ground;
- four-wheel drive vehicle;
- no approved towbar available.

Type of vehicle (engine/gearbox)	Towing constraints			
	Front wheels on the ground	Rear wheels on the ground	Flatbed	4 wheels on the ground with towbar
Internal combustion/Manual	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Type of vehicle (engine/gearbox)	Towing constraints			
	Front wheels on the ground	Rear wheels on the ground	Flatbed	4 wheels on the ground with towbar
Internal combustion/Automatic	✗	✓	✓	✗


Accessing the tools



The towing eye is stored under the boot floor.
For more information on accessing the **Tool kit**, refer to the corresponding section.

Towing your vehicle

To access the front screw thread:

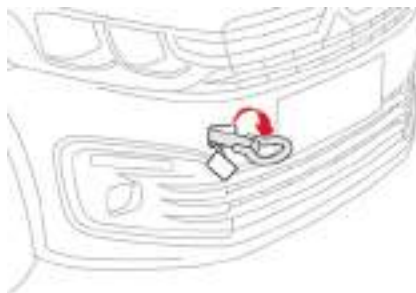

▶ Unclip the cover by pressing on its left-hand section.

To be towed:

- ▶ Screw the towing eye in fully.
- ▶ Install the towbar.
- ▶ Put the gearbox into neutral.

! Failure to observe this instruction could result in damage to certain components (e.g. braking, transmission) and to the absence of braking assistance the next time the engine is started.

! **Automatic gearbox**
Never tow the vehicle with the driving wheels on the ground and the engine off.

- ▶ Unlock the steering and release the parking brake.
- ▶ Switch on the hazard warning lamps on both vehicles in accordance with the legislation in force in the country in which you are driving.
- ▶ Move off gently, drive slowly and only for a short distance.

Towing another vehicle

! This towing is strictly prohibited (risk of damaging your vehicle).

Engine technical data and towed loads

Engines

The engine characteristics are given in the vehicle's registration document, as well as in sales brochures.

Only the values available at the time of publication are presented in the tables. Contact a CITROËN dealer or a qualified workshop to obtain missing values.

i The maximum power corresponds to the value type-approved on a test bed, under conditions defined by European legislation (Directive 1999/99/EC).

For more information, contact a CITROËN dealer or a qualified workshop.

Weights and towed loads

The weights and towed loads relating to the vehicle are indicated on the registration document, as well as in sales brochures.

These values are also indicated on the manufacturer's plate or label.

For more information, contact a CITROËN dealer or a qualified workshop.

The GTW (Gross Train Weight) and towed load values indicated are valid up to a maximum altitude of 1,000 metres. The towed load value

must be reduced by 10% for each additional 1,000 metres of altitude.

The maximum authorised nose weight corresponds to the weight permitted on the towball.

! When exterior temperatures are high, the vehicle performance may be limited in order to protect the engine. When the exterior temperature is higher than 37°C, reduce the towed weight.

! Towing even with a lightly loaded vehicle can adversely affect its road holding. Braking distances are increased when towing a trailer. When using a vehicle to tow, never exceed a speed of 62 mph (100 km/h) (observe the local legislation in force).




Engines and towed loads - Petrol

Engines	1,2 PureTech 82 BVM5	1,6 VTi 115 EAT6	1,6 VTi 115 BVM5
Gearboxes	Manual 5-speed	Automatic 6-speed	Manual 5-speed
Code	EB2F	EC5F	EC5M
Model codes	HMZ6	NFPT	NFH5
Cubic capacity (cc)	1,199	1,587	1,587
Max. power: EC standard (kW)	60	85	85
Fuel	Unleaded 91 RON to 98 RON	Unleaded 91 RON to 98 RON	Unleaded 91 RON to 98 RON
Braked trailer (within the GTW limit) (kg) on a 10 % or 12 % gradient	450	750	750
Unbraked trailer (kg)	450	580	580
Maximum authorised nose weight (kg)	55	55	55

Engines and towed loads - Diesel


Engine	1,6 HDi 92 BVM5		1,5 BlueHDi 100 S&S BVM6
Gearboxes	Manual 5-speed		Manual 6-speed
Code	DV6DM euro 4	DV6D euro 5	DV5RCf euro 6.3
Model codes	9HJC	9HP0	YHT2
Cubic capacity (cc)	1,560		1,499
Max. power: EC standard (kW)	68		75
Fuel	Diesel		Diesel
Braked trailer (within the GTW limit) (kg) on a 10% or 12% gradient	750		750
Unbraked trailer (kg)	580		580
Maximum authorised nose weight (kg)	55		55

Dimensions (in mm)

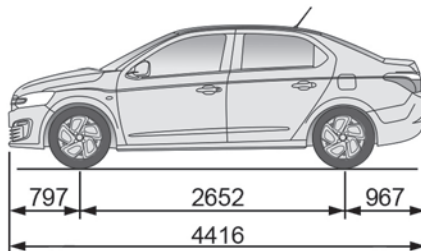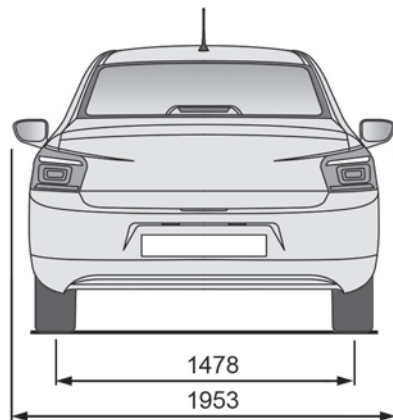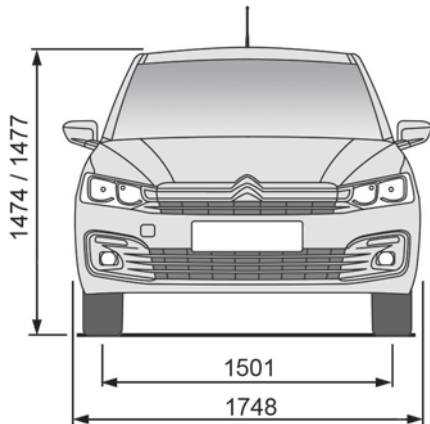

Identification markings

Various visible markings for vehicle identification and vehicle search.

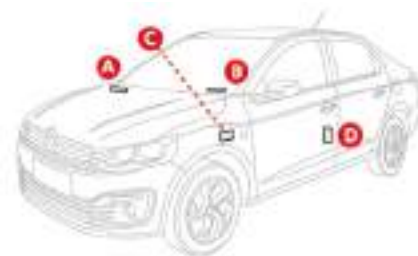

A. Vehicle Identification Number (VIN), under the bonnet.

Stamped on the chassis.

B. Vehicle Identification Number (VIN), on the dashboard.

Printed on an adhesive label visible through the windscreen.

C. Manufacturer's label.

Affixed to the right-hand door.

Bears the following information:

- Manufacturer's name.
- European whole vehicle type approval number.
- Vehicle Identification number (VIN).
- Gross vehicle weight (GVW).
- Gross train weight (GTW).
- Maximum weight on the front axle.
- Maximum weight on the rear axle.

D. Tyres/paint code label.

Affixed to the driver's door.

Bears the following information about the tyres:

- Tyre pressures, unladen and laden.
- Tyre specification, made up of the dimensions and type as well as the load and speed indices.
- Spare tyre inflation pressure.

Also indicates the paint colour code.

i The vehicle may be originally equipped with tyres with higher load and speed indices than those indicated on the label, without affecting tyre pressure (on cold tyres). In the event of a change in the type of tyres, contact a CITROËN dealer for the tyre fits approved for the vehicle.

Bluetooth® audio system



! As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

! Your audio system is coded in such a way that it will only operate in your vehicle. All work on the system must be carried out exclusively by a dealer or qualified workshop, to avoid any risk of electrocution, fire or mechanical faults.

i To avoid discharging the battery, the audio system may switch off after a few minutes if the engine is not running.

First steps



Volume adjustment.



On / Off.



TA (Traffic Announcement) function On / Off.

Long press: access to type of information.



Select the source:
Radio, CD, AUX, USB, Streaming.

Accept an incoming call.



Manual step by step up / down frequency search for radio stations.

Select previous / next MP3 track.

Select previous / next folder / genre / artist / playlist of the USB device.

Scroll in a list.



Access to the main menu.



Automatic search for a lower / higher radio frequency.

Select previous / next CD, USB, streaming track.

Scroll in a list.



Select a preset radio station.

Long press: memorise a radio station.

Cancel the current operation.



Go up one level (menu or folder).



Confirm or display contextual menu.



Display the list of stations received, the CD / MP3 tracks or folders.

Long press: manage the classification of MP3 / WMA files - update the list of stations received.



Adjust audio settings: sound ambience, treble, bass, loudness, distribution, left /

right balance, front / rear balance, automatic volume.



Select the screen display mode, between: Full screen: Audio (or telephone if call in progress) /

Windowed screen: Audio (or telephone if call in progress) - Time or Trip computer.

Long press: black screen (DARK).



Select AM / FM wavebands.

Steering mounted controls



Radio: automatic search for lower frequency.

CD / MP3 / USB: selection of the previous track.

CD / USB: press and hold: fast back.

Skip in the list.



Change the audio source.

Confirm a selection.

Call/end call on the telephone.

Press for more than 2 seconds: access telephone main menu.



Radio: automatic search for a higher frequency.

CD / MP3 / USB: select the next track.

CD / USB: press and hold: fast forward.

Skip in the list.



Increase volume.



Decrease volume.



Mute on: cut the sound by simultaneously pressing the volume up and down buttons.



Radio: select the previous / next preset radio station.

USB: select the genre / artist / folder from the list depending on classification.

Select the previous / next item in a menu.

Menus

Screen C



"Multimedia": Media settings, Radio settings.



"Telephone": Call, Directory management, Telephone management,

Hang up.



"Trip computer": Warning log.



"Bluetooth connection": Connections management, Search for a device.



"Personalisation-configuration": Define the vehicle parameters, Choice of language, Display configuration, Choice of units, Date and time adjustment.

Radio

Selecting a station



The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio equipment.



Press the **SRC/TEL** button repeatedly to select the radio.



Press **BAND** to select a waveband.



Press **LIST** to display the list of stations received, in alphabetical order.



Select the desired radio station by turning the thumb wheel then confirm by pressing.



A press changes to the next or previous letter (e.g. A, B, D, F, G, J, K, ...).



A long press on **LIST** builds or updates the list of stations; audio reception is cut momentarily.

RDS



RDS, if displayed, makes it possible to continue listening to the same radio

station using the alternative frequencies function. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100% of the territory. This explains the loss of reception of the station during a journey.



With the radio displayed on the screen, press OK to display the contextual menu. Select **"RDS"** and confirm to save. **"RDS"** is displayed in the screen.



Play TA messages



The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station that carries this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal play of the media previously playing is resumed at the end of the message.



Press **TA** to activate or deactivate the reception of traffic messages.

Display TEXT INFO



Text info is information transmitted by the radio station related to the current programme or song.

Screen C



With the radio displayed on the screen, press OK to display the contextual menu. Turn the thumb wheel to select "**RADIO TEXT**", press to save.

Media

Audio CD

Playing a CD



Insert 12 cm diameter circular compact discs only.

Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the **EJECT** button, insert a CD in the player, play begins automatically.



To play a disc which has already been inserted, press the **SRC/TEL** button several times and select "**CD**".



Press one of the buttons to select a track on the CD.



Press **LIST** to display the list of tracks on the CD.



Press and hold one of these buttons for fast forward or fast back.

CD, USB

Information and advice



The audio system will only play files with extension ".mp3" or ".wma" and a compression rate that is constant or variable between 32 Kbps and 320 Kbps.



File names should have less than 20 characters, avoiding special characters (e.g.: " ? ; ù) so as to avoid any reading or display problems.



Playlists accepted are types .m3u and .pls.

The number of files is limited to 5 000 in 500 directories on a maximum of 8 levels.



On a single disc, the CD player can read up to 255 MP3 files spread over 8 directory levels. However, it is recommended that this be kept to 2 levels so as to limit the time taken to access and play the CD. The folder structure is not observed during playback.



In order to be able to play a burned CDR or CDRW, select standards ISO 9660 level 1, 2 or Joliet if possible when burning the CD.

If the disc is burned in another format, it may not be played correctly.

It is recommended that the same burning standard is always used on an individual disc,

with the lowest speed possible (4x maximum) for the best acoustic quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



Do not connect a hard disk or USB device other than audio players to the USB port. This may cause damage to your installation.

Playing a compilation

Insert an MP3 compilation in the CD player or connect a memory stick to the USB port, directly or via an extension lead.



The system creates playlists (temporary memory); this operation can take from a few seconds to several minutes.

The playlists are updated every time the ignition is switched off or a USB memory stick is connected.

Play starts automatically after a certain amount of time depending on the capacity of the USB memory stick.

Use only USB memory sticks formatted FAT 32 (File Allocation Table).

On first connection, the order suggested is by folder. When connecting again, the order previously chosen is retained.



To play a disc or memory stick which has already been inserted, press the **SRC/TEL** button repeatedly and select "**CD**" or "**USB**".



Press one of the buttons to select the next or previous track.



Rotate the thumb wheel to select the next or previous folder in the order chosen.



Press and hold one of these buttons for fast forward or fast back.



Press **LIST** to display the structure of the folders in the compilation.



Select a line in the list.



Select a track or a folder.



Up a level in the menu.



Skip a track.

USB memory stick - File sorting



Make a long press on **LIST** or press **MENU**, select "**Multimedia**", then "**Media settings**" and finally "**Choice of track listing**" to display the different types of sorting.



Having selected the desired sorting ("**By folders**", "**By artists**", "**By genres**", "**By playlists**") press the thumb wheel.

Then press the thumb wheel to confirm and save the changes.

- **By folders**: all folders containing audio files recognised on the peripheral device, in alphabetical order without following the folder structure.
- **By artists**: all of the artist names defined in the ID3 Tags, in alphabetical order.
- **By genres**: all of the genres defined in the ID3 Tags.
- **By playlists**: if playlists have been saved.

Apple® players or portable player

Audio files on a portable mass storage player* can be heard through the vehicle's speakers by connecting it to the USB port (cable not supplied).

i Management of the device is via the audio system controls.

If the portable player is not recognised by the USB port, connect it to the auxiliary Jack socket.

The Apple® player software must be updated regularly for the best connection.

The playlists are those defined in the Apple® player.

The Apple® player must be generation 5 or later.

Auxiliary input (AUX)

JACK socket

i The auxiliary Jack socket permits the connection of a portable non-mass storage device or an Apple® player if not recognised by the USB port.

! Do not connect a device to the USB port and to the auxiliary Jack socket at the same time.

Connect the portable device to the auxiliary Jack socket using a suitable cable (not supplied).



Press the **SRC/TEL** button repeatedly and select "**AUX**".

First adjust the volume on your portable device.



Then adjust the volume of the audio system.

i The display and management of controls is on the portable device.


* (Check the manual for your player)

Streaming - Playing audio files via Bluetooth

Depending on the compatibility of the phone

i Streaming allows music files on a telephone to be heard via the vehicle's speakers.
The telephone must support the appropriate Bluetooth profiles (Profiles A2DP / AVRCP).

Pair/connect the telephone: see the TELEPHONE section.


 Activate the streaming source by pressing **SRC/TEL**. Control of playback is via the audio system. The contextual information can be displayed in the screen.

! In certain cases, playing of the audio files must be initiated from the telephone.
The audio quality depends on the quality of transmission by the telephone.

Play mode

! The play modes available are:
– Normal Normal: the tracks are played in order, depending on the classification of the selected files.
– Random Random: the tracks in an album or folder are played in a random order.

– Random all Random all: all of the tracks saved in the media are played in random order.
– Repeat Repeat: the tracks played are only those from the current album or folder.

 Press the thumb wheel to access the contextual menu.

or
Press **MENU**.



Select **"Multimedia"** and confirm.
Select **"Media settings"** and confirm.
Select **"Read mode"** and confirm.
Choose the desired playback method then press the thumb wheel to validate and save the changes.

Telephone

Pairing a telephone

First connection

i The services offered depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the instructions for your telephone and with your service provider for the services to which you have access.

! As a safety measure and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the **vehicle stationary** and the ignition on.

For more information (compatibility, more help, ...), visit the Manufacturer's website in your country.

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (refer to the telephone user guide).

 Press **MENU**.



Select **"Bluetooth connection"** and confirm.



Select **"Search for a device"**.

A window is displayed with **"Search in progress..."**.



Select the telephone to be connected from the list. Only one telephone can be connected at a time.

i In some cases, the reference number of the telephone or the Bluetooth address may appear instead of the name of the telephone.



A virtual keypad is displayed on the screen: enter a code of at least 4 digits then press the control knob to confirm.

A message is displayed on the screen of the telephone: enter the same code and confirm.

i If pairing fails, the number of attempts is not restricted.

Accept the connection on the telephone.

A message appears in the screen to confirm the result of the connection.

! Pairing can also be initiated from the telephone by searching for detected Bluetooth devices.

The directory and the call list can be accessed after the necessary synchronisation period (if the telephone is compatible). Automatic connection must be configured in the telephone to allow the connection each time the vehicle is started.

Streaming - Playing audio files via Bluetooth

Pair/connect the telephone and listen: see the AUDIO chapter.

Status of the telephone



To find out the status of the telephone, press **MENU**.



Select **"Telephone"** and confirm

Select **"Telephone management"** and confirm

Select **"Telephone status"** and confirm



i The screen displays the name of the telephone, the name of the network, the quality of network reception, and the confirmation of the Bluetooth and streaming connections.

Managing connections

i The telephone connection automatically includes hands free operation and audio streaming.

The ability of the system to connect to just one profile depends on the telephone. Both profiles may connect by default.



Press **MENU**.



Select **"Bluetooth connection"** and confirm.

Select **"Connections management"** and confirm the list of paired devices is displayed.



Indicates that a device is connected.



Indicates connection of the audio streaming profile.



Indicates the hands-free telephone profile.



Select a telephone and confirm.



Then select and confirm:

- **"Connect telephone"** / **"Disconnect telephone"** : to connect / disconnect the telephone or the hands-free connection only.
- **"Connect media player"** / **"Disconnect media player"** : to connect / disconnect only streaming.
- **"Connect telephone + media player"** / **"Disconnect telephone + media player"** : to connect / disconnect the telephone (hands-free and streaming).
- **"Delete connection"**: to delete the pairing.

Making a call - Dialling



To display the **"TELEPHONE"** menu:

- Press and hold **SRC/TEL**.
- Or, press the thumb wheel to display the context menu. Select **"Call"** and confirm.
- Or, press **MENU**, select **"Telephone"** and confirm. Select **"Call"** and confirm.



Select **"Dial"** to enter a number and confirm.

i Correction allows numbers to be deleted one at a time.



Press the thumb wheel to confirm and place the call.

Making a call - Recently called numbers

(Depending on the compatibility of the phone)



To display the "TELEPHONE" menu:

- Press and hold **SRC/TEL**.
- Or, press the thumb wheel to display the context menu. Select "**Call**" and confirm.
- Or, press **MENU**, select "**Telephone**" and confirm. Select "**Call**" and confirm.



Select "**Calls list**" and confirm.



Select the number and confirm to start the call.

i The calls list includes calls sent and received in the vehicle using the connected telephone.

! It is possible to make a call directly from the telephone; park the vehicle first as a safety measure.

Making a call - From the directory of contacts



To display the "TELEPHONE" menu:

- Press and hold **SRC/TEL**.
- Or, press the thumb wheel to display the context menu. Select "**Call**" and confirm.
- Or, press **MENU**, select "**Telephone**" and confirm. Select "**Call**" and confirm.



Select "**Directory**" and confirm



Select a contact then confirm.



Home / Work / Mobile

(depending on the information available in the contact records of the connected telephone).



Select the number and confirm.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the multifunction screen.



"**YES**" to accept the call is selected by default.

Press the thumb wheel to accept the call.

Select "**NO**" and confirm to reject the call.

or



Press one of these buttons to accept the call.



A long press on **BACK** or on **SRC/TEL** also rejects an incoming call.

Managing calls



During a call, press the thumb wheel to display the contextual menu.

Hang up



In the contextual menu, select "**Hang up**" to end the call.



A long press on one of these buttons also ends the call.

Secret - Mute

(so that the caller cannot hear)



In the contextual menu:

- select "**Micro OFF**" to switch off the microphone.
- deselect "**Micro OFF**" to switch the microphone on.

Combined mode

(to leave the vehicle without ending the call)




In the contextual menu:


- select "**Telephone mode**" to transfer the call to the telephone.
- deselect "**Telephone mode**" to transfer the call to the vehicle.

i In some cases, the combined mode must be activated from the telephone. If contact has been cut off, when you reconnect on returning to the vehicle, the Bluetooth connection will be restored automatically (depending on the compatibility of the telephone).


Interactive voice response


 From the contextual menu, select **"DTMF tones"** and confirm to use the digital keypad to navigate in the interactive voice response menu.

Consultation call


 From the contextual menu, select **"Switch"** and validate to return to a call left on hold.

Directory


i  The directory of the telephone is transmitted to the system, depending on the compatibility of the telephone. The directory is temporary and depends on the Bluetooth connection.


!  The contacts, imported from the telephone to the audio system directory, are saved in a permanent directory


visible to all, regardless of the telephone connected.

 To access the directory, press and hold **SRC/TEL**.

or

 Press on the thumb wheel then select **"Call"** and confirm.

 Select **"Directory"** to see the list of contacts.

 To modify the contacts saved in the system, press **MENU** then select **"Telephone"** and confirm.

 Select **"Directory management"** and confirm


You can:

- **"Consult an entry"**,
- **"Delete an entry"**,
- **"Delete all entries"**.

Audio settings


Screen C



 The settings available are:

- Ambience,
- Bass,

- Treble,
- Loudness,
- Distribution : Personalised or Driver,
- Left / right balance,
- Fader (front / rear balance),
- Auto. volume

 Select and confirm **"Other settings..."** to display the rest of the list of settings available.

! The distribution (or spatialisation using the Arkamys® system), is an audio process which allows the sound quality to be improved according to the setting chosen, corresponding to the position of the listeners in the vehicle.

i The audio Ambience, Treble and Bass settings are different and independent for each sound source.

i Onboard audio: Arkamys sound staging®. With Sound Staging, the driver and the passengers are immersed into a "sound stage" recreating the natural atmosphere of a theatre: truly centre stage in surround sound. This new sensation is possible thanks to the software installed in the radio which processes the digital signals of the media players (radio, CD, MP3...) without changing the setting of the loudspeakers. This process takes into account the features of

the passenger compartment for optimum performance.

The Arkamys® software installed in your audio system processes the digital signals of all the media players (radio, CD, MP3...) and makes it possible to recreate a natural sound setting, with a harmonious placement of the instruments and voices in space, facing the passengers, positioned at the height of the windscreen.

Frequently asked questions

The following information groups together the answers to the most frequently asked questions concerning your audio system.

There is a difference in sound quality between the different audio sources (radio, CD, etc.).

To allow for optimal listening quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be tailored to different sound sources, which can generate audible differences when changing source (radio, CD, etc.).

Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Fader, Left-Right Balance) to the middle position, select the musical ambience "None" and set the

loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

When changing the settings for treble and bass, the ambience setting is deselected.

When changing the ambience setting, treble and bass are reset to zero.

Choosing an ambience imposes settings for treble and bass. Modifying one without the other is not possible.

Modify the treble and bass settings or the ambience setting to obtain the desired sound quality.

When changing the balance setting, distribution is deselected.

Choosing a distribution setting imposes a balance setting. Modifying one without the other is not possible.

Modify the balance or distribution settings to obtain the desired sound quality.

The reception quality of the tuned radio station gradually deteriorates or the stored stations are not working (no sound, 87.5 Mhz is displayed, etc.).

1.The vehicle is too far from the transmitter of the station or no transmitter is present in the geographical area.

Activate the RDS mode and start a new search for the station so that the system can check whether a stronger transmitter is available in the geographic area.

2.The environment (hills, buildings, tunnels, basement car parks, etc.) block reception, including in RDS tracking mode.

This phenomenon is normal and does not indicate a failure of the audio equipment.

3.The aerial is absent or has been damaged (for example when going through an automatic car wash or in an underground car park).

Have the antenna checked by the network CITROËN.

Sound cut-outs of 1 to 2 seconds in radio mode.

During this brief sound cut-out, the RDS searches for another frequency giving better reception of the station.

Switch off the RDS function if the phenomenon is too frequent and always on the same route.

The traffic announcement (TA) is displayed. I do not receive any traffic information.

The radio station does not broadcast traffic information.

Tune to a radio station which broadcasts traffic information.

The stored stations are not found (no sound, 87.5 MHz is displayed, etc.).

An incorrect waveband is selected.

Press the BAND button to return to the waveband on which the stations are stored.

The CD is ejected every time or is not played.

The CD is upside down, cannot be read, does not contain audio files or contains audio files of a format that cannot be played by the audio system.

The CD is protected by an anti-pirating system not recognised by the audio system.

- Check that the CD is inserted in the player the right way up.
- Check the condition of the CD: the CD cannot be played if it is too badly damaged.
- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.
- The audio system's CD player does not read DVDs.
- Because of low quality, certain burned CDs will not be read by the audio system.

The CD sound is of poor quality.

1. The CD used is scratched or of poor quality. Insert good quality CDs and store them in suitable conditions.
2. The audio settings (bass, treble, ambience) are unsuitable. Return bass and treble settings to 0, without selecting an ambience.

I am unable to connect my Bluetooth telephone.

1. It is possible that Bluetooth is switched off on the telephone or that the telephone has been made not visible.
 - Check that your telephone has Bluetooth switched on.
 - Check in the telephone settings that it is "visible to all".
 2. The Bluetooth telephone is not compatible with the system. To check the compatibility of your telephone (services), visit the Manufacturer's website in your country.
- The Bluetooth connection is cut.**

The battery of the peripheral may not be sufficiently charged.

Charge the battery of the peripheral device.

The "USB peripheral error" or "Peripheral not recognised" message appears on the screen.

The USB memory stick is not recognised. The memory stick could be corrupt. Reformat the memory stick (FAT 32).

A telephone connects automatically, disconnecting another telephone.

Automatic connection overrides manual connection.

Modify the telephone settings to remove automatic connection.

The Apple® player is not recognised when connecting to the USB port.

The Apple® player is of a generation that is not compatible with a USB connection.

Connect the Apple® player to the AUX Jack socket using a suitable cable (not supplied).

The hard disk or peripheral is not recognised when connecting to the USB socket.

Some hard disks and devices need a power supply greater than is provided by the audio system.

Connect the peripheral to the 230 V socket, the 12V socket or an external power supply.

! Ensure that the device does not transmit a voltage greater than 5 V (risk of destruction of the system).

When streaming, the sound cuts momentarily.

Some telephones prioritise connection of the "hands-free" profile.

Delete the "hands-free" connection profile to improve streaming.

In "Random all" play, not all of the tracks are played.

In "Random all" play, the system can only take into account up to 999 tracks.

With the engine off, the audio system switches off after a few minutes of use.

When the engine is switched off, the audio system operating time depends on the battery charge.

The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery. Start the vehicle's engine to increase the battery charge.

The message "the audio system is overheated" appears on the display.

In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD. Switch the audio system off for a few minutes to allow the system to cool.

CITROËN Connect Radio

Multimedia audio system - Applications - Bluetooth® telephone

i The functions and settings described vary according to the vehicle version and configuration, as well as the country of sale.

! For safety reasons and because they require sustained attention by the driver, the following operations must be carried out with the **vehicle stationary** and the ignition on:

- Pairing the smartphone with the system via Bluetooth.
- Using the smartphone.
- Connecting to the CarPlay® or Android Auto applications (certain applications stop displaying when the vehicle is moving).
- Changing the system settings and configuration.

i The system is protected so that it only operates in the vehicle. The message **Energy economy mode** is displayed when the system is about to go into standby.

i The system's Open Source Software (OSS) source codes are available at the following addresses:
<https://www.groupe-psa.com/fr/oss/>
<https://www.groupe-psa.com/en/oss/>

First steps



With the engine running, a press mutes the sound.

With the ignition off, a press turns the system on.

Increase or decrease the volume using the wheel or the "plus" or "minus" buttons (depending on the equipment).

Use the buttons on either side of or below the touch screen to access the menus, then press the virtual buttons on the touch screen.

Depending on the model, use the "Source" and "Menu" buttons on the left of the touch screen to access the menus, then press the virtual buttons on the touch screen.

At all times it is possible to display the rolling menus by pressing the screen briefly with three fingers.

All touch-sensitive areas on the screen are white.

On pages with multiple tabs at the bottom of the screen, you can switch between pages either by tapping the tab for the desired page or by swiping the pages to the left or right with your finger.

Press in the shaded area to go back up a level or confirm.

Press the back arrow to go back a level or confirm.



The touch screen is of the "capacitive" type.

To clean the screen, use a soft, non-abrasive cloth (e.g. spectacles cloth) with no additional product.

Do not use sharp objects on the screen.

Do not touch the screen with wet hands.

Certain information is displayed permanently in the upper bar of the touch screen:

- Air conditioning status information (depending on version), and direct access to the corresponding menu.
- Radio Media and Telephone menu status information.
- Privacy status information.
- Access to the touch screen and digital instrument panel settings.

Audio source selection (depending on equipment):

- FM/DAB/AM radio stations (depending on equipment).
- Telephone connected via Bluetooth and Bluetooth multimedia broadcast (streaming).
- USB Memory stick.
- Media player connected via the auxiliary socket (depending on equipment).



I In the "Settings" menu, it is possible to create a profile for an individual or for a group of people with shared interests, and configure a wide range of settings (radio presets, audio settings, ambiances, etc.). Settings are applied automatically.

I In very hot conditions, the volume may be limited to protect the system. It may enter standby mode (with the screen and sound off) for 5 minutes or more. The system will resume normal operation when the temperature in the passenger compartment has dropped.

Steering mounted controls

Steering mounted controls - Type 1



Radio:

Select the previous/next preset radio station.

Select the previous/next item in a menu or a list.

Media:

Select the previous/next track.

Select the previous/next item in a menu or a list.



Radio:

Short press: display the list of radio stations.

Long press: update the list.

Media:

Short press: display the list of folders.

Long press: display the available sorting options.



Change audio source (radio; USB; AUX if equipment connected; CD; streaming).



Confirm a selection.



Increase volume.



Decrease volume.



Mute/restore sound by simultaneously pressing the increase and decrease volume buttons.

Steering mounted controls - Type 2



Voice commands:

This control is located on the steering wheel or at the end of the lighting control stalk (depending on equipment).

Short press, smartphone voice commands via the system.



Increase volume.



Decrease volume.

Mute by pressing the volume increase and decrease buttons simultaneously (depending on equipment).

Restore the sound by pressing one of the two volume buttons.



Media (short press): change the multimedia source.



Telephone (short press): start telephone call.

Call in progress (short press): access telephone menu.

Telephone (long press): reject an incoming call, end call; when no call is in progress, access telephone menu.



Radio (rotate): automatic search for the previous/next station.

Media (rotate): previous/next track, move in a list.

Short press: confirm a selection; if nothing selected, access to presets.




Radio: display the list of stations.

Media: display the list of tracks.

Radio (press and hold): update the list of stations received.


Menus

Applications

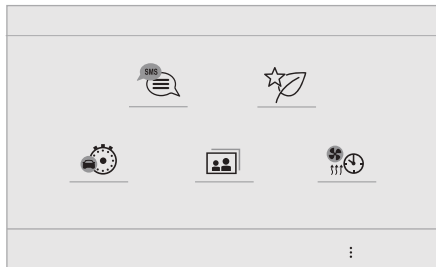


Access configurable equipment.

Radio Media

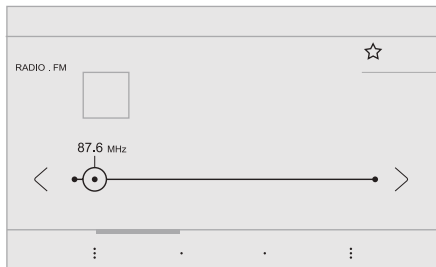


Select an audio source or radio station.

Telephone

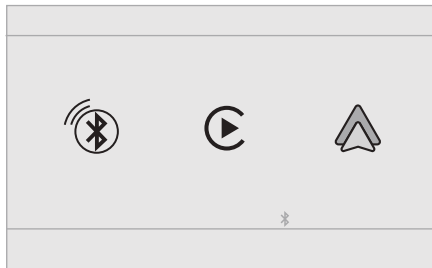

Connect a mobile phone via Bluetooth®. Run certain applications from a smartphone connected via CarPlay® or Android Auto.

Settings

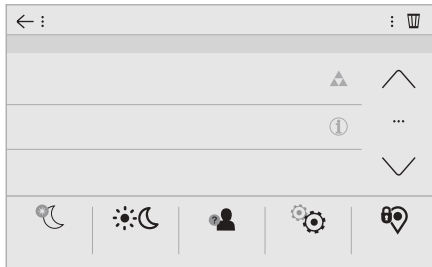


Configure a personal profile and/or configure the sound (balance, ambience, etc.) and the display (language, units, date, time, etc.).

Driving




Activate, deactivate or configure certain vehicle functions.


Navigation

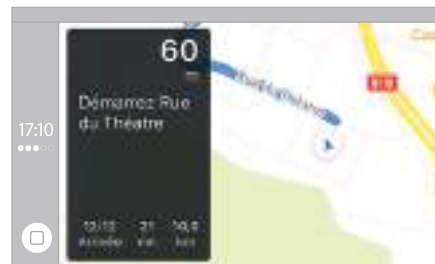

Configure the navigation and select your destination via CarPlay® or Android Auto.

Air conditioning

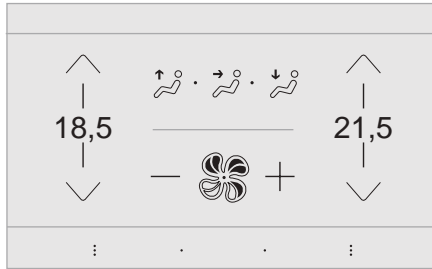


 Manage various temperature and air flow settings.


Applications


Viewing photos

Insert a USB memory stick in the USB port.

 To protect the system, do not use a USB hub.


The system can read folders and image files in the formats: .tiff; .gif; .jpg/jpeg; .bmp and .png.


 Press **Applications** to display the main page.

 Press "**Photos**".


 Select a folder.

 Select an image to view.


 Press this button to display the details of the photo.


 Press the back arrow to go back a level.


Managing messages

 Press **Applications** to display the main page.


 Press "SMS".


 Select the "SMS" tab.


 Press this button to select the display settings for messages.

 Press this button to search and select a recipient.


 Select the "Quick messages" tab.


 Press this button to select the display settings for messages.

 Press this button to write a new message.

 Press the bin alongside the selected message to delete it.

 Press this button alongside the selected message to display the secondary page.

 Press this button to edit and modify the existing text.


 Press this button to write a new message.

 Press the bin to delete the message.


Radio

Selecting a station


 Press **Radio Media** to display the main page.


 Press one of the buttons to perform an automatic search for radio stations.

Or


 Move the slider to manually search for frequencies up or down.

Or

 Press the frequency.

 Enter the FM and AM waveband values using the virtual keypad.

 Press "**OK**" to confirm.

 Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a USB charger connected to the 12 V socket. The exterior environment (hills, buildings, tunnels, basement car parks, etc.) may block reception, including in RDS mode. This phenomenon is perfectly normal in the context of radio wave transmission, and in no way indicative of an audio system malfunction.

Changing the waveband



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Press "**Band**" to change waveband.



Press in the shaded area to confirm.

Presetting a station

Select a radio station or frequency.



Make a short press on the star outline. If the star is solid, the radio station is already preset.

Or

Select a radio station or frequency.

Press "**Preset**".



Make a long press on one of the buttons to preset the station.

Activating/Deactivating RDS

RDS, if activated, allows you to continue listening to the same station by automatically retuning to alternative frequencies.



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Activate/deactivate "**RDS**".



Press in the shaded area to confirm.

i RDS station tracking may not be available nationwide, as many radio stations do not cover 100 % of the country. This explains the loss of reception of the station during a journey.

Displaying text information

The "Radio Text" function displays information transmitted by the radio station relating to the station or the currently playing song.



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Activate/deactivate "**News**".



Press in the shaded area to confirm.

Playing TA messages

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station that transmits this type of message. While traffic information is being broadcast, the current media is automatically interrupted so that the TA message can be heard. Normal play of the previously playing media resumes at the end of the message.



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Activate/deactivate "**TA**".



Press in the shaded area to confirm.

Audio settings



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Press "**Audio settings**".



Select the "**Tone**", "**Balance**", "**Sound**", "**Voice**" or "**Ringtones**" tab to configure the sound settings.



Press the back arrow to confirm.

i In the "**Tone**" tab, the **Ambience**, **Bass**, **Medium** and **Treble** sound settings are different and independent for each audio source.

In the "**Balance**" tab, the **All passengers**, **Driver** and **Front only** settings are common to all sources.

In the "**Sound**" tab, activate or deactivate "**Volume linked to speed**", "**Auxiliary input**" and "**Touch tones**".

! The balance/distribution (or spatialisation with the Arkamys® system) uses audio processing to adjust the sound quality according to the number of passengers in the vehicle.

i Onboard audio: Arkamys Sound Staging® optimises the sound distribution inside the passenger compartment.


DAB (Digital Audio Broadcasting) radio

Terrestrial Digital Radio

Digital radio provides higher quality sound. The various "multiplexes/ensembles" offer a choice of radio stations organised in alphabetical order.

 Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.

 Press "**Band**" to select "**DAB band**".

 Press in the shaded area to confirm.


FM-DAB Follow-up

"DAB" does not cover 100% of the territory.

When the digital radio signal is poor, the "FM-DAB Follow-up" enables you to continue listening to the same station by automatically switching to the corresponding "FM" analogue station (if there is one).

 Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to go to the secondary page.

 Activate/deactivate "**FM-DAB Follow-up**".

 Press in the shaded area to confirm.

i If "FM-DAB Follow-up" is activated, there may be a time offset of a few seconds when the system switches to "FM" analogue radio, and in some cases a change in volume. When the digital signal quality is restored, the system automatically changes back to "DAB". To minimise this time lag, storing radio stations in the "DAB" band is recommended.

! If the "DAB" station being listened to is not available on "FM", or if "FM-DAB Follow-up" is not activated, the sound will cut out when the digital signal becomes too weak.

Media

USB port



Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).



To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory); this operation can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time. Playlists are updated whenever the ignition is switched off or a USB memory stick is connected. The audio system memorises these lists, which will subsequently load faster if they have not been changed.

Auxiliary (AUX) jack socket

Depending on equipment



Connect a portable device (MP3 player, etc.) to the auxiliary jack socket using an audio cable (not supplied).

This source is only available if "Auxiliary input" has been selected in the audio settings.

First adjust the volume on the portable device (to a high level). Then adjust the volume of the audio system.

Controls are managed via the portable device.

Selecting the source



Press **Radio Media** to display the main page.

Press the "**SOURCES**" button.

Select the source.

BluetoothStreaming®

Streaming allows you to listen to the audio feed from your smartphone.

The Bluetooth profile must be activated.

First adjust the volume on the portable device (to a high level). Then adjust the volume of the system.

If play does not start automatically, it may be necessary to start the audio playback from the smartphone.

Control is from the portable device or by using the system's touch buttons.

Once connected in Streaming mode, the smartphone is considered to be a media source.

Connecting Apple® players

Connect the Apple® player to the USB socket using a suitable cable (not supplied).

Play starts automatically.

Control is via the audio system.

The classifications available are those of the portable device connected (artists/albums/genres/playlists/audio books/podcasts). It is also possible to use a

classification structured in the form of a library.

The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of the Apple® player.

Information and advice

The system supports USB mass storage devices, BlackBerry® devices or Apple® players via the USB ports. The adapter cable is not supplied.

Devices are managed using the audio system controls.

Other devices, not recognised on connection, must be connected to the auxiliary socket using a jack cable (not supplied) or via Bluetooth streaming, if compatible.

! To protect the system, do not use a USB hub.

The audio system will only play audio files with ".wav", ".wma", ".aac", ".ogg" and ".mp3" file extensions, at bit rates between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode. No other file types (".mp4", etc.) can be read.

All ".wma" files must be standard WMA 9 files.

The supported sampling rates are 11, 22, 44 and 48 KHz.

To avoid reading and display problems, we recommend choosing file names less than 20 characters long that do not contain any special characters (e.g. " ? . ; ù).

Use only USB memory sticks in FAT32 format (File Allocation Table).

! We recommend using the original USB cable for the portable device.

Telephone

USB sockets

Depending on equipment, for more information on the USB sockets compatible with **CarPlay®** or **Android Auto** applications, refer to the "Ease of use and comfort" section.

! For the list of compatible smartphones, visit the Manufacturer's website in your country.

! Synchronising a smartphone enables users to display applications that support the smartphone's CarPlay® or Android Auto technology on the vehicle's screen. For


CarPlay® technology, the CarPlay® function must first be activated on the smartphone. Unlock the smartphone for the communication process between the smartphone and the system to work.


As principles and standards are constantly changing, **we recommend keeping the smartphone's operating system up-to-date, together with the date and time on the smartphone and the system.**

CarPlay® smartphone connection


Depending on country.

i On connecting the USB cable, the CarPlay® function deactivates the system's Bluetooth® mode. The **"CarPlay"** function requires the use of a compatible smartphone and compatible applications.


 Connect the USB cable. The smartphone charges when connected by the USB cable.

 From the system, press **Telephone** to display the CarPlay® interface.


Or

 If the smartphone has already connected by Bluetooth®.


 Connect the USB cable. The smartphone charges when connected by the USB cable.

 From the system, press **"Telephone"** to display the main page.

Press the **"PHONE"** button to go to the secondary page.


 Press **"CarPlay"** to display the CarPlay® interface.

i When the USB cable is disconnected and the ignition is switched off then back on, the system will not automatically switch to Radio Media mode; the source must be changed manually.

 The CarPlay® navigation can be accessed at any time by pressing the system's **Navigation** button.


Android Auto smartphone connection


Depending on country.


 On the smartphone, download the Android Auto application.

i The "Android Auto" function requires the use of a compatible smartphone and applications.

Telephone not connected by Bluetooth®

 Connect a USB cable. The smartphone charges when connected by a USB cable.


 From the system, press **"Telephone"** to display the main page.

 Press **"Android Auto"** to start the application in the system.


Depending on the smartphone, it may be necessary to activate the **"Android Auto"** function.

OK During the procedure, several screen pages relating to certain features are displayed.


Accept to start and complete the connection.

 When connecting a smartphone to the system, we recommend enabling Bluetooth® on the smartphone.

Telephone connected by Bluetooth®

 From the system, press **"Telephone"** to display the main page.

Press the **"PHONE"** button to display the secondary page.

 Press **"Android Auto"** to start the application in the system.

Access to the different audio sources remains available in the margin of the Android Auto display, using the touch buttons located in the upper bar.

Access to the menus for the system is possible at any time using the dedicated buttons.

i There may be a pause before applications become available, depending on the quality of the network.

Pairing a Bluetooth® telephone

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Consult the telephone user guide and the service provider to check which services are available.

i The Bluetooth function must be activated and the telephone configured as "Visible to all" (in the telephone settings).

To complete the pairing, whichever procedure is used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

i If the pairing procedure fails, we recommend deactivating and then reactivating the Bluetooth function on the telephone.

Procedure from the telephone



Select the name of the system in the list of detected devices.

In the system, accept the connection request from the telephone.

Procedure from the system



Press **Telephone** to display the main page.



Press **"Bluetooth search"**.

The list of detected telephones is displayed.



Select the name of the chosen telephone in the list.

Connection sharing

The system offers to connect the telephone with 3 profiles:

- **"Telephone"** (hands-free kit, telephone only),
- **"Streaming"** (streaming: wireless playing of audio files on the telephone),
- **"Mobile internet data"**.



Select one or more profiles.



Press **"OK"** to confirm.

Depending on the type of telephone, you may be prompted to accept the transfer of contacts and messages.

i The ability of the system to connect just one profile depends on the telephone. All three profiles may connect by default.

i The profiles compatible with the system are: HFP, OPP, PBAP, A2DP, AVRCP, MAP and PAN.

Visit the Brand's website for more information (compatibility, additional help, etc.).

Automatic reconnection

On returning to the vehicle, if the last telephone connected is present again, it is automatically recognised and within about 30 seconds after switching on the ignition, the pairing is established automatically (Bluetooth activated).

To modify the connection profile:



Press **Telephone** to display the main page.

Press the **"PHONE"** button to access the secondary page.



Press **"Bluetooth connection"** to display the list of paired devices.



Press the "Details" button for a paired device.



Select one or more profiles.



Press **"OK"** to confirm.

Managing paired telephones

This function lets you connect or disconnect a device or delete a pairing.



Press **Telephone** to display the main page.

Press the **"PHONE"** button to access the secondary page.



Press **"Bluetooth connection" to display the list of paired devices.**



Press on the name of the telephone selected in the list to disconnect it.

Press again to connect it.

Deleting a telephone



Press the basket at the top right of the screen to display a basket alongside the telephone chosen.



Press the basket alongside the telephone chosen to delete it.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **PHONE** button to accept an incoming call.

And



Make a long press



on the steering mounted **PHONE** button to reject the call.

Or



Press **"End call"**.

Making a call



Using the telephone is not recommended while driving.

Parking the vehicle.

Make the call using the steering mounted controls.

Calling a new number



Press **Telephone** to display the main page.



Enter the phone number using the digital keypad.



Press **"Call" to start the call.**

Calling a contact



Press **Telephone** to display the main page.



Or press and hold



the steering mounted **PHONE** button.

Press **"Contacts"**.

Select the desired contact from the displayed list.



Press **"Call"**.

Calling a recently used number



Press **Telephone** to display the main page.

Or



Press and hold



the steering mounted button.

Press **"Recent calls"**.

Select the desired contact from the displayed list.



It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.

Setting the ringtone



Press **Telephone** to display the main page.

Press the **"OPTIONS"** button to access the secondary page.



Press **"Ring volume"** to display the volume bar.



Press the arrows or move the slider to set the ring volume.

Settings

Configuring profiles






 


Press **Settings** to display the main page.



 



Press **"Profiles"**.




Select **"Profile 1"**, **"Profile 2"**, **"Profile 3"** or **"Common profile"**.

-  Press this button to enter a name for the profile using the virtual keypad.
-  Press **"OK"** to save.
-  Press the back arrow to confirm.
-  Press this button to activate the profile.
-  Press the back arrow again to confirm.
-  Press this button to reset the selected profile.

Adjusting the brightness


-  Press **Settings** to display the main page.
-  Press **Brightness**.
-  Move the slider to adjust the brightness of the screen and/or the instrument panel (depending on version).
-  Press in the shaded area to confirm.

Modifying system settings

-  Press **Settings** to display the main page.
-  Press **"Configuration"** to access the secondary page.
-  Press **"System configuration"**.




Press the **"Units"** tab to change the units of distance, fuel consumption and temperature.





Press the **"Factory settings"** tab to restore the initial settings.


 Returning the system to factory settings activates the English language by default (depending on version).


Press the **"System info"** tab to display the versions of the various modules installed in the system.



Press the **"Privacy"** tab, or


-  Press **Settings** to display the main page.
-  Press **"Privacy"** to activate or deactivate the private data mode.
-  Activate or deactivate:
 - **"No sharing (data, vehicle position)"**.
 - **"Only data sharing"**
 - **"Data and vehicle position sharing"**

-  Press the back arrow to confirm.
-  Press **Settings** to display the main page.
-  Press **"Configuration"** to access the secondary page.
-  Press **"Screen configuration"**.





- Press **"Brightness"**.
-  Move the slider to adjust the brightness of the screen and/or the instrument panel (depending on version).

-  Press the back arrow to confirm.






- Press **"Animation"**.
-  Activate or deactivate: **"Automatic scrolling"**.
-  Select **"Animated transitions"**.






-  Press the back arrow to confirm.


Selecting the language

-  Press **Settings** to display the main page.
-  Press **"Configuration"** to access the secondary page.
-  Select **"Language"** to change the language.
-  Press the back arrow to confirm.








Setting the time


-  Press **Settings** to display the main page.
-  Press **"Configuration"** to access the secondary page.
-  Press **"Date and time"**.
- Select **"Time"**.
-  Press this button to set the time using the virtual keypad.
-  Press **"OK"** to save the time.

-  Press this button to set the time zone.
-  Select the display format for the time (12h/24h).
-  Activate or deactivate summer time (+1 hour).
-  Activate or deactivate GPS synchronisation (UTC).
-  Press the back arrow to save the settings.

 The system may not automatically manage the change between winter and summer time (depending on the country of sale).

Setting the date

-  Press **Settings** to display the main page.
-  Press "**Configuration**" to access the secondary page.
-  Press "**Date and time**".
- Select "**Date**".
-  Press this button to set the date.
-  Press the back arrow to save the date.
-  Select the display format for the date.
-  Press the back arrow again to confirm.

 Time and date setting is only available if "GPS Synchronisation." is deactivated.

Frequently asked questions

The following information groups together the answers to the most frequently asked questions concerning the system.

Radio

The reception quality of the tuned radio station gradually deteriorates or the station presets are not working (no sound, 87.5 MHz is displayed, etc.).

The vehicle is too far from the selected station's transmitter, or no transmitter is present in the geographical area.

► Activate the "RDS" function in the upper bar to enable the system to check whether there is a more powerful transmitter in the geographical area.

The environment (hills, buildings, tunnels, basement car parks, etc.) is blocking reception, including in RDS mode.

This is a perfectly normal phenomenon, and is not indicative of an audio system malfunction. The aerial is missing or has been damaged (for example while entering a car wash or underground car park).

► Have the aerial checked by a dealer.

I cannot find some radio stations in the list of received stations.

The name of the radio station changes.

The station is no longer received or its name has changed in the list.

► Press the round arrow on the "List" tab on the "Radio" page.

Some radio stations send other information in place of their name (the title of the song for example).

The system interprets these details as the station name.

► Press the round arrow on the "List" tab on the "Radio" page.

Media

Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).

Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the cataloguing time).

► Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.

Some characters in information about the currently playing media are not displayed correctly.

The audio system is unable to process certain types of character.

► Use standard characters to name tracks and folders.

Playback of streaming files does not start.

The connected device does not automatically launch playback.

- ▶ Start playback from the device.

Track names and playing times are not displayed on the audio streaming screen.

The Bluetooth profile does not allow the transfer of this information.

Telephone

I cannot connect my Bluetooth telephone.

The telephone's Bluetooth function may be switched off or the device may not be visible.

- ▶ Check that the telephone has Bluetooth switched on.
- ▶ Check in the telephone settings that it is "visible to all".

The Bluetooth telephone is not compatible with the system.

- ▶ Check the compatibility of the telephone on the Brand's website (services).

Android Auto and/or CarPlay do not work.

Android Auto and CarPlay may not activate if the USB cables are of poor quality.

- ▶ Use genuine USB cables to ensure compatibility.

Android Auto and/or CarPlay do not work.

Android Auto and CarPlay are not available in all countries.

- ▶ Check the Google Android Auto or Apple website to see which countries are supported.

The volume of the telephone connected in Bluetooth mode is inaudible.

The volume depends on both the system and the telephone.

- ▶ Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.

Ambient noise affects the quality of the telephone call.

- ▶ Reduce ambient noise (close windows, turn down ventilation, slow down, etc.).

The contacts are not listed in alphabetical order.

Some telephones offer display options.

Depending on the settings chosen, contacts can be transferred in a specific order.

- ▶ Modify the telephone directory display settings.

Settings

When the treble and bass settings are changed, the ambience is deselected.

When the ambience is changed, the treble and bass settings are reset.

Selecting an ambience imposes the treble and bass settings, and vice versa.

- ▶ Modify the treble and bass or ambience settings to obtain the desired musical ambience.

When the balance settings are changed, the distribution is deselected.

When the distribution setting is changed, the balance settings are deselected.

Selecting a distribution setting imposes the balance settings, and vice versa.

- ▶ Modify the balance setting or the distribution setting to obtain the desired sound quality.

There is a difference in sound quality between audio sources.

To allow for optimal listening quality, the sound settings can be tailored to different audio sources, which can generate audible differences when changing source.

- ▶ Check that the sound settings are appropriate to the sources listened to. Adjust the sound functions to the middle position.

When the engine is off, the system switches off after several minutes of use.

When the engine is switched off, the system's operating time depends on the state of charge of the battery.

The switch-off is normal: the system automatically goes into energy economy mode and switches off to maintain an adequate charge in the battery.

- ▶ Start the vehicle's engine to increase the charge of the battery.

CITROËN Connect Nav



GPS navigation - Applications - Multimedia audio system - Bluetooth® telephone

i The functions and settings described vary according to the vehicle version and configuration.

! For safety reasons and because they require sustained attention by the driver, the following operations must be carried out with the **vehicle stationary** and the ignition on:

- Pairing the smartphone with the system in Bluetooth mode.
- Using the smartphone.
- Connection to the CarPlay®, MirrorLink™ or Android Auto applications (certain

applications interrupt their display while the vehicle is moving).

- Changing the system settings and configuration.

i The system is protected so that it only operates in the vehicle.

The message **Energy Economy Mode** is displayed when the system is about to enter the corresponding mode.

i System and map updates can be downloaded from the Brand's website.

The update procedure is also available on the website.

i The system's Open Source Software (OSS) source codes are available at the following addresses:

<https://www.groupe-psa.com/fr/oss/>
<https://www.groupe-psa.com/en/oss/>

First steps



With the engine running, a press mutes the sound.



With the ignition off, a press turns the system on.
Adjustment of the volume.

Use the buttons either side of or below the touch screen for access to the menus, then press the virtual buttons in the touch screen.

Depending on the model, use the "Source" or "Menu" buttons on the left of the touch screen for access to the menus, then press the virtual buttons in the touch screen.

You can display the menus at any time by pressing the screen briefly with three fingers. All of the touch areas of the screen are white. Press the cross to go back a level. Press "OK" to confirm.


! The touch screen is of the "capacitive" type.

To clean the screen, use a soft, non-abrasive cloth (e.g. spectacles cloth) with no additional product.

- Do not use sharp objects on the screen.
- Do not touch the screen with wet hands.


Certain information is displayed permanently in the upper band of the touch screen:

- Reminder of the air conditioning information (depending on version), and direct access to the corresponding menu.
- Go directly to the selection of the audio source, to the list of radio stations (or list of titles depending on the source).
- Go to the message notifications, emails, map updates and, depending on the services, the navigation notifications.
- Go to the settings for the touch screen and the digital instrument panel.

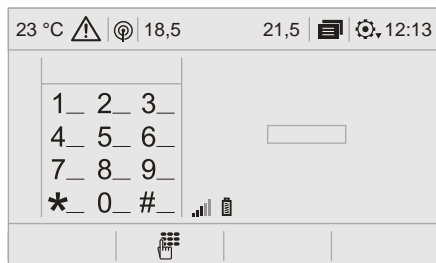

Selecting the audio source (depending on version):

- FM/DAB/AM* radios*
- USB memory stick.
- CD Player (depending on model).
- Media player connected via the auxiliary socket (depending on model).
- Telephone connected via Bluetooth and Bluetooth multimedia broadcast* (streaming).

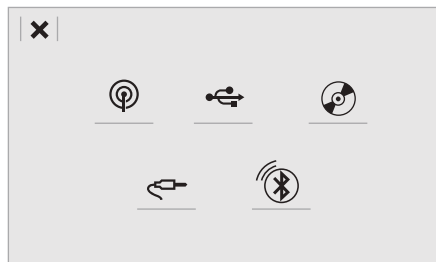

i In the "Settings" menu you can create a profile for just one person or a group of people with common points, with the possibility of entering a multitude of settings (radio presets, audio settings, navigation history, contact favourites, etc.); these settings are taken into account automatically.

i In very hot conditions, the volume may be limited to protect the system. It may go into standby (screen and sound off) for at least 5 minutes
The return to normal takes place when the temperature in the passenger compartment has dropped.

Steering mounted controls

Voice control:
This control is located on the steering wheel or at the end of the lighting control stalk (depending on equipment).
Short press, system voice control.
Long press, voice control for smartphone or CarPlay®, MirrorLink™ (availability depending on country), Android Auto via the system.

- +** Increase volume.
- Decrease volume.

Mute by pressing the volume increase and decrease buttons simultaneously (depending on equipment).

Restore the sound by pressing one of the two volume buttons.

SRC **Media** (short press): change the multimedia source.

Telephone (short press): start telephone call.

Call in progress (short press): access telephone menu.

Telephone (long press): reject an incoming call, end call; when no call is in progress, access telephone menu.

Radio (rotate): automatic search for the previous / next station.

Media (rotate): previous / next track, move in a list.

Short press: confirm a selection; if nothing selected, access to presets.

LIST **Radio:** display the list of stations.
Media: display the list of tracks.


Radio (press and hold): update the list of stations received.

* depending on equipment.


Menus


Connected navigation



 Enter navigation settings and choose a destination.
Use real-time services, depending on equipment.


Applications

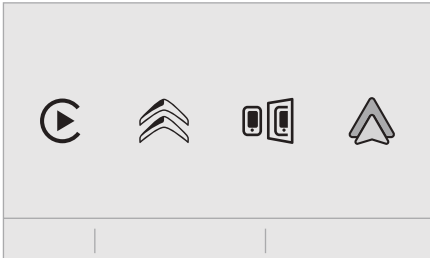


 Run certain applications on a smartphone connected via CarPlay®, MirrorLink™ (available in some countries) or Android Auto.


Check the status of Bluetooth® and Wi-Fi connections.


Radio Media

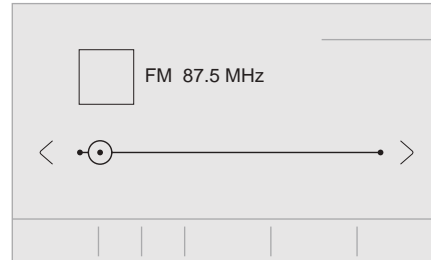


 Select an audio source or radio station, or display photographs.


Telephone

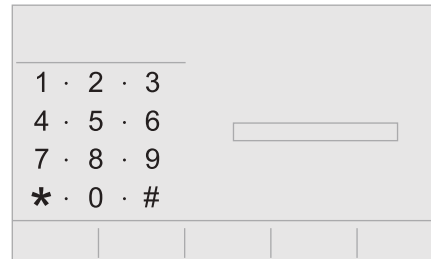

 Connect a telephone via Bluetooth®, read messages and emails and send quick messages.


Settings

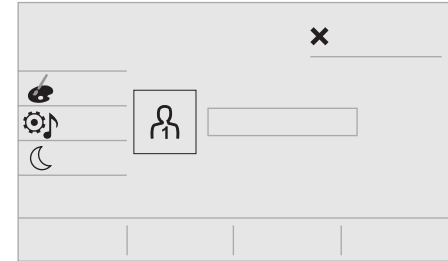


 Configure a personal profile and/or configure the sound (balance, ambience, etc.) and the display (language, units, date, time, etc.).

Vehicle



 Activate, deactivate or configure certain vehicle functions.

 Air conditioning



Manage various temperature and air flow settings.

Voice commands

Steering-mounted controls



Voice commands:

Voice commands can be issued from any screen page after briefly pressing the "Voice commands" button, located on the steering wheel or at the end of the lighting control stalk (depending on equipment), as long as there is no telephone call in progress.



To ensure that voice commands are always recognised by the system, please observe the following recommendations:

- speak in a normal tone without breaking up words or raising your voice.
- always wait for the "beep" (audible signal) before speaking.

- for best operation, we recommend closing the windows and sunroof (depending on version) to avoid any external interference.
- before issuing a voice command, ask any other passengers to refrain from speaking.

First steps



Example of a "voice command" for navigation:

"Navigate to address, 11 Regent Street, London".

Example of a "voice command" for the radio and media:

"Play artist, Madonna".

Example of a "voice command" for the telephone:

"Call David Miller".



The voice commands, with a choice of 12 languages (English, French, Italian, Spanish, German, Dutch, Portuguese, Polish, Turkish, Russian, Arabic, Brazilian), are made using the language previously chosen and set in the system.

For some voice commands, there are alternative synonyms.

Example: Guide to / Navigate to / Go to / ...

The voice commands in Arabic for: "Navigate to address" and "Display POI in the city" are not available.

Information - Using the system



Press the Push To Talk button and tell me what you'd like after the tone. Remember you can interrupt me at any time by pressing this button. If you press it again while I'm waiting for you to speak, it'll end the conversation. If you need to start over, say "cancel". If you want to undo something, say "undo". And to get information and tips at any time, just say "help". If you ask to me do something and there's some information missing that I need, I'll give you some examples or take you through it step by step. There's more information available in "novice" mode. You can set the dialogue mode to "expert" when you feel comfortable.

Global voice commands



Voice commands

Help

Voice commands help

Navigation help

Radio help

Media help

Telephone help



Help messages

There are lots of topics I can help you with. You can say: "help with phone", "help with navigation", "help with media" or "help with

radio". For an overview on how to use voice controls, you can say "help with voice controls".



Voice commands

Set dialogue mode as <...>



Help messages

Choose "beginner" or "expert" mode.



Voice commands

Select profile <...>



Help messages

Select profile 1, 2 or 3.



Voice commands

Yes

No



Help messages

Say "yes" if I got that right. Otherwise, say "no" and we'll start that again.

"Navigation" voice commands



Voice commands

Navigate home

Navigate to work

Navigate to preferred address <...>

Navigate to contact <...>

Navigate to address <...>

Show nearby POI <...>



Help messages

To start guidance or add a stopover, say "navigate to" and then the address or contact name. For example, "navigate to address 11 Regent Street, London", or "navigate to contact, John Miller". You can specify if it's a preferred or recent destination. For example, "navigate to preferred address, Tennis club", "navigate to recent destination, 11 Regent Street, London". Otherwise, just say, "navigate home". To see points of interest on a map, you can say things like "show hotels in Banbury" or "show nearby petrol station". For more information you can ask for "help with route guidance".



Voice commands

Remaining distance

Remaining time

Arrival time

Stop route guidance



Help messages

To get information about your current route, you can say "tell me the remaining time", "distance" or "arrival time". Try saying "help with navigation" to learn more commands.

i Depending on the country, give destination (address) instructions in the language configured for the system.

"Radio Media" voice commands



Voice commands

Tune to channel <...>



Help messages

You can pick a radio station by saying "tune to" and the station name or frequency. For example "tune to channel Talksport" or "tune to 98.5 FM". To listen to a preset radio station, say "tune to preset number". For example "tune to preset number five".



Voice commands

What's playing



Help messages

To display the details of the current "song", "artist" and "album", you can say "What's playing".



Voice commands

Play song <...>

Play artist <...>

Play album <...>



Help messages

Use the command "play" to select the type of music you'd like to hear. You can pick by "song", "artist", or "album". Just say something like "play

artist, Madonna", "play song, Hey Jude", or "play album, Thriller".

i Media voice commands are available only with a USB connection.

"Telephone" voice commands

i If there is no telephone connected by Bluetooth, a voice message announces: "Please first connect a telephone", and the voice session will be closed.



Voice commands

Call contact <...>*

Dial <...>*

Display contacts*

Display calls*

Call (message box | voicemail)*



Help messages

To make a phone call, say "call" followed by the contact name, for example: "Call David Miller". You can also include the phone type, for example: "Call David Miller at home". To make a call by number, say "dial" followed by the

phone number, for example, "Dial 107776 835 417". You can check your voicemail by saying "call voicemail". To send a text, say "send quick message to", followed by the contact, and then the name of the quick message you'd like to send. For example, "send quick message to David Miller, I'll be late". To display the list of calls, say "display calls". For more information on SMS, you can say "help with texting".

"Text message" voice commands

i If there is no telephone connected by Bluetooth, a voice message announces: "Please first connect a telephone", and the voice session will be closed.



Voice commands

Send text to <...>

Listen to most recent message**



Help messages

To hear your messages, you can say "listen to most recent message". When you want to send a text, there's a set of quick messages ready for you to use. Just use the quick message name

and say something like "send quick message to Bill Carter, I'll be late". Check the phone menu for the names of the supported messages. Please say "call" or "send quick message to", and then select a line from the list. To move around a list shown on the display, you can say "go to start", "go to end", "next page" or "previous page". To undo your selection, say "undo". To cancel the current action and start again, say "cancel".

i The system only sends pre-recorded "Quick messages".

Navigation

Choice of a destination

To a new destination



Press **Navigation** to display the main page.

Press the **"MENU"** button to access the secondary page.



Select **"Enter address"**.



Select the **"Country"**.

* This function is available only if the telephone connected to the system supports downloading of contacts and recent calls and the corresponding download has been performed.

** This function is available only if the telephone connected to the system supports downloading of contacts and recent calls and the corresponding download has been performed.



Enter the "**City**", the "**Street**" and the "**Number**", and confirm by pressing on the displayed suggestions.



Press "**OK**" to select the "**Guidance criteria**".

And/or



Select "**See on map**" to choose the "**Guidance criteria**".



Press "**OK**" to start guided navigation.



Zoom in/out using the touch buttons or with two fingers on the screen.



In order to be able to use the navigation function, you must enter the "**City**", the "**Street**" and the "**Number**" on the virtual keyboard, or select them from the list in "**Contact**" or in the address "**History**".



If you do not enter the street number, you will be guided to one end of the street.

To a recent destination



Press **Navigation** to display the main page.

Press the "**MENU**" button to access the secondary page.



Select "**My destinations**".

Select the "**Recent**" tab.

Select the chosen address from the list to display the "**Guidance criteria**".



Press "**OK**" to start guided navigation.



Select "**Position**" to see the point of arrival on the map.

To "My home" or "My work"



Press **Navigation** to display the main page.

Press the "**MENU**" button to access the secondary page.



Select "**My destinations**".

Select the "**Preferred**" tab.



Select "**My home**".

Or



Select "**My work**".

Or

Select a preset favourite destination.

To a contact



Press **Navigation** to display the main page.

Press the "**MENU**" button to access the secondary page.



Select "**My destinations**".

Select the "**Contact**" tab.

Select a contact in the list to start guided navigation.

To points of interest (POI)

Points of interest (POI) are listed in different categories.



Press **Navigation** to display the main page.

Press the "**MENU**" button to access the secondary page.



Select "**Points of interest**".



Select the "**Travel**", "**leisure**", "**Commercial**", "**Public**" or "**Geographic**"

tab.

Or



Select "**Search**" to enter the name and address of a POI.



Press "**OK**" to calculate the route.

To a point on the map



Press **Navigation** to display the main page.

Explore the map by sliding your finger across the screen.

Select the destination by pressing on the map.



Tap the screen to place a marker and display the sub-menu.



Press this button to start guided navigation.

Or



Press this button to save the displayed address.



Pressing and holding on a point opens a list of nearby POIs.

To GPS coordinates



Press **Navigation** to display the main page.

Explore the map by sliding your finger across the screen.



Press this button to display the world map.

Using the grid, select the desired country or region by zooming in.



Press this button to enter the GPS coordinates.



A marker is displayed in the middle of the screen, with the "**Latitude**" and "**Longitude**" coordinates.



Press this button to start guided navigation.

Or



Press this button to save the displayed address.

OR



Press this button to enter the "**Latitude**" value using the virtual keypad.

And



Press this button to enter the "**Longitude**" value using the virtual keypad.

TMC (Traffic Message Channel)



TMC (Traffic Message Channel) messages are linked to a European standard on the broadcasting of traffic information via the RDS system on FM radio, transmitting traffic information in real time. The TMC information is then displayed on a GPS Navigation system map and taken into account straight away during navigation, so as to avoid accidents, traffic jams and closed roads.



The display of danger zones depends on the legislation in force and subscription to the service.

Connected navigation

Depending on version

Depending on the equipment level of the vehicle

Network connection provided by the vehicle



OR

Network connection provided by the user



Connected navigation connection



As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.



For access to connected navigation, you can use the connection provided by the vehicle via the "Emergency or assistance call" services or use your smartphone as a modem.

Activate and enter settings for sharing the smartphone connection.

Network connection provided by the vehicle



The system is automatically connected to the modem included for the "Emergency or assistance calls" services and does not require a connection provided by the user via their smartphone.

Network connection provided by the user

USB connection



Connect a USB cable.

The smartphone charges when connected by a USB cable.

Bluetooth connection



Activate the Bluetooth function on the telephone and ensure that it is visible to all (see the "Applications" section).

Wi-Fi connection



Select a Wi-Fi network found by the system and connect to it (see the "Applications" section).

- i** Restrictions of use:
- With CarPlay®, connection sharing is only with a Wi-Fi connection.
 - With MirrorLink™, connection sharing is only with a USB connection.
- The quality of services depends on the quality of the network connection.



With the arrival of "TOMTOM TRAFFIC", the services are available.

- i** The services offered with connected navigation are as follows.

A Connected Services pack:

- Weather,
- Filling stations,
- Car park,
- Traffic,
- POI local search.

A Danger zone pack (option).

i The processes and standards are constantly changing; for the communication process between the smartphone and the system to work correctly, we recommend that you **update the operating system of the smartphone as well as the date and time of the smartphone and the system.**

Settings specific to connected navigation

i In the "Settings" menu, you can create a profile for an individual or for a group of people with shared interests, and configure a wide range of settings (radio presets, audio settings, navigation history, favourite contacts, etc.). Settings are applied automatically.



Press **Navigation** to display the main page.

Press the **"MENU"** button to access the secondary page.



Select **"Settings"**.

Select **"Map"**.



Activate or deactivate:

- **"Allow declaration of danger zones"**.
- **"Guidance to final destination on foot"**
- **"Authorize sending information"**

These settings must be configured for each profile.

Select **"Alerts"**.



Activate or deactivate **"Warn of danger zones"**.



Select this button.



Activate: **Give an audible warning**



For access to connected navigation, you must tick the option: **"Authorize sending information"**



Danger zone alerts may or may not be displayed, depending on the applicable legislation and subscription to the corresponding service.

Declaration of "Danger zones"



To send information on the declaration of danger zones, you must tick the option: **"Allow declaration of danger zones"**



Press **Navigation** to display the main page.



Press the **"Declare a new danger zone"** button located in the upper bar on the

touch screen



Select the **"Type"** option to select the type of "Danger area".



Select the "**Speed**" option and enter it using the virtual keypad.

OK

Press "**OK**" to save and send the information.

"Danger zones" pack updates



Press **Settings** to display the primary page.

Press the "**OPTIONS**" button to go to the secondary page.



Select "**System administration**".



Select the "**System info**" tab.



Select "**View**" to display the versions of the different modules installed in the system.



Select "**Update(s) due**".

i You can download the system and map updates from the Brand's website.

The update procedure can also be found on the website.

Displaying weather information



Press **Navigation** to display the main page.



Press this button to display the list of services.



Select "**View map**".



Select "**Weather**".



Press this button to display basic information.



Press this button to display detailed weather information.

i The temperature displayed at 6 a.m. will be the maximum temperature for the day.
The temperature displayed at 6 p.m. will be the minimum temperature for the night.

Applications

Internet Browser



Press **Applications** to display the main page.

Press "**Connectivity**" to access the "**Internet Browser**" function.

Press "**Internet Browser**" to display the browser home page.



Select your country of residence.

OK

Press "**OK**" to save and start the browser.

i Connection to the internet is via one of the network connections provided by the vehicle or the user.

Connectivity



Press **Applications** to display the main page.

Press "**Connectivity**" to access the **CarPlay**[®], **MirrorLink**[™] or **Android Auto** functions.

Applications



Press **Applications** to display the main page.

Press "**Applications**" to display the applications home page.

CarPlay[®] smartphone connection

! As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited.
All operations must be done with the **vehicle stationary**.

i Smartphone synchronisation allows users to display smartphone applications compatible with the CarPlay[®] technology on the vehicle's screen, provided that the smartphone's CarPlay[®] function has previously been activated.
As processes and standards are constantly changing, **we recommend updating your smartphone's operating system**.

For the list of compatible smartphones, visit the vehicle brand's website in your country.



Connect the USB cable. The smartphone charges when connected by the USB cable.



Press "**Telephone**" to display the CarPlay® interface.

Or



Connect the USB cable. The smartphone charges when connected by the USB cable.



From the system, press "**Applications**" to display the main page.

Press "**Connectivity**" to access the "CarPlay®" function.



Press "**CarPlay**" to display the CarPlay® interface.

i On connecting the USB cable, the CarPlay® function deactivates the system's Bluetooth® mode.

MirrorLink™ smartphone connection

! As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

i Smartphone synchronisation allows users to display smartphone applications compatible with the MirrorLink™ technology on the vehicle's screen. Processes and standards are constantly changing. The communication process between the smartphone and the system requires the smartphone to be unlocked; **update the smartphone's operating system and the date and time on the smartphone and in the system.**

For the list of compatible smartphones, visit the vehicle brand's website in your country.

! As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.

i The "**MirrorLink™**" function requires the use of a compatible smartphone and compatible applications.



When connecting a smartphone to the system, we recommend enabling Bluetooth® on the smartphone.



Connect the USB cable. The smartphone charges when connected by the USB cable.



From the system, press "**Applications**" to display the main page. Press "**Connectivity**" to access the "MirrorLink™" function.



Press "**MirrorLink™**" to start the application in the system.

Depending on the smartphone, it may be necessary to activate the "**MirrorLink™**" function.

OK

During the procedure, several screen pages relating to certain features are displayed.

Accept to start and complete the connection. Once the connection is established, a page is displayed with the applications already downloaded to your smartphone which are compatible with the MirrorLink™ technology. Access to the different audio sources remains available in the margin of the MirrorLink™ display, using the touch buttons located in the upper bar.

Access to the menus for the system is possible at any time using the dedicated buttons.

i There may be a wait for the availability of applications, depending on the quality of your network.

Android Auto smartphone connection

! As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

i Synchronising a smartphone allows users to display applications compatible with the smartphone's Android Auto technology on the vehicle screen.

Processes and standards are constantly changing. The communication process between the smartphone and the system requires the smartphone to be unlocked;

update the smartphone's operating system and the date and time on the smartphone and in the system.

For the list of compatible smartphones, visit the vehicle brand's website in your country.

! As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.

i The "**Android Auto**" function requires the use of a compatible smartphone and compatible applications.



Connect the USB cable. The smartphone charges when connected by the USB cable.



From the system, press "**Applications**" to display the main page.

Press "**Connectivity**" to access the "Android Auto" function.



Press "**Android Auto**" to start the application in the system.

OK

During the procedure, several screen pages relating to certain features are displayed.

Accept to start and complete the connection. Access to the different audio sources remains available in the margin of the Android Auto display, using the touch buttons located in the upper bar.

Access to the menus for the system is possible at any time using the dedicated buttons.

i In Android Auto mode, the function that displays rolling menus by briefly pressing the screen with three fingers is disabled.

i There may be a wait for the availability of applications, depending on the quality of your network.

Bluetooth connection®

! As a safety measure and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the **vehicle stationary** and the ignition on.

i Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

Procedure from the telephone



Select the system name in the list of devices detected.

In the system, accept the connection request from the telephone.



To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

Procedure from the system



Press **Connect-App** to display the main page.

Press the "**OPTIONS**" button to go to the secondary page.



Press on "**Bluetooth connection**".



Select "**Search**".

The list of telephones detected is displayed.



If the pairing procedure fails, we recommend deactivating and then reactivating the Bluetooth function on your telephone.



Select the name of the chosen telephone in the list.




Depending on the type of telephone, you may be prompted to accept (or decline) the transfer of your contacts and messages.

Connection sharing

The system offers to connect the telephone with 3 profiles:

- "Telephone" (hands-free kit, telephone only),
- "Streaming" (streaming: wireless playing of the audio files on the telephone),
- "Mobile internet data".

i The "Mobile internet data" profile must be activated for connected navigation (where the vehicle does not have "Emergency and assistance call" services), having first activated sharing of this connection on your smartphone.

 Select one or more profiles.

OK Press "OK" to confirm.


Wi-Fi connection

Network connection via the smartphone's Wi-Fi.

 Press **Connect-App** to display the main page.

Press the "OPTIONS" button to access the secondary page.

 Select "Wi-Fi network connection".

 Select the "Secured", "Not secured" or "Stored" tab.

 Select a network.



Using the virtual keypad, enter the Wi-Fi network "Key" and "Password".

Press "OK" to establish the connection.



The Wi-Fi connection and Wi-Fi connection sharing are exclusive.

Wi-Fi connection sharing

Creation of a local Wi-Fi network by the system.



Press **Connect-App** to display the main page.

Press the "OPTIONS" button to access the secondary page.



Select "Share Wi-Fi connection".

Select the "Activation" tab to activate or deactivate Wi-Fi connection sharing.

And/or

Select the "Settings" tab to change the system's network name and password.



Press "OK" to confirm.



To protect against unauthorised access and to make your systems as secure as possible, we recommend using a complex password or security code.

Managing connections



Press **Connect-App** to display the main page.

Press the "OPTIONS" button to access the secondary page.



Select "Manage connection".

With this function, you can view the access to connected services, check the availability of connected services and change the connection mode.

Radio

Selecting a station



Press **Radio Media** to display the main page.

Press on "Frequency".



Press one of the buttons to perform an automatic search for radio stations.

Or



Move the slider to manually search for frequencies up or down.

Or



Press **Radio Media** to display the main page.

Press the "OPTIONS" button to go to the secondary page.



Select "Radio stations" on the secondary page.

Press on "Frequency".



Enter the values using the virtual keypad. First enter the units then click on the

decimals field to enter the figures after the decimal point.

OK Press "**OK**" to confirm.

! Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a USB charger connected to the 12 V socket. The exterior environment (hills, buildings, tunnels, basement car parks, etc.) may block reception, including in RDS mode. This phenomenon is perfectly normal in the context of radio wave transmission, and in no way indicative of an audio system malfunction.

Presetting a station

Select a radio station or frequency. (refer to the corresponding section)

Press "**Presets**".



Make a long press on one of the buttons to preset the station.

Activating/Deactivating RDS



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Select "**Radio settings**".

Select "**General**".



Activate/deactivate "**Station follow**".

OK Press "**OK**" to confirm.

i RDS, if activated, allows you to continue listening to the same station by automatically retuning to alternative frequencies. However, in certain conditions, RDS station tracking may not be possible nationwide, as radio stations do not always cover the entire country. This can explain the loss of reception of a station during a journey.

Displaying text information

i The "Radio Text" function displays information transmitted by the radio station relating to the station or the currently playing song.



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Select "**Radio settings**".

Select "**General**".



Activate/deactivate "**Display radio text**".



Press "**OK**" to confirm.

Play TA messages

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station that carries this type of message. While traffic information is being broadcast, the current media is automatically interrupted so that the TA message can be heard. Normal play of the media previously playing is resumed at the end of the message.

Select "**Announcements**".



Activate / Deactivate "**Traffic announcement**".



Press "**OK**" to confirm.

DAB (Digital Audio Broadcasting) radio

Terrestrial Digital Radio

! Digital radio provides higher quality reception.

The various "multiplexes/ensembles" offer a choice of radio stations organised in alphabetical order.



Press **Radio Media** to display the main page.



Select the audio source.

Press "**Band**" to select the "**DAB**" waveband.

FM-DAB tracking

i "DAB" does not cover 100% of the country.

When the digital radio signal is poor, "FM-DAB auto tracking" enables you to continue listening to the same station by automatically switching to the corresponding FM analogue station (if there is one).



Press **Radio Media** to display the main page.

Press the "**OPTIONS**" button to access the secondary page.



Select "**Radio settings**".

Select "**General**".



Activate/deactivate "**Station follow**".

OK

Press on "**OK**".

i If "FM-DAB auto tracking" is activated, there may be a time lag of a few seconds when the system switches to "FM" analogue radio, and in some cases a change in volume. When the digital signal quality is restored, the system automatically changes back to "DAB".



If the "DAB" station being listened to is not available on "FM" ("**FM-DAB**" greyed out), or "FM-DAB auto tracking" is not activated, the sound will cut out while the digital signal is too weak.

Media

USB socket



Insert the USB memory stick into the USB socket or connect the USB device to the USB socket using a suitable cable (not supplied).



To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory); this operation can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time. The playlists are updated every time the ignition is switched off or a USB memory stick is connected. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

Auxiliary socket (AUX)

(depending on model / depending on equipment)



Connect a portable device (MP3 player, etc.) to the auxiliary jack socket using an audio cable (not supplied).

This source is only available if "Auxiliary input" has been selected in the audio settings. First adjust the volume on your portable device (to a high level). Then adjust the volume on your audio system.

Controls are managed via the portable device.

CD player

(depending on model / depending on equipment)
Insert the CD in the player.

Selecting the source



Press **Radio Media** to display the main page.



Select "**Source**".

Select the source.

Bluetooth® audio streaming

Streaming allows you to listen to music from your smartphone.

The Bluetooth profile must be activated, first adjust the volume on your portable device (to a high level).

Then adjust the volume of your audio system. If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the portable device or by using the system's touch buttons.

! Once connected in streaming mode, the telephone is considered to be a media source.

Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.
Control is via the audio system.

i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).
The default classification used is by artists.
To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.

Information and advice

! The system supports USB mass storage devices, BlackBerry® devices or Apple® players via USB ports. The adapter cable is not supplied.
Device management is done by the audio system controls.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied) or via Bluetooth streaming, depending on compatibility.

! To protect the system, do not use a USB hub.

The audio equipment will only play audio files with ".wma", ".aac", ".flac", ".ogg" and ".mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode. No other file types (".mp4", etc.) can be read. Files of the ".wma" type should be to the wma 9 standard.

The sampling rates supported are 32, 44 and 48 kHz.

It is advisable to restrict file names to 20 characters, without using special characters (e.g. " " ? ; ù) so as to avoid any reading or display problems.

Use only USB keys in FAT32 format (File Allocation Table).

i It is recommended that the original USB cable for the portable device is used.

In order to be able to play a burned CDR or CDRW, select standards ISO 9660 level 1, 2 or Joliet if possible when burning the CD.
If the disc is burned in another format, it may not be played correctly.

It is recommended that the same burning standard is always used on an individual disc, with the lowest speed possible (4x maximum) for the best acoustic quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

Telephone

Pairing a Bluetooth® telephone

! As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

i Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

Procedure from the telephone



Select the system name in the list of devices detected.

In the system, accept the connection request from the telephone.

! To complete the pairing, whichever procedure used (from the telephone or

from the system), ensure that the code is the same in the system and in the telephone.

Procedure from the system



Press **Telephone** to display the main page.



Press "**Bluetooth search**".

Or



Select "**Search**".

The list of telephones detected is displayed.

i If the pairing procedure fails, we recommend deactivating and then reactivating the Bluetooth function on your telephone.



Select the name of the chosen telephone in the list.

Connection sharing

The system offers to connect the telephone with 3 profiles:

- "**Telephone**" (hands-free kit, telephone only),
- "**Streaming**" (streaming: wireless playing of the audio files on the telephone),
- "**Mobile internet data**".

i Activation of the profile; "**Mobile internet data**" is obligatory for connected navigation having first activated sharing of this connection on your smartphone.



Select one or more profiles.

OK

Press "**OK**" to confirm.

i Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

Automatic reconnection

i On return to the vehicle, if the last telephone connected is present again, it is automatically recognised and within about 30 seconds of switching on the ignition, the pairing is established without any action on your part (with Bluetooth activated).

To modify the connection profile:



Press **Telephone** to display the main page.

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Bluetooth connection**" to display the list of paired devices.



Press the "Details" button.



Select one or more profiles.

OK

Press "**OK**" to confirm.



The ability of the system to connect just one profile depends on the telephone.

By default, all three profiles are able to connect.



The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Refer to your telephone's user guide and your service provider to check which services you are able to access.



The system supports the following profiles: HFP, OPP, PBAP, A2DP, AVRCP, MAP and PAN.

Visit the Brand's website for more information (compatibility, additional help, etc.).

Managing paired telephones



This function lets you connect or disconnect a device or delete a pairing.



Press **Telephone** to display the main page.

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Bluetooth connection**" to display the list of paired devices.



Press on the name of the telephone selected in the list to disconnect it.

Press again to connect it.

Deleting a telephone



Select the basket at top right of the screen to display a basket alongside the telephone chosen.



Press the basket alongside the telephone chosen to delete it.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **PHONE** button to accept an incoming call.

And



Make a long press



on the steering mounted **PHONE** button to reject the call.

Or



Select "**End call**".

Making a call



Using the telephone is not recommended while driving.

Park the vehicle.

Make the call using the steering mounted controls.

Calling a new number



Press **Telephone** to display the main page.



Enter the number using the digital keypad.



Press "**Call**" to start the call.

Calling a contact



Press **Telephone** to display the main page.



Or press and hold



on the steering-mounted **TEL** button.

Select "**Contact**".

Select the desired contact in the displayed list.



Select "**Call**".

Calling a recently used number



Press **Telephone** to display the main page.

Or



Press and hold



on the steering-mounted button.

Select "**Calls**".

Select the desired contact in the displayed list.



It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.

Managing contacts/entries



Press **Telephone** to display the main page.

Select "**Contact**".



Select "**Create**" to add a new contact.

In the "**Telephone**" tab, enter the telephone numbers for the contact.

In the "**Address**" tab, enter the addresses for the contact.

In the "**Email**" tab, enter the email addresses for the contact.



The "**Email**" function allows email addresses to be entered for a contact, but the system is not able to send emails.

Managing messages



Press **Telephone** to display the main page.

Press the "**OPTIONS**" button to go to the secondary page.






Select "**Messages**" to display the list of messages.



Select the "**All**", "**Incoming**" or "**Sent**" tab.







Select the details of the message chosen in one of the lists.




-  Press **"Answer"** to send a quick message stored in the system.
-  Press **"Call"** to start a call.
-  Press **"Play"** to listen to the message.

! Access to **"Messages"** depends on the compatibility between the smartphone and the onboard system. Depending on the smartphone, access to your messages or email may be slow.





i The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Refer to your smartphone manual and your service provider to check which services are available to you.

Managing quick messages

-  Press **Telephone** to display the main page.
- Press the **"OPTIONS"** button to go to the secondary page.
-  Select **"Quick messages"** to display the list of messages.
-  Select the **"Delayed"**, **"My arrival"**, **"Not available"** or **"Other"** tab, enabling you to create new messages.
-  Press **"Create"** to write a new message.

-  Select the message chosen in one of the lists.
-  Press **"Transfer"** to select one or more recipients.
-  Press **"Play"** to start playing the message.



Managing email

-  Press **Telephone** to display the main page.
- Press the **"OPTIONS"** button to go to the secondary page.
-  Select **"Email"** to display the list of messages.
-  Select the **"Incoming"**, **"Sent"** or **"Not read"** tab.
- Select the message chosen in one of the lists.
-  Press **"Play"** to start playing the message.

! Access to **"Email"** depends on the compatibility between the smartphone and the onboard system.

Settings

Audio settings


-  Press **Settings** to display the main page.
-  Select **"Audio settings"**.
- Select **"Ambience"**.

Or **"Position"**.
Or **"Sound"**.
Or **"Voice"**.
Or **"Ringtone"**.


OK Press **"OK"** to save the settings.


! The balance/distribution (or spatialisation with the Arkamys® system) uses audio processing to adjust the sound quality according to the number of passengers in the vehicle. Available only with the front and rear speaker configuration.

i The **Ambience** setting (choice of 6 ambiances) as well as for **Bass**, **Medium** and **Treble** are different and independent for each audio source. Activate or deactivate **"Loudness"**. The **"Position"** settings (All passengers, Driver and Front only) are common to all sources. Activate or deactivate **"Touch tones"**, **"Volume linked to speed"** and **"Auxiliary input"**.

 Onboard audio: Arkamys Sound Staging® optimises the sound balance/distribution inside the passenger compartment.

Configuring profiles


 As a safety measure and because it requires the sustained attention of the driver, the operations must only be done with the **vehicle stationary**.

 Press **Settings** to display the main page.


Press the "**OPTIONS**" button to access the secondary page.


 Select "**Setting of the profiles**".

Select "**Profile 1**", "**Profile 2**", "**Profile 3**" or "**Common profile**".

 Press this button to enter a name for the profile using the virtual keypad.

Press "**OK**" to confirm.


 Press this button to add a photograph to the profile.

 
 Insert a USB memory stick containing the photograph in the USB socket.


Select the photograph.

Press "**OK**" to accept the transfer of the photograph.

Press "**OK**" again to save the settings.

 The location for the photograph is square; the system reshapes the original photograph if in another format.

 Press this button to reset the selected profile.

 Resetting the selected profile activates the English language by default.

Select a "**Profile**" (1 or 2 or 3) to link the "**Audio settings**" with it.

 Select "**Audio settings**".

Select "**Ambience**".

Or

"**Position**".

Or


"**Sound**".

Or


"**Voice**".

Or


"**Ringtone**".

 Press "**OK**" to save the settings.


Modifying system settings

 Press **Settings** to display the main page.


Press the "**OPTIONS**" button to access the secondary page.

 Select "**Screen configuration**".

Select "**Animation**".

 Activate or deactivate: "**Automatic scrolling**".


Select "**Brightness**".

 Move the slider to adjust the brightness of the screen and/or the instrument panel.

Press **Settings** to display the main page.




Press the "**OPTIONS**" button to access the secondary page.

 Select "**System settings**".


Select "**Units**" to change the units of distance, fuel consumption and temperature.

Select "**Factory settings**" to restore the initial settings.


 Returning the system to factory settings activates the English language by default.

Select "**System info**" to display the versions of the various modules installed in the system.

Selecting the language

 Press **Settings** to display the main page.

Press the "**OPTIONS**" button to go to the secondary page.

 Select "**Languages**" to change the language.

Setting the date



Press **Settings** to display the main page.

Press the **"OPTIONS"** button to access the secondary page.



Select **"Setting the time-date"**.

Select **"Date"**.



Press this button to set the date.

OK

Press **"OK"** to confirm.



Select the display format for the date.



Time and date setting is only available if "GPS synchronisation" is deactivated. The change between winter and summer time is made by changing the time zone.

Setting the time



Press **Settings** to display the main page.

Press the **"OPTIONS"** button to access the secondary page.



Select **"Setting the time-date"**.

Select **"Time"**.



Press this button to set the time using the virtual keypad.

OK

Press **"OK"** to confirm.



Press this button to set the time zone.



Select the display format for the time (12h/24h).



Activate or deactivate GPS synchronisation (UTC).



Press **"OK"** to confirm.



The system does not automatically manage the change between winter and summer time (depending on country).

Colour schemes



For safety reasons, the colour scheme can only be changed while the **vehicle is stationary**.



Press **Settings** to display the main page.



Select **"Color schemes"**.



Select a colour scheme in the list then press **"OK"** to confirm.



Whenever the colour scheme is changed, the system restarts, temporarily displaying a black screen.

Frequently asked questions

The following information groups together the answers to the most frequently asked questions concerning the system.

Navigation

I cannot enter the navigation address.

The address is not recognised.

► Use the "intuitive method" by pressing the "Search..." button at the bottom of the "Navigation" page.

The route calculation is not successful.

The route settings may conflict with the current location (for example, if toll roads are excluded but the vehicle is on a toll road).

► Check the route settings in the "Navigation" menu.

I do not receive "Danger zone" alerts.

You have not subscribed to the online services option.

► If you have subscribed to the option:

- a few days may elapse before the service is activated,

- services may not be selected in the system menu,

- online services are not active ("TOMTOM TRAFFIC" not shown on the map).

The POIs do not appear.

The POIs have not been selected.

► Set the zoom level to 600 ft (200 m) or select POIs in the POI list.

The "Danger zone" audible warning feature is not working.

The audible warning is not active or the volume is too low.

► Activate the audible warning in the "Navigation" menu and check the voice volume in the sound settings.

The system does not suggest a detour around an incident on the route.

The route settings do not take account of TMC messages.

► Configure the "Traffic info" function in the route settings list (Without, Manual or Automatic).

I receive a warning about a "Danger area" that is not on my route.

As well as providing guided navigation, the system announces all "Danger areas" positioned in a cone located in front of the vehicle. It may provide an alert for "Danger areas" located on nearby or parallel roads.

► Zoom the map to show the exact location of the "Danger area". You can select "On the route" to stop receiving warnings or decrease the warning duration.

Certain traffic jams along the route are not indicated in real time.

On starting, a few minutes may elapse before the system begins to receive traffic information.

► Wait until traffic information is being received correctly (traffic information icons shown on the map).

In certain countries, only major routes (motorways, etc.) are listed for the traffic information.

This is perfectly normal. The system is dependent on the traffic information available.

The altitude is not displayed.

On starting, GPS initialisation may take up to 3 minutes to receive more than 4 satellites correctly.

► Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.

Depending on the geographical environment (tunnel, etc.) or the weather, the conditions of reception of the GPS signal may vary.

This behaviour is normal. The system is dependent on the GPS signal reception conditions.

My navigation is no longer connected.

During start-up and in certain geographical areas, the connection may be unavailable.

► Check that the online services are activated (settings, contract).

Radio

The reception quality of the tuned radio station gradually deteriorates or the station presets are not working (no sound, 87.5 MHz is displayed, etc.).

The vehicle is too far from the selected station's transmitter, or no transmitter is present in the geographical area.

► Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.

The aerial is missing or has been damaged (for example while entering a car wash or underground car park).

► Have the aerial checked by a dealer.

The environment (hills, buildings, tunnels, basement car parks, etc.) is blocking reception, including in RDS mode.

This is a perfectly normal phenomenon, and is not indicative of an audio system malfunction.

I cannot find some radio stations in the list of stations received.

The name of the radio station changes.

The station is no longer received or its name has changed in the list.

Some radio stations send other information in place of their name (the title of the song for example).

The system interprets these details as the station name.

► Press the "Update list" button in the "Radio stations" secondary menu.

Media

Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).

Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the cataloguing time).

► Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.

The CD is systematically ejected or is not played.

The CD is upside down, cannot be read, does not contain audio files or contains audio files of a format not recognised by the audio system.

► Check that the CD is inserted in the player the right way up.
 ► Check the condition of the CD: the CD cannot be played if it is too badly damaged.

The CD has been burned in a format that is not compatible with the player (udf, etc.).

► Check the content if it is a burned CD: consult the advice in the "AUDIO" section.

► The audio system CD player does not play DVDs.

The CD is protected by an anti-pirating system not recognised by the audio system.

► Due to poor quality, certain burned CDs will not be played by the audio system.

There is a long waiting period following the insertion of a CD or connection of a USB memory stick.

The system reads a variety of data (folder, title, artist, etc.). This can take from a few seconds to a few minutes.

This is perfectly normal.

The CD audio quality is poor.

The CD is scratched or of poor quality.

► Insert good quality CDs and store them in suitable conditions.

The audio settings (bass, treble, ambience) are unsuitable.

► Return bass and treble settings to 0, without selecting an ambience.

Some characters in the information about the media currently being played are not displayed correctly.

The audio system is unable to process certain types of character.

► Use standard characters to name tracks and folders.

Playback of files in audio streaming mode does not start.

The connected device does not automatically start playback.

► Start playback from the device.

The names of tracks and playing times are not displayed on the screen in audio streaming mode.

The Bluetooth profile does not allow the transfer of this information.

Telephone

I cannot connect my Bluetooth telephone.

The telephone's Bluetooth function may be switched off or the telephone may not be visible.

► Check that the telephone has Bluetooth switched on.

► Check in the telephone settings that it is "visible to all".

► Deactivate then reactivate the telephone's Bluetooth function.

The Bluetooth telephone is not compatible with the system.

► You can check that your telephone is compatible on the Brand's website (services).

The volume of the telephone connected in Bluetooth mode is inaudible.

The volume depends on both the system and the telephone.

► Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.

Ambient noise affects the quality of the telephone call.

► Reduce the ambient noise level (close windows, reduce ventilation, slow down, etc.).

Some contacts are duplicated in the list.

The options for synchronising contacts are: synchronise the contacts on the SIM card, the contacts on the telephone, or both. When both synchronisations are selected, some contacts may be duplicated.

► Select "Display SIM card contacts" or "Display telephone contacts".

The contacts are not listed in alphabetical order.

Some telephones offer display options.

Depending on the settings chosen, contacts can be transferred in a specific order.

► Modify the telephone directory display settings.

The system does not receive SMS.

SMS text messages cannot be sent to the system in Bluetooth mode.

Settings

When the treble and bass settings are changed, the ambience is deselected.

When the ambience is changed, the treble and bass settings are reset.

Selecting an ambience imposes the treble and bass settings, and vice versa.

► Modify the treble and bass or ambience settings to obtain the desired musical ambience.

When the balance settings are changed, the distribution is deselected.

When the distribution setting is changed, the balance settings are deselected.

Selecting a distribution setting imposes the balance settings, and vice versa.

► Modify the balance setting or the distribution setting to obtain the desired sound quality.

There is a difference in sound quality between audio sources.

To allow for optimal listening quality, the sound settings can be tailored to different audio sources, which can generate audible differences when changing source.

► Check that the sound settings are appropriate to the sources listened to. We recommend setting the sound functions (Bass:, Treble:, Balance) to the middle position, setting the musical ambience to "None", setting loudness correction to "Active" in USB mode and "Inactive" in Radio mode.

► In all cases, after applying sound settings, adjust the volume level on the portable device (to

a high level) first. Then adjust the volume level on the audio system.

When the engine is off, the system switches off after several minutes of use.

When the engine is switched off, the system's operating time depends on the state of charge of the battery.

The switch-off is normal: the system automatically goes into energy economy mode and switches off to maintain an adequate charge in the battery.

► Start the vehicle's engine to increase the charge of the battery.

The date and time cannot be set.

Setting of the date and time is only available if the synchronisation with the satellites is deactivated.

► Settings menu / Options / Time-Date setting. Select the "Time" tab and deactivate the "GPS synchronisation" (UTC).

Vehicle data recording and privacy

Electronic control units are installed in your vehicle. These control units process data received from the vehicle's sensors, for example, or data they generate themselves or exchange with each other. Some of these control units are required for the correct operation of your vehicle, some others assist you while driving (driving or manoeuvring aids), while others provide comfort or infotainment functions.

The following contains general information about how data is processed within the vehicle.

You will find additional information about the specific data which is downloaded, stored and transmitted to third parties and what it is used for in your vehicle under the keyword "Data protection". This information is directly associated with the references for the functions in question contained in the corresponding vehicle handbook, or in the general terms and conditions of sale.

This information is also available online.

Vehicle operating data

The control units process the data used for the operation of the vehicle.

This data includes, for example:

- Information about the state of the vehicle (e.g. speed, travel time, lateral acceleration, wheel rotation rate, fastened seat belts display).

- Environmental conditions (e.g. temperature, rain sensor, distance sensor).

As a general rule, this data is temporary, is not stored for longer than one operating cycle and is only used within the vehicle itself. The control units often record this data (including the vehicle's key). This function allows either the temporary or permanent storage of information about the state of the vehicle, stresses on components, servicing requirements, as well as events and technical errors.

Depending on the vehicle's equipment level, the data stored is as follows:

- Operating state of system components (e.g. filling level, tyre pressures, battery charge status).
- Faults and malfunctions in important system components (e.g. lamps, brakes).
- System reactions in specific driving situations (e.g. deployment of an airbag, triggering of stability control and braking systems).
- Information about events which have damaged the vehicle.
- For electric and rechargeable hybrid vehicles, the traction battery charge level and the estimated driving range.

In particular circumstances (e.g. if the vehicle has detected a malfunction), it may be necessary to record data which would otherwise simply not be stored.

When taking your vehicle in for servicing (e.g. repairs, maintenance), the stored operating data may be read along with the vehicle's

identification number and used if necessary.

The personnel working for the servicing network (e.g. garages, manufacturers) or third parties (e.g. roadside assistance agents) may read the vehicle's data. This also applies to work carried out under warranty and quality assurance measures.

This data is generally read via the OBD (On-Board Diagnostics) port fitted by law to the vehicle. It is used to report on the technical state of the vehicle or its components and facilitates the diagnosis of malfunctions, in compliance with warranty obligations and for quality improvement. This data, in particular the information relating to stress on components, technical events, operator errors and other malfunctions, is sent to the Manufacturer, if necessary, along with the vehicle's identification number. The Manufacturer's liability may also be engaged. The Manufacturer may also use the operating data taken from the vehicle for product recalls. This data may also be used to check the customer's warranty and any claims made under warranty.

Any malfunctions stored in the vehicle may be reset by an after-sales service company during servicing or repair work, or at your request.

Comfort and infotainment functions

Comfort settings and personalised settings may be saved in the vehicle and modified or reinitialised at any time.

Depending on the vehicle's equipment level, this may include:

- Seat and steering wheel position settings.
- Chassis and air conditioning settings.
- Personalised settings such as the interior lighting.

You can enter your own data into the functions of your vehicle's audio and telematic system, as part of the selected functionalities.

Depending on the vehicle's equipment level, this may include:

- Multimedia data such as music, videos or photos to be read by an integrated multimedia system.
- Address book data to be used with an integrated hands-free system or with an integrated navigation system.
- Entered destinations.
- Data regarding the use of online services.

This data for the comfort and infotainment functions may be stored locally in the vehicle or saved to a device that you have connected to the vehicle (e.g. smartphone, USB memory stick or MP3 player). Data that you have entered yourself may be deleted at any time.

This data may also be transmitted outside the vehicle at your request, particularly when using

online services in line with the settings that you have selected.

Smartphone integration (e.g. Android Auto® or Apple® CarPlay®)

If your vehicle is equipped accordingly, you can connect your smartphone or another mobile device to the vehicle in order to operate it using the vehicle's integrated controls. Images and sounds from the smartphone can be transmitted through the audio and telematics system.

Specific information is simultaneously sent to your smartphone. Depending on the type of integration, this includes data such as location, day/night mode and other general information about the vehicle. For more information, please refer to the user instructions for the vehicle or the audio and telematics system.

Integrating a smartphone allows you to use its applications, such as a navigation app or music player. No other integration between the smartphone and the vehicle is possible, in particular active access to vehicle data. How the data is processed subsequently is determined by the supplier of the application being used. The ability the change settings depends on the application in question and on the operating system installed on your smartphone.

Online services

If your vehicle is connected to a wireless network, data can be exchanged between your vehicle and other systems. Connection to a wireless network is made possible via a transmitter located in your vehicle or a mobile device that you have provided (e.g. smartphone). The online services can be used via this wireless connection. These include online services and applications (apps) provided to you by the Manufacturer or other suppliers.

Exclusive services

As regards the Manufacturer's online services, the corresponding functions are described by the Manufacturer in an appropriate medium (e.g. handbook, Manufacturer's website) and the information about data protection is provided. Personal data may be used for online services. The exchange of data for this purpose takes place over a secure connection, using for example the Manufacturer's dedicated computer systems. The collection, processing and use of personal data for the development of services are carried out solely on the basis of a legal authorisation, for example in the case of a legal emergency call system or a contractual agreement or else under a consent agreement. You can activate or deactivate the services and functions (some may be chargeable) and, in some cases, the vehicle's entire connection to the wireless network. This does not include the

statutory functions and services such as the emergency or assistance call system.

Third-party services

If you use online services provided by other (third-party) suppliers, these services are subject to the responsibility, the data protection and the terms and conditions of use of the supplier in question. The Manufacturer often has no influence over the content exchanged in this regard.

Please therefore ensure that you are aware of the nature, extent and purpose of the collection and use of personal data as part of the third-party services provided by the service provider in question.

-
- A**
- ABS 38
 - Accessories 37
 - AdBlue® 70
 - AdBlue® tank 72
 - Additive, Diesel 78–79
 - Adjusting headlamps 35
 - Adjusting head restraints 23
 - Adjusting seat 23–24
 - Adjusting the date 14, 123, 145
 - Adjusting the headlamp beam height 35
 - Adjusting the height and reach of the steering wheel 25
 - Adjusting the time 14, 122, 145
 - Advice on care and maintenance 81
 - Advice on driving 6, 51–52
 - Airbags 41–43, 45
 - Airbags, curtain 42
 - Airbags, front 42–43, 45
 - Airbags, lateral 42–43
 - Air conditioning 26
 - Air conditioning, electronic (with display screen) 28–29
 - Air conditioning, manual (without display screen) 27
 - Air vents 26
 - Alarm 21–22
 - Anti-lock braking system (ABS) 38
 - Antitheft / Immobiliser 18
 - Armrest, front 30–31
 - Ashtray, portable 30
- Assistance, emergency braking 38
- Audio streaming (Bluetooth) 106–107, 118, 139
-
- B**
- Battery 92
 - Battery, 12 V 73, 79, 92–94
 - Battery, charging 92–93
 - Battery, remote control 19
 - Blanking screen (snow shield) 74–75
 - BlueHiD 79, 83
 - Bluetooth (hands-free) 106, 120, 140–141
 - Bluetooth (telephone) 120–121, 140–142
 - Bodywork 81
 - Bonnet 76
 - Boot 20–21
 - Boot (opening) 17
 - Brake discs 80
 - Brake lamps 90
 - Brakes 80
 - Braking assistance system 38
 - Brightness 122
 - Bulbs (changing) 87–88, 90
-
- C**
- Cable, audio 139
 - Cable, Jack 139
 - Capacity, fuel tank 69
 - Care of the bodywork 81
 - CD 104, 139
 - CD, MP3 104, 139
 - Central locking 18
 - Changing a bulb 87–88, 90
 - Changing a fuse 91
 - Changing a wheel 84
 - Changing a wiper blade 35–36
 - Changing the remote control battery 19
 - Changing to free-wheeling 80
 - Checking the levels 77–78
 - Checks 76–77, 79–80
 - Checks, routine 79–80
 - Child lock 46, 49–50
 - Children 40, 46–49
 - Children (safety) 50
 - Child seats 40, 43–46
 - Child seats, conventional 45
 - Child seats, ISOFIX 47–49
 - Cigar lighter 31
 - Cleaning (advice) 81–82
 - Clock 14
 - Closing the boot 20–21
 - Closing the doors 20
 - Connection, Apple CarPlay 119, 134
 - Connection, Bluetooth 120–121, 136–137, 140–142
 - Connection, MirrorLink 119, 135
 - Connection, Wi-Fi network 137
 - Container, AdBlue® 71–72
 - Control, emergency boot release 21
 - Control, emergency door 19

Control stalk, lighting 33
 Control stalk, wipers 35
 Courtesy lamps 32
 Cruise control 64–66

D

DAB (Digital Audio Broadcasting) -
 Digital radio 117, 138–139
 Date (setting) 14, 123, 145
 Daytime running lamps 34, 88
 Deactivating the passenger airbag 42, 45
 Defrosting 26–27, 29
 Defrosting, front 29
 Defrosting, lower windscreen 29
 Defrosting, rear screen 29–30
 Demisting 26–27
 Demisting, front 29
 Demisting, rear 30
 Dimensions 100
 Dipstick 77
 Direction indicators (turn signals) 34, 88, 90
 Doors 20
 Driving 51–52
 Driving aids (recommendations) 62
 Driving economically 6
 Dynamic stability control (DSC) 38–39

E

EBFD 38
 Eco-driving (advice) 6
 Electric windows 22
 Electronic brake force distribution (EBFD) 38
 Emergency braking assistance (EBA) 38
 Emergency warning lamps 37, 83
 Emissions control system, SCR 70
 Energy economy (mode) 73
 Energy economy mode 73
 Engine compartment 76–77
 Engine, Diesel 69, 77, 83, 99
 Engine, petrol 76, 98
 Engines 97–99
 Environment 6, 19
 ESC (electronic stability control) 38

F

Filling the AdBlue® tank 72, 79
 Filling the fuel tank 69–70
 Filter, air 79
 Filter, oil 79
 Filter, particle 78–79
 Filter, passenger compartment 26, 79
 Fitting a wheel 85–86
 Fitting roof bars 75
 Fittings, interior 30
 Flap, fuel filler 69–70
 Flashing indicators 34, 88

Fluid, brake 78
 Fluid, engine coolant 78
 Foglamp, rear 33, 90
 Foglamps, front 33, 90
 Folding the rear seats 24
 Frequency (radio) 138
 Fuel 6, 69
 Fuel consumption 6
 Fuel level, low 69
 Fuel (tank) 69–70
 Fuses 91

G

Gauge, fuel 69
 Gearbox, automatic 55–57, 80, 92
 Gearbox, manual 55, 80
 Gear lever, automatic gearbox 57
 Gear lever, manual gearbox 55
 Gear shift indicator 58
 Glove box 30
 G.P.S. 132

H

Hazard warning lamps 37, 83
 Headlamps (adjustment) 35
 Headlamps, dipped beam 88–89
 Headlamps, halogen 88
 Headlamps, main beam 88–89

Head restraints, front	23
Head restraints, rear	24–25
Heating	26–29
Hill start assist	54–55
Horn	38

I	
Ignition	142
Immobiliser, electronic	52
Indicators, direction	34, 88
Indicator, service	11
Inflating tyres	80, 101
Information, vehicle	149
Infrared camera	62
Input, auxiliary	105
Instrument panel	7, 63
Internet browser	134
ISOFIX mountings	47, 49

J	
Jack	84, 139
Jump starting	93

K	
Key	17–19
Key, electronic	17

Key with remote control	17, 53
Kit, hands-free	106, 120, 140–141
Kit, temporary puncture repair	83
Klaxon	38

L	
Labels, identification	100
Leather (care)	82
LEDs - Light-emitting diodes	34, 88
Level, AdBlue®	79
Level, brake fluid	78
Level, Diesel additive	78–79
Level, engine coolant	78
Level, engine oil	77
Levels and checks	76–78
Level, screenwash fluid	35, 78
Light-emitting diodes - LEDs	34, 88
Lighting, exterior	33
Lighting, guide-me home	34
Lighting, interior	32
Loading	75
Load reduction mode	74
Locating your vehicle	18
Locking	18
Locking from the inside	18
Locking the doors	18–19

M	
Maintenance (advice)	81
Maintenance, routine	63, 79
Manoeuvring aids (recommendations)	62
Map reading lamps	32
Markings, identification	100
Mat	63
Menu	119
Menu, main	103
Menus (audio)	114–115, 127–128
Messages	142
Messages, quick	143
Mirror, rear view	26
Mirrors, door	25–26, 30
Misfuel prevention	70
Mountings, ISOFIX	47, 49
MP3 CD	104

N	
Number plate lamps	91

O	
Obstacle detection	66
Oil change	77
Oil consumption	77
Oil, engine	77
On-board tools	83

Opening the bonnet 76
 Opening the boot 17, 20–21
 Opening the doors 17, 20

P

Pads, brake 80
 Paint 81, 100
 Paint colour code 100
 Parking brake 54, 80
 Parking sensors, audible and visual 66
 Plates, identification 100
 Player, Apple® 118, 140
 Player, MP3 CD 104, 139
 Player, USB 104, 117, 139
 Port, USB 31, 104–105, 117–118, 139
 Pressures, tyres 80, 101
 Pre-tensioning (seat belts) 40
 Priming pump 83
 Priming the fuel system 83
 Profiles 121, 144
 Protecting children 42–49
 Puncture 84

R

Radio 103, 115–116, 137–139
 Radio, digital (Digital Audio
 Broadcasting - DAB) 117, 138–139
 Range, AdBlue® 79

RDS 116, 138
 Reading lamps 32
 Rear bench seat 24
 Rear screen (demisting) 29–30
 Recharging the battery 92–93
 Recorder, trip distance 13
 Reduction of electrical load (mode) 74
 Regeneration of the particle filter 79
 Reinitialising the remote control 20
 Reinitialising the under-inflation
 detection system 61
 Reminder, key in ignition 54
 Reminder, lighting on 33
 Remote control 17–19, 52
 Removing a wheel 85–86
 Replacing bulbs 87–88, 90
 Replacing fuses 91
 Replacing the air filter 79
 Replacing the oil filter 79
 Replacing the passenger
 compartment filter 79
 Reservoir, screenwash 78
 Resetting the trip recorder 13
 Reversing camera 62, 67
 Reversing lamps 90
 Roof bars 63–64
 Running out of fuel (Diesel) 83

S

Safety, children 42–45, 47–48

Saturation of the particle filter (Diesel) 79
 Screen, cold climate 74
 Screen menu map 119
 Screen, multifunction (with audio system) 103
 Screens, very cold conditions 75
 Screenwash 35
 Screenwash, front 35
 SCR (Selective Catalytic Reduction) 70
 Seat belts 39–40, 45
 Seat belts, rear 40
 Seats, front 23
 Seats, rear 24, 44
 Sensors (warnings) 62
 Serial number, vehicle 100
 Servicing 11, 79
 Settings, system 122, 144
 Shield, snow 74
 Sidelamps 34, 88–90
 Side repeater (turn signal) 90
 Snow chains 61, 73
 Snow screen 74
 Socket, 12 V accessory 31
 Socket, auxiliary 105, 117, 139
 Socket, Jack 31, 105, 139
 Sockets, audio 31, 105
 Speed limiter 63–64
 Speedometer 63
 Stability control (ESC) 38
 Starting a Diesel engine 69
 Starting the vehicle 53–54, 57
 Starting using another battery 93
 Station, radio 103, 115–116, 137–138

Stay, engine bonnet 76
 Steering mounted controls,
 audio 102, 113, 126
 Steering wheel (adjustment) 25
 Stickers, customising 82
 Stopping the vehicle 53–54, 57
 Stop & Start 16, 27, 29, 58–60, 69, 75, 79, 95
 Storage 30–31
 Sunshine sensor 26
 Sun visor 30
 Switch, ignition 53–54
 Synchronising the remote control 20

T

Tables of engines 98–99
 Tank, fuel 69–70
 Technical data 98–99
 Telephone 107, 120–121, 140–143
 Third brake lamp 91
 Time (setting) 14, 122, 145
 TMC (Traffic info) 132
 Tools 83, 84
 Topping-up AdBlue® 72
 Top Tether (fixing) 47
 Total distance recorder 13
 Towbar 74
 Towed loads 97
 Towing 95–96
 Towing another vehicle 96
 Towing the vehicle 95–96

Traction control (ASR) 38–39
 Traffic information (TA) 103
 Traffic information (TMC) 132
 Trailer 74, 98–99
 Trajectory control systems 38
 Triangle, warning 83
 Trip computer 14–16
 Tyres 80, 101
 Tyre under-inflation detection 60–62

U

Under-inflation (detection) 60
 Unlocking 17
 Unlocking from the inside 18
 Unlocking the boot 17
 Unlocking the doors 18–19
 Updating the date 123, 145
 Updating the time 122, 145
 USB 104, 117–118, 139

V

Vehicle data recording and privacy 149
 Ventilation 26–29
 Voice commands 128–130

W

Warning and indicator lamps 7
 Warning lamp, driver's
 seat belt not fastened 40
 Warning lamps 7
 Warning lamp, seat belts 40
 Warnings and indicators 7–8
 Washing 63
 Washing (advice) 81–82
 Weights 97
 Wheel, spare 80, 83–85
 Windscreen, bottom of heated 29
 Windscreen, heated 29
 Wiper blades (changing) 35–36
 Wipers 35

Automobiles CITROËN declares, in accordance with the provisions of European legislation (Directive 2000/53) relating to End-of-Life Vehicles, that it achieves the objectives set by this legislation and that recycled materials are used in the manufacture of the products that it sells.

Reproducing and translating this document, even partially, is strictly prohibited without written authorisation from Automobiles CITROËN.

4DCONCEPT
Groupe MAURY Imprimeur



Printed in the EU
05-22

Automobiles CITROËN

Siège social : 2-10, boulevard de l'Europe - 78300 POISSY

www.citroen.com

Société anonyme au capital de 159 000 000 € - R.C.S. VERSAILLES : 642 050 199



ANG. 22ELY.0040

