

Wiring Diagram

How to use this wiring diagram	50 : 2 (O)	Headlights cleaner	50 : 22 (E)
Symbol in this wiring diagram	50 : 5 (O)	Tail lights	50 : 22 (E)
Parts index	50 : 6 (PI)	Illumination lights	50 : 22 (E)
Electrical wiring schematic	50 : 8 (W-1)	Glove box light	50 : 22 (E)
[For 12A Engine]		Front & rear side marker lights	50 : 22 (E)
Electrical wiring schematic	50 : 9 (W-2)	Storage box lights	50 : 22 (E)
[For 13B Engine]		License lights	50 : 22 (E)
Starting system [For 12A Engine]	50 : 10 (A-1)	Turn & hazard flasher lights	50 : 24 (F)
Sub-zero motor [For 12A Engine]	50 : 10 (A-1)	Horn	50 : 24 (F)
Charging system [For 12A Engine]	50 : 10 (A-1)	Back-up lights	50 : 24 (F)
Hot start motor [For 12A Engine]	50 : 10 (A-1)	Stop lights	50 : 24 (F)
Over drive system (For A/T)	50 : 10 (A-1)	Air conditioner	50 : 26 (G-1)
[For 12A Engine]		Air conditioner [For U.S.A. air con.]	50 : 28 (G-2)
Kick down solenoid (For A/T)	50 : 10 (A-1)	Lights off reminder buzzer	50 : 30 (H)
[For 12A Engine]		Door lock cylinder & ignition key	50 : 30 (H)
Starting system [For 13B Engine]	50 : 12 (A-2)	cylinder lights	
Charging system [For 13B Engine]	50 : 12 (A-2)	Ignition key reminder buzzer	50 : 30 (H)
Sub-zero motor [For 13B Engine]	50 : 12 (A-2)	Interior & spot lights	50 : 30 (H)
Emission control system	50 : 14 (B-1)	Auto clock	50 : 30 (H)
[For 12A Engine]		Luggage compartment light	50 : 30 (H)
Fuel pump [For 12A Engine]	50 : 14 (B-1)	Seat belt warning buzzer	50 : 30 (H)
Ignition system [For 12A Engine]	50 : 14 (B-1)	Glass hatch release solenoid	50 : 32 (I)
E.G.I. & emission control system	50 : 16 (B-2)	Fuel-door release solenoid	50 : 32 (I)
[For 13B Engine]		Power window	50 : 32 (I)
Ignition system [For 13B Engine]	50 : 16 (B-2)	Remote control mirror	50 : 32 (I)
Fuel pump [For 13B Engine]	50 : 16 (B-2)	Cigarette lighter	50 : 32 (I)
Meters & warning lights	50 : 18 (C)	Audio system	50 : 34 (J)
Wiper & washer	50 : 20 (D)	Power antenna	50 : 34 (J)
Rear window defroster	50 : 20 (D)	Cruise control system	50 : 36 (K)
Headlights	50 : 22 (E)	Power steering control solenoid	50 : 36 (K)
Front parking lights	50 : 22 (E)	Common connector list	50 : 37 (X)
Headlights retractable system	50 : 22 (E)		


50-0 HOW TO USE THIS WIRING DIAGRAM

HOW TO USE THIS WIRING DIAGRAM



The complete electrical system is divided into charging system, ignition system, etc.

Each system is shown on both right and left pages as described below.

When reading the wiring diagram, following should be noted:

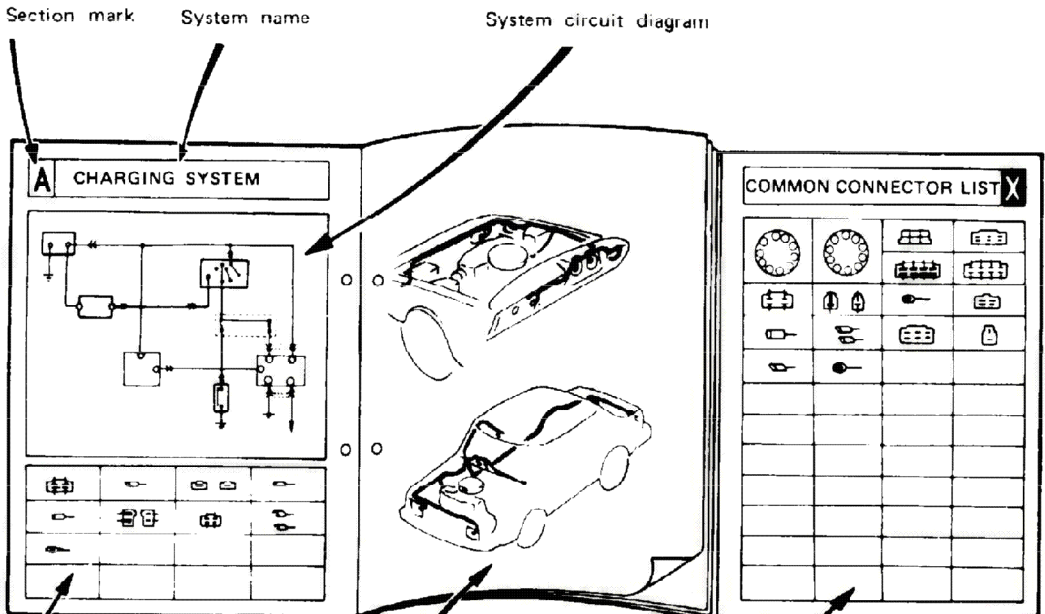

- Connector diagram identifies the exclusive applicable connectors for the circuit.
- Right page illustrates the actual location of each connector and the routing diagram of the harness.
- The last page, "Section X", illustrates common connectors related to each system.

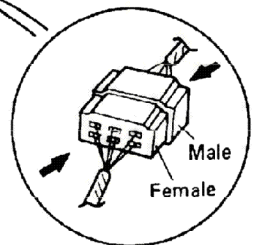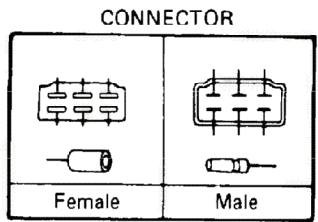


Way to look at Connector


WIRING COLOR CODE

Wiring color code is indicated with alphabetical letter/s. The first letter indicates the basic color of the wire, and second letter (if any) indicates that the color of the stripe.



CODE	COLOR	CODE	COLOR
B	Black	Lg	Light green
Br	Brown	O	Orange
G	Green	R	Red
L	Blue	Y	Yellow
Lb	Light blue	W	White

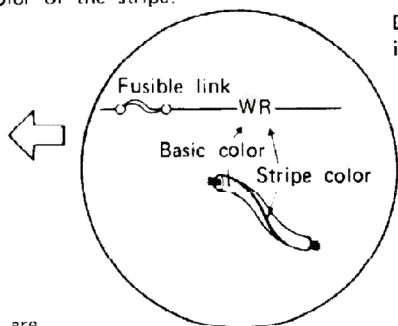

Direction of current is shown by the arrow



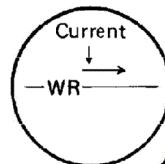


CONNECTOR

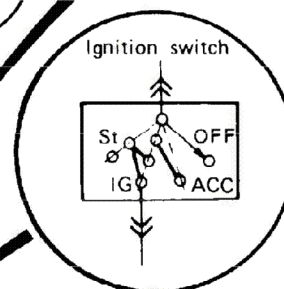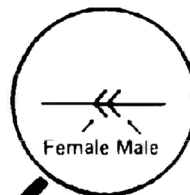

Circuit is shown with the ignition switch off.


The same fusible link and fuses are indicated on each page.

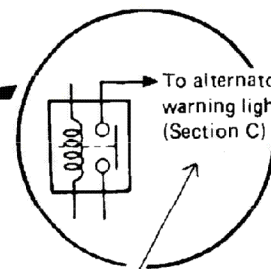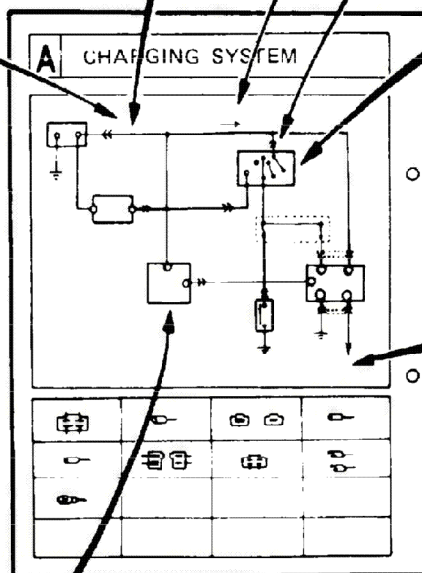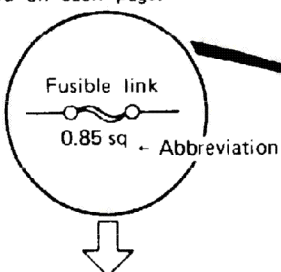

Legend in the parenthesis () indicates the reference section.

ABBREVIATIONS USED IN THIS BOOKLET

Abbr.	Term	Abbr.	Term
St	Start	A	Ampere
IG	Ignition	W	Watt
ACC	Accessory	R	Resistance
AS	Auto stop	Tr	Transistor
INT	Intermittent	M	Motor
Lo	Low	SW	Switch
Mi	Middle	Sq	Square per millimeter
Hi	High	A/T	Automatic transmission
R.H.	Right hand	M/T	Manual transmission
L.H.	Left hand	NO	Normal opened
F.R	Front right	NC	Normal closed
F.L	Front left		
R.R	Rear right		
R.L	Rear left		
V	Volt		

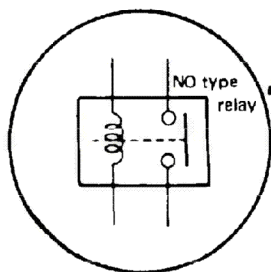

The relays and switches are identified as NC (normal closed), or NO (normal opened), to indicate their normal position when they are not in operation.


	Relay		Switch	
	NO type relay	NC type relay	NO switch	NC switch
Not in operation				
In operation				

50-0 HOW TO USE THIS WIRING DIAGRAM


HARNESS SYMBOLS

Each harness is distinguished by a symbol to indicate to which harness belong a wiring and connector in circuit diagrams and connector charts.

DESCRIPTION OF HARNESS	SYMBOL	DESCRIPTION OF HARNESS	SYMBOL
Front harness	[F]	Hand brake harness	[HB]
Engine harness	[E]	No. 1 Door harness	[Dr1]
Instrument panel harness	[I]	No. 2 Door harness	[Dr2]
Rear harness	[R]	Audio harness	[Au]
Transmission harness	[M]	Air conditioner harness	[A]

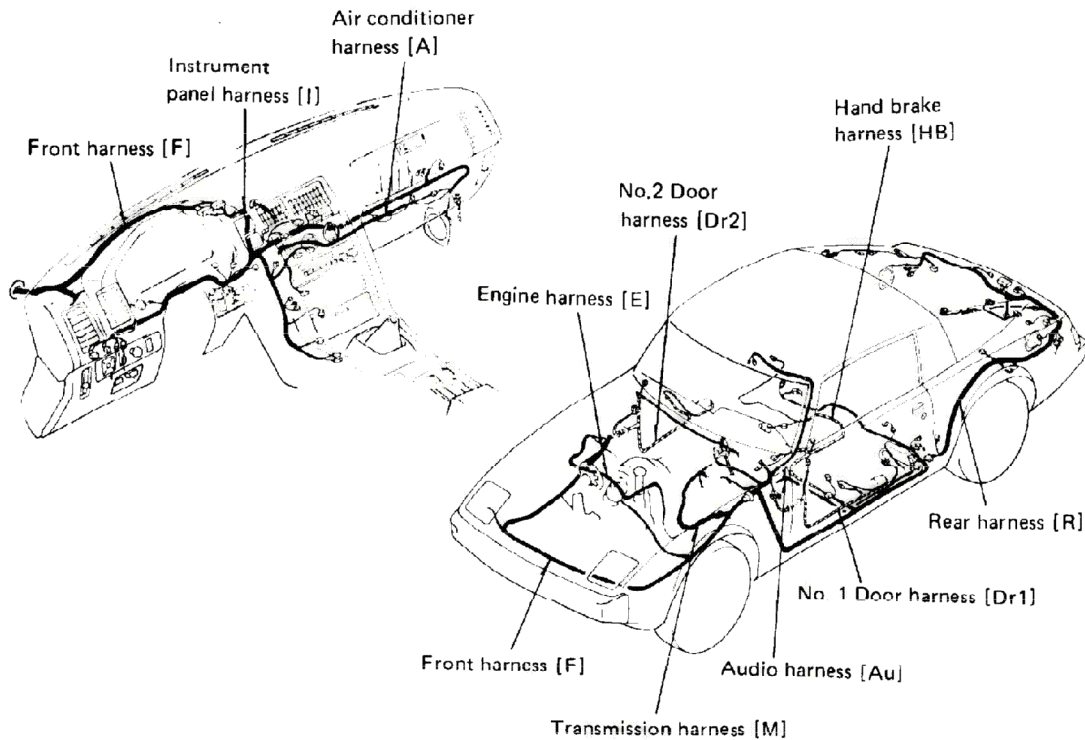


EXAMPLE OF CIRCUIT DIAGRAM

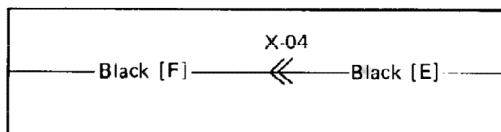

- * It is seen from the above that the male-side black line of the X-04 shows the engine harness and the female-side black line shows the front harness.
- * It is seen from the above that the X-04 connector is a connector connecting the engine and the front.

EXAMPLE OF CONNECTOR

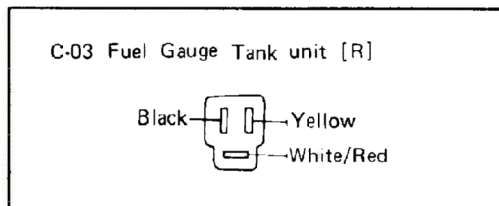
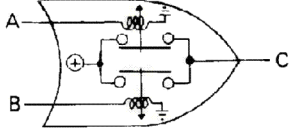
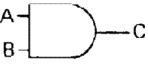
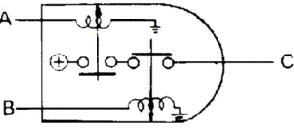
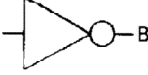
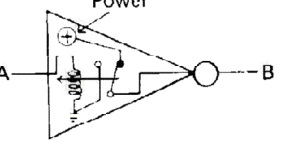

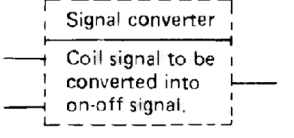


- * It is seen from the above that this connector (C-03) is on the Rear harness.

 






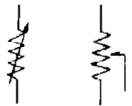
 





 
 


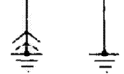

SYMBOLS IN THIS WIRING DIAGRAM

LOGICAL SYMBOLS

The logical symbols are of four kinds : OR, AND, INV. (Inverter), PROCESS.
The circuit operation can be easily read by understanding these symbols.
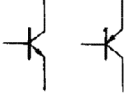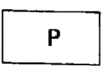
<p>OR</p> 	<p>In case of input to either A or B, an output comes out from C. When A and B are off (0V), C is off (0V). When either A or B is on (12V), C is on (12V). This can be simply shown in the relay circuit on the right-hand side.</p>	
<p>AND</p> 	<p>In case of input to both A and B, an output comes out from C. When A and B are on (12V), C is on (12V). When either A or B is off (0V), C is off (0V). This can be simply shown in the relay circuit on the right-hand side.</p>	
<p>INV. (Inverter)</p> 	<p>In case of input to A, B is grounded. When A is off (0V), B is on (12V). When A is on (12V), B is off (0V). This can be simply shown in the relay circuit on the right-hand side.</p>	
<p>PROCESS</p> 	<p>PROCESS makes a simplified representation of complicated functions of the circuit. Functions mainly used: 1. Detection of signals 2. Conversion of signals The process of the full transistor ignition control unit is as shown in the right-hand figure.</p>	

GRAPHIC SYMBOLS

				
Battery	Ground	Fuse	Fusible link	Motor
				
Coil solenoid	Resistance	Variable resistance	Thermister	Diode
				
Condenser	Transistor	Pump	Lamp	Horn
				
Speaker	Cigar lighter	Heater	Illuminated Diode	Zener Diode

PI	PARTS INDEX
----	-------------

PARTS	SECTION	PARTS	SECTION
Actuator solenoid valve	K	Fresh-Rec control motor	G-1, G-2
A.C.V.	B-2	Front amp.	I
A.C.V. relay	B-2	Front combination light	E, F
Air con. solenoid valve	B-1	Front side marker light	E
Air con. switch	G-1, G-2	Front speaker	J
Air flow meter	B-2	Front warning temp. switch	G-1, G-2
Air supply valve	B-2, G-1, G-2	Fuel-door release solenoid	I
Air temp. sensor	B-2	Fuel-door release switch	I
Air vent solenoid valve	B-1	Fuel gauge tank unit	C
Alternator	A-1, A-2	Fuel pump	B-1, B-2
A.P.L. solenoid valve	B-1	Fuel pump cut relay	B-1
A/T control unit	A-1	Fusible link	A-1 ~ K
Auto clock	H		
		Glass hatch release solenoid	I
Back-up light switch	F	Glass hatch release switch	I
Battery	A-1 ~ K	Glove box light	E
Blower control switch	G-1, G-2	Glove box light switch	E
Blower motor	G-1, G-2		
Brake fluid level switch	C	Headlight	E
Brake light warning checker	C	Headlight cleaner motor	E
		Heat hazard sensor	B-1, B-2
Carburetor heater	B-1	Horn	F
Central processing unit	D, F, H	Horn relay	F
Check connector	B-1	Horn switch	F
Choke & check relay	A-1, A-2	Hot start motor	A-1
Choke switch & magnet	B-1	Hot start relay	A-1
Cigarette lighter	I		
Circuit opening relay	B-2	ID. richer solenoid valve	B-1
Cluster switch	D, E, F	Igniter	B-1, B-2
Clutch switch	B-1, B-2	Ignition coil	B-1, B-2
Combination meter	C	Ignition key cylinder light	H
Combination switch		Ignition key reminder switch	H
Coast switch	K	Ignition switch	A-1, K
Light switch	E	Illumination light	
Resume switch	K	Ashtray	E
Waher switch	D	Bower fan switch	E
Wiper switch	D	Cigarette lighter	E
Condenser	B-1, B-2	Select lever	E
Control unit	B-2	Temp. control switch	E
Coolant level sensor	C	Inhibitor switch	A-1, F
Coolant level unit	C	Injector	B-2
Cruise control main switch	K	Instrument panel light control	E
Cruise control unit	K	Interior & spot light	H
Diode	A-1, E, G-1, G-2, K	Kick down relay	A-1
Door lock cylinder light	H	Kick down solenoid	A-1
Door switch	H	Kick down switch	A-1
Door handle switch	H		
		License light	E
E.G.I. & emission control unit	B-2	Luggage compartment light	H
Electric tuner & stereo deck	J	Luggage compartment light switch	H
Emission control unit	B-1		
Equalizer	J	Magnet clutch	G-1, G-2
		Main relay	B-2
Fail check connector	B-2	Mode control motor	G-1, G-2

PARTS INDEX	PI
--------------------	-----------

PARTS	SECTION	PARTS	SECTION
Mode control unit	G-1, G-2	Seat belt switch.	H
Neutral switch	B-1, B-2	Setting connector	B-2
No. 1 air con. relay	G-1, G-2	Short connector	B-1
No. 2 air con. relay	G-1, G-2	Short connector of fuel pump	B-2
No. 2 M. A. B. valve	B-1	Shutter solenoid valve	B-1
No. 1 water temp. switch	B-1	Side marker light.	E
No. 2 water temp. switch	B-1	Speaker cord	J
Oil level sensor	C	Starting motor	A-1, A-2
Oil pressure gauge unit	C	Stereo deck	J
Oscillator.	C	Stop light.	F
O ₂ sensor.	B-1, B-2	Stop light checker	F
O ₂ sensor check connector	B-2	Stop light switch	F
Over drive cancel solenoid.	A-1	Stop switch	K
Over drive switch.	A-1	Storage box light.	E
Over top switch.	B-2	Storage box light switch	E
Parking brake switch	C	Sub-zero motor.	A-1, A-2
Port air switching valve	B-1	Sub-zero sensor.	A-1, A-2
Power antenna motor.	J	Switching solenoid valve	B-1, B-2
Power antenna relay.	J	Tail light	E
Power steering control solenoid	K	Thermo sensor	B-1
Power steering control unit	K	Throttle sensor	B-1, B-2
Power steering oil pressure switch.	G-1, G-2	Transmission oil pressure switch.	C
Power window motor.	I	Turn & hazard flasher light	F
Power window switch.	I	Turn switch	F
P.R.C.	B-2	Vacuum control solenoid valve.	B-1, B-2
Rear amp.	J	Vacuum pressure sensor	B-2
Rear combination light.	F, E	Vacuum switch	B-1, B-2
Rear side marker light	E	Vacuum switch solenoid	B-2
Rear speaker.	J	Variable resistor	B-2
Rear washer motor	D	V.S.V.	B-2
Rear wiper motor	D	Washer fluid level sensor	C
Rear window defroster	D	Washer motor	D
Refrigerant pressure switch	G-1, G-2	Water temp. sensor	B-2
Relief solenoid valve	B-1, B-2	Water temp. switch	B-2
Remote control mirror	I	Water temp. gauge unit.	C
Remote control mirror switch	I	Wiper motor.	D
Resistor.	G-1, G-2		
Retractable headlight motor	E		

50 WIRING DIAGRAM

W

-1

For 12A Engine

ELECTRICAL WIRING SCHEMATIC


— CURRENT FROM BATTERY

- - - CURRENT FROM IG1 TERMINAL OF IGNITION SWITCH

· · · CURRENT FROM IG2 TERMINAL OF IGNITION SWITCH

— · — CURRENT FROM ACC TERMINAL OF IGNITION SWITCH

— · · — OTHERS

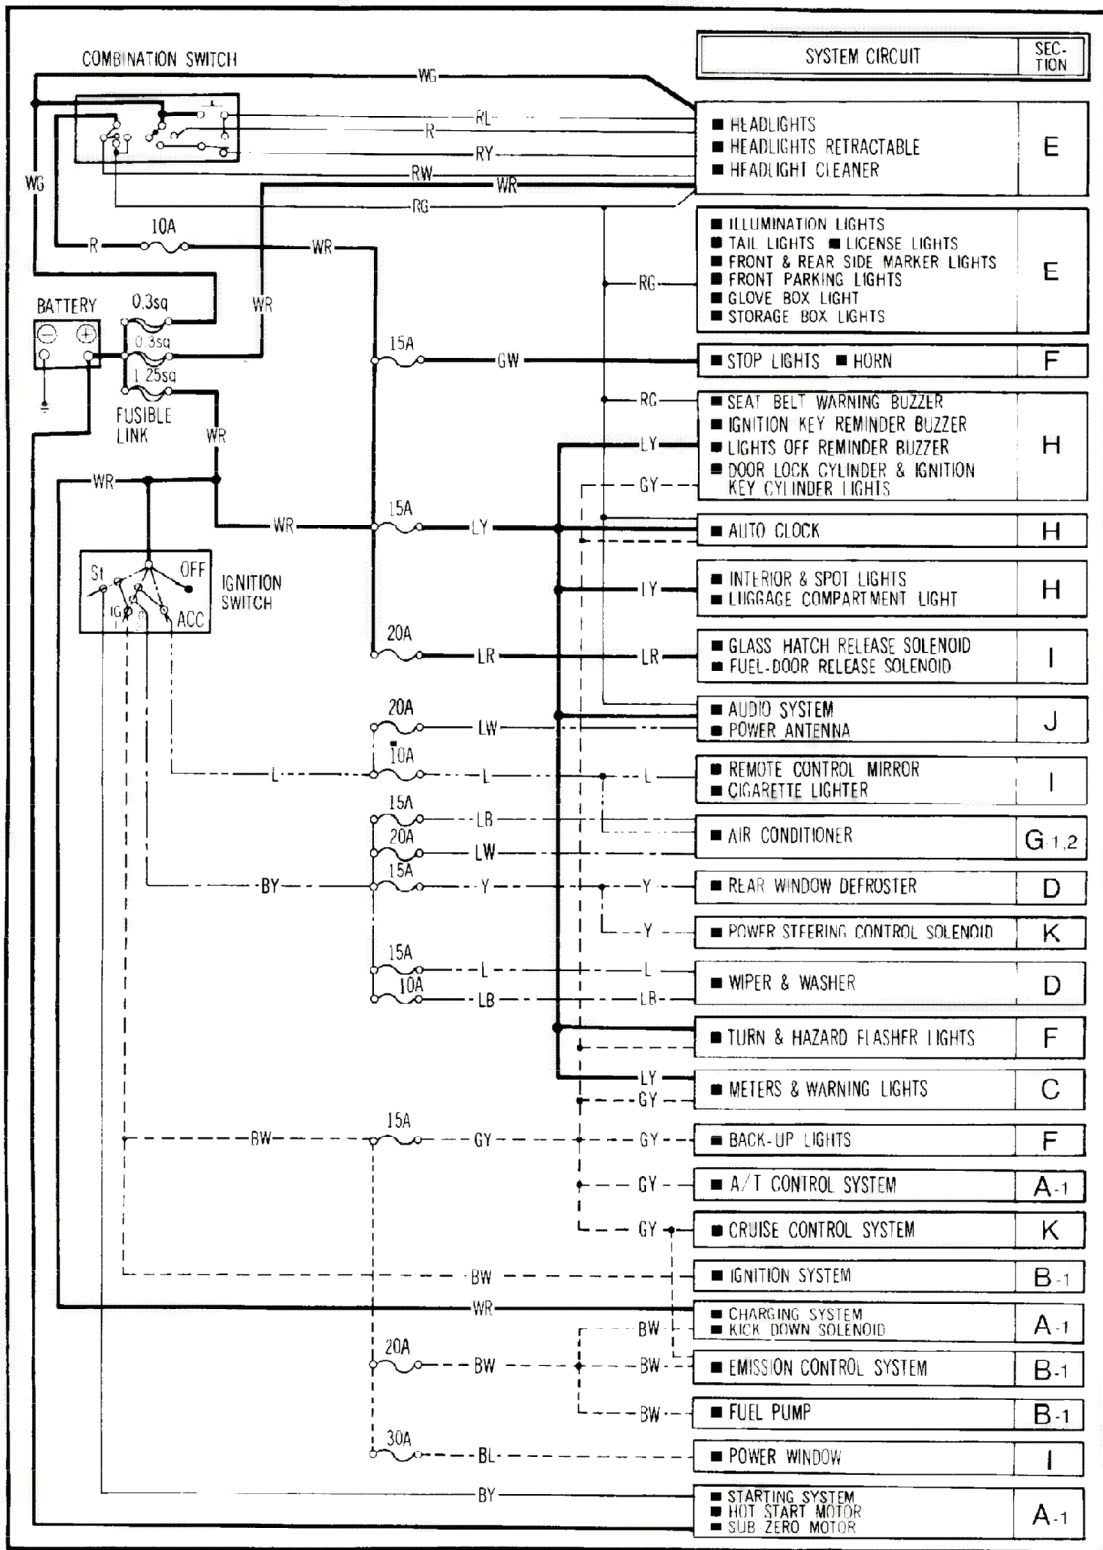


For 13B Engine

ELECTRICAL WIRING SCHEMATIC

——— CURRENT FROM BATTERY
 - - - - - CURRENT FROM IG1 TERMINAL OF IGNITION SWITCH
 - · - · - CURRENT FROM IG2 TERMINAL OF IGNITION SWITCH
 - · - · - CURRENT FROM ACC TERMINAL OF IGNITION SWITCH
 - - - - - OTHERS


W-2

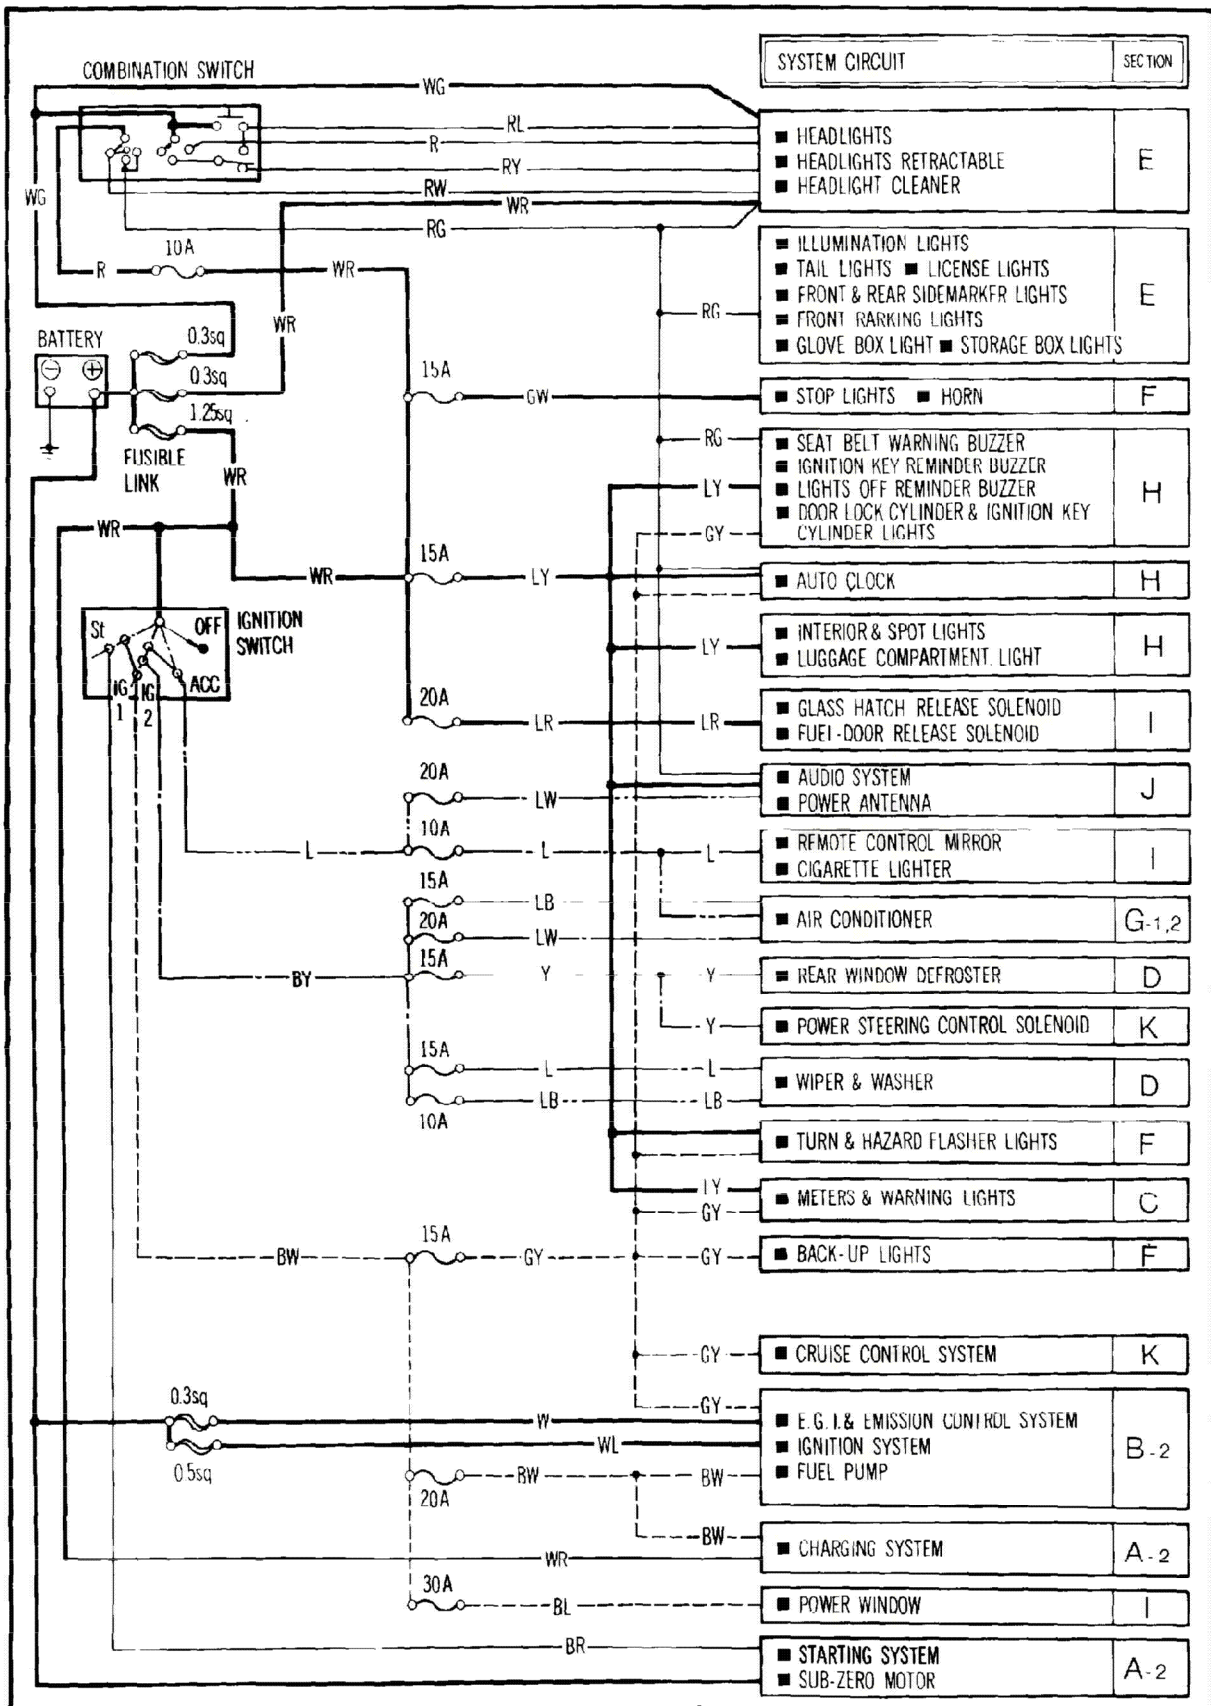

A-1


For 12A Engine

- STARTING SYSTEM
- SUB-ZERO MOTOR
- A/T CONTROL SYSTEM (For A/T)
- CHARGING SYSTEM
- HOT START MOTOR
- KICK DOWN SOLENOID (For A/T)

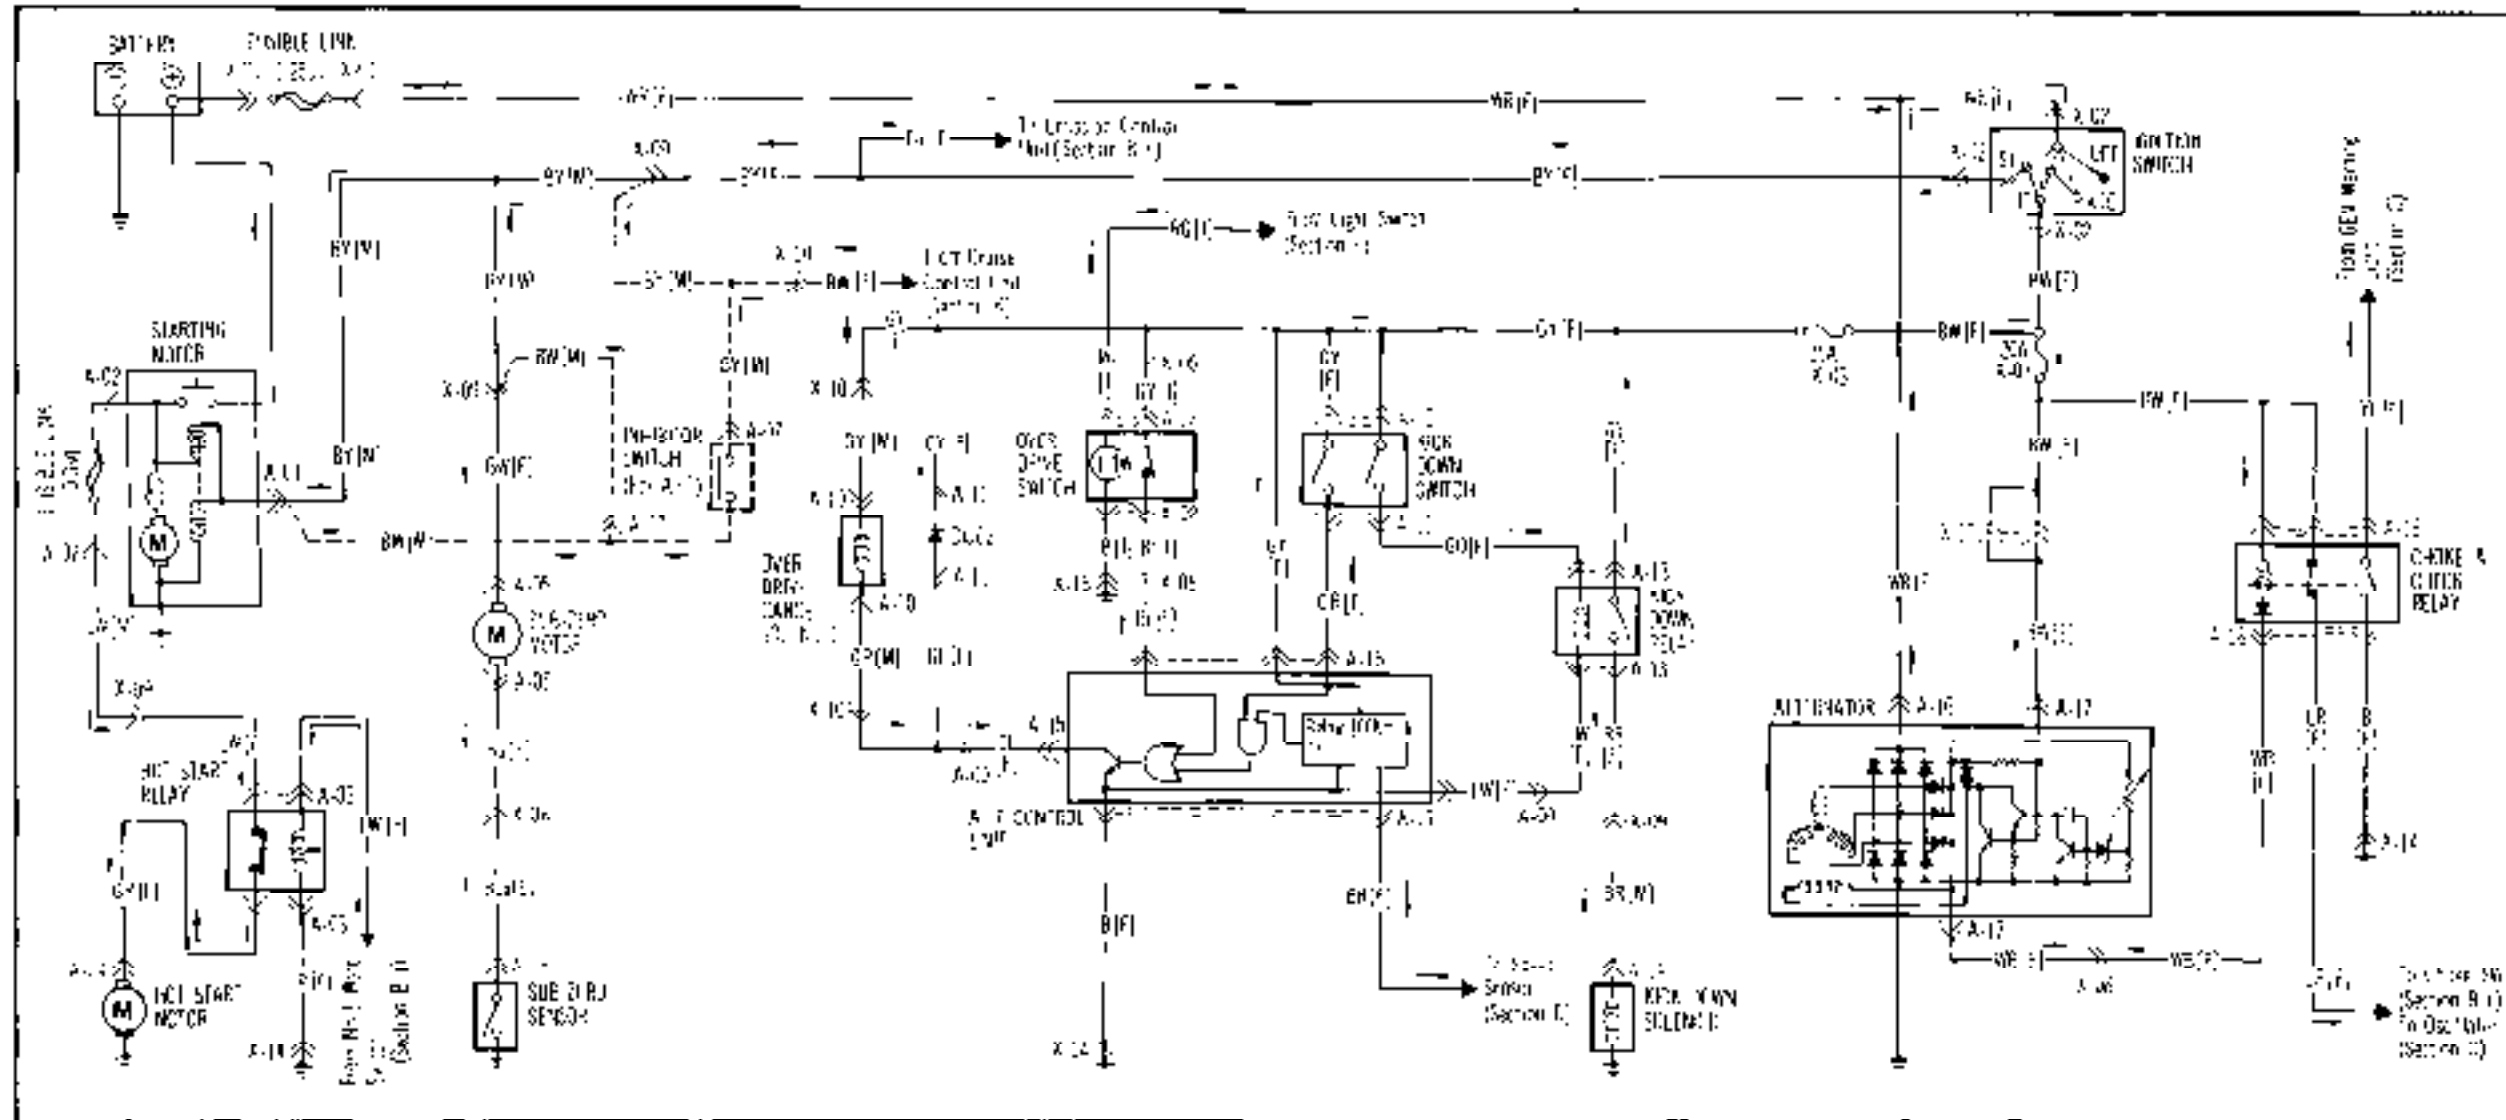

<p>A-1 Starting Motor (M)</p>	<p>A-2 Hot Start Motor (M)</p>	<p>A-3 Sub-Zero Motor (M)</p>	<p>A-4 Ignition Switch (S)</p>	<p>A-5 Over-Drive Switch (S)</p>	<p>A-6 Kick-Down Solenoid (S)</p>	<p>A-7 Kick-Down Solenoid (S) (For A/T)</p>	<p>A-8 Kick-Down Solenoid (S) (For A/T)</p>
<p>A-9 Alternator (A)</p>	<p>A-10 Kick-Down Relay (R)</p>	<p>A-11 Kick-Down Relay (R) (For A/T)</p>	<p>A-12 Kick-Down Relay (R) (For A/T)</p>	<p>A-13 Kick-Down Relay (R) (For A/T)</p>	<p>A-14 Kick-Down Relay (R) (For A/T)</p>	<p>A-15 Kick-Down Relay (R) (For A/T)</p>	<p>A-16 Kick-Down Relay (R) (For A/T)</p>


WIRING DIAGRAM 50-A-1

 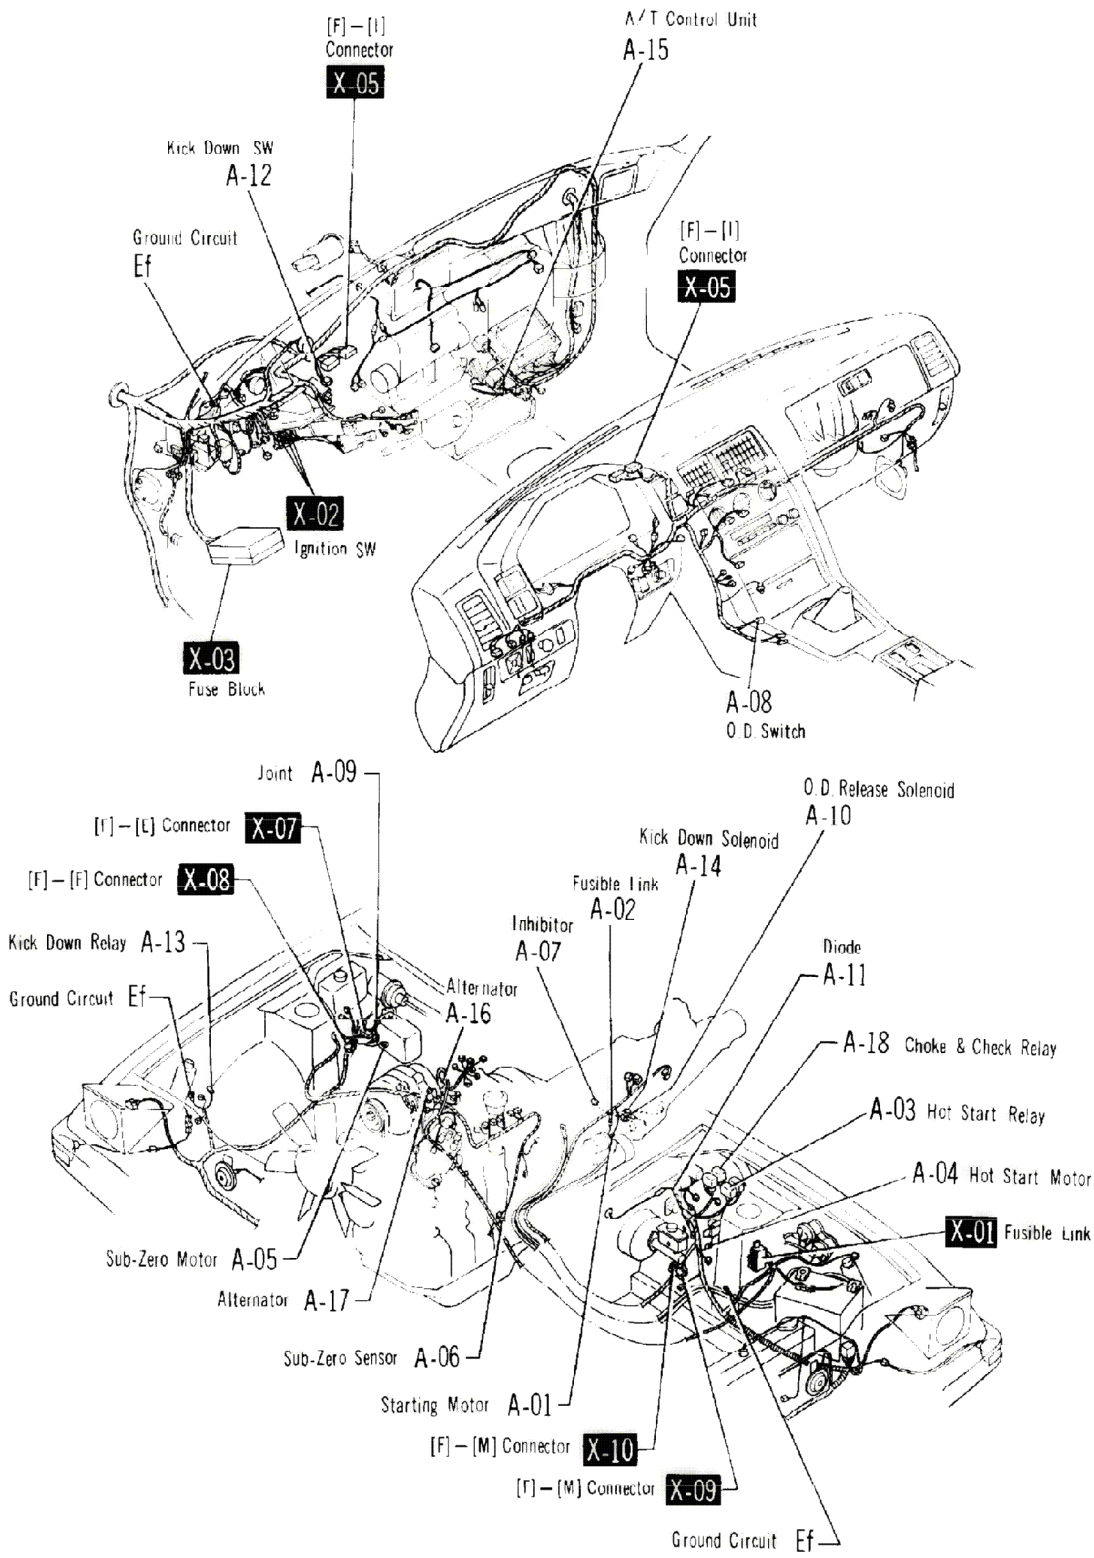

 
 
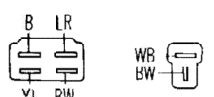


50 WIRING DIAGRAM


A-2 For 13B Engine

- STARTING SYSTEM
- CHARGING SYSTEM
- SUB-ZERO MOTOR

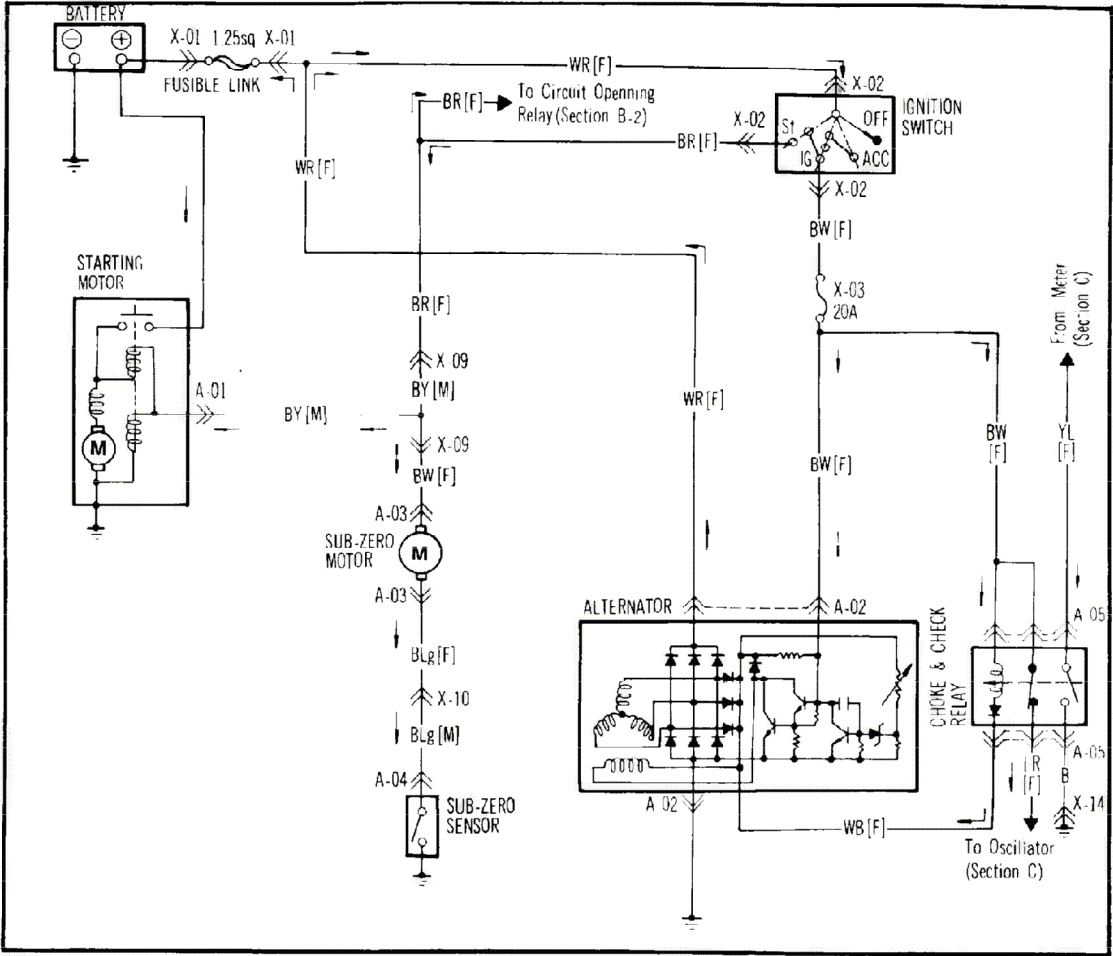


<p>A-01 Starting Motor [M]</p> 	<p>A-02 Alternator [F]</p> 	<p>A-03 Sub-Zero Motor [F]</p> 	<p>A-04 Sub-Zero Sensor [M]</p> 
<p>A-05 Choke & Check Relay [F]</p> 			

Note: ✕ ... Not Used

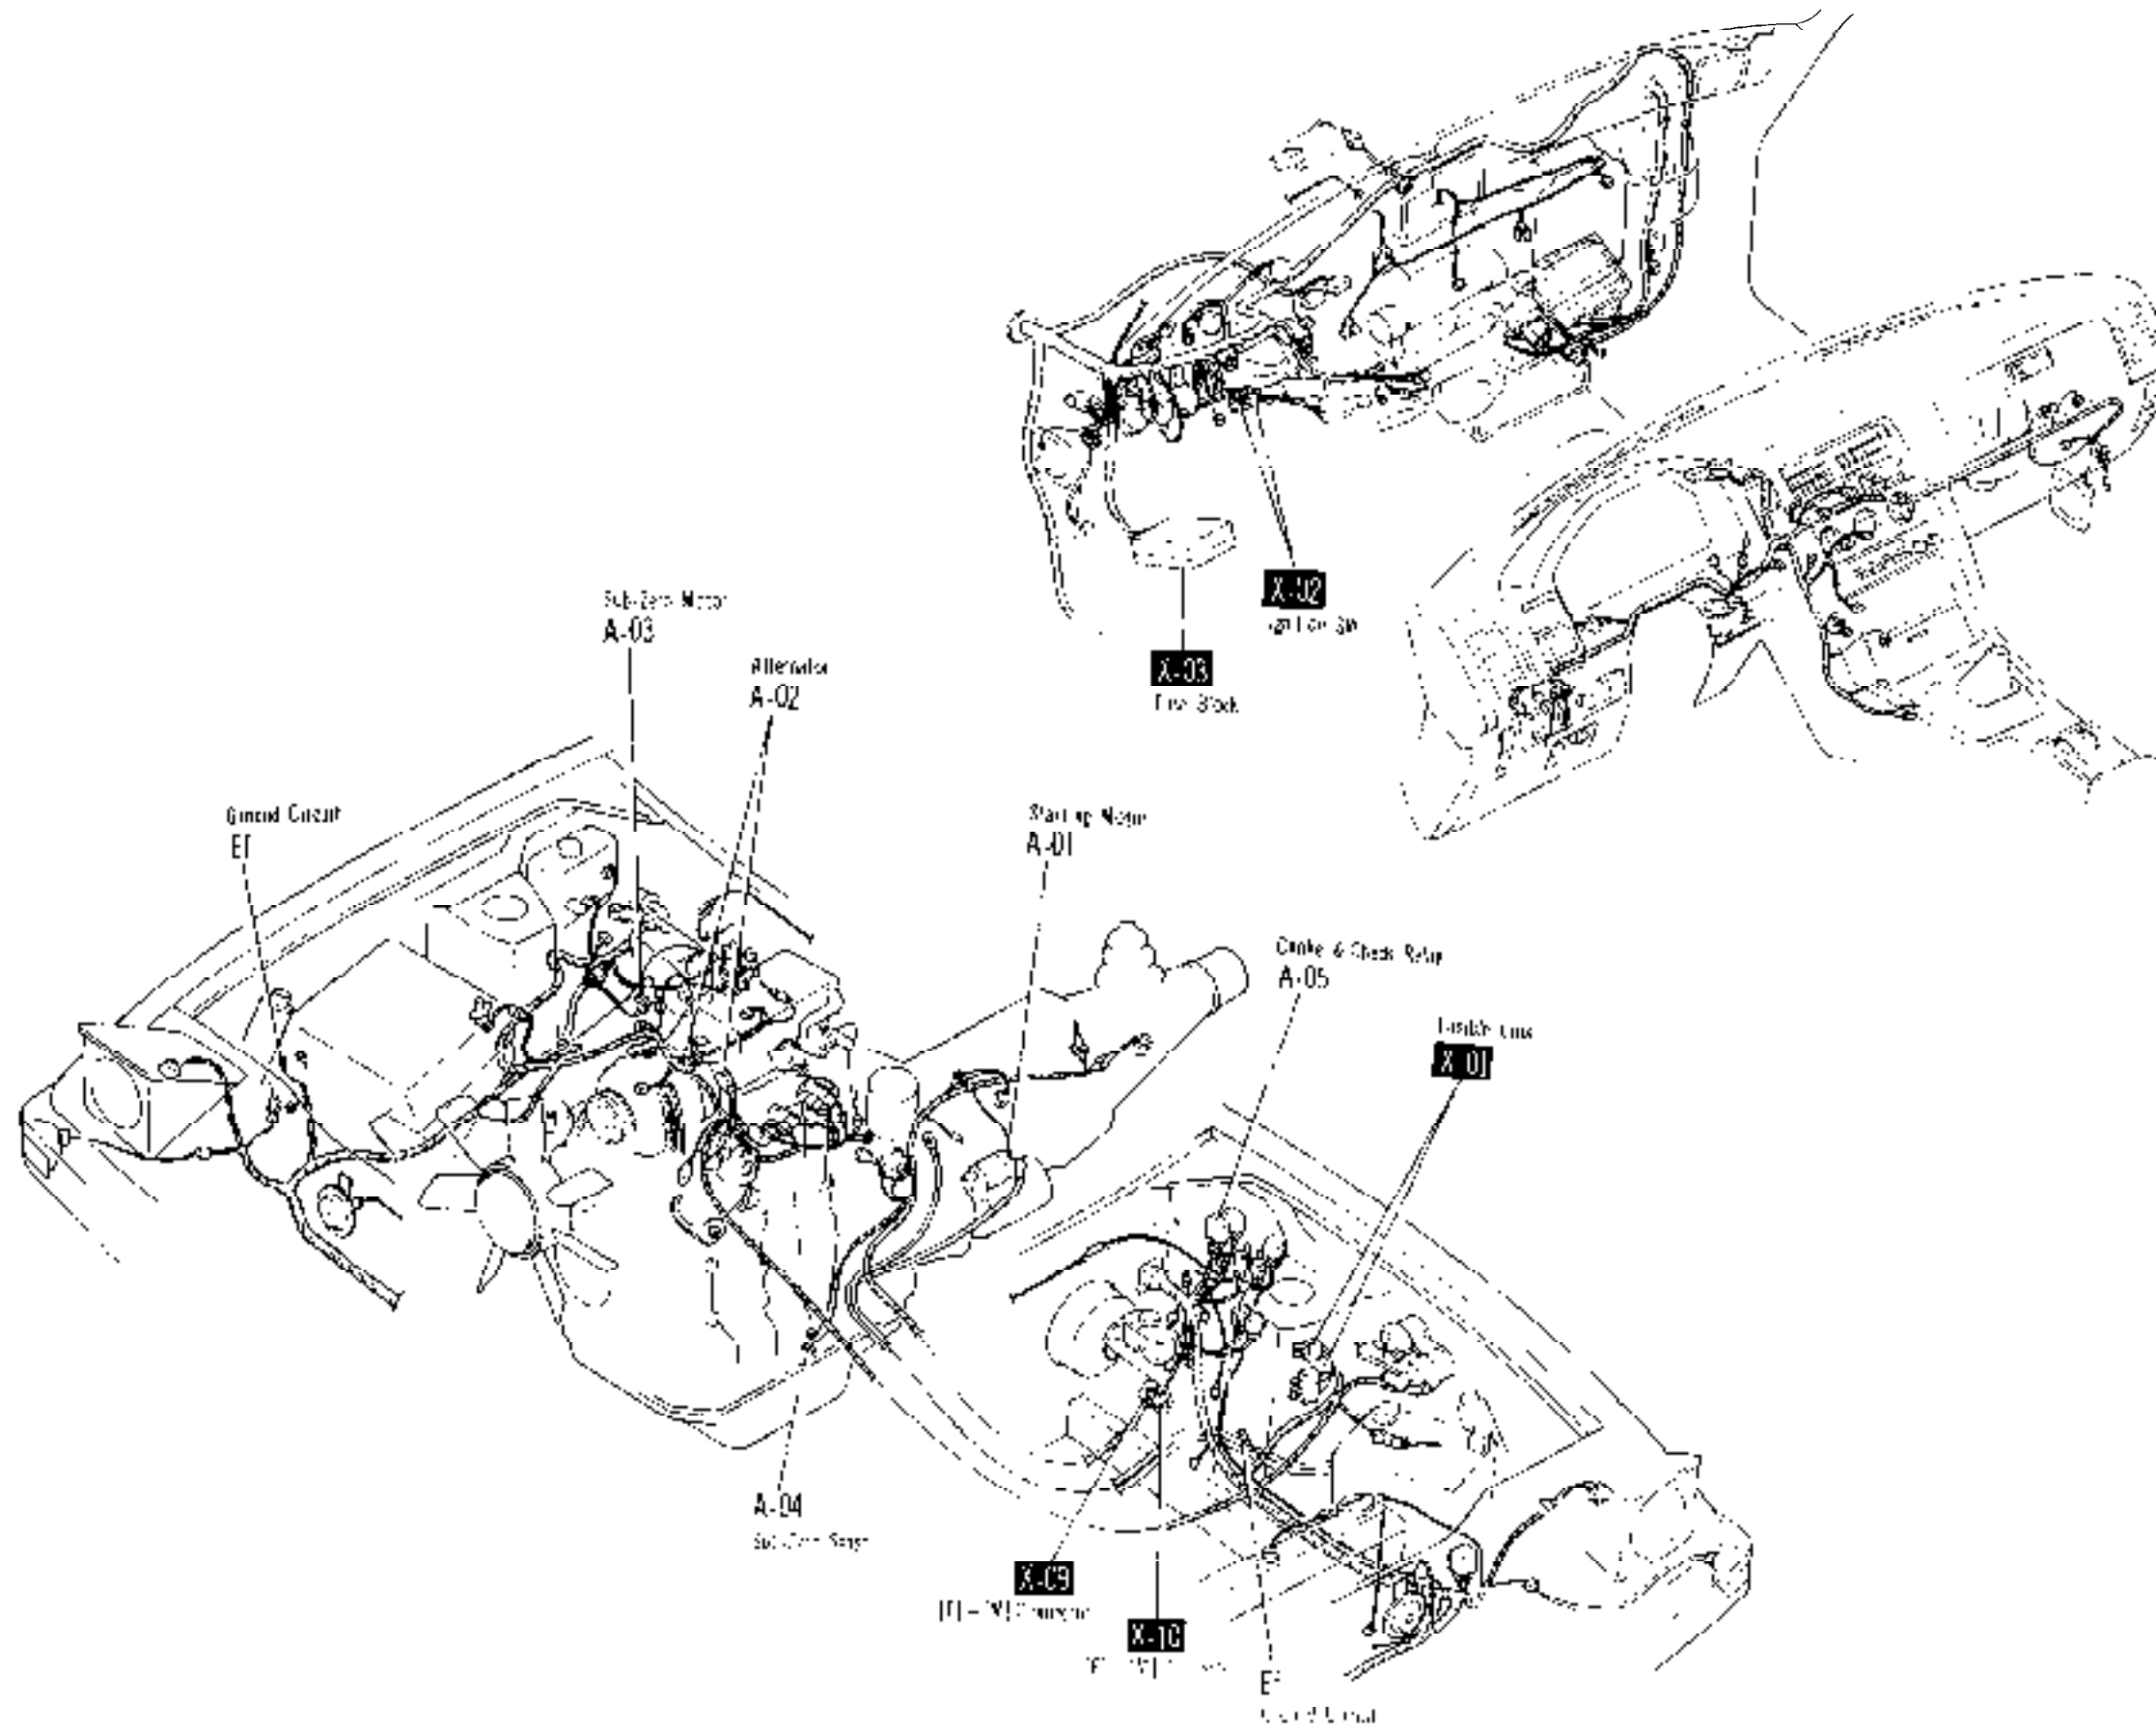


B-1 For 12A Engine ■ EMISSION CONTROL SYSTEM ■ IGNITION SYSTEM ■ FUEL PUMP



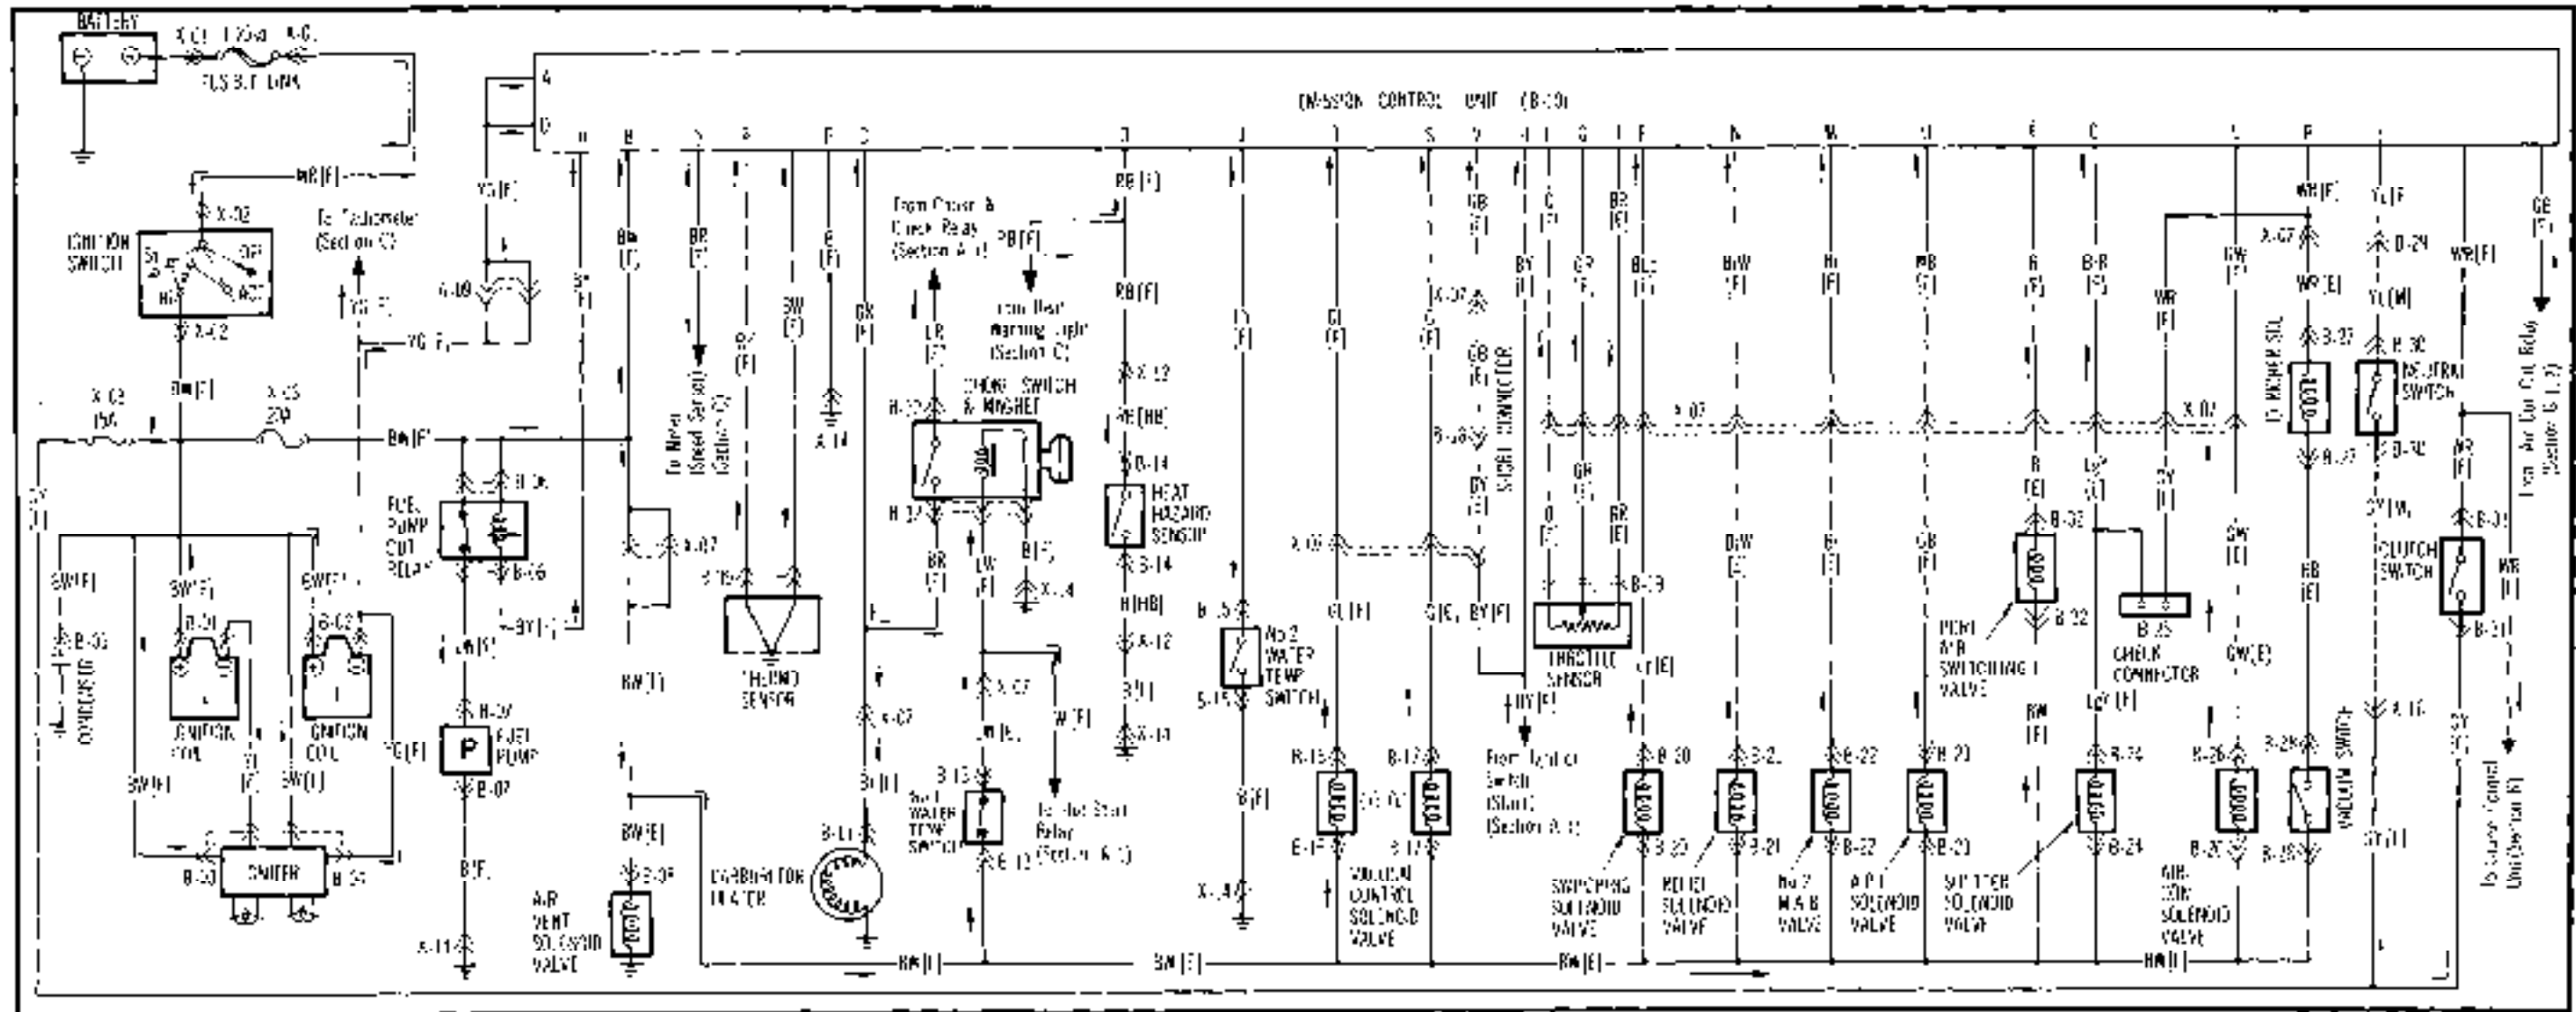



B-01 Ignition Coil [E] 	B-02 Ignition Coil [E] 	B-03 Igniter [E] 	B-04 Ignition Relay [E] 	B-05 Condenser [E] 	B-06 Fuel Pump Cut Relay [E] 	B-07 Fuel Pump [E] 	B-08 Air Vent Solenoid Valve [E] 	B-09 Thermo Sensor [E]
B-10 Emission Control Unit [E] 	B-11 Start Connector [E] 	B-12 Throttle Sensor [E] 	B-13 Exhaust Heater [E] 	B-14 Check Switch & Magnet [E] 	B-15 Hot Water Temp Switch [E] 	B-16 Heat Exchanger Sensor [E] 	B-17 Hot Water Temp Switch [E] 	B-18 Vacuum Control Solenoid Valve [E]
B-19 Vacuum Control Solenoid Valve [E] 	B-20 Start Connector [E] 	B-21 Throttle Sensor [E] 	B-22 Solenoid Solenoid Valve [E] 	B-23 Relay Solenoid Valve [E] 	B-24 Hot Water Temp Switch [E] 	B-25 Hot Water Temp Switch [E] 	B-26 Air Vent Solenoid Valve [E] 	B-27 Check Connector [E]
B-28 Air Vent Solenoid Valve [E] 	B-29 Relay Solenoid Valve [E] 	B-30 Throttle Sensor [E] 	B-31 Solenoid Solenoid Valve [E] 	B-32 Relay Solenoid Valve [E] 	B-33 Hot Water Temp Switch [E] 	B-34 Hot Water Temp Switch [E] 	B-35 Air Vent Solenoid Valve [E] 	B-36 Check Connector [E]





B-2 13B Engine ■ E.G.I. & EMISSION CONTROL SYSTEM ■ IGNITION SYSTEM ■ FUEL PUMP

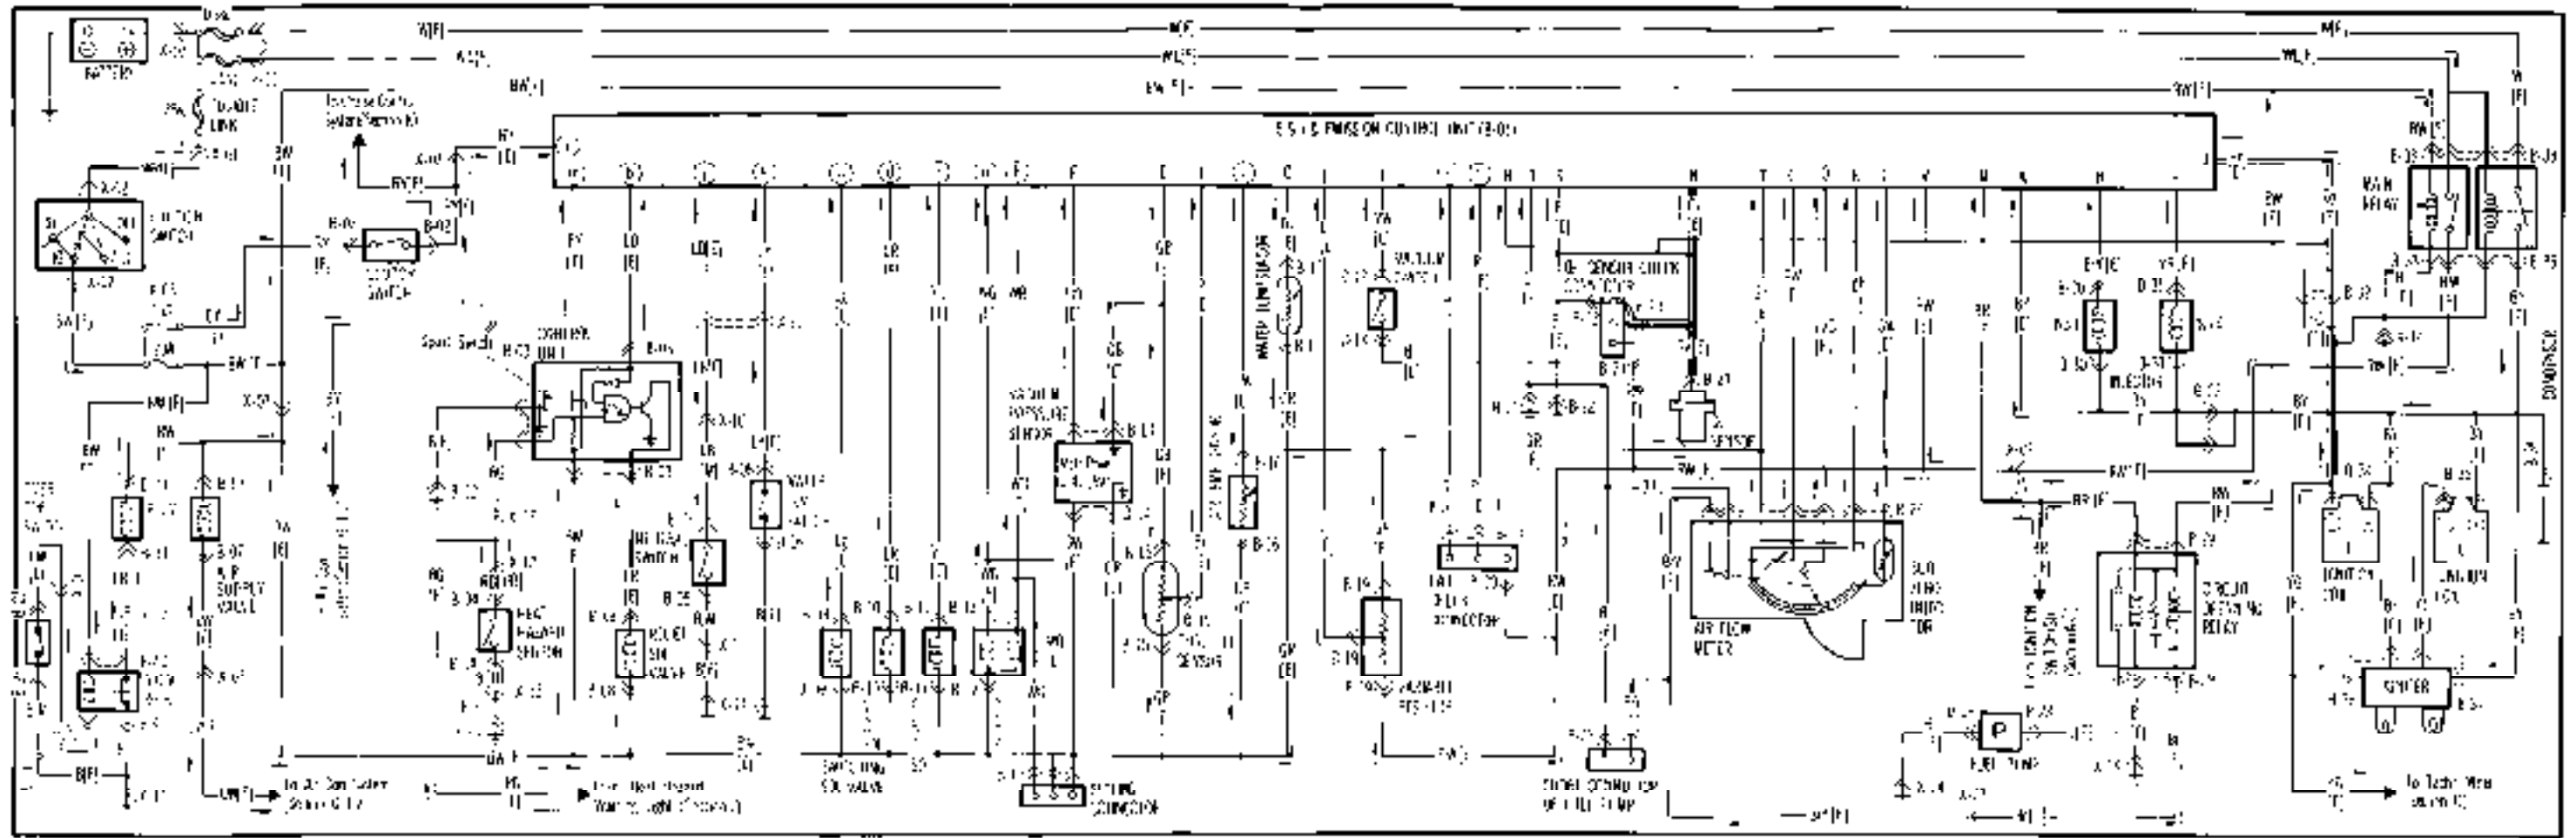


B.0. 13B Emission Control Unit	B.1. 13B Emission Control Unit	B.2. 13B Emission Control Unit	B.3. 13B Emission Control Unit	B.4. 13B Emission Control Unit	B.5. 13B Emission Control Unit	B.6. 13B Emission Control Unit	B.7. 13B Emission Control Unit	B.8. 13B Emission Control Unit	B.9. 13B Emission Control Unit
B.10. 13B Emission Control Unit	B.11. 13B Emission Control Unit	B.12. 13B Emission Control Unit	B.13. 13B Emission Control Unit	B.14. 13B Emission Control Unit	B.15. 13B Emission Control Unit	B.16. 13B Emission Control Unit	B.17. 13B Emission Control Unit	B.18. 13B Emission Control Unit	B.19. 13B Emission Control Unit
B.20. 13B Emission Control Unit	B.21. 13B Emission Control Unit	B.22. 13B Emission Control Unit	B.23. 13B Emission Control Unit	B.24. 13B Emission Control Unit	B.25. 13B Emission Control Unit	B.26. 13B Emission Control Unit	B.27. 13B Emission Control Unit	B.28. 13B Emission Control Unit	B.29. 13B Emission Control Unit
B.30. 13B Emission Control Unit	B.31. 13B Emission Control Unit	B.32. 13B Emission Control Unit	B.33. 13B Emission Control Unit	B.34. 13B Emission Control Unit	B.35. 13B Emission Control Unit	B.36. 13B Emission Control Unit	B.37. 13B Emission Control Unit	B.38. 13B Emission Control Unit	B.39. 13B Emission Control Unit

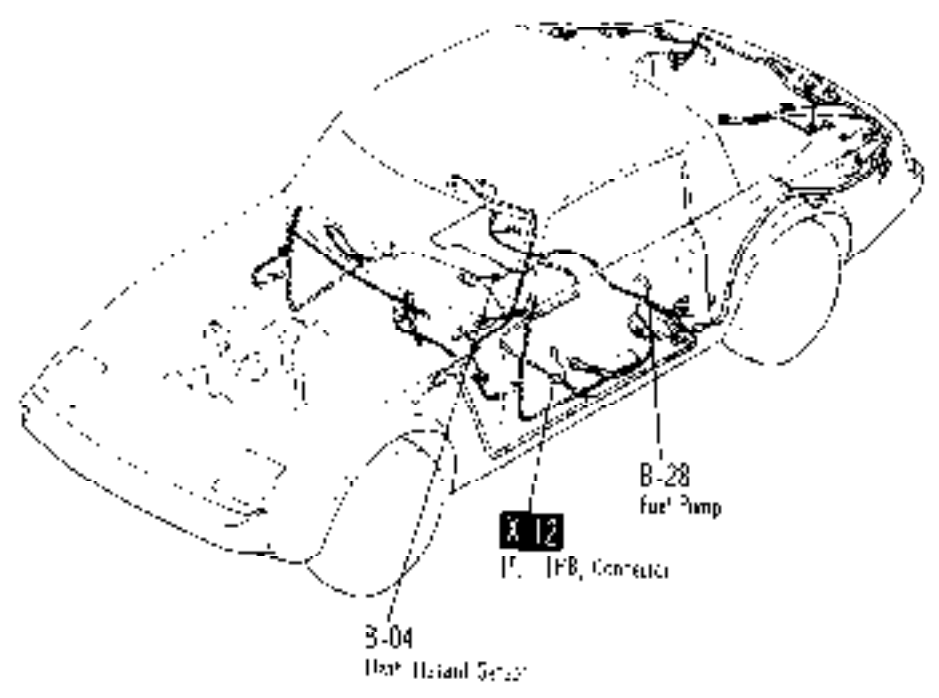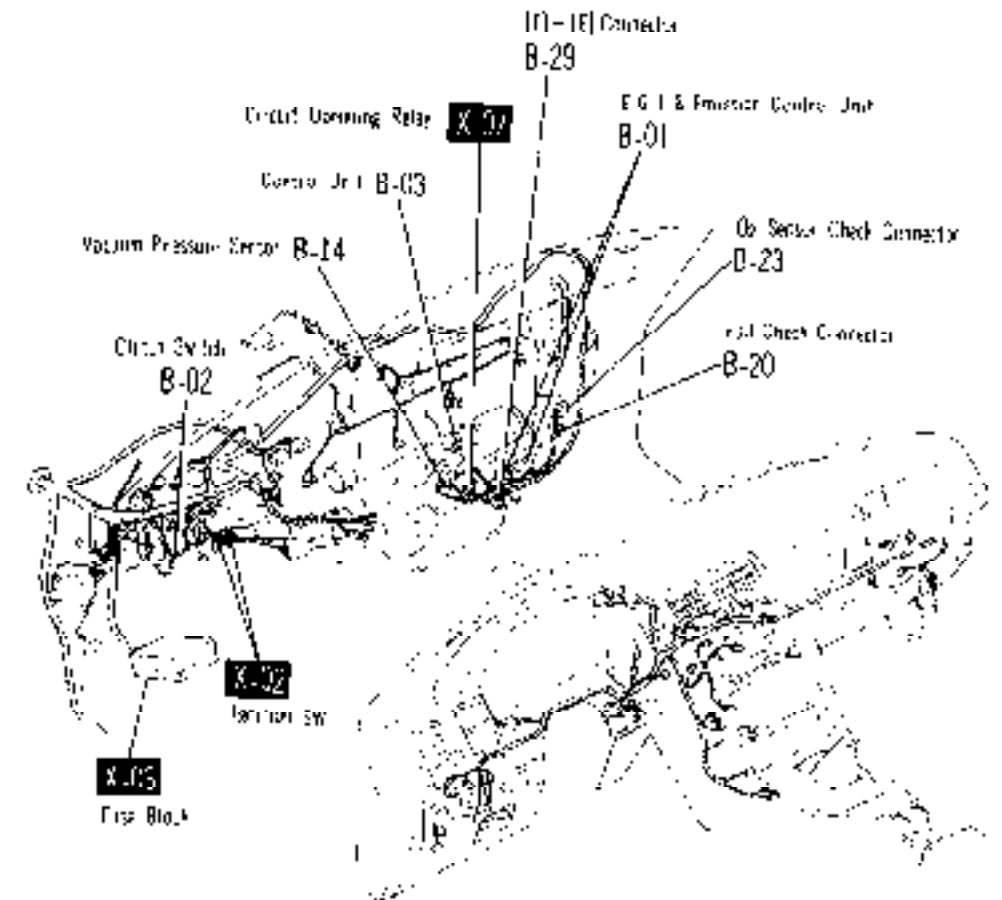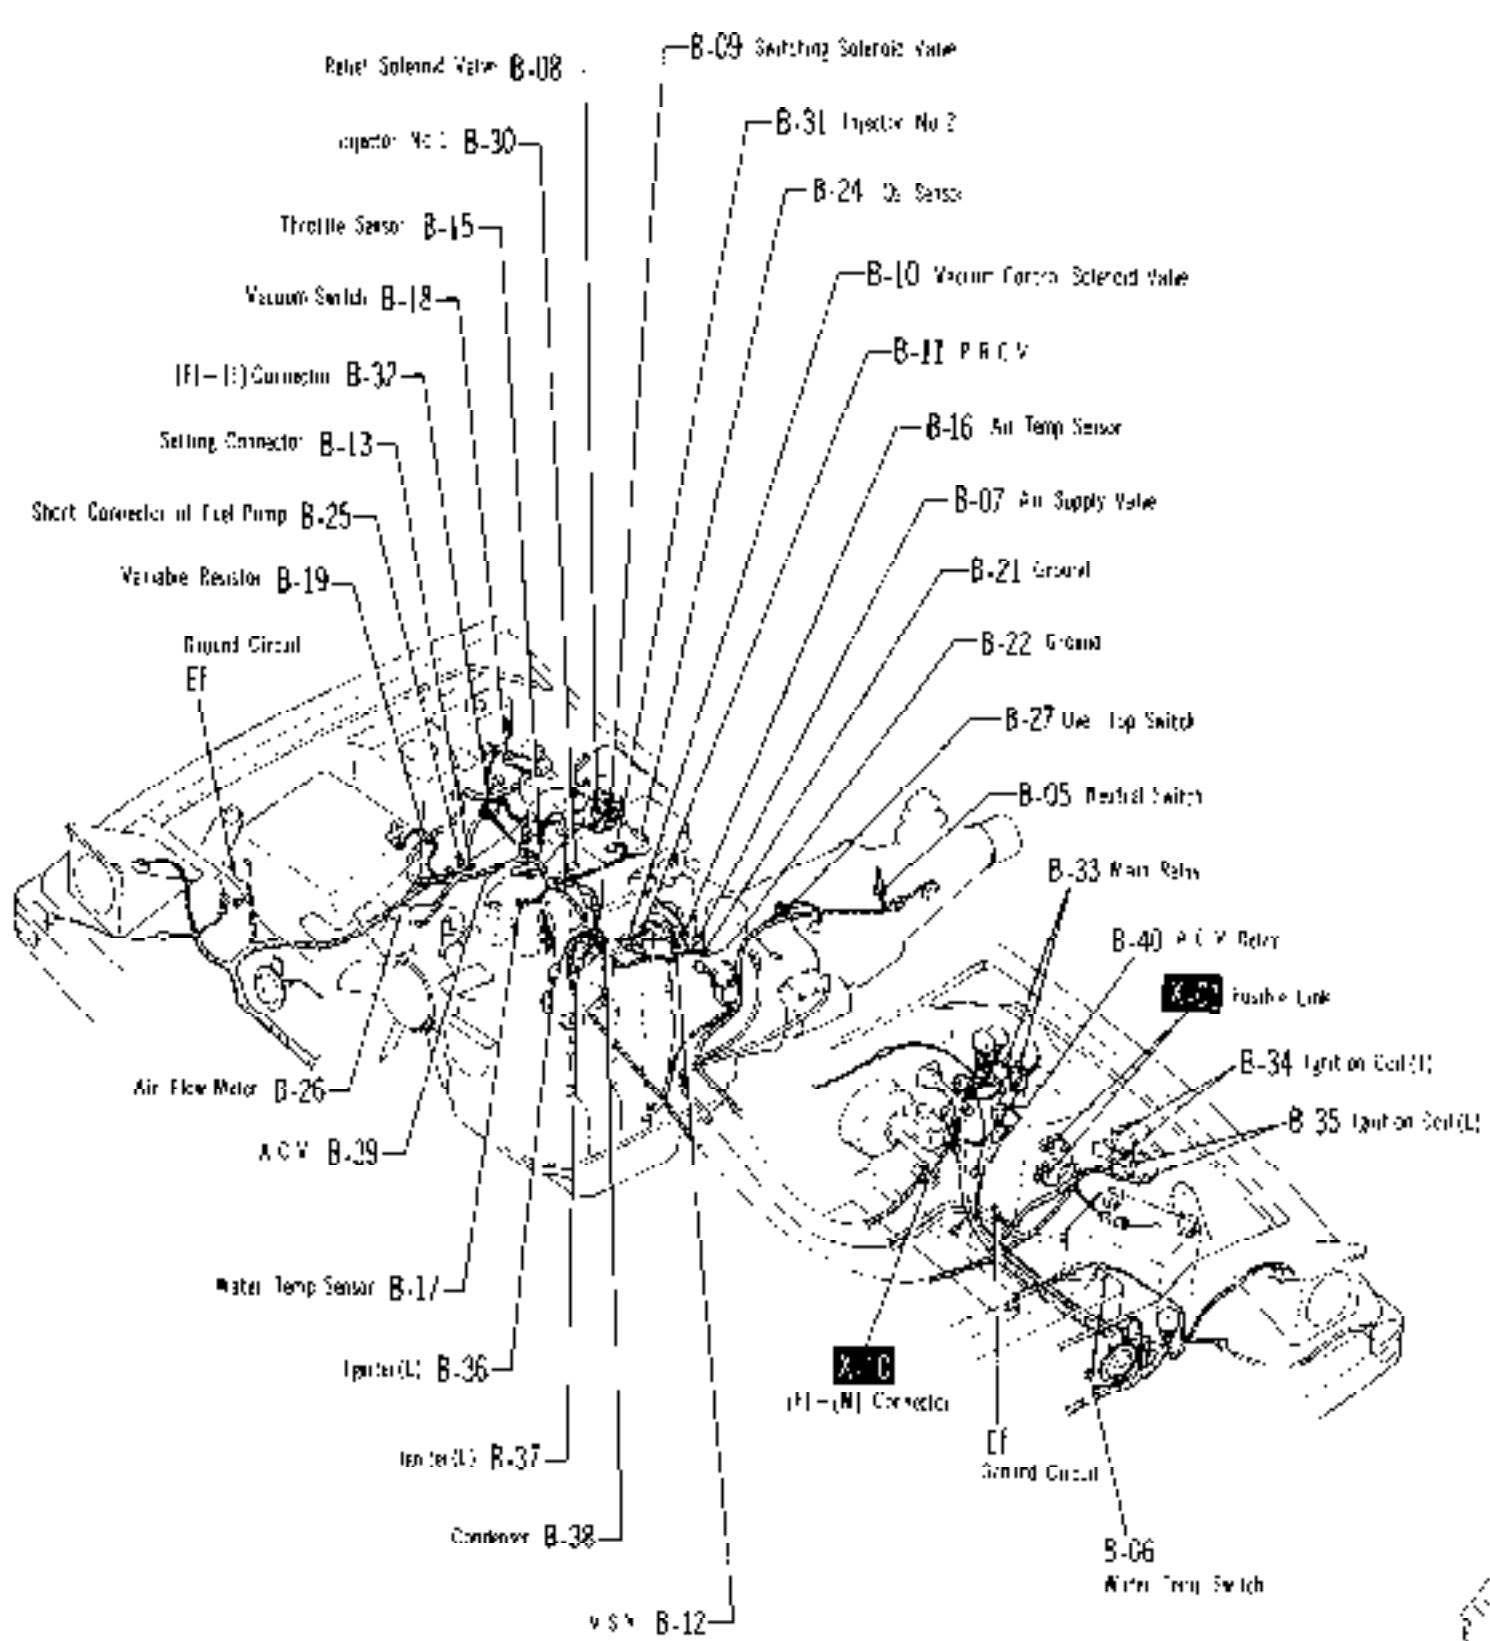

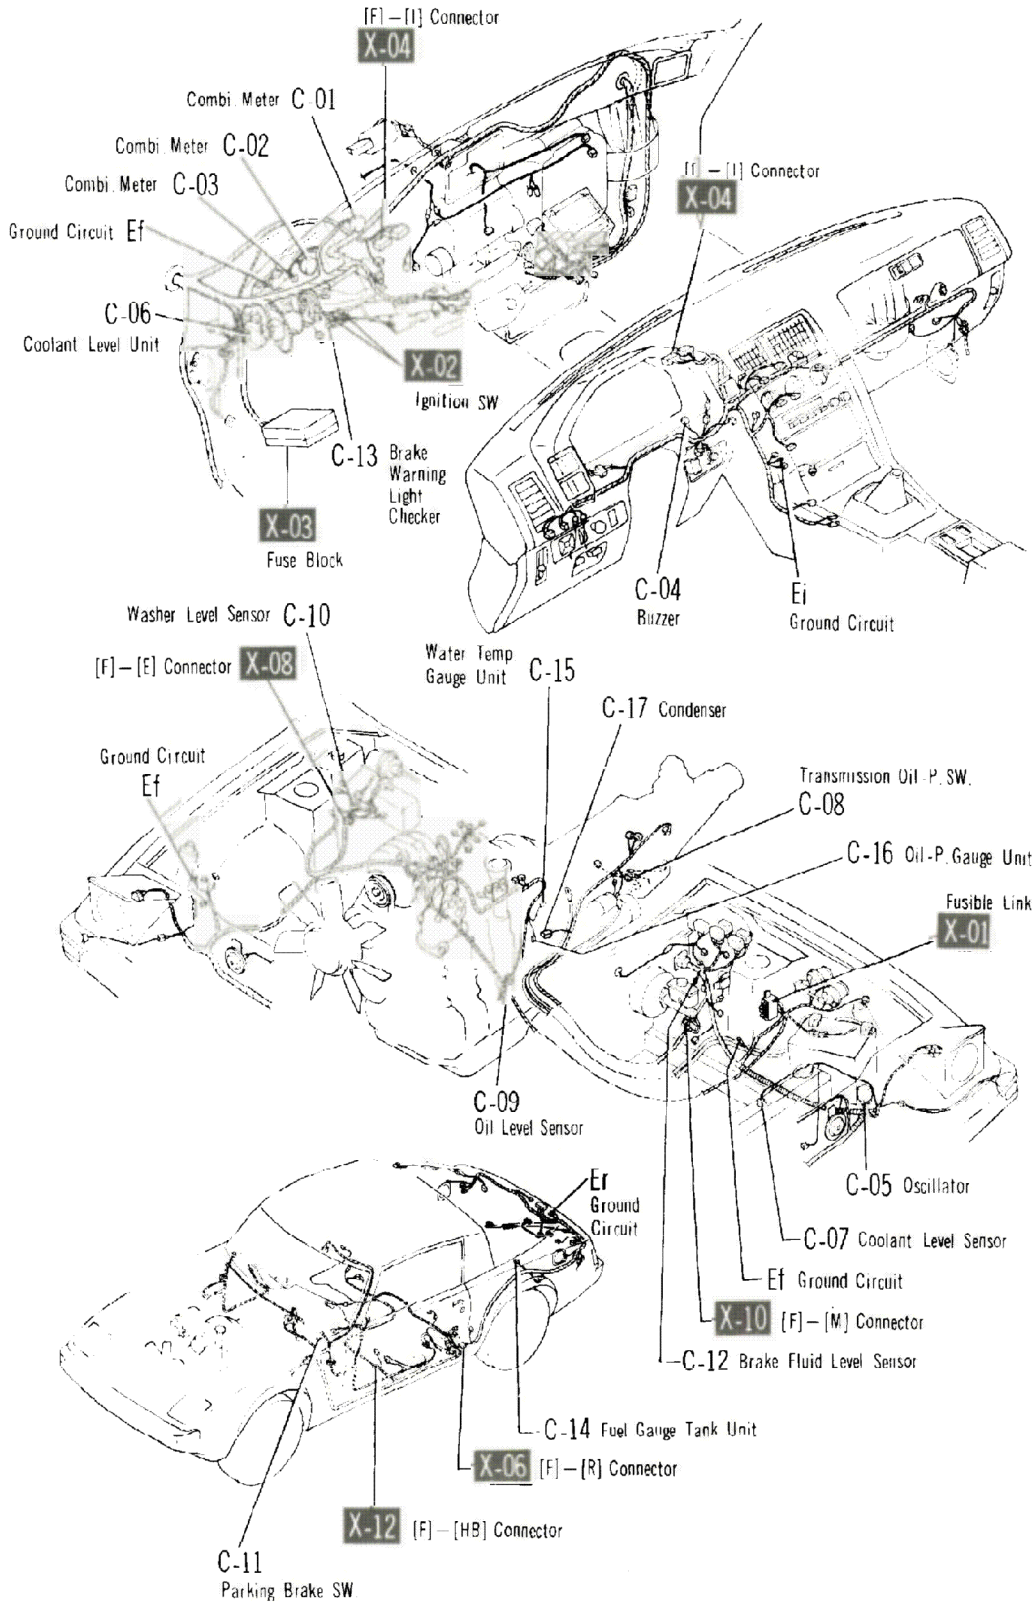

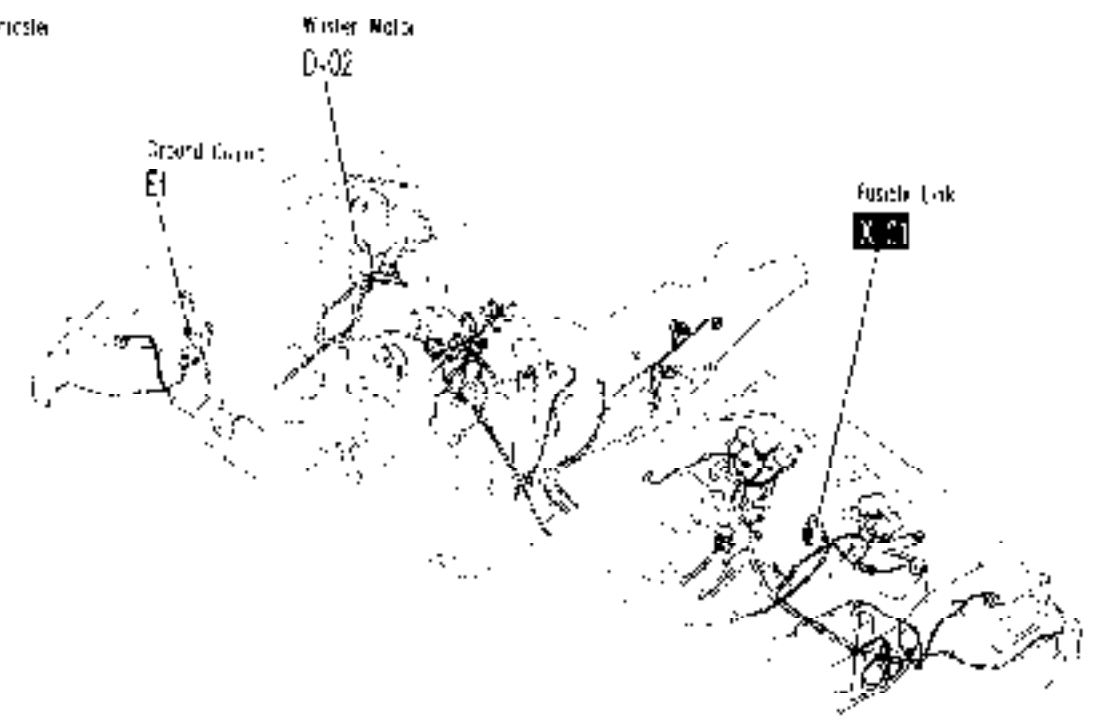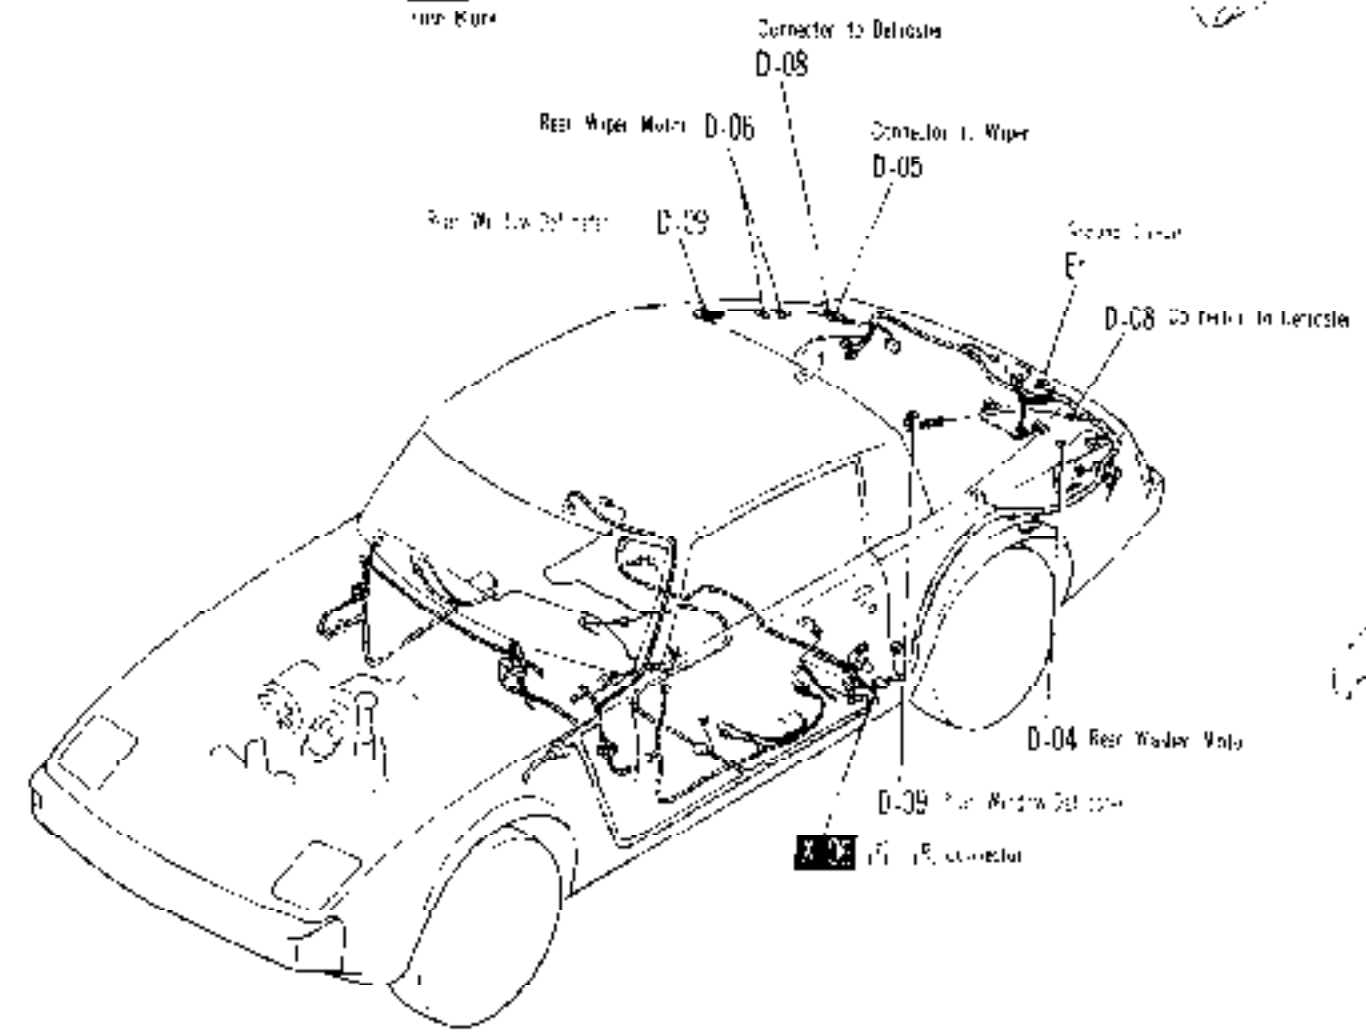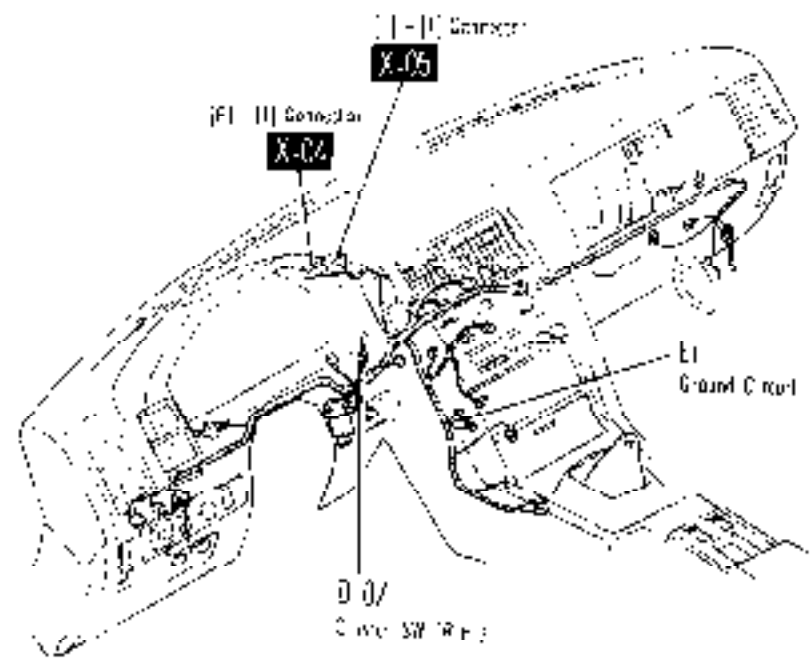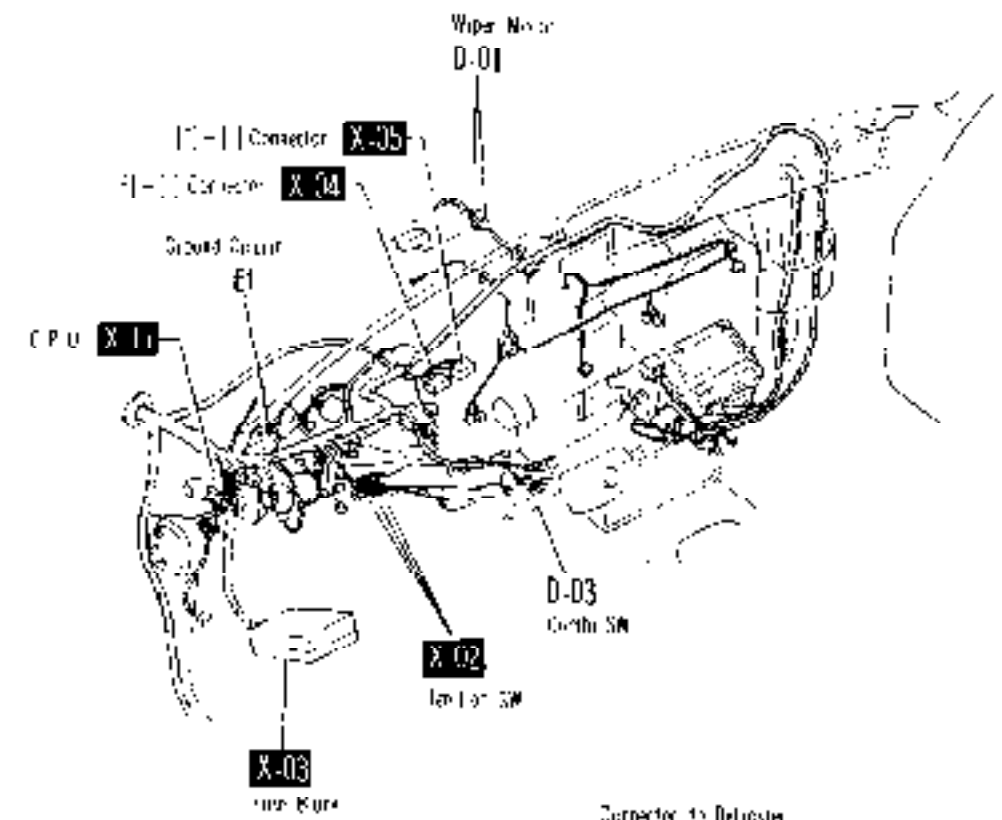


E ■ HEADLIGHTS ■ HEADLIGHT RETRACTABLE SYSTEM ■ HEADLIGHT CLEANER ■ ILLUMINATION LIGHTS ■ GLOVE BOX LIGHT
 ■ FRONT PARKING LIGHTS ■ TAIL LIGHTS ■ FRONT & REAR SIDE MARKER LIGHTS ■ STORAGE BOX LIGHTS ■ LICENSE LIGHTS

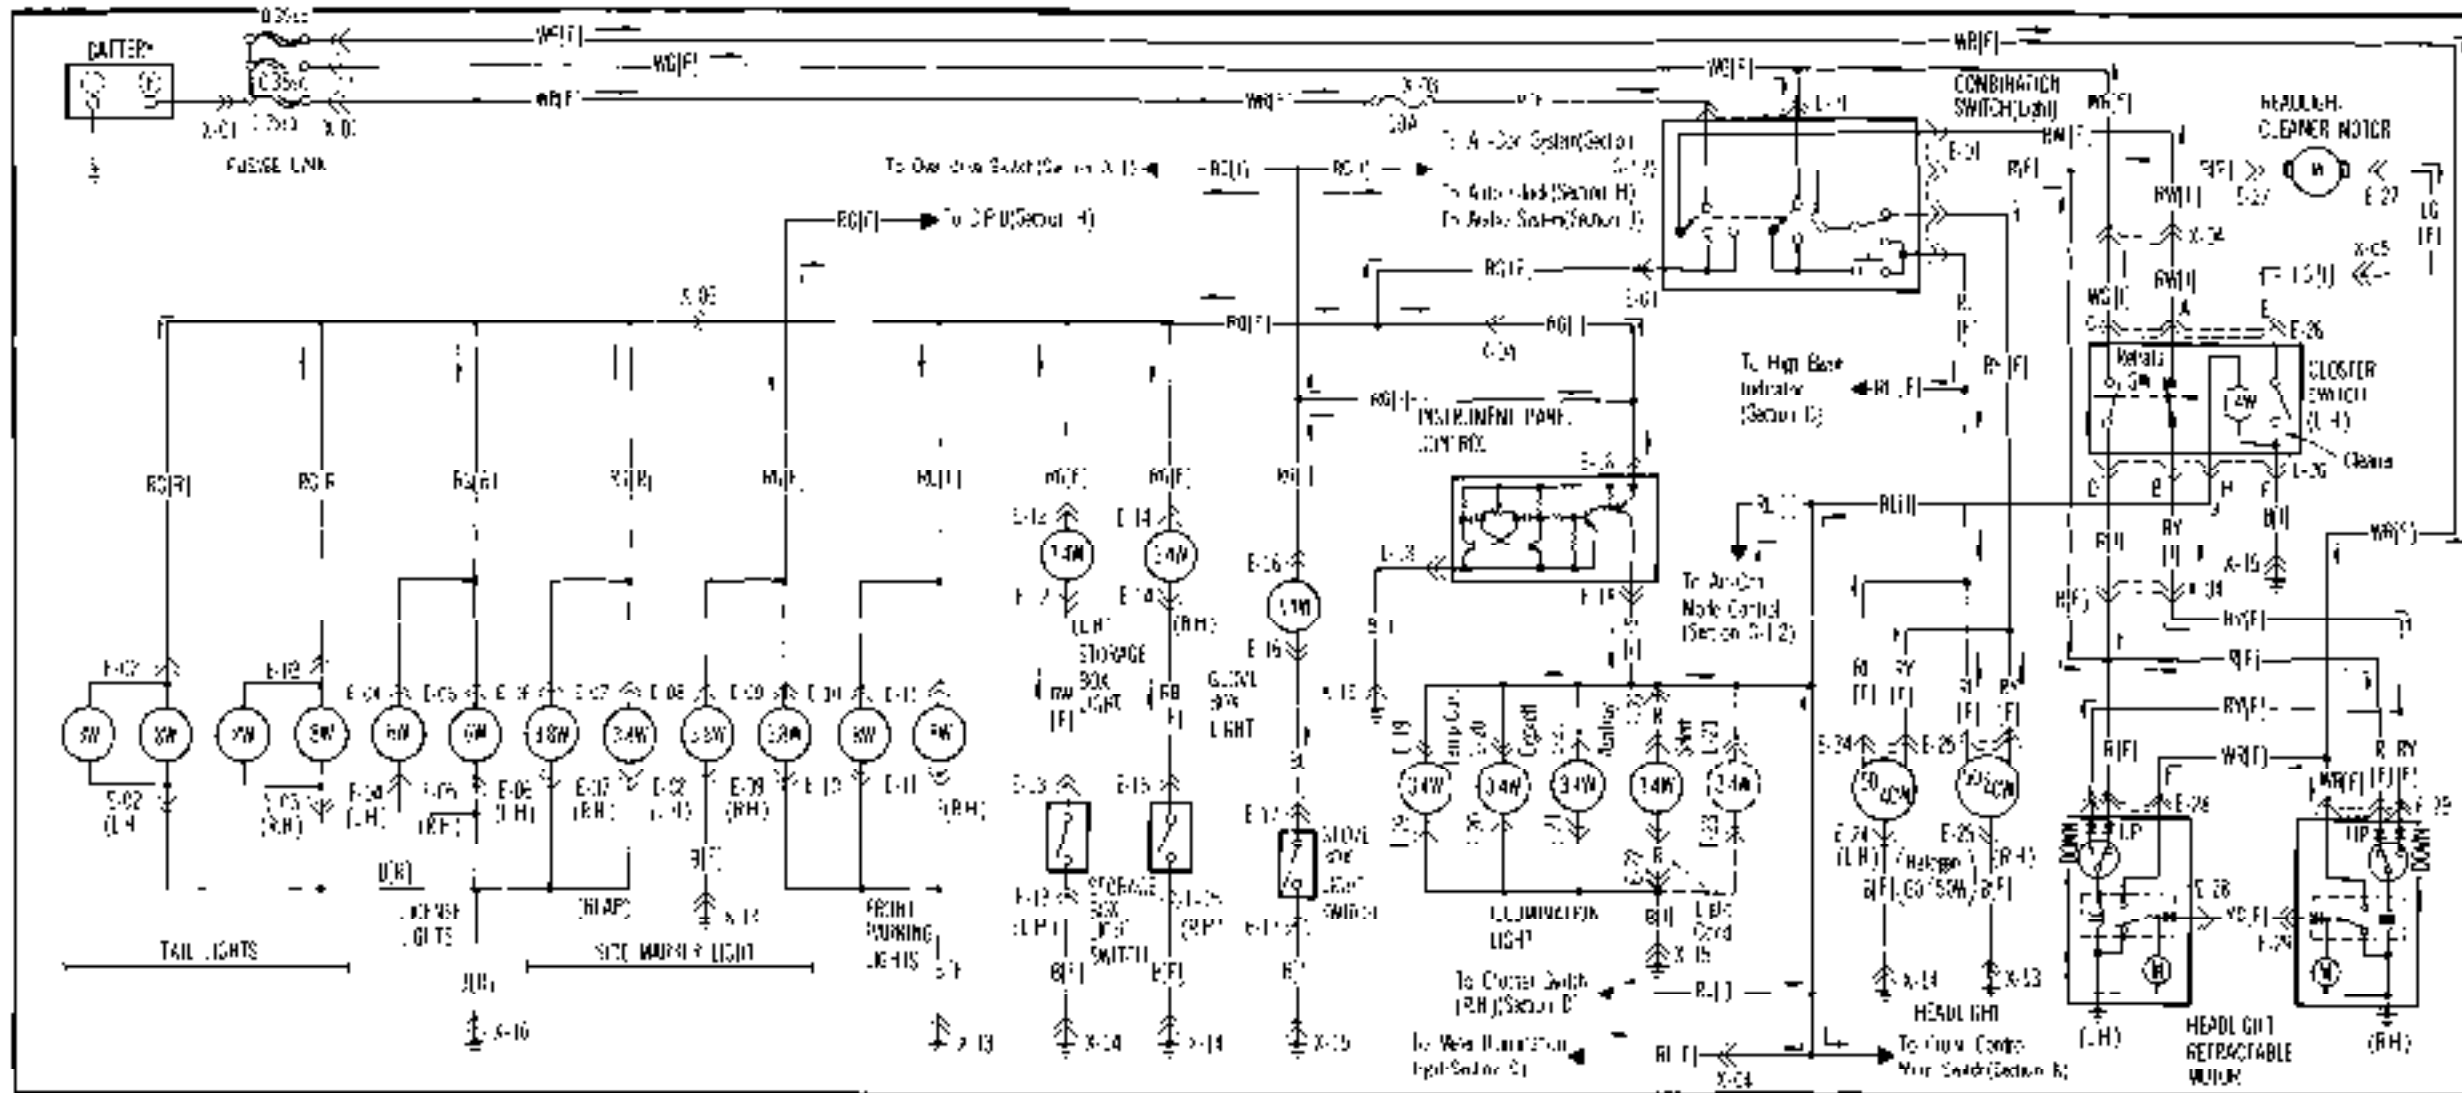

E-02 Combination Switch [E]	E-03 Rear Combination Light [E][R]	E-04 Rear Combination Light [R][L]	E-05 Front Light [E][R]	E-06 License Light [R][L]	E-07 Front Side Marker Light [L][R]	E-08 Rear Side Marker Light [R][L]	E-09 Front Side Marker Light [L][R]
E-10 Glove Box Light Switch [E]	E-11 Instrument Panel Light Control [E]	E-12 Storage Box Light Switch [E][R]	E-13 Storage Box Light [E][R]	E-14 Storage Box Light [R][L]	E-15 Storage Box Light [R][L]	E-16 Storage Box Light [R][L]	E-17 Glove Box Light [E]
E-18 Headlight Cleaner Motor [E]	E-19 Instrument Panel Light Control [E]	E-20 Storage Box Light Switch [E][R]	E-21 Storage Box Light [E][R]	E-22 Storage Box Light [R][L]	E-23 Storage Box Light [R][L]	E-24 Storage Box Light [R][L]	E-25 Storage Box Light [R][L]
E-26 Headlight Cleaner Motor [E]	E-27 Instrument Panel Light Control [E]	E-28 Storage Box Light Switch [E][R]	E-29 Storage Box Light [E][R]	E-30 Storage Box Light [R][L]	E-31 Storage Box Light [R][L]	E-32 Storage Box Light [R][L]	E-33 Storage Box Light [R][L]


Note: See Section 1-10

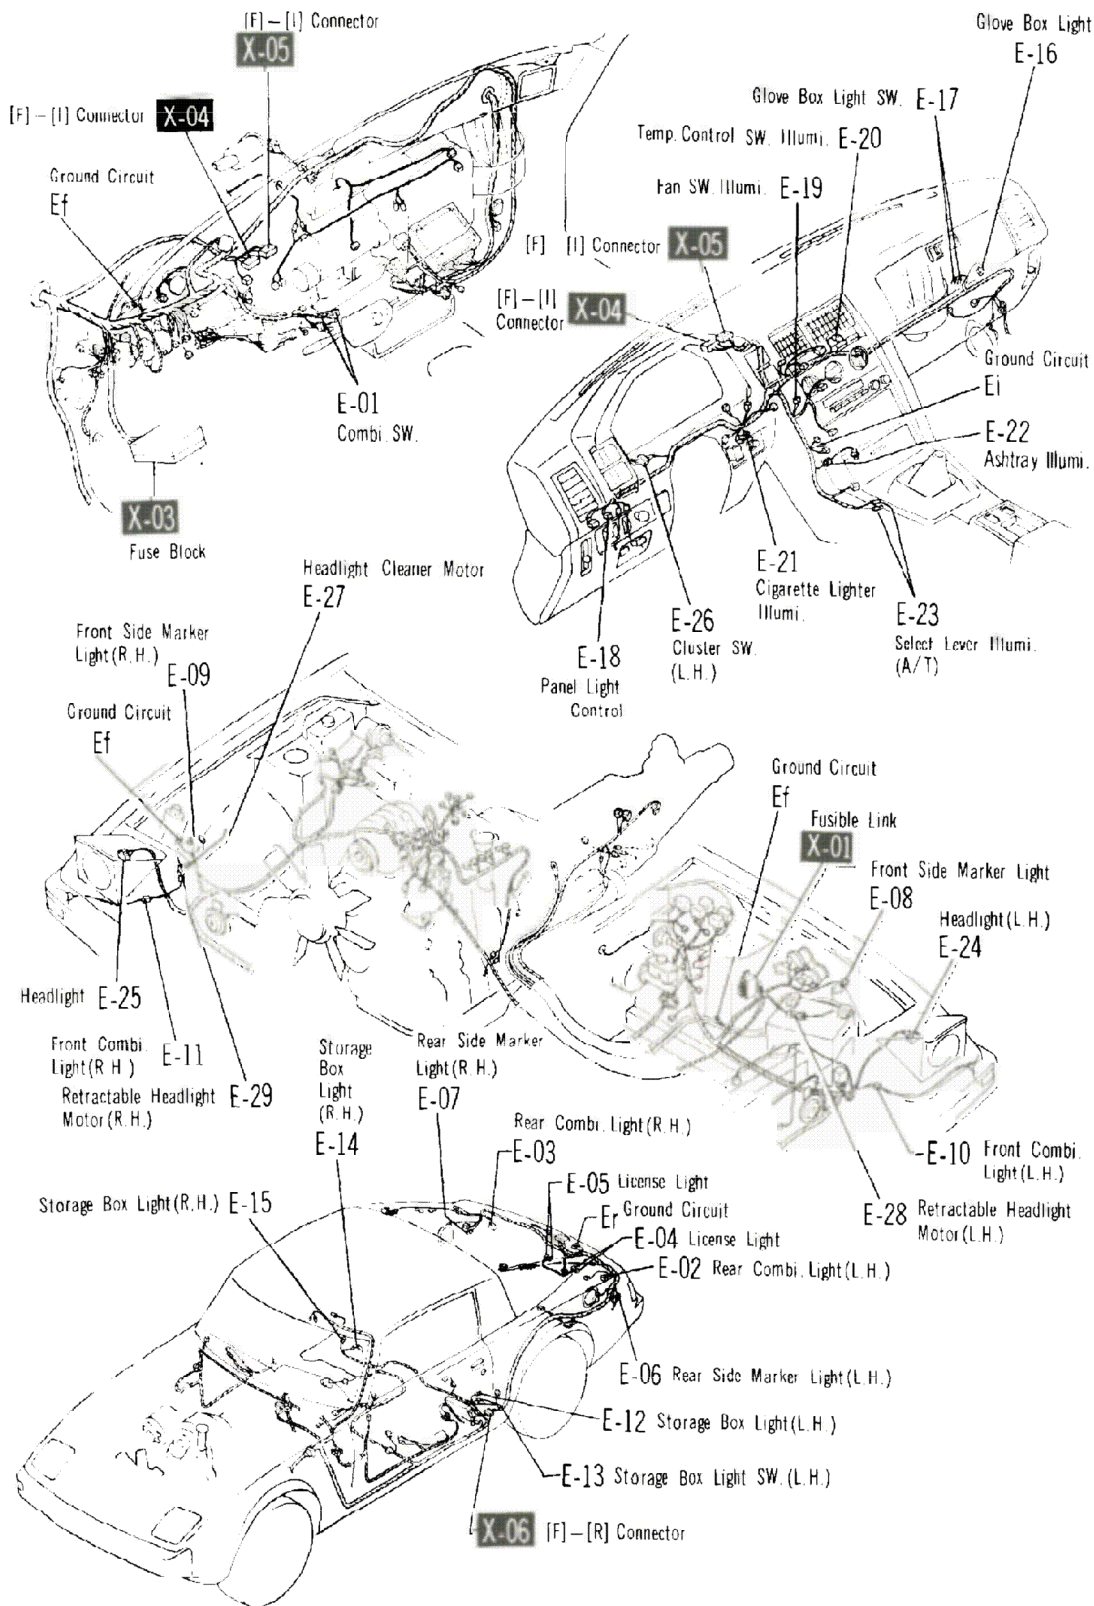

50 WIRING DIAGRAM


F

■ TURN & HAZARD FLASHER LIGHTS ■ HORN
 ■ BACK-UP LIGHTS ■ STOP LIGHTS

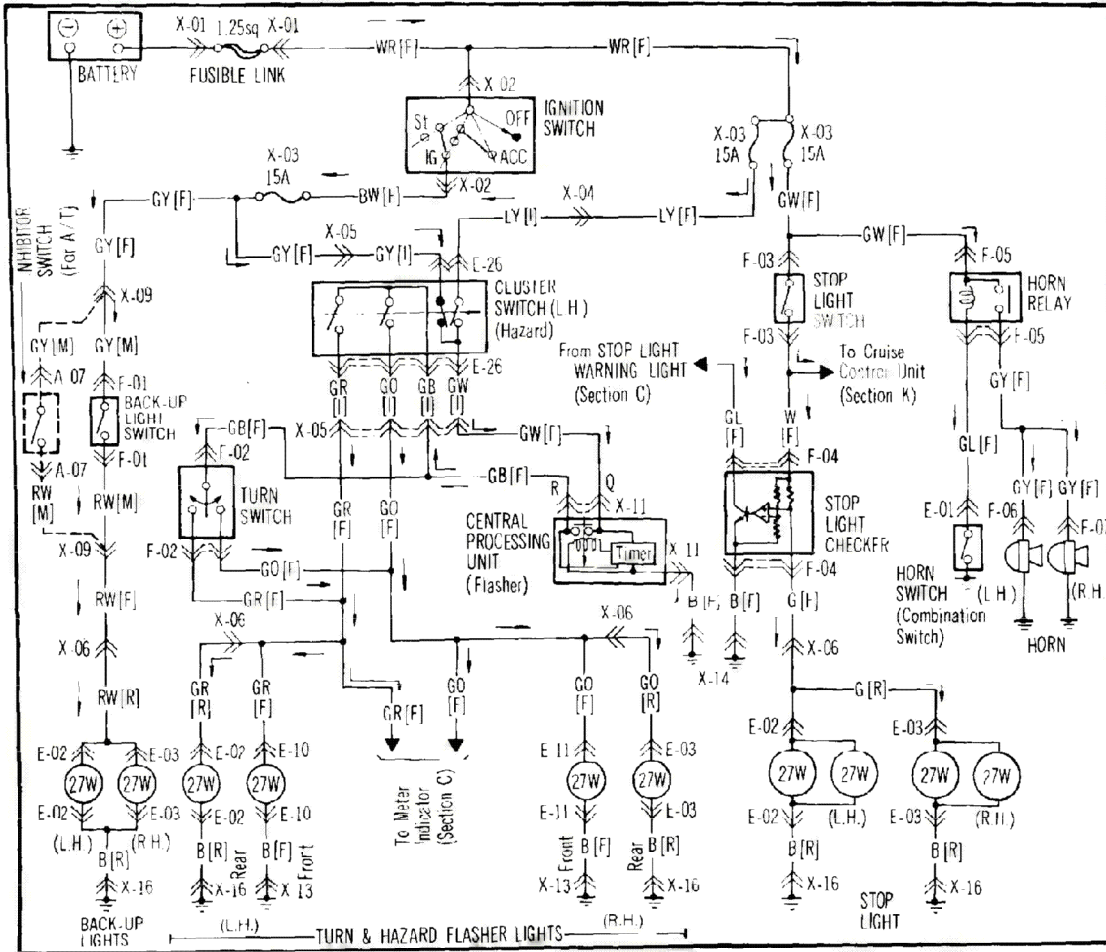


F-01 Back-Up Light Switch [M] 	F-02 Turn Switch [F] 	F-03 Stop Light Switch [F] 	F-04 Stop Light Checker [F]
F-05 Horn Relay [F] 	F-06 Horn (L.H.) [F] 	F-07 Horn (R.H.) [F] 	A-07 Inhibitor Switch [M] (For A/T)
F-01 Combination Switch [F] 	E-02 Rear Combination Light (L.H.) [R] 	E-03 Rear Combination Light (R.H.) [R] 	E-10 Front Combination Light (L.H.) [F]
E-11 Front Combination Light (R.H.) [F] 	E-26 Cluster Switch (L.H.) [I] 		

Note ✕ ... Not Used

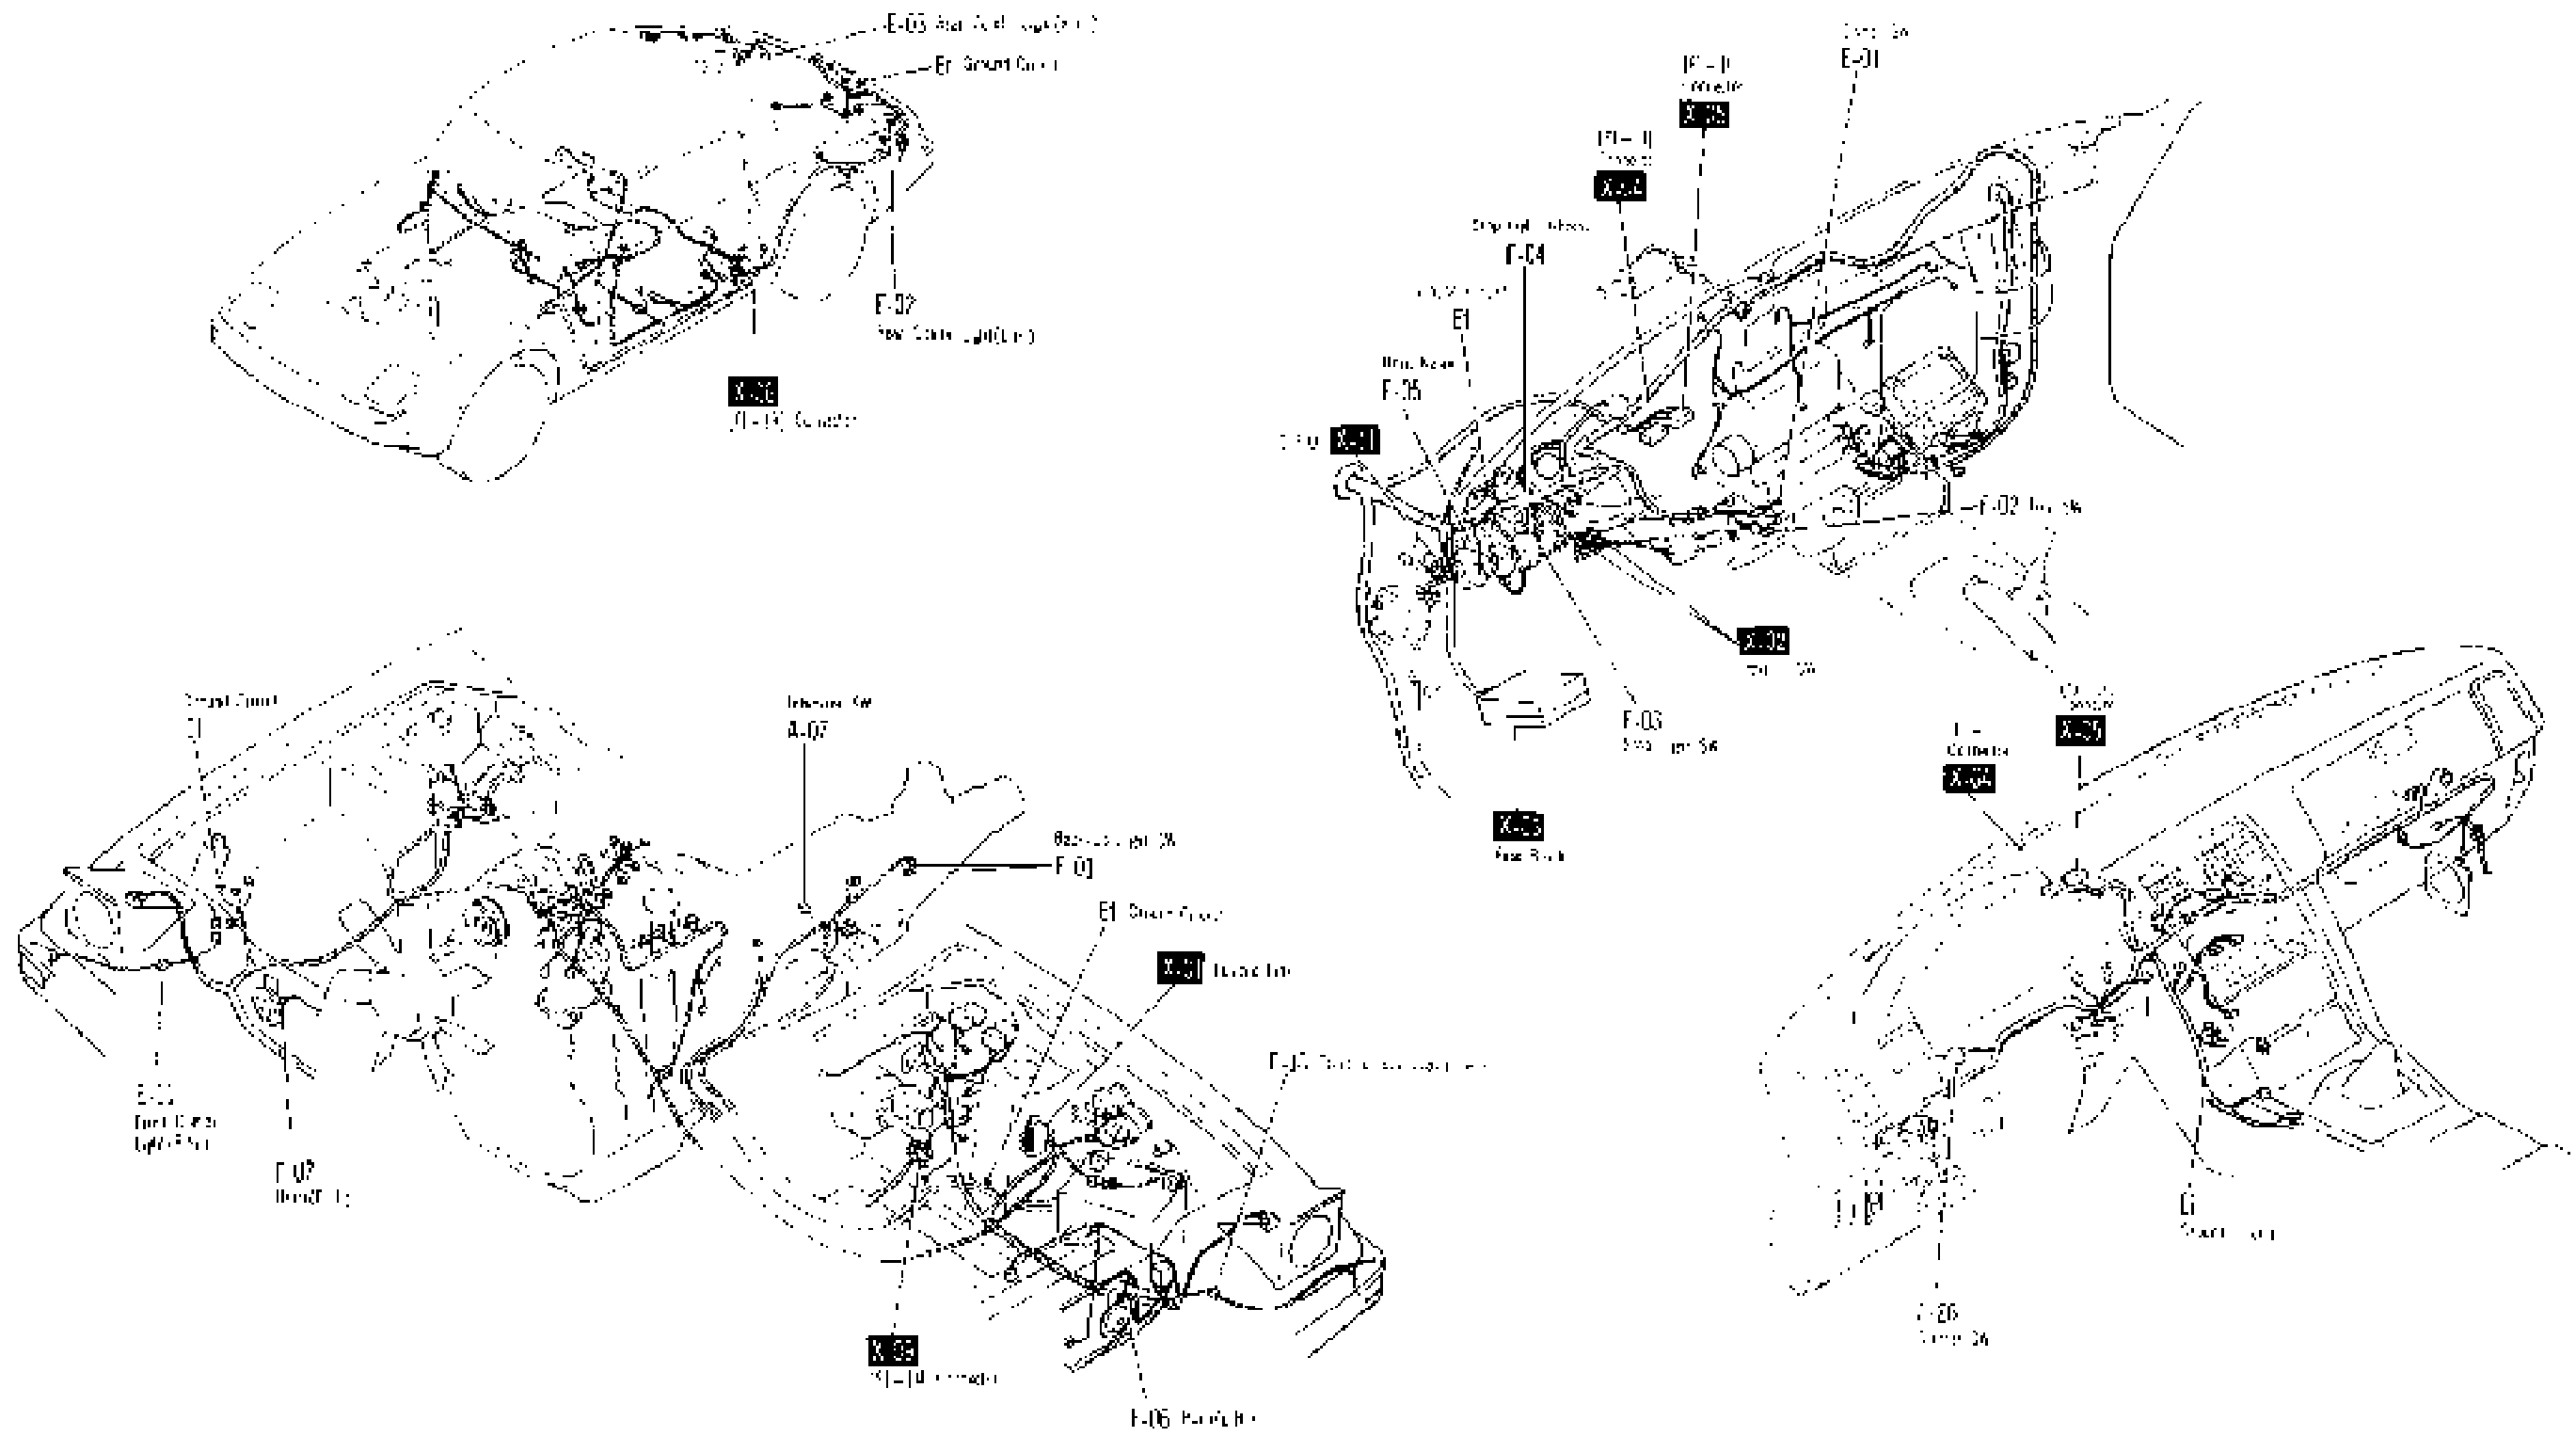


G-1 ■ AIR CONDITIONER

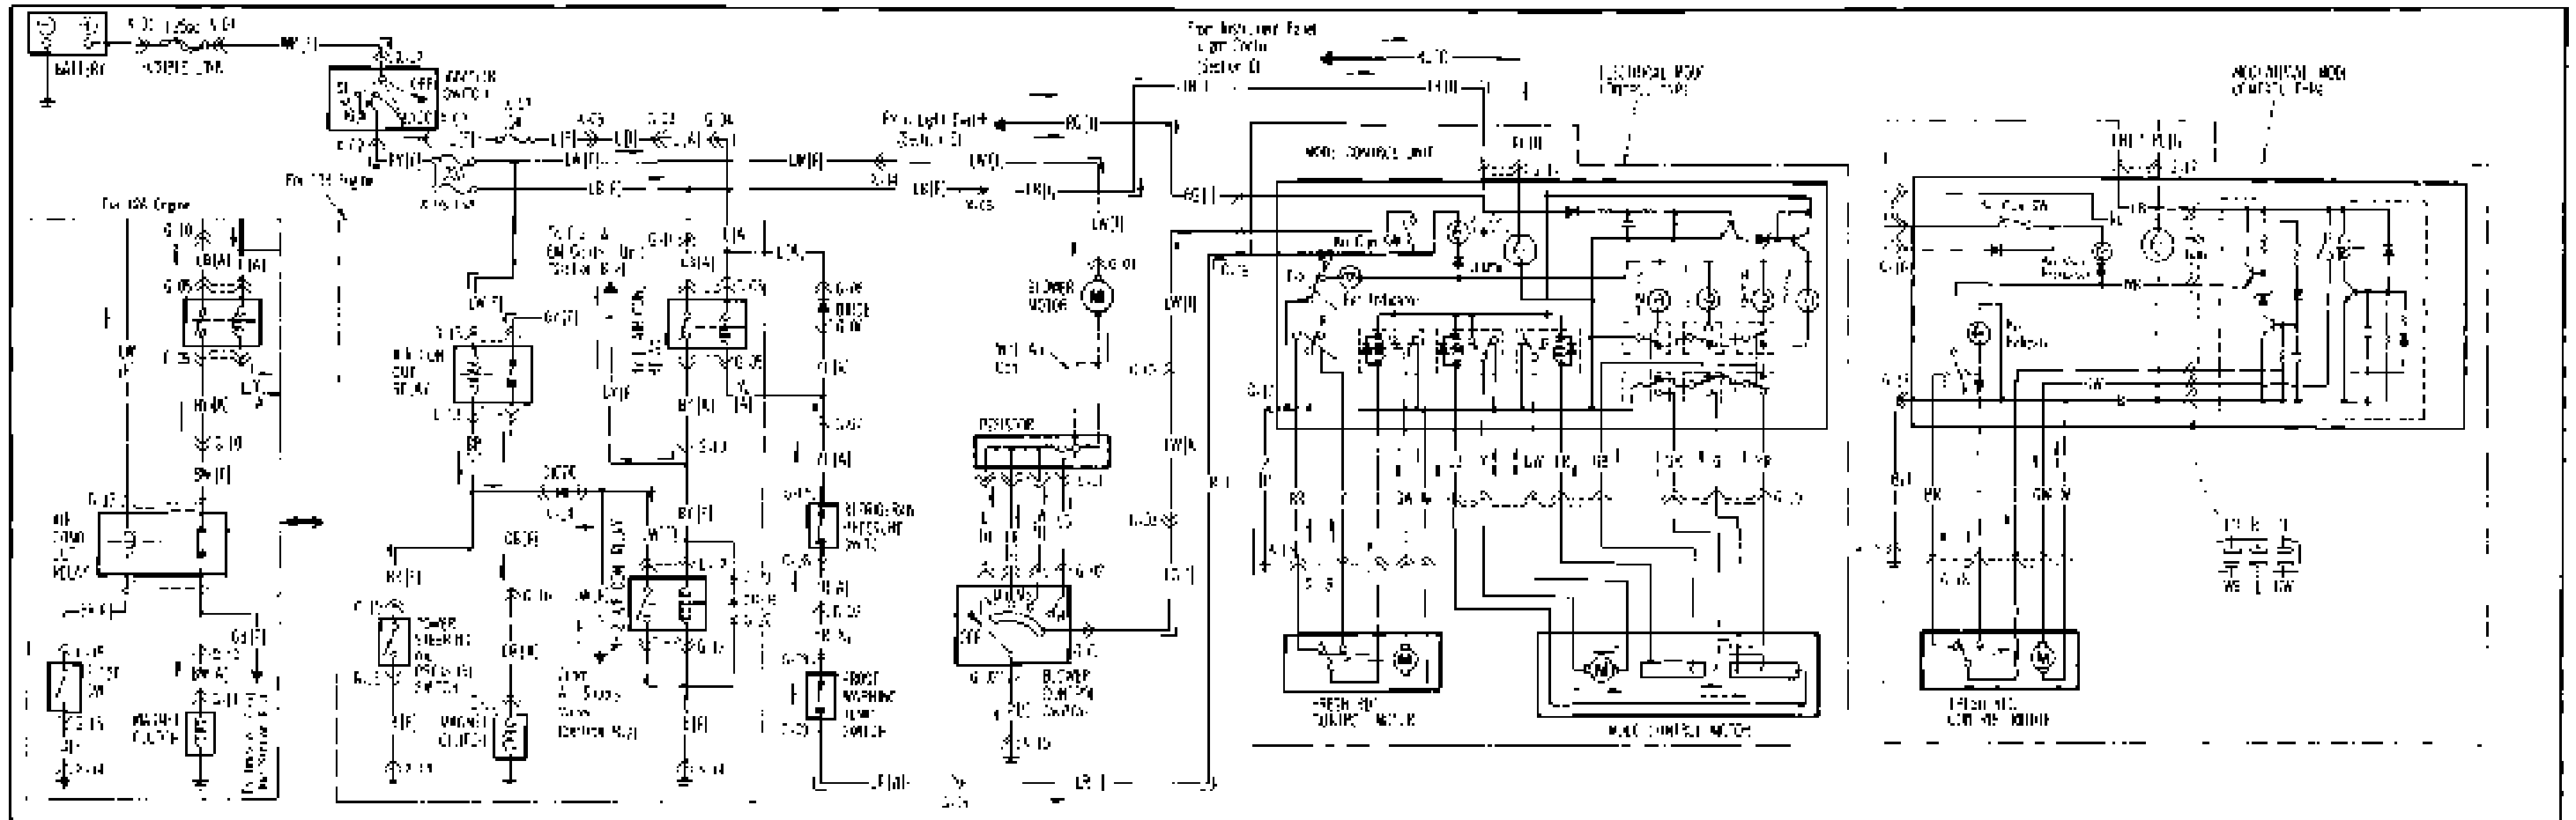


<p>5-01 Blower Motor Unit</p>	<p>5-02 Power Control Switch</p>	<p>5-03 Compressor Relay (Control Panel) and 5-04 Compressor</p>	<p>5-05 Condenser Fan Motor</p>	<p>5-06 Evap. Fan Motor</p>	<p>5-07 Relay</p>	<p>5-08 Control Unit</p>	<p>5-09 Condenser Fan Motor</p>	<p>5-10 Evaporator Fan Motor</p>	<p>5-11 Compressor</p>	<p>5-12 Mechanical Room</p>
<p>5-13 Blower Motor Unit</p>	<p>5-14 Power Control Switch</p>	<p>5-15 Compressor Relay (Control Panel) and 5-16 Compressor</p>	<p>5-17 Condenser Fan Motor</p>	<p>5-18 Evap. Fan Motor</p>	<p>5-19 Relay</p>	<p>5-20 Control Unit</p>	<p>5-21 Condenser Fan Motor</p>	<p>5-22 Evaporator Fan Motor</p>	<p>5-23 Compressor</p>	<p>5-24 Mechanical Room</p>

G-2 For U.S.A. AIR-CON. ■ AIR CONDITIONER

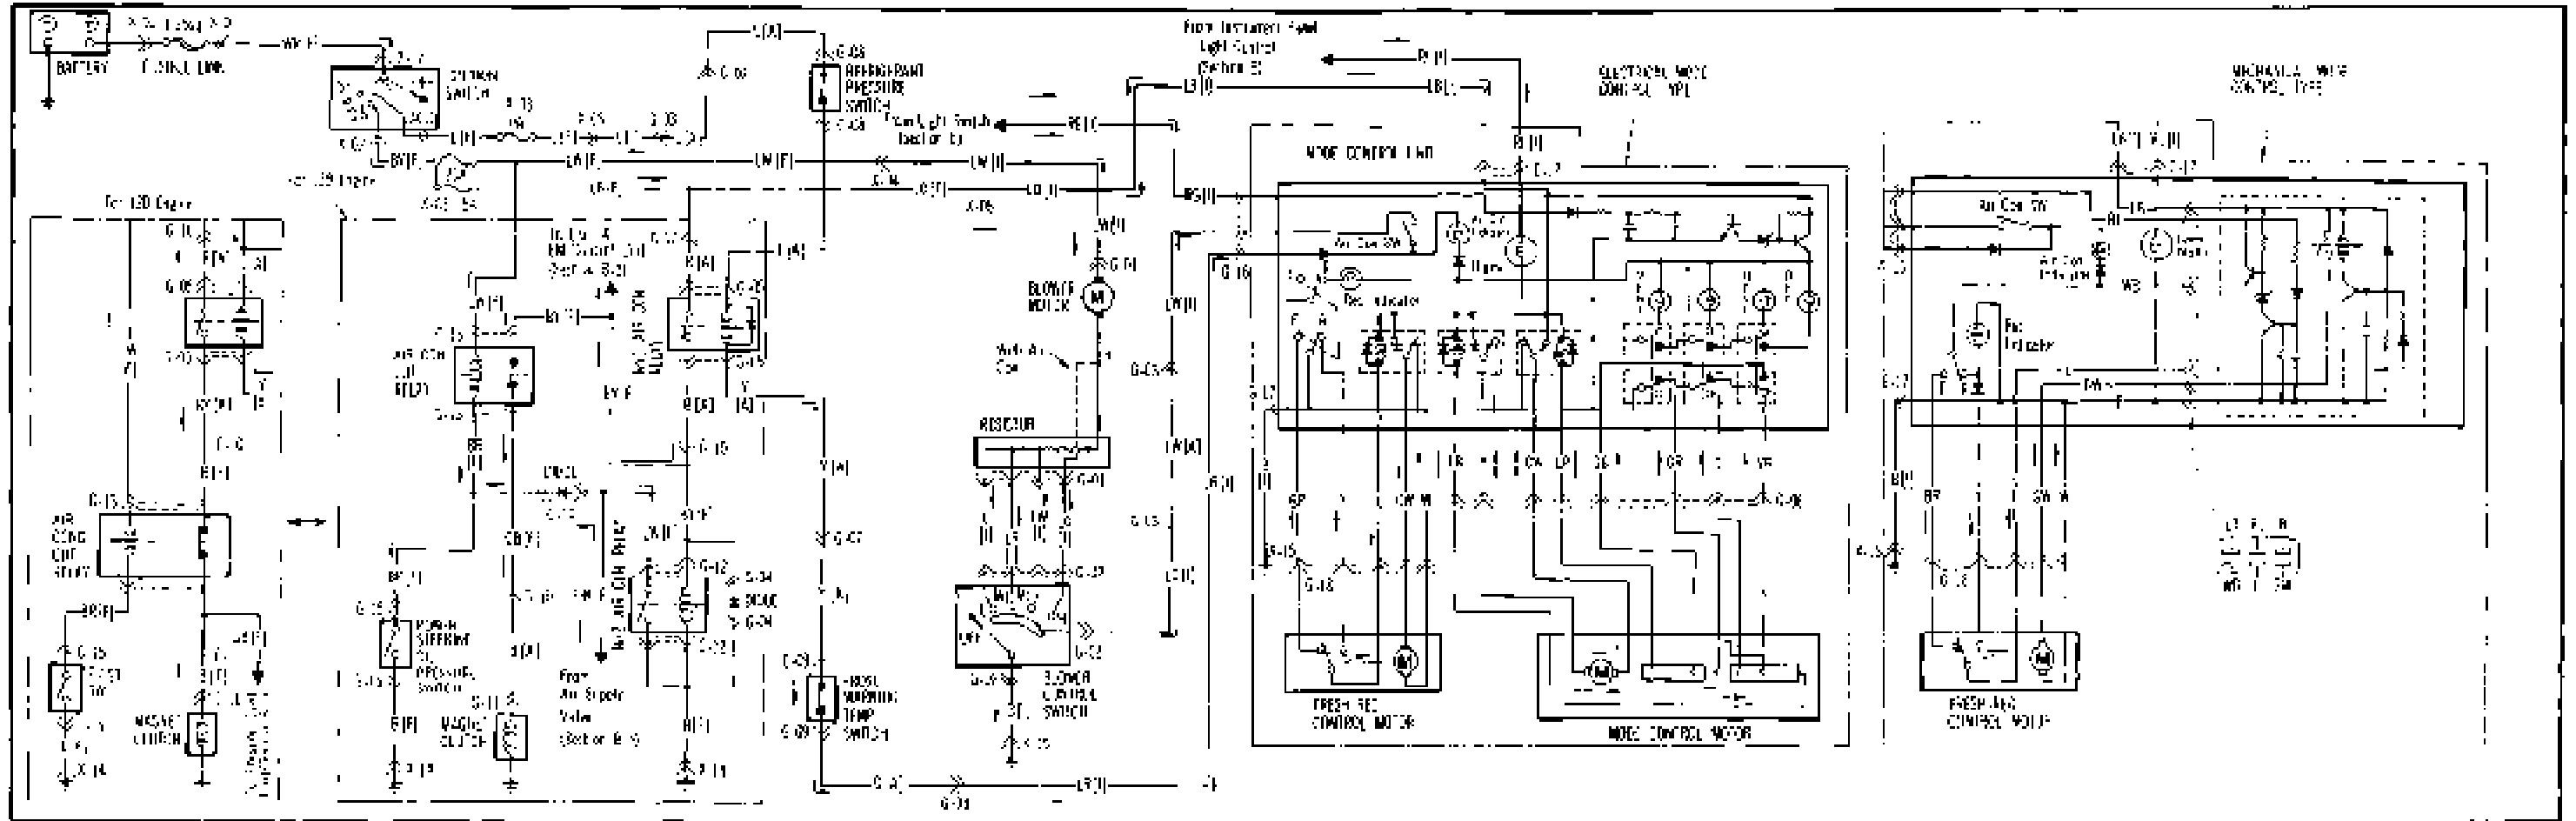

<p>0-01 Power Motor Unit (M)</p>	<p>0-02 Relay (R)</p>	<p>0-03 Connector between Instrument Panel and Air Cond. Unit (A)</p>	<p>0-04 Control (C)</p>	<p>0-05 Relay (R)</p>	<p>0-06 Mode Control Motor (M)</p>	<p>0-07 Connector of Air Cond. Unit (A)</p>	<p>0-08 Refrigerant Pressure Switch (R)</p>	<p>0-09 Fuel Warning Lamp Switch (S)</p>	<p>0-10 Switch Between Air Cond. Unit and Air Cond. Unit (A)</p>	<p>0-11 Negative Control (N)</p>
<p>0-12 Mode Air Cond. Unit (M)</p>	<p>0-13 Air Cond. Unit (A)</p>	<p>0-14 Mode (M)</p>	<p>0-15 Power Steering and Forward Switch (S)</p>	<p>0-16 Air Cond. Switch (S)</p>	<p>0-17 Mode Control Unit (M)</p>	<p>0-18 Refrigerant Pressure Switch (R)</p>				


Key: M - Motor
S - Switch
R - Relay
C - Control
A - Connector
N - Negative Control

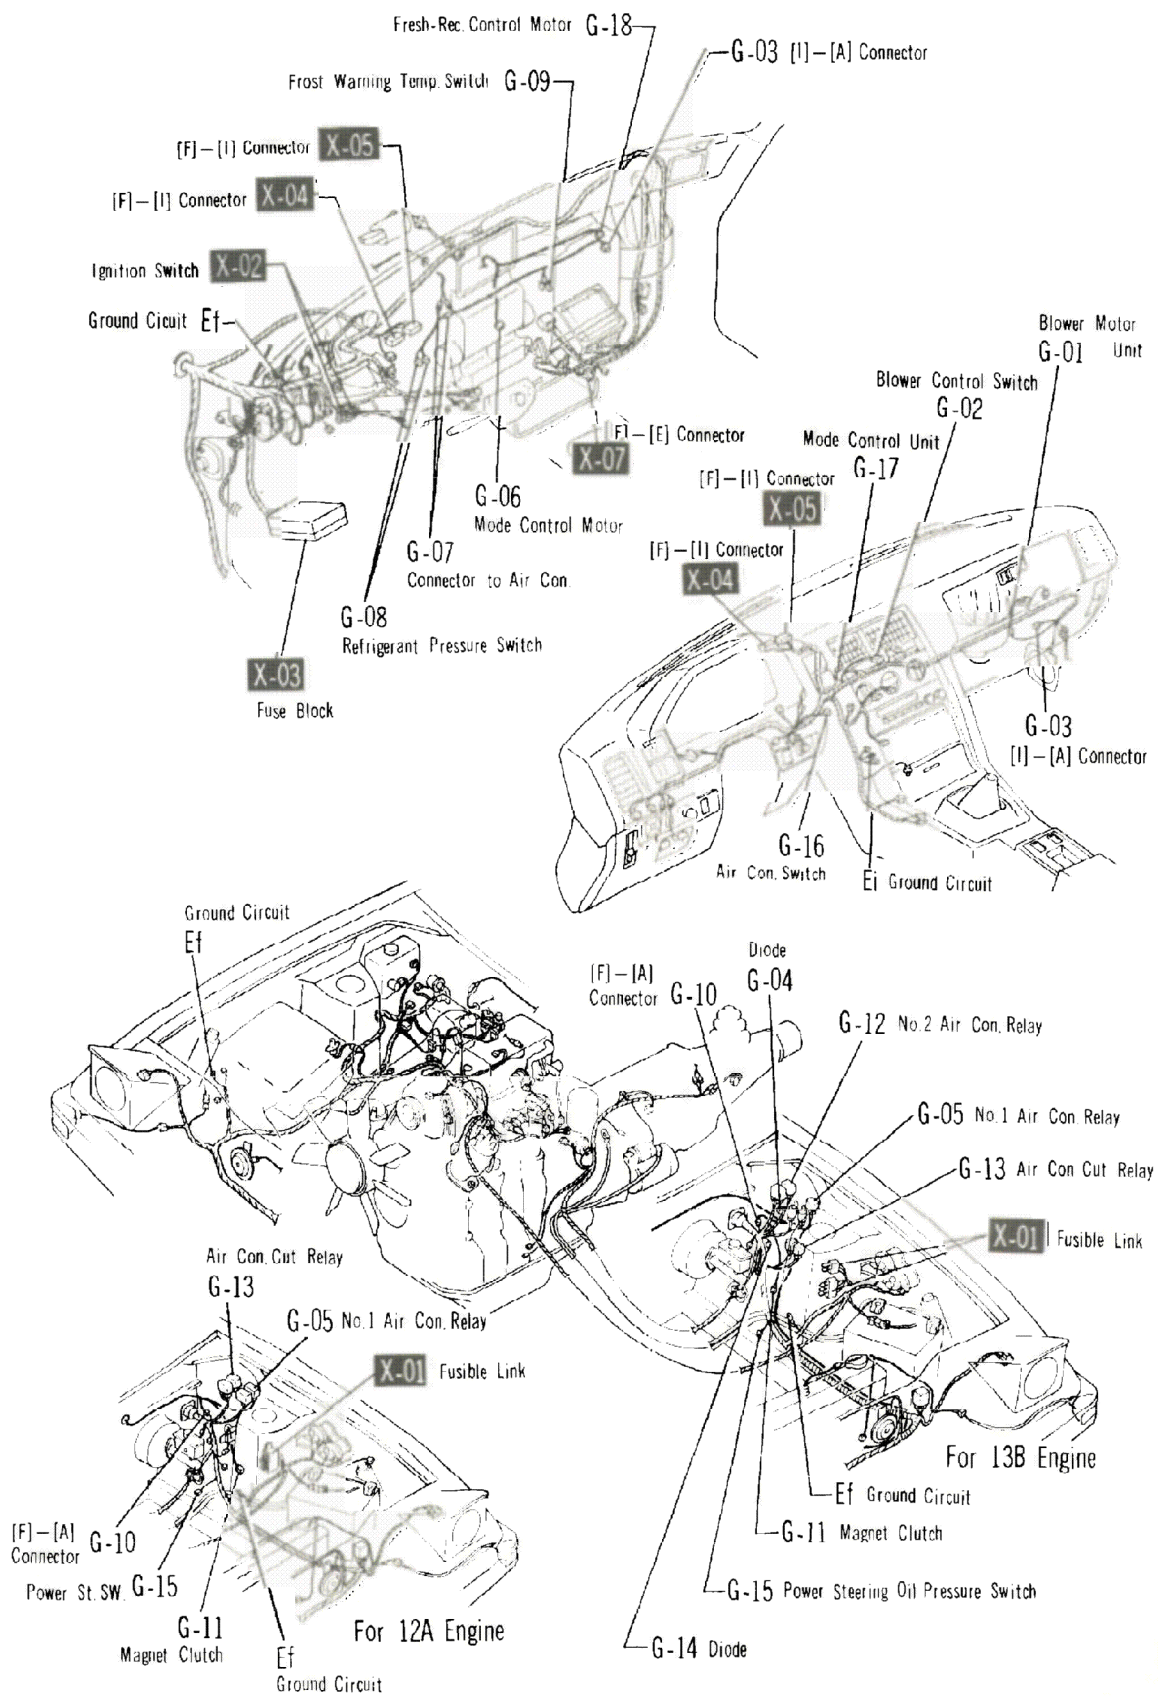

50 WIRING DIAGRAM


H

- LIGHTS OFF REMINDER BUZZER ■ DOOR LOCK CYLINDER & IGNITION KEY CYLINDER LIGHTS
- IGNITION KEY REMINDER BUZZER ■ INTERIOR & SPOT LIGHTS
- AUTO CLOCK ■ LUGGAGE COMPARTMENT LIGHT ■ SEAT BELT WARNING BUZZER

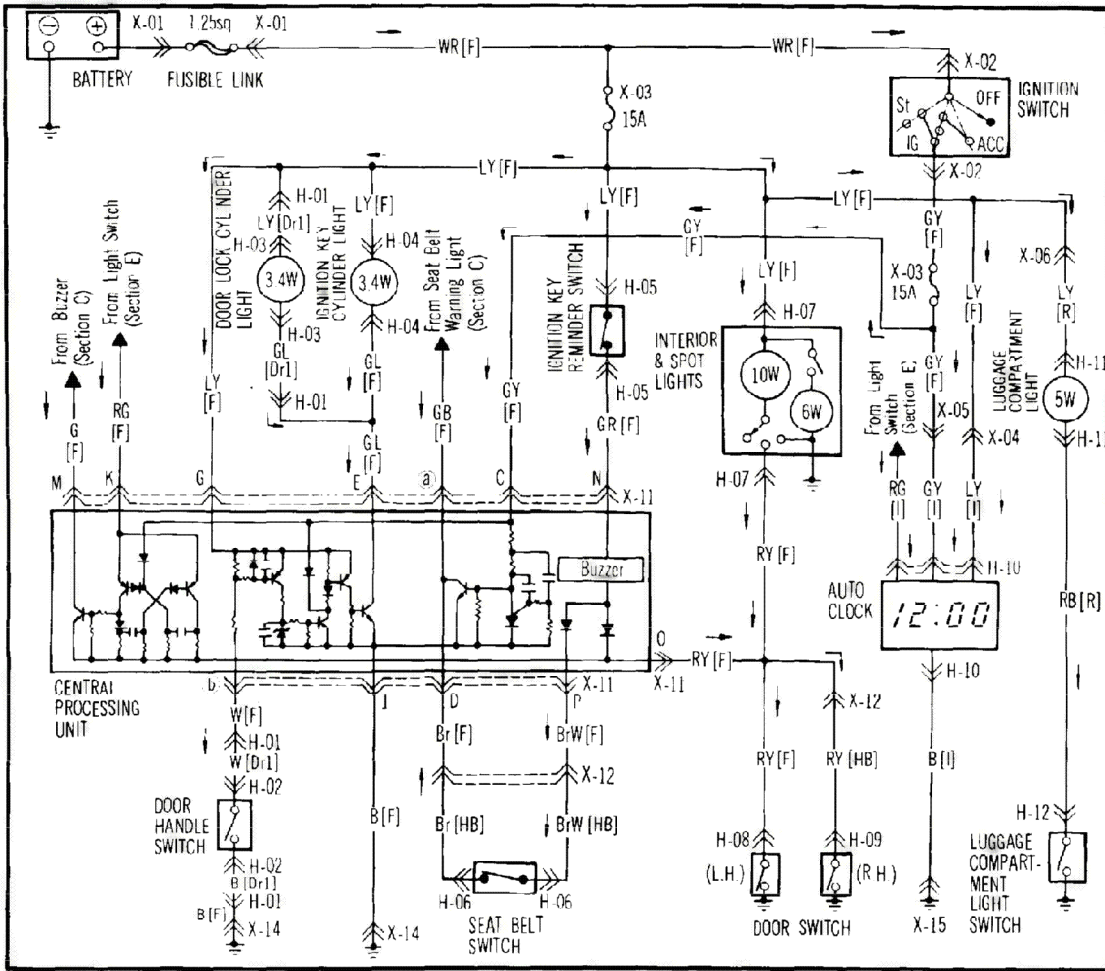


<p>H-01 Connector Between Front And No.1 Door Harness</p>	<p>H-02 Door Handle Switch [Dr1]</p>	<p>H-03 Door Lock Cylinder Light [Dr1]</p>	<p>H-04 Ignition Key Cylinder Light [F]</p>
<p>H-05 Ignition Key Reminder Switch [F]</p>	<p>H-06 Seat Belt Switch [HB]</p>	<p>H-07 Interior & Spot Light [F]</p>	<p>H-08 Door Switch (L.H.) [F]</p>
<p>H-09 Door Switch (R.H.) [HB]</p>	<p>H-10 Auto Clock [I]</p>	<p>H-11 Luggage Compartment Light [R]</p>	<p>H-12 Luggage Compartment Light Switch [R]</p>

Note *... Not Used

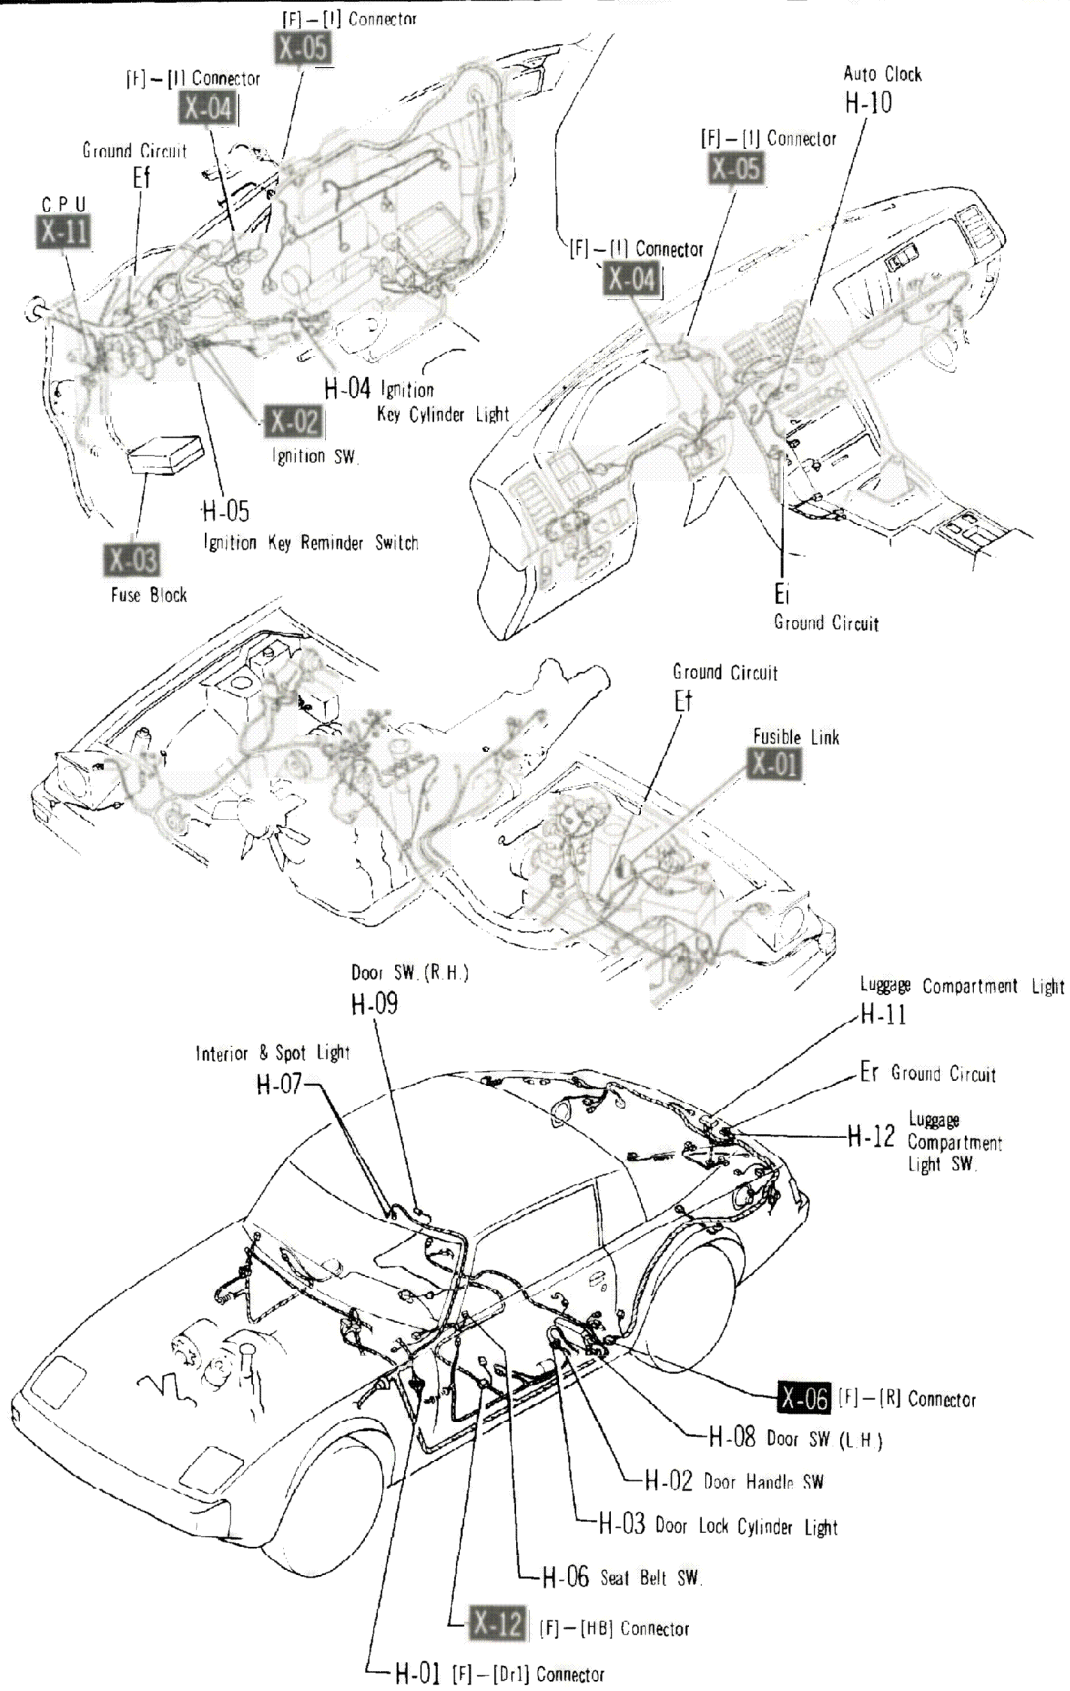


- GLASS HATCH RELEASE SOLENOID ■ FUEL-DOOR RELEASE SOLENOID
- POWER WINDOW ■ REMOTE CONTROL MIRROR
- CIGARETTE LIGHTER

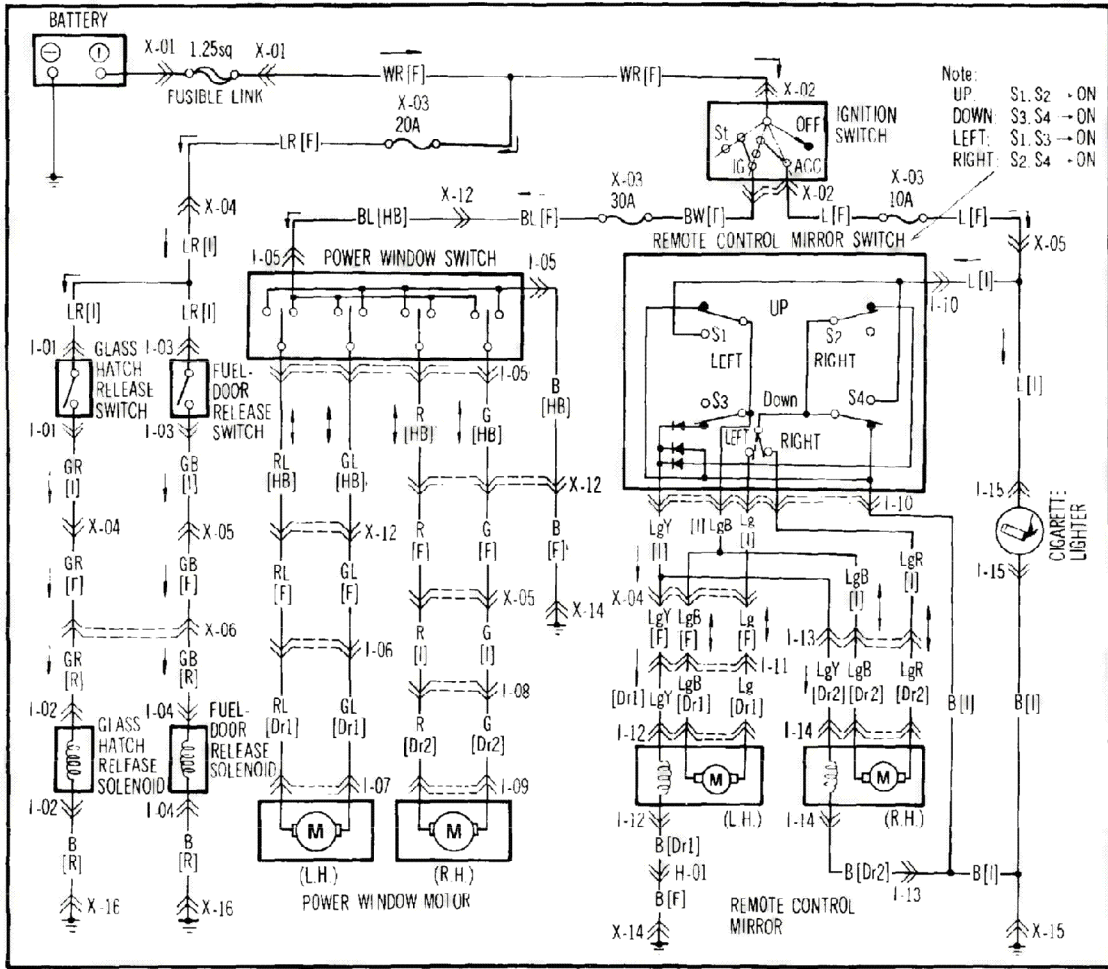

1-01 Glass Hatch Release Switch [I]	1-02 Glass Hatch Release Solenoid [R]	1-03 Fuel-Door Release Switch [I]	1-04 Fuel-Door Release Solenoid [R]
1-05 Power Window Switch [HB]	1-06 Connector Between Front And No 1 Door Harness	1-07 Power Window Motor (L.H.) [Dr1]	1-08 Connector Between Instrument Panel And No 2 Door Harness
1-09 Power Window Motor (R.H.) [Dr2]	1-10 Remote Control Mirror Switch [I]	1-11 Connector Between Front And No.1 Door Harness	1-12 Remote Control Mirror (L.H.) [Dr1]
1-13 Connector Between Instrument Panel And No 2 Door Harness	1-14 Remote Control Mirror (R.H.) [Dr2]	1-15 Cigarette Lighter [I]	

Note: ✕ --- Not Used
50 : 32


J ■ AUDIO SYSTEM ■ POWER ANTENNA

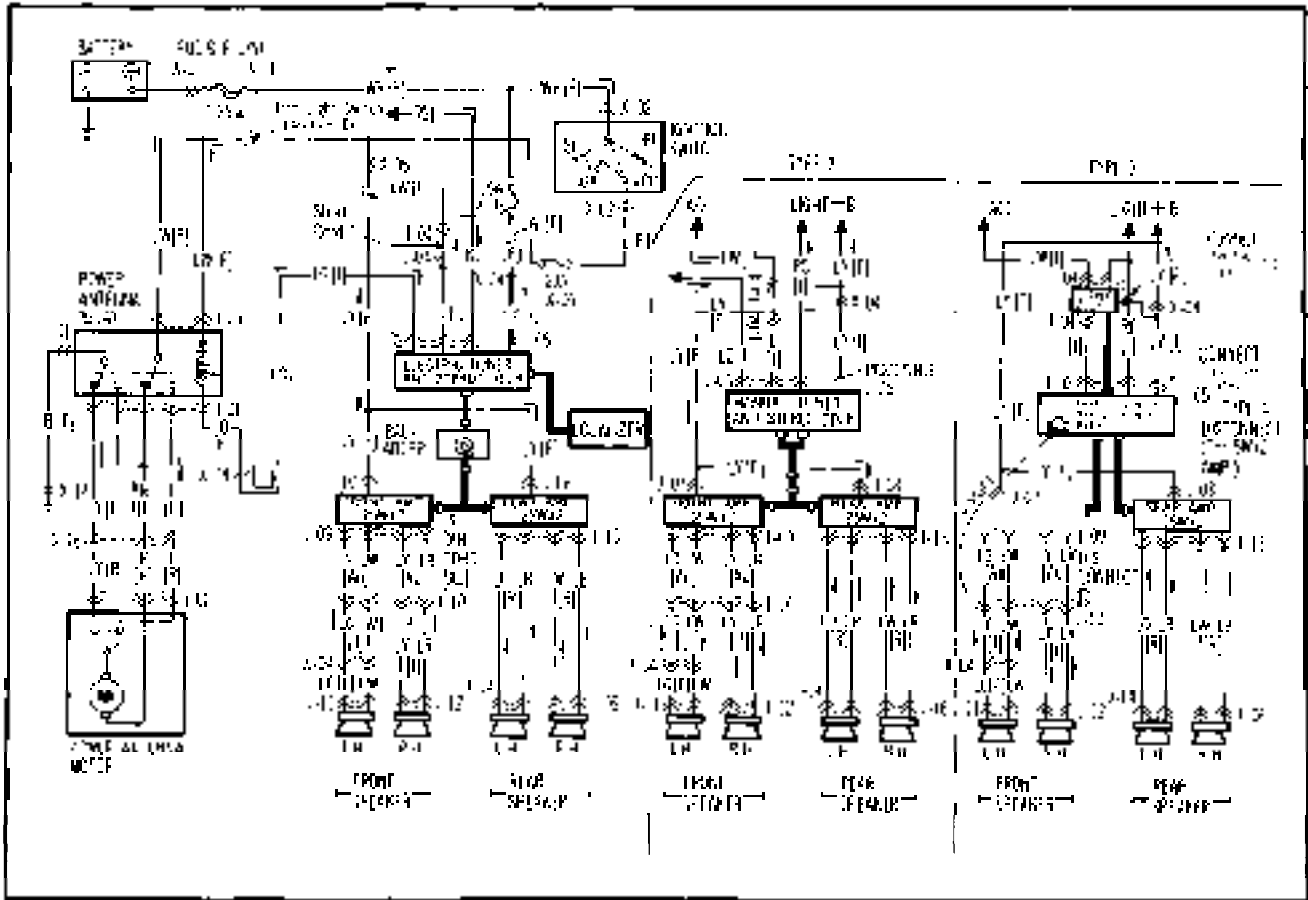


<p>1-11 Power Antenna Relay (R)</p>	<p>1-7 Fuse Block (M, L, R)</p>	<p>1-10 Fuse & Switch (S)</p>	<p>1-17 Stereo Amp (R) (Rear Left) (R)</p>	<p>1-18 Fuse & Switch (S)</p>
<p>1-12 Rear Speaker Grid (R)</p>	<p>1-07 Fuse (R)</p>	<p>1-16 Rear Amp (R)</p>	<p>1-15 Stereo Amp (R) (Rear Right) (R)</p>	<p>1-13 Fuse & Switch (S)</p>
<p>1-11 Fuse & Switch (S)</p>	<p>1-11 Front Amp (R)</p>	<p>1-12 Rear Speaker Grid (R)</p>	<p>1-14 Rear Speaker (R) (R)</p>	

Table 1 - (Continued)

WIRING DIAGRAM 50-J

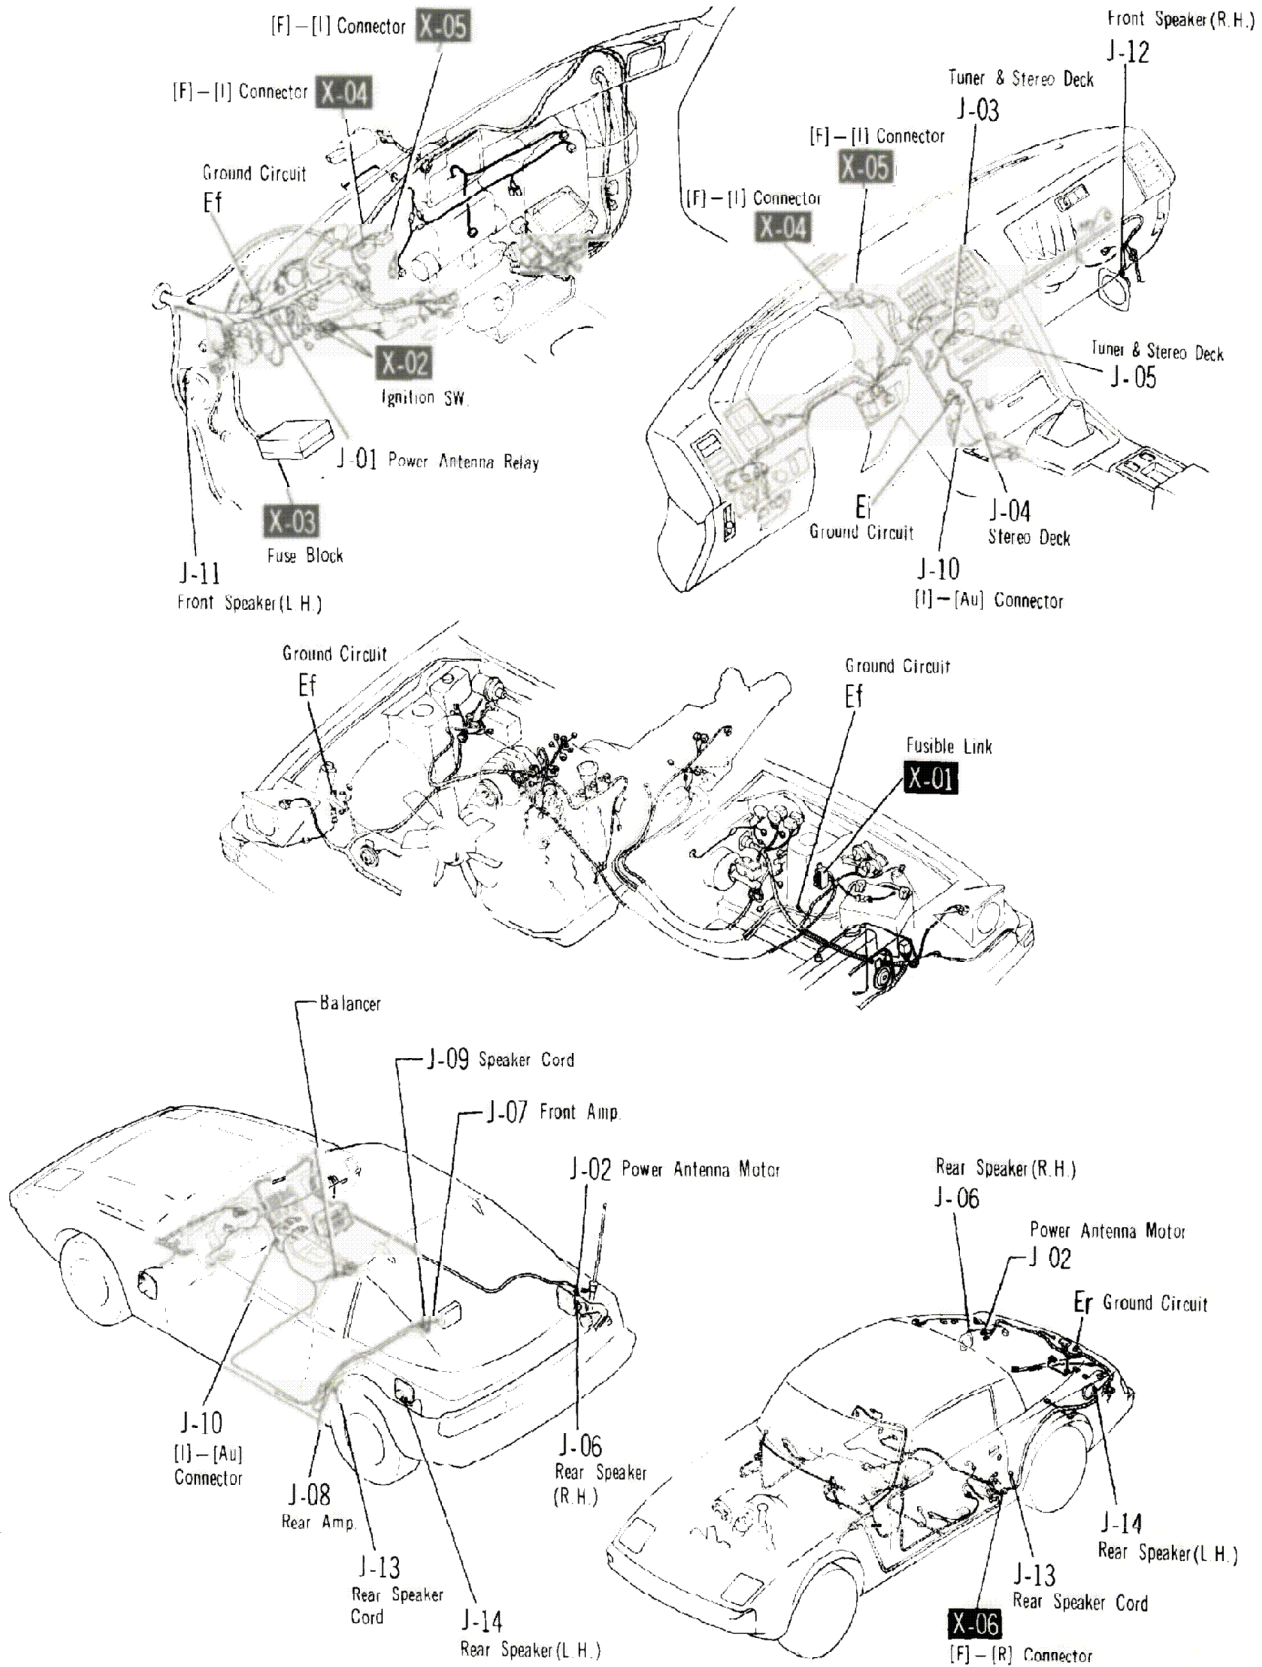

K ■ CRUISE CONTROL SYSTEM
 ■ POWER STEERING CONTROL SOLENOID

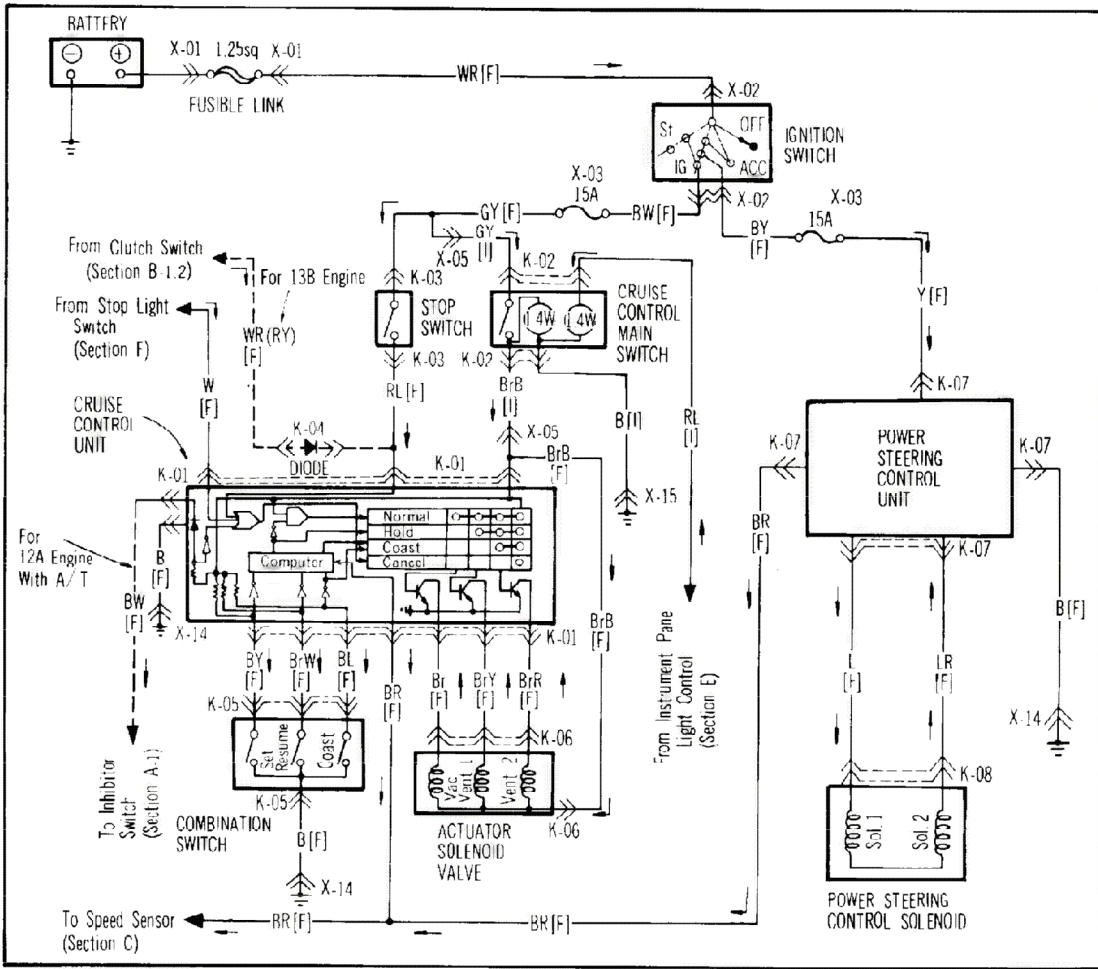

<p>K-01 Cruise Control Unit</p> <p>() For 13B Engine</p>	<p>K-02 Cruise Control Main Switch [I]</p>	<p>K-03 Stop Switch [F]</p>
<p>K-04 Diode [F]</p> <p>() For 13B Engine</p>	<p>K-05 Combination Switch [F]</p>	<p>K-06 Actuator Solenoid Valve [F]</p>
<p>K-07 Power Steering Control Unit [F]</p>		<p>K-08 Power Steering Control Solenoid [F]</p>

Note: ✕ ... Not Used

