

FAMILIARISATION

EXTERIOR

Sunroof

This roof improves the ventilation and light in the passenger compartment.

» 72

Visual and audible rear parking sensors

This system warns you if an obstacle is detected behind the vehicle when reversing.

» 101

Tyre under-inflation detection

This system checks the pressures of the tyres while driving and warns you if there is a problem.

» 103

Visual and audible front parking sensors

This system warns you if an obstacle is detected in front of the vehicle in forward gear.

» 101

Directional headlamps

This additional lighting automatically provides additional visibility when cornering.

» 77



OPEN

Remote control key



- A. Unfolding/Folding the key.
- B. Normal locking or deadlocking.
- C. Complete or selective unlocking.
- D. Unlocking the boot.

Fuel tank



- 1. Fuel filler flap opening button.
- 2. Opening the fuel filler flap.
- 3. Opening and hooking the fuel filler cap.

Capacity of the tank: approximately 67 litres.

Low fuel level



When this warning lamp comes on in the instrument panel, you have enough fuel left to drive approximately 30 miles (50 km).

Bonnet



- 1. Bonnet release lever.
- 2. Opening the bonnet.

OPEN

Doors



☞ After unlocking the vehicle, pull the door handle.

i To facilitate opening of the door, the window lowers automatically by a few centimetres.

It rises and adjusts automatically when the door is closed to ensure perfect sealing.

Boot



To open the boot, press the button and raise the boot lid.

i If the permanent locking of the boot is activated, the boot can only be opened using the button on the remote control.

Sunroof



1. Opening the sunroof.
2. Closing the sunroof.

INTERIOR

Digital air conditioning

This digital air conditioning system ensures comfort and adequate air circulation in the passenger compartment.

» 40

Audio and communication systems

These systems benefit from the latest technology: MP3 compatible audio system, Bluetooth hands-free kit, colour screen, audio system, auxiliary sockets.

» 131

6-speed automatic gearbox

This gearbox offers driving in auto-adaptive mode enhanced by a selection suited to dynamic driving conditions.


» 94

Cruise control/speed limiter

This cruise control system automatically maintains the vehicle speed at the value programmed by the driver, without any action on the accelerator pedal.

The speed limiter system prevents the vehicle from exceeding the programmed speed.

» 97

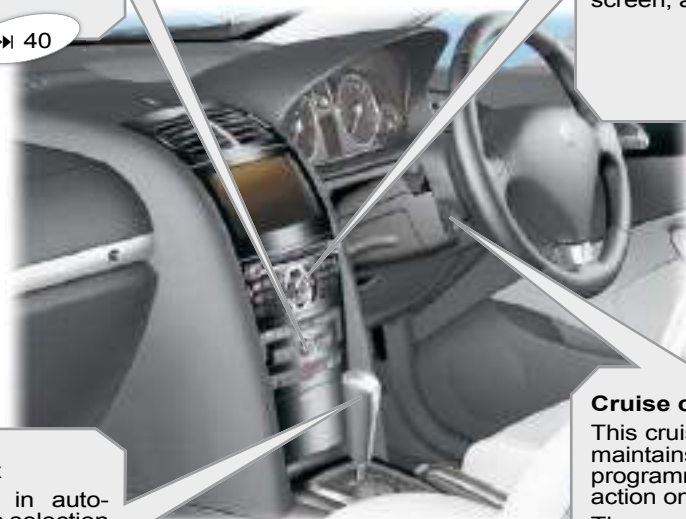

INSTRUMENTS AND CONTROLS



1. Audio system steering mounted controls.
2. Steering lock and ignition.
3. Wipers/screenwash and trip computer control stalk.
4. Instrument panel.
5. Driver's airbag.
Horn.
6. Gear lever.
7. Driver's seat electric controls.
8. Driver's heated seat control.
9. Driver's footwell air outlet.
10. Storage compartment.
11. Fuel filler flap opening button.
12. Adjustable side air vent.
13. Speakers (tweeters).
14. Deactivating the passenger's airbag*.

* According to country.

INSTRUMENTS AND CONTROLS



1. Steering wheel height and reach adjustment.
2. Cruise control/speed limiter switches.
3. Lighting and direction indicator control stalk.
4. Speakers (tweeters).
5. Adjustable and closing central vents.
6. Air diffuser vent grille.
7. Windscreen demisting and defrosting vent.
8. Sunshine sensor.
9. Adjustable side air vent.
10. Bonnet release.
11. Passenger's airbag.
12. Glove box/Video sockets.
Dashboard fusebox.
13. Passenger's footwell air outlet.
14. Passenger's heated seat control.
15. Passenger's seat electric controls.

INSTRUMENTS AND CONTROLS

1. Multifunction screen.
2. Audio and telematics system.
3. Digital air conditioning controls.
4. Deactivation of the parking sensors.
Central locking from the inside.
Alarm control.
Hazard warning lamps.
SPORT suspension control.
Deactivation of the ESP system.
5. Front ashtray/cigar lighter
(100 W max).
6. Gear lever.
7. Parking brake.
8. Retractable cup holder.
9. Armrest with storage compartment
and USB port.
10. 12 volt accessory socket
(100 W max).
11. Rear ashtray.



Peugeot Connect Media



» 131

Peugeot Connect Navigation



» 179

Peugeot Connect Sound



» 211


SITTING COMFORTABLY

Front seat adjustment

Forwards-backwards



Height and angle of the driver's seat cushion

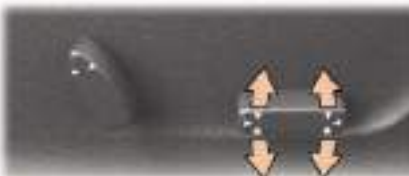

Seat back angle



SITTING COMFORTABLY

Access to the rear seats



1. Driver's seat handle.
2. Passenger seat courtesy handle.

Steering wheel adjustment



Manual

When stationary, release the steering wheel by pushing the control forwards. Adjust the height and reach of the steering wheel then lock by pulling the control fully.



Electric

When stationary, adjust the height and reach of the steering wheel by moving the control:

- ☞ forwards or rearwards to adjust the reach.
- ☞ upwards or downwards to adjust the height.

SITTING COMFORTABLY

Door mirror adjustment



- A.** Door mirror selection, adjustment and folding control.
1. Selection of the driver's side mirror.
 2. Selection of the passenger's side mirror.
 3. Folding the mirrors.

Rear view mirror adjustment



4. Mirror adjustment.



To provide optimum vision when parking, the rear view mirror glass automatically lightens when reverse is engaged.

Storing driving positions



This memorisation stores the electric adjustment of the driver's seat, steering wheel and door mirrors. You can store two driving positions using **buttons M/1 and M/2**.

SITTING COMFORTABLY

Electric windows



- B.** Windows manual or automatic opening and closing control.
- 1.** Driver's electric window.
- 2.** Passenger's electric window.

Front seat belt



- 1.** Fastening.
- 2.** Height adjustment.

Ignition switch



- 1.** **Stop** position.
- 2.** **Running** position.
- 3.** **Starting** position.



A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

SEEING CLEARLY

Lighting



The selected position is shown in the instrument panel by the corresponding indicator.

Ring A



Lighting off



Automatic illumination of headlights



Sidelamps



Dipped/Main beam headlights



Automatic illumination of headlights: activate or deactivate the function via the multifunction screen configuration menu.

Ring B



Front foglamps (one turn)



Front foglamps and rear foglamps (two turns)

Wipers



- 2. Fast wipe.
- 1. Normal wipe.
- I. Intermittent wipe.
- 0. Park.
- AUTO.** Automatic wipe then single wipe.
- A.** Screenwash.

VENTILATION

Digital air conditioning (Dual-zone)



Driver and passenger automatic programme (comfort).



Passenger's side temperature adjustment.
Driver's side temperature adjustment.



Air flow adjustment.



Ventilation off.



Passenger air distribution adjustment.



Driver's air distribution adjustment.



Front visibility control.



Exterior air intake.
Interior air recirculation.



Rear screen demisting.

MONITORING

Instrument panel



- A. With the ignition on, the fuel gauge needle should rise.
- B. With the engine running, the associated low level warning lamp should go off.
- C. With the ignition on, the oil level indicator should display "OIL OK" for a few seconds.

If the levels are not correct, top up the level which is low.

Warning lamps



- With the ignition on, the orange and red warning lamps come on.
- With the engine running, these warning lamps should go off.
- If a warning lamp remains on, refer to the page concerned.

Switch panel



Lighting of the indicator lamp indicates the status of the corresponding function.

- A. Deactivation of the front and/or rear parking sensors. » 102
- B. Central locking. » 70
- C. Deactivation of the interior protection alarm. » 68
- D. Hazard warning lamps. » 84
- E. Selection of the electronically controlled suspension. » 96
- F. Deactivation of the electronic stability programme ESP. » 85

PASSENGER SAFETY

Front passenger's airbag*



1. Insert the key.
2. Select the **"OFF"** position.
3. Remove the key keeping the switch in the new position.

* According to country.

Passenger's airbag deactivated

For the safety of your child, it is essential that you deactivate the passenger's airbag when you install a "rear facing" child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.



This warning lamp remains on in the instrument panel whilst the airbag is deactivated.

Front seat belt fastening detection



When the ignition is switched on, if a front occupant has not fastened their seat belt and if the vehicle speed is below 12 mph (20 km/h), the seat belt warning lamp comes on.

The warning lamp goes off when the seat belt(s) concerned is(are) fastened. If the vehicle speed is above 12 mph (20 km/h), the seat belt warning lamp flashes, together with an audible signal and a message in the multifunction screen identifying the seat belt(s) which is(are) not fastened.

DRIVING SAFELY

Cruise control



This enables the vehicle to maintain a constant speed programmed by the driver.

1. Selection/Switching off cruise control mode.
2. Decrease the programmed value and storing a speed.
3. Increase the programmed value and storing a speed.
4. Cruise control on/off.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox.

Speed limiter



This prevents the vehicle from exceeding the speed programmed by the driver (minimum speed 20 mph (30 km/h)).

1. Selection/Switching off speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter on/off.

The values must be set with the engine running.

Display in the instrument panel



The cruise control or speed limiter mode appears in the instrument panel when it is selected.



Cruise control



Speed limiter



5-DIAL PETROL-DIESEL MANUAL AND AUTOMATIC GEARBOX INSTRUMENT PANELS

1. Coolant temperature indicator dial.
2. Lighting on indicators:
 - dipped beam headlamps.
 - main beam headlamps.
 - front foglamps.
 - rear foglamps.
3. Rev counter dial.
4. Warning lamps:
 - seat belts not fastened in the front.
 - fuel level.
 - left direction indicator.
5. Fuel gauge dial.
6. Warning lamps:
 - parking brake applied or brake fluid level or electronic brake force distribution fault.
 - right direction indicator.
7. Speedometer dial.
8. Warning lamps:
 - emission control system.
 - anti-lock braking system (ABS).
 - passenger's airbag deactivated.
 - pre-heat (Diesel engine starting).
9. Engine oil temperature indicator dial.
10. CHECK and trip recorder zero reset and service display button.
11. Instrument panel display:
 - Total distance recorder.
 - Trip recorder.
 - Cruise control/speed limiter reference value.
 - Service indicator.
 - Guidance advice (navigation).
 - CHECK (vehicle self-test).
 - Trip computer information.
 - Automatic gearbox lever position indicator.
 - Warning and status displays.
12. Instrument panel lighting dimmer.

CHECK (vehicle self-test)

Automatic CHECK

With the key in the running (ignition on) position, all of the warning lamps of the functions tested are displayed. They are switched off after a few seconds.

At the same time, an automatic CHECK (vehicle self-test) is carried out.



No "major" fault has been detected: the CHECK OK indicator lamp is displayed after a few seconds.

You can start your vehicle.

In the presence of a fault

A "minor" fault has been detected: when the CHECK OK indicator lamp has been displayed, the warning lamp(s) is(are) displayed.

You can start your vehicle; however, contact a PEUGEOT dealer as soon as possible.

A "major" fault has been detected: the CHECK OK indicator lamp does not appear and the warning lamp(s) is(are) displayed.

Do not start your vehicle.

Call a PEUGEOT dealer without delay.



Manual CHECK

Pressing the "CHECK/000" button on the instrument panel starts the manual CHECK (vehicle self-test).

This function enables you to find out, at any time (with the key in the ignition on position or with the engine running):

- the alerts present,
- the status of the functions activated or deactivated (automatic rain sensitive wipers, automatic illumination of headlamps).

With the engine running and the vehicle moving, the instrument panel screen displays the warning lamps (in the event of a fault).



The passenger's airbag deactivated warning lamp* remains on while the airbag is deactivated.

INSTRUMENT PANEL WARNING LAMPS



Braking system warning lamp

This indicates:

- parking brake applied or incorrectly released,
- an excessive drop in the brake fluid level, in this case linked with the **STOP** warning lamp,
- an electronic brake force distribution malfunction, linked with the **STOP** warning lamp.



This warning lamp is repeated in the instrument panel screen in the case of the last 2 faults.

You must stop as soon as it is safe to do so in the two latter cases. Consult a PEUGEOT dealer.



Directional headlamps warning lamp

When this flashes, it indicates a malfunction of the directional headlamps.

Consult a PEUGEOT dealer.



Seat belt warning lamp

When the ignition is switched on, the warning lamp comes on if a front occupant has not fastened or unfastens their seat belt.



Low fuel warning lamp

In certain driving conditions and depending on the engine, the distance which you will be able to travel with the remaining fuel may be less than 30 miles (50 kilometres) (the capacity of the tank is approximately 67 litres).



This warning lamp is repeated in the instrument panel screen.



Emission control system warning lamp

This should switch off a few seconds after the engine is switched on.

When the engine is running, if the warning lamp flashes or comes on continuously, this indicates an emission control system fault.

Contact a PEUGEOT dealer as soon as possible.



Anti-lock braking system (ABS) warning lamp

If it comes on continuously above 6 mph (10 km/h), it indicates an ABS fault.

However, the vehicle retains conventional servo-assisted braking. Consult a PEUGEOT dealer.



This warning lamp is repeated in the instrument panel screen.



Passenger's airbag deactivated warning lamp*

If the warning lamp remains on, this indicates that the passenger's airbag has been deactivated intentionally.



Diesel engine pre-heat warning lamp

Wait for the warning lamp to go off before starting. The length of time that the lamp stays on is determined by the exterior climatic conditions.

INSTRUMENT PANEL SCREEN WARNING LAMPS



STOP warning lamp

It comes on linked with the warning lamps for engine oil pressure, coolant temperature, power steering, braking system or punctured tyre.

Stop as soon as it is safe to do so.
Consult a PEUGEOT dealer.



Low coolant level warning lamp (according to version)

This warning lamp indicates that cooling system level is too low.

Stop as soon as it is safe to do so.
Consult a PEUGEOT dealer.

Warning: the cooling system is pressurised, wait for the engine to cool down before topping up the level.



When topping up, and in order to prevent any risk of scalding, unscrew the cap by two turns to allow the pressure to drop.

When the pressure has dropped, remove the cap and top up the level with coolant.



Engine oil level warning lamp

This indicates a low engine oil level.

Stop as soon as it is safe to do so.
Consult a PEUGEOT dealer.



Parking brake warning lamp

This indicates that the parking brake is still applied or has not been released correctly.

It is linked with the braking system warning lamp.



Low screenwash and headlamp wash fluid level warning lamp

When the wipers are switched on, this indicates that the fluid level is too low.

Fill the screenwash and headlamp wash fluid reservoir.



Battery charge warning lamp

When the engine is running, this indicates a charging circuit fault (battery terminals, alternator belt).

Consult a PEUGEOT dealer.

Electronic stability control system (ESP) warning lamps



Activation warning lamp



Operation warning lamp



Deactivation warning lamp



Fault warning lamp



Under-inflation tyre warning lamp

This indicates that the tyre pressure is too low.

A message in the multifunction screen indicates the wheel(s) concerned.

Refer to the information label affixed to the central pillar of the driver's door. For your safety, check the tyre pressures as soon as possible.



Power steering warning lamp

This indicates a power steering fault.

It is linked with the **STOP** warning lamp.
Consult a PEUGEOT dealer.



Punctured tyre warning lamp

This indicates that one or more punctured tyres have been detected.

A message in the multifunction screen identifies the wheel(s) concerned.

It is linked with the **STOP** warning lamp.

Stop as soon as it is safe to do so.

Change the damaged wheel and have it repaired by a PEUGEOT dealer.



Tyre under-inflation detection system warning lamp

This indicates the absence or fault with one or more tyre pressure sensors or a system fault.

Consult a PEUGEOT dealer.



Electronic engine immobiliser warning lamp

This indicates an electronic engine immobiliser system fault.

Consult a PEUGEOT dealer.



Front brake pad wear warning lamp

This indicates that the brake pads are worn.

For your safety, have them replaced by a PEUGEOT dealer.



Fuel filler cap warning lamp (according to version)

With the engine running, this indicates that the fuel filler cap is incorrectly fitted or missing.

It comes on in orange if the vehicle speed is below 6 mph (10 km/h) and in red if the vehicle speed is above 6 mph (10 km/h).



Door/boot open warning lamp

With the engine running, this indicates that an opening has not been closed correctly.

An image in the multifunction screen identifies the opening concerned.

It comes on in orange if the vehicle speed is below 6 mph (10 km/h) and in red if the vehicle speed is above 6 mph (10 km/h).



Airbag warning lamp

This indicates an airbag fault.

Consult a PEUGEOT dealer.



Automatic headlamp beam adjustment system warning lamp

This indicates that the automatic headlamp height adjustment system is faulty.

Consult a PEUGEOT dealer.



Engine oil pressure warning lamp

This indicates that the engine oil pressure is too low.

It is linked with the **STOP** warning lamp.

Stop immediately if it comes on while the engine is running.

If there is a lack of oil in the lubrication system, top up the level and contact a PEUGEOT dealer as soon as possible.



Particle emission filter saturation warning lamp (Diesel engine)

With the engine running, this indicates that the particle emission filter is starting to become saturated (exceptionally prolonged urban driving type conditions: low speed, long traffic jams...) or a low Diesel additive reservoir level.

In order to regenerate the filter, you are advised to drive, as soon as possible when the traffic conditions permit, at a speed of 40 mph (60 km/h) or above for at least five minutes (until the warning lamp goes off).

If the warning lamp remains on, contact a PEUGEOT dealer.

Following prolonged use of the vehicle at very low speeds or at idle, you may, exceptionally, notice an emission of water vapour at the exhaust during acceleration. This does not affect the performance of the vehicle or the environment.



Water in Diesel filter warning lamp

This indicates the presence of water in the Diesel filter. There is a risk of damage to the injection system.

Contact a PEUGEOT dealer as soon as possible.



Service warning lamp

This is displayed to indicate an engine management system fault.

Contact a PEUGEOT dealer as soon as possible.



Electronically controlled suspension fault warning lamp

This indicates an electronically controlled suspension malfunction.

Select automatic operation and contact a PEUGEOT dealer as soon as possible.



Parking sensor system warning lamp

In forward and/or reverse gear, this indicates a parking sensor system fault.

Consult a PEUGEOT dealer.



Electronically controlled suspension indicator lamps

This comes on when the SPORT function is activated.



This comes on when the SPORT function is deactivated.



Automatic illumination of headlamps on indicator

This comes on when the AUTO function is activated.



Automatic illumination of headlamps off indicator

This comes on when the AUTO function is deactivated.



Automatic rain sensitive wipers on indicator

This comes on when the AUTO function is activated.



Automatic rain sensitive wipers off indicator

This comes on when the AUTO function is deactivated.

Automatic gearbox lever position indicators



"Park" indicator



"Reverse" indicator



"Neutral" indicator



"Drive" indicator

The letter **S** or the symbol *, associated with the gear lever position indicators, corresponds to the Sport or Snow programme selected intentionally.



This indicates an automatic gearbox programme fault.

6 speed automatic gearbox

"Manual" indicators

These correspond to the manual control of the gearbox.



When the engine speed is too low or too high in relation to the gear engaged, the gear selected flashes for a few seconds, then the actual gear is displayed, the auto-adaptive programme having taken control temporarily.



Automatic gearbox fault warning lamp

This indicates an automatic gearbox fault.

The gearbox will operate in down-grade mode, locked in 3rd gear.

Never force the gear lever.
Consult a PEUGEOT dealer.



Coolant temperature indicator

When the needle is in zone **A**, the temperature is correct.

When the needle is in zone **B**, the temperature is too high.



If the coolant temperature warning lamp comes on (linked with the **STOP** warning lamp), stop as soon as it is safe to do so.

Wait for the engine to cool down before topping up the level, if necessary.



As the cooling circuit is pressurised, in order to prevent any risk of scalding, unscrew the cap by two turns to allow the pressure to drop.

When the pressure has dropped, remove the cap and top up the level with coolant, if necessary.

Consult a PEUGEOT dealer.



Engine oil temperature indicator

When the ignition is switched on or while the vehicle is moving, this indicates the engine oil temperature.

When the needle is in zone **C**, the temperature is correct.

When the needle is in zone **D**, the temperature is too high.

Reduce your speed to lower the temperature.

SERVICE INDICATOR

This is a visual reminder of when the next service is due. This service is to be carried out according to the manufacturer's servicing schedule.

Operation

As soon as the ignition is switched on and for 5 seconds, the spanner symbolising the service operations is on. The trip recorder display shows the distance remaining (in round figures) before the next service.

Example: when switching on the ignition and for 5 seconds, the display shows that 400 miles/900 km remain before the next service is due.



Once an engine oil level indication has been displayed, the display indicates the total and trip distances.

If the service is overdue, each time the ignition is switched on and for 5 seconds, the distance and the spanner flash.

Example: when the ignition is switched on and for 5 seconds, the display indicates that the service is overdue by 300 miles/km. The service should be carried out very shortly.



Once the servicing and oil level information has been displayed, the total distance recorder resumes normal operation and the spanner remains on.

The point at which a service is due is calculated using two parameters:

- the total distance travelled,
- the time elapsed since the last service.

The distance remaining may be weighted by the time factor, depending on the user's driving conditions.



Engine oil temperature indicator

When the ignition is switched on or while the vehicle is moving, this indicates the engine oil temperature.

When the needle is in zone **C**, the temperature is correct.

When the needle is in zone **D**, the temperature is too high.

Reduce your speed to lower the temperature.

SERVICE INDICATOR

This is a visual reminder of when the next service is due. This service is to be carried out according to the manufacturer's servicing schedule.

Operation

As soon as the ignition is switched on and for 5 seconds, the spanner symbolising the service operations is on. The trip recorder display shows the distance remaining (in round figures) before the next service.

Example: when switching on the ignition and for 5 seconds, the display shows that 400 miles/900 km remain before the next service is due.



Once an engine oil level indication has been displayed, the display indicates the total and trip distances.

If the service is overdue, each time the ignition is switched on and for 5 seconds, the distance and the spanner flash.

Example: when the ignition is switched on and for 5 seconds, the display indicates that the service is overdue by 300 miles/km. The service should be carried out very shortly.



Once the servicing and oil level information has been displayed, the total distance recorder resumes normal operation and the spanner remains on.

The point at which a service is due is calculated using two parameters:

- the total distance travelled,
- the time elapsed since the last service.

The distance remaining may be weighted by the time factor, depending on the user's driving conditions.

Service indicator zero re-set

Your PEUGEOT dealer carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- ☞ Switch off the ignition,
- ☞ Press and hold the trip recorder re-set button,
- ☞ Switch on the ignition.

The display begins a countdown.

When the display shows "**=0**", release the button; the spanner disappears.



After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for approximately 5 seconds, after the service information.



Oil level correct



Oil level too low

Flashing indicates that the oil level is too low, which may damage the engine.

If the low oil level is confirmed by checking with the dipstick, the level must be topped up.



Oil level indicator fault (flashing segments)

Check the oil level using the dipstick. If the level is correct, the flashing indicates an engine oil level gauge malfunction.

Consult a PEUGEOT dealer.

The level observed on the dipstick is only valid if the vehicle is parked on level ground and the engine has been off for more than 15 minutes.



Dipstick

There are 2 level marks on the dipstick: never exceed level **A**.

In position **B**, top up the level via the oil filler cap, using the type of oil suited to your engine.

A = max.

B = min.

Service indicator zero re-set

Your PEUGEOT dealer carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- ☞ Switch off the ignition,
- ☞ Press and hold the trip recorder re-set button,
- ☞ Switch on the ignition.

The display begins a countdown.

When the display shows "**=0**", release the button; the spanner disappears.



After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for approximately 5 seconds, after the service information.



Oil level correct



Oil level too low

Flashing indicates that the oil level is too low, which may damage the engine.

If the low oil level is confirmed by checking with the dipstick, the level must be topped up.



Oil level indicator fault (flashing segments)

Check the oil level using the dipstick. If the level is correct, the flashing indicates an engine oil level gauge malfunction.

Consult a PEUGEOT dealer.

The level observed on the dipstick is only valid if the vehicle is parked on level ground and the engine has been off for more than 15 minutes.



Dipstick

There are 2 level marks on the dipstick: never exceed level **A**.

In position **B**, top up the level via the oil filler cap, using the type of oil suited to your engine.

A = max.

B = min.



Mileage recorder

The total mileage is displayed in zone **A** of the screen and the trip mileage in zone **B**.



Trip recorder zero reset

With the trip mileage displayed, press the button for a few seconds.



LIGHTING DIMMER

With the exterior lighting on, press the button to vary the intensity of the lighting of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness.

As soon as the lighting is of the required brightness, release the button.

TRIP COMPUTER



or



TRIP: access to the trip computer information.

Each successive press on the button located at the end of the **wiper stalk** displays different information.



- the **"vehicle"** tab with:
 - range,
 - current fuel consumption,
 - distance remaining.



- trip **"1"** tab with:
 - distance travelled,
 - average fuel consumption,
 - average speed, for the first trip.



- trip **"2"** tab with:
 - distance travelled,
 - average fuel consumption,
 - average speed, for the second trip.

Trips

Trips **"1"** and **"2"** are independent but are used in the same way.

For example, trip **"1"** could be used for daily figures and trip **"2"** for monthly figures.

Zero reset

When the required trip is displayed, press the control for more than two seconds.



Range (miles or km)

This shows the distance that can still be covered with the fuel remaining in the tank based on the average fuel consumption over the last few miles (kilometres).



This figure may change if there is a change in the style of driving or the road profile, producing a significant change in current fuel consumption.

When the range is less than 20 miles (30 km), four bars are displayed. After filling with fuel, the range is displayed when it exceeds 62 miles (100 km).



If horizontal bars are displayed for long periods instead of digits, contact a PEUGEOT dealer.



Current fuel consumption (mpg or l/100 or km/l)

This is the average fuel consumption during the last few seconds.



 
This function is displayed only when the vehicle is travelling at a speed greater than 20 mph (30 km/h).



Distance remaining to be travelled (miles or km)

This is the distance remaining to the destination, either calculated at any time by the navigation if guidance is activated, or entered by the user, minus the distance covered since the distance was entered.

If digits are missing, dashes are displayed in their place.



Average speed (mph or km/h)

This is the average speed calculated since the computer was last reset to zero (with the ignition on).



Average fuel consumption (mpg or l/100 or km/l)

This is the average fuel consumption since the computer was last reset to zero.



Distance travelled (miles or km)

This indicates the distance travelled since the computer was last reset to zero.

Access via the main menu

"TRIP" menu

Press the **"MENU"** button to open the main menu.

Select the **"Trip computer"** or **"Vehicle diagnostics"** application using the navigator, then confirm or press the **"MODE"** button until you reach the trip computer screen, then confirm using **"OK"**.

The **"Trip computer"** or **"Vehicle diagnostics"** menu offers various options:

- Warnings log,
- Status of the functions,
- Input of the distance to be travelled.

Alert log

This summarises the active warning messages, displaying them in the multifunction screen in succession.

Status of the functions

This summarises the active or inactive status of the functions present on the vehicle.

Distance remaining

When guidance is not activated, this enables you to enter an approximate distance to be travelled value.

Display in the instrument panel screen



All of the various items of trip computer information also appear on the instrument panel screen at the same time.

COLOUR SCREEN C



This displays the following information, via the Peugeot Connect Sound control panel:

- time,
- date,
- ambient temperature (the value displayed flashes if there is a risk of ice),
- openings check,
- warning messages,
- audio functions,
- trip computer information,
- personalisation and configuration displays,
- air conditioning settings,
- front and rear parking sensors display,
- hands-free kit information.

Management of the displays



The **"AUDIO"**, **"TRIP"**, **"CLIM"** and **"TEL"** buttons on the audio system control panel allow display in the main window.

For example: "TRIP"

 


Main menu

Press the **"MENU"** button to gain access to the **main menu** and select one of the following functions:

- "Audio functions",
- "Trip computer",
- "Personalisation-Configuration",
- "Air conditioning",
- "Telephone".

For example: "Audio functions"

**"Personalisation-Configuration" menu**

 
 
This provides access to successive confirmation windows.

Define the vehicle parameters

This enables you to activate or deactivate certain driving and comfort systems:

- "Automatic lighting of headlamps",
- "Guide-me-home lighting" and "Duration",
- "Remote control action",
- "Permanent locking of the boot",
- "Directional headlamps".

For example: "Automatic lighting of headlamps"




Choice of language

German, Spanish, French, English, Italian, Dutch, Turkish, Portuguese and Brazilian Portuguese.

Display configuration

 - "Video brightness adjustment".
- "Date and time adjustment".
- "Choice of units".
- "Choice of colors".




Setting the date and time


From the **main menu**, select the **"Personalisation-Configuration"** icon using the navigator, then confirm.



 From the list displayed, select **"Display configuration"**, then confirm.



 From the list displayed, select **"Date and time and adjustment"**, then confirm.



Adjust the settings one by one:

- the zone selected is displayed on the screen,
- use the navigator to move from one zone to another,
- your new settings are confirmed one by one, by pressing the navigator button,
- all of the changes are saved, if you click on **"OK"** on the screen, or cancelled, if you press the **"ESC"** button on the control panel.



For safety reasons, configuration of the multifunction screen by the driver must only be done while stationary.


COLOUR SCREEN (WITH PEUGEOT CONNECT NAVIGATION)



This displays the following information:

- time,
- date,
- ambient temperature (the value displayed flashes if there is a risk of ice),
- check of openings,
- vehicle function status messages, displayed temporarily,
- warning messages,
- audio functions,
- trip computer information,
- air conditioning settings,
- satellite navigation system information.

"SETUP" menu

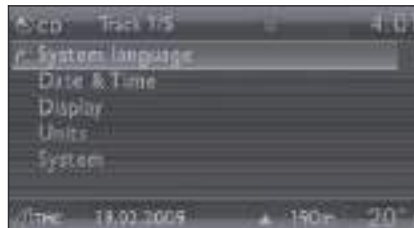

Press the SETUP button to gain access to the **"SETUP"** menu. This provides access to the following functions:

- System language,
- Date & Time,
- Display,
- Vehicle,
- Units,
- System.

System language

This menu allows you to select the language used by the display: German, English, Spanish, French, Italian, Dutch, Polish, Portuguese.

Date & Time

This menu allows you to set the date and time, the format of the date and the format of the time (refer to the "Audio and Telematics" section).

Display

This menu allows you to set the brightness of the screen, the screen colour scheme and the colour of the map (day/night and auto mode).

Vehicle

This menu permits the activation or deactivation of certain driving and comfort systems:

- air conditioning (A/C),
- vehicle information,
- access to the vehicle,
- driving assistance,
- lighting configuration,
- comfort lighting.

Units

This menu permits selection of the units: temperature (°C or °F) and fuel consumption (km/l, l/100, miles and mpg).

System

This menu allows factory settings to be restored, display of the software version and activation of scrolling text.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

HIGH DEFINITION COLOUR SCREEN (WITH PEUGEOT CONNECT MEDIA)



This displays the following information, via the Peugeot Connect Media audio and telematics system control panel:

- time,
- date,
- ambient temperature (the value displayed flashes if there is a risk of ice),
- status of openings,
- warning messages or vehicle function status messages, displayed temporarily,
- audio functions,
- telematic systems display (telephone, services, ...),
- trip computer information,
- personalisation and configuration displays,
- the air conditioning settings,
- front and rear parking sensors display,
- satellite navigation system information.

Main menu



Press the **"MENU"** button to access the **main menu** and select one of the following functions:

- "Navigation - guidance",
- "Map",
- "Traffic information",
- "Audio functions",
- "Telematics",
- "Configuration",
- "Video",
- "Vehicle diagnostics",
- "Air conditioning".



"Configuration" menu



This provides access to the following functions:



- "Display configuration",
- "Sound",
- "Choice of language",
- "Define vehicle parameters".

Define the vehicle parameters

This enables you to activate or deactivate certain driving and comfort functions:

- "Automatic lighting of headlamps",
- "Guide-me-home lighting" and "Duration",
- "Remote control action",
- "Directional headlights",
- "Permanent locking of the boot".

For example: "Automatic lighting of headlamps"

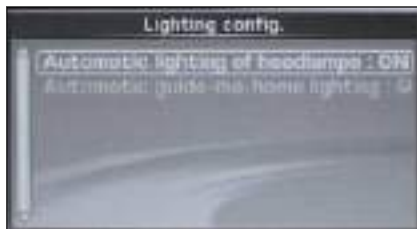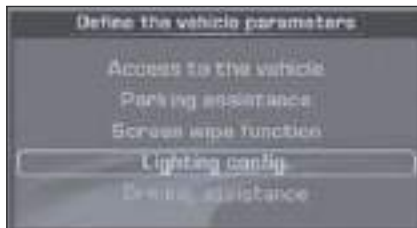

Display configuration

- "Choose colour",
- "Adjust brightness",
- "Adjust date and time",
- "Select units".



"Video" menu



You can connect video equipment (camcorder, digital camera, DVD player, ...) to the three video sockets, located in the glove box.

Videos can only be displayed when stationary.

Select the **"Video"** menu from the **main menu**:

- "Activate video mode" to activate/deactivate the video,
- "Video parameters" to set the display format, the brightness, the contrast and the colours.

Pressing the **"DARK"** button disconnects the display from the video.

Successive presses on the **"SOURCE"** button permit the selection of an audio source other than that of the video.





For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

Define the vehicle parameters

This enables you to activate or deactivate certain driving and comfort functions:

- "Automatic lighting of headlamps",
- "Guide-me-home lighting" and "Duration",
- "Remote control action",
- "Directional headlights",
- "Permanent locking of the boot".

For example: "Automatic lighting of headlamps"

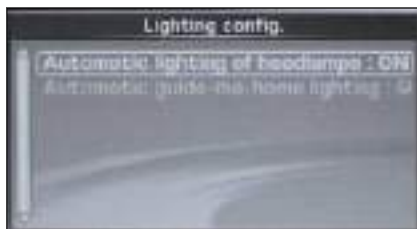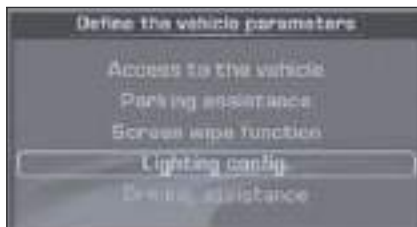

Display configuration

- "Choose colour",
- "Adjust brightness",
- "Adjust date and time",
- "Select units".



"Video" menu



You can connect video equipment (camcorder, digital camera, DVD player, ...) to the three video sockets, located in the glove box.

Videos can only be displayed when stationary.

Select the **"Video"** menu from the **main menu**:

- "Activate video mode" to activate/deactivate the video,
- "Video parameters" to set the display format, the brightness, the contrast and the colours.

Pressing the **"DARK"** button disconnects the display from the video.

Successive presses on the **"SOURCE"** button permit the selection of an audio source other than that of the video.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.



AUTOMATIC AIR CONDITIONING REGULATION

Use of the automatic regulation of the air conditioning is recommended. It permits automatic and optimised control of all of the following functions: air flow, passenger compartment temperature and air distribution, by means of various sensors, so preventing the need for you to change settings other than the comfort value displayed.

Do not cover the sunshine sensor **8**.

It is required for regulation of the air conditioning.

Advice on operation



To obtain even ventilation, avoid closing the air diffuser grille **9**.

In hot weather, in order to obtain intense ventilation, you can close the air diffuser grille and use vents **1** and **5** only.

If, when the vehicle has been parked in the sun for a long time, the interior temperature remains very high; first ventilate the passenger compartment for a few minutes.

For even air distribution, take care not to obstruct the exterior air intake grille located at the bottom of the windscreen, the vents, the air outlets under the front seats and the air extractor located behind the flaps in the boot.

In certain cases of particularly arduous use (towing the maximum load on a steep gradient in hot weather), switching off the air conditioning saves engine power and therefore improves the towing capacity.

Close the windows to benefit from the full effectiveness of the air conditioning.

Ensure that the passenger compartment filter is in good condition. Have the filter elements replaced periodically. If you drive in a dusty environment, replace it twice as often.

The air conditioning system does not contain chlorine and is not harmful to the ozone layer.

Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in good working order.

The water formed by the air conditioning condensation is discharged via an opening provided for this purpose. Therefore, a puddle of water may form underneath the vehicle when stationary.

If the system does not produce cold air, do not use it and contact a PEUGEOT dealer.

1. Centre panel vents.
2. Adjustment of the glove box air flow (see section "Interior fittings").
3. Air outlet to passenger footwells.
4. Two ventilation vents at the rear at the base of the centre console between the passengers.
5. Side vents.
6. Front windows demisting/defrosting vents.
7. Windscreen demisting/defrosting vents.
8. Sunshine sensor.
9. Air diffuser grille.

Air diffuser

The air diffuser grille, located at the top of the centre console, significantly improves distribution and flows and prevents air currents, while maintaining an optimum temperature inside the passenger compartment.

DIGITAL AIR CONDITIONING (DUAL-ZONE)

Dual-zone: this is the differentiated regulation of the temperature and air distribution on the driver's side and the front passenger's side.

The driver and front passenger can each adjust the temperature and the distribution of the air to suit their requirements.

The symbols and messages associated with the digital air conditioning controls appear in the multifunction screen.



Control by the Auto programme



Automatic programme - driver and passenger comfort (1)

Press the **"AUTO"** button. The indicator lamp comes on. The **"AUTO"** symbol is displayed in the multifunction screen.

Depending on the level of comfort selected, the system controls the air distribution, flow, temperature and intake of air in order to provide comfort and an adequate circulation of air in the passenger compartment. You do not have to make any adjustments.



To prevent too great a distribution of cold air when the engine is cold, the ventilation will only reach its optimum level progressively.



Adjustment of the temperature on the driver's side (2)

Adjustment of the temperature on the passenger's side (3)

- Press the up or down arrow to change the temperature on the driver's side **2** or passenger's side **3**.

The value indicated on the display corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit, depending on the screen configuration.

A setting around the **value 21** makes it possible to obtain optimum comfort. However, depending on your requirements, a setting between 18 and 24 is usual.



On entering the vehicle, the interior temperature may be much colder (or warmer) than is comfortable. There is no need to change the temperature displayed in order to obtain rapidly the level of comfort required.

The automatic regulation of the air conditioning settings is used to correct the temperature difference as quickly as possible.

Manual control

It is possible to adjust one or more functions manually while leaving the other functions in automatic mode.

Switching to manual mode may result in discomfort (temperature, humidity, odour, condensation) and is not advantageous (comfort).

To return to automatic mode, press the **"AUTO"** button.

Fan (4)

Air flow



☞ Turn dial **4** to the right to increase the air flow or to the left to reduce it.

The **"AUTO"** button indicator lamp goes off.

The air flow symbol (fan) is displayed in the multifunction screen and is filled according to the setting.

To prevent condensation and deterioration of the quality of the air in the passenger compartment, ensure that an adequate flow of air is maintained.

Switching off the ventilation



☞ Turn the dial **4** to the left until the flow of air stops.

The **"OFF"** symbol is displayed in the multifunction screen.

This action switches off the display and the indicator lamps.

It deactivates all of the system's functions, with the exception of the rear screen demisting.

The temperature-related comfort is no longer controlled (temperature, humidity, odour, condensation).

Avoid driving for too long with the air conditioning off.

To reactivate the air conditioning:

☞ Press button **1**.



Adjustment of the driver's air distribution (5)



Adjustment of the passenger's air distribution (6)

Successive or continuous pressure on button **5** or **6** enables you to direct the flow of air on the driver's side or on the passenger side independently.

The **"AUTO"** button indicator lamp goes off.

The symbol (arrows) corresponding to the chosen direction **5** or **6** is displayed in the multifunction screen.

- ▲ Windscreen and front side windows.
- ◀ Front and rear ventilation.
- ▼ Front and rear footwells.

AUTO Automatic distribution.



Front visibility control (7)

In certain cases, the comfort programme may not be sufficient to demist or defrost the windows (humidity, several passengers, ice).

☞ In this case, select the front visibility programme in order to clear the windows quickly. The indicator lamp comes on.

It controls the air conditioning, air flow and intake and distributes the ventilation to the windscreen and front side windows.

The front visibility control symbol is displayed in the multifunction screen.

Once the screen is clear, press button **1** to return the system to the comfort setting.



Intake of exterior air/Recirculation of interior air (8)

This function enables you to isolate the passenger compartment from exterior fumes and odours.

☞ Press button **8** several times to set the air intake mode, the indicator lamp which corresponds to the mode set comes on at your preference:

- intake of exterior air. Forced exterior air intake mode.
- recirculation of the air inside the passenger compartment.

The indicator lamp which corresponds to the mode set comes on. Prolonged operation in interior air recirculation mode may result in the formation of condensation and deterioration of the quality of the interior air.

Do not drive in air recirculation mode for prolonged periods, except in truly exceptional atmospheric conditions.

The message associated with the control is displayed in the multifunction screen.

☞ Press button **8** to return to automatic control of the air intake. The indicator lamps go off.

For your comfort, when the ignition is switched off, the settings are stored until it is switched on again.



Rear screen demisting (9)

The heated rear screen operates independently of the air conditioning system.

☞ Press button **9**, with the engine running, to demist the rear screen and the door mirrors. The indicator lamp comes on.

Demisting is switched off automatically to avoid an excessive consumption of current and according to the ambient temperature.

It may be stopped by pressing button **9** again or when the engine is switched off.

However, the demisting resumes if the engine is switched on again within one minute.

Switch off the rear screen and exterior mirrors demisting when no longer needed as lowering current consumption reduces fuel consumption.

"AIR CON" menu



Press the **"MENU"** button for access to the main menu, then confirm.


 
The **"Main menu"** appears in the multifunction screen.



Select the Air Conditioning icon using the navigator buttons.

The **"Air Conditioning"** menu appears in the multifunction screen as the main display.

Deactivation of the air conditioning (A/C-OFF)

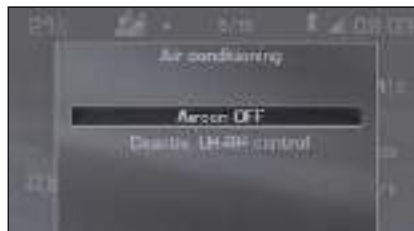

Deactivation may result in discomfort (temperature, humidity, odour, condensation).

You can cancel the deactivation by pressing the **"AUTO"** button on the air conditioning control panel.

Deactivation or activation of the simultaneous Left-Right control

Activation of this function transfers the driver's settings to the passenger.

Deactivation of this function allows a return to the independent driver/passenger settings.

Any manual action on button **4** or **6** cancels the simultaneous configuration setting.

Additional heating*

Vehicles which are fitted with an HDI engine may be equipped with automatic additional heating to improve your comfort.

When the engine is idling or when the vehicle is stationary, a high-pitched whistling noise and the emission of a small amount of smoke and odour is normal.

* According to country.

PROGRAMMABLE HEATING



The programmable heating operates independently of the engine.

When the engine is off, it pre-heats the coolant circuit in order to benefit from an optimum engine operating temperature from the time the engine is switched on.

The programmable heating system is switched on using the long range remote control. Activation can be immediate or deferred by means of a programming function.

If a malfunction of the programmable heating system occurs, contact a PEUGEOT dealer.

Programming remote control

The heating system programming remote control comprises the following buttons and displays:

1. Scrolling functions menu buttons.
2. Function indicator lamps: clock, temperature, operating time, programmed time, heater operation, heating management symbols.
3. Digital displays: time, temperature, duration of operation, programmed time or level of heating.
4. Off button.
5. On button.

Displays in the remote control screen



Displaying the functions



Press the buttons 1 in succession to display the functions.

The first press of the left-hand or right-hand button displays the time.

Next, the left-hand button gives access to the programming time then to the level of heating (C1 to C5).

The right-hand button permits access to the passenger compartment temperature then to the duration of operation of the heater if it is to be switched on immediately.



The passenger compartment temperature information is only available when the engine is off.

Setting the time



Once the time has been displayed, by means of the buttons **1**, press buttons **4** and **5** simultaneously within 10 seconds.



This symbol flashes.

Set the time using the buttons **1**.

Press buttons **4** and **5** simultaneously to save it.



This symbol is displayed (fixed).

Immediate activation



Press button **5** (ON) until the message "OK" appears.

When the signal has been received, the message "OK" is displayed along with the duration of operation.



The heater starts and this symbol is displayed.

To deactivate the function, press button **4** (OFF) until the message "OK" appears.



This symbol goes off.



When carrying out these operations, if the message "FAIL" appears, the signal has not been received. Repeat the procedure after changing your location.

Setting the duration of operation



Press the buttons **1** to display the duration of operation.



This symbol is displayed.

Once the duration of operation has been displayed, press buttons **4** and **5** simultaneously within 10 seconds.



This symbol flashes.

Set the duration by pressing the buttons **1** (adjustment in steps of 10 mins and max value 30 mins).

Press buttons **4** and **5** simultaneously to save the duration of operation.



This symbol is displayed (fixed).



The factory setting value is 30 minutes.

Programming the heating

You must programme your departure time in order for the system to calculate the optimum heater start time automatically.



Programming the departure time

Press the buttons **1** to display the programming time.



This symbol is displayed.

Once the programming time has been displayed, press buttons **4** and **5** simultaneously within 10 seconds.



This symbol flashes.

Set the time by pressing the buttons **1** and press buttons **4** and **5** simultaneously to save it.



This symbol is displayed (fixed).

Activation - deactivation

Once the programming time has been displayed by means of the buttons **1**, press button **5** (ON) until the message "OK" appears.



When the signal has been received, the message "OK" is displayed along with the "HTM" symbol.



This symbol is displayed when the heater starts.



HTM: Heat Thermo Management.

To deactivate the programming, press button **4** (OFF) until the message "OK" appears.



The symbol "HTM" goes off.



When carrying out these operations, if the message "FAIL" appears, the signal has not been received. Repeat the procedure after changing your location.

Switching off the heating

Press button **5** (ON).



The symbol "HTM" remains on.

Changing the level of heating

The system offers **5 levels** of heating (from the lowest level **C1** to the highest level **C5**).

Once the level of heating has been displayed by means of the buttons **1**, press buttons **4** and **5** simultaneously. The letter "C" flashes.

Set the level of heating by pressing the buttons **1**.

Press buttons **4** and **5** simultaneously to save the level selected. The letter "C" is displayed (fixed).



The factory pre-sets are replaced by the new settings entered. The programmed times are stored until the next time they are changed.

When the departure time is activated, the level of heating cannot be changed. The departure time must be deactivated first.



Changing the battery

The remote control is supplied by a 6V-28L battery, which is supplied.

Information on the display indicates when it is time to replace this battery.

Unclip the casing then replace the battery.

The remote control must then be reinitialised, see below.

Do not discard the used batteries, take them to an approved collection point.



Reinitialising the remote control

If the vehicle's battery is disconnected or the remote control's battery is replaced, the remote control must be reinitialised.

After switching on the power, press button **4** (OFF) for 1 second within the next 5 seconds. If the operation has taken place correctly the message "OK" is displayed in the remote control screen.

If a problem occurs, the message "FAIL" appears. Repeat the operation.

As an accessory, your programmable heating can be adapted to pre-heat your vehicle's passenger compartment.



Always switch off the programmable heating while filling with fuel to avoid any risk of fire or explosion.

To avoid any risk of poisoning and asphyxiation, the programmable heating must not be used, even for short periods, in an enclosed space such as a garage or workshop which is not equipped with an exhaust gas extraction system.

Do not park the vehicle on an inflammable surface (dry grass, dead leaves, paper...), there is a risk of fire.

The programmable heating system is supplied by the vehicle's fuel tank. Before use, ensure that the quantity of fuel remaining is sufficient. If the fuel tank is at the reserve, we strongly advise that you do not programme the heating.



DOOR MIRRORS

Adjustment

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Direct control **B** in all four directions to adjust .

Folding back the mirrors electrically

- from inside:
 - ☞ With the ignition on, move the control **A** to the central position then pull it rearwards.
- from outside:
 - ☞ Lock the vehicle using the remote control.

This function can be deactivated. Consult a PEUGEOT dealer.

When the vehicle is parked, the door mirrors can be folded back manually.

Automatic tilting of the mirrors in reverse gear*

This function allows you to see the ground (kerb, wall...) when carrying out parking manoeuvres in reverse gear.

Initial setting of the function

Engage reverse gear then select and adjust the left mirror then the right mirror. These settings will be stored.

Tilting the mirror to the parking position

- ☞ engage reverse gear,
- ☞ move control **A** to the right or the left to select the corresponding mirror.

The door mirror corresponding to the side on which you are parking tilts downwards.

Intentional return of the mirror to the driving position:

- ☞ deselect the mirror.
- ☞ change out of reverse gear. After a few seconds, the glass of the corresponding mirror resumes its normal position.

The mirror returns to the driving position automatically if the vehicle speed exceeds 6 mph (10 km/h) or if the engine is switched off.



Objects observed in the driver and passenger mirrors are, in reality, closer than they appear.

This must be taken into account in order to judge the distance of vehicles approaching from behind correctly.

* According to version.



Rear view mirror

Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, useful in poor light.

Automatic day/night model

By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.

It has an anti-dazzle system which darkens the mirror glass: this reduces any driver discomfort caused by the light beams of following vehicles, the sun...



In order to ensure optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.



MANUAL ADJUSTMENT OF STEERING WHEEL HEIGHT AND REACH

When the vehicle is stationary, unlock the steering wheel adjustment by pushing the lever forwards.

Adjust the height and reach of the steering wheel then lock the adjustment by pulling the lever fully back.



ELECTRIC ADJUSTMENT OF STEERING WHEEL HEIGHT AND REACH

When stationary, adjust the height or reach of the steering wheel by moving the control:

- ☞ forwards or backwards to adjust the reach.
- ☞ up or down to adjust the height.

WELCOME FUNCTION

When the driver's door is opened with the ignition off, the steering wheel rises to make access to or exit from the vehicle easier.



You can activate or deactivate this function via the "personalisation - configuration" menu in the multi-function screen.

Reinitialisation

Following reconnection of the battery, the welcome function must be reinitialised:

- move the control in the direction of the required adjustment,
- release the control,
- move the control again until it reaches its stop.

This procedure must be carried out for all four directions.

MANUAL FRONT SEATS



Longitudinal adjustment

Lift the control bar and slide the seat forwards or backwards.



Driver and passenger seat cushion height and angle adjustment

Pump up or down to the required position.



Seat back angle adjustment

Without resting your back against the seat, turn the control to adjust the angle of the seat back.



Driver and passenger seat lumbar adjustment*

Operate the lever to obtain the required position.



Heated seat adjustment

With the engine running, turn the knob. The temperature of the seat is regulated automatically.

- 0: Off. 2: Medium.
1: Low. 3: High.



Access to the rear seats

If necessary, detach the seat belt from the handle and position it along the door pillar.

Pull the handle **A** upwards and forwards to fold the seat back, then move the seat forward pushing the seat back.

The driver has a courtesy handle **B** to enable him to move the passenger seat from his seat.

When it is put back in place, the seat returns to its initial position.



Do not use the seat back angle adjustment control when using the access to the rear seats (risk of disengaging of the seat back with loss of the angle adjustment function).



No person or object must prevent the seat from returning to its initial **longitudinal** and **angle** position.

Depending on your seat's settings, it is possible that the access to the rear seats manoeuvre may be limited. In this case, the seat settings must be altered first.

The seat must return to this position for correct locking of the seat back.

Ensure that the seat back returns to its position correctly and never drive with the seat back disengaged (able to move freely).

If the seat back jams on repositioning, operate the handle **A** again to release it and return it to its initial position.

* With electric seat only.



Head restraint height and angle adjustment

To raise or lower the head restraint, pull it forwards then slide it.

To tilt the head restraint, tilt the lower part forwards or backwards.

To remove the head restraint, move it almost to the highest position, lift the tab using a coin and pull the head restraint forwards and upwards at the same time.

To refit the head restraint, engage the stalks in the holes keeping in line with the seat back.



The adjustment is correct when the top of the head restraint is level with the top of the head.



Front seat active head restraint

This system prevents whiplash.

In the event of a rear impact, the action of the body on the seat back moves the head restraint forwards and upwards preventing the head from being thrown backwards.



Never drive with the head restraints removed; they must be in place and adjusted correctly.



Front armrest

To change the position of the armrest:

☞ Lift the lever 1.


The armrest folds forwards and upwards.

To return to the initial position, push the armrest backwards and press it to engage.

ELECTRIC FRONT SEATS

**Longitudinal adjustment**

Push the control forwards or backwards to slide the seat.

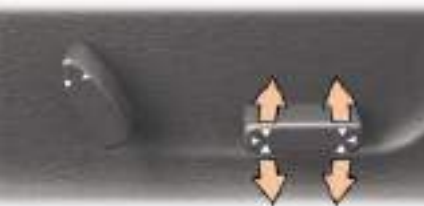**Driver and passenger seat cushion height and angle adjustment**

Height: tilt the rear of the control up or down.

Angle: tilt the front of the control up or down.

**Seat back angle adjustment**

Tilt the control forwards or backwards to adjust the angle of the seat back.



The electrical functions of the driver's seat (with the exception of the access to the rear seats) are deactivated approximately one minute after the ignition is switched off.

To reactivate them, open the door or switch on the ignition.



Driver and passenger seat lumbar adjustment*

Operate the lever to obtain the required position.



Heated seat adjustment

With the engine running, turn the knob. The temperature of the seat is regulated automatically.

- 0: Off. 2: Medium.
1: Low. 3: High.



Access to the rear seats

If necessary, detach the seat belt from the handle and position it along the door pillar.

Pull the handle **A** upwards and forwards to fold the seat back, then move the seat forward pushing the seat back.

The driver has a courtesy handle **B** to enable him to move the passenger seat from his seat.

When it is put back in place, the seat returns to its initial position.



Do not use the seat back angle adjustment control when using the access to the rear seats (risk of disengaging of the seat back with loss of the angle adjustment function).



No person or object must prevent the seat from returning to its initial **longitudinal** and **angle** position.

Depending on your seat's settings, it is possible that the access to the rear seats manoeuvre may be limited. In this case, the seat settings must be altered first.

The seat must return to this position for correct locking of the seat back.

Ensure that the seat back returns to its position correctly and never drive with the seat back disengaged (able to move freely).

If the seat back jams on repositioning, operate the handle **A** again to release it and return it to its initial position.

* With electric seat only.



Head restraint height and angle adjustment

To raise or lower the head restraint, pull it forwards then slide it.

To tilt the head restraint, tilt the lower part forwards or backwards.

To remove the head restraint, move it almost to the highest position, lift the tab using a coin and pull the head restraint forwards and upwards at the same time.

To refit the head restraint, engage the stalks in the holes keeping in line with the seat back.



The adjustment is correct when the top of the head restraint is level with the top of the head.



Front seat active head restraint

This system prevents whiplash.

In the event of a rear impact, the action of the body on the seat back moves the head restraint forwards and upwards preventing the head from being thrown backwards.



Never drive with the head restraints removed; they must be in place and adjusted correctly.



Front armrest

To change the position of the armrest:

☞ Lift the lever 1.

The armrest folds forwards and upwards.

To return to the initial position, push the armrest backwards and press it to engage.



Storing driving positions

The electrical adjustments of the driver's seat, steering wheel and door mirrors are stored.

Two driving positions can be stored using **buttons M/1 and M/2**.

Storing using the controls on the driver's door

To store a driving position:

- ☞ Switch on the ignition,
- ☞ Adjust your seat, steering wheel and mirrors,
- ☞ Press button **M**, then button **1** "first driving position" or button **2** "second driving position" within four seconds.

An audible signal confirms that a position has been stored.

Storing a new position cancels the previous one.

Recalling a stored driving position

Ignition on, vehicle stationary

- ☞ Briefly press button **1** or **2** to recall the corresponding stored position. The end of the setting is indicated by an audible signal.

After recalling a stored position a few times in succession, the function will be cancelled until the engine is started.

Vehicle moving

- ☞ Keep button **1** or **2** pressed down until the audible signal indicates that setting of the corresponding memorised position is complete.



During access to the rear seats, the storing and recalling of the driving positions are deactivated.



REAR HEAD RESTRAINTS

The rear head restraints have a high position for use and a low position for stowing.

They can also be removed.

To remove them, pull upwards fully and press the lug.



Never drive with the head restraints removed; they must be in place and adjusted correctly.



REAR SEATS

To fold down the rear left seat or the rear right seat, always start with the seat cushion, **never** with the seat back (risk of damage):

- ☞ move the front seat(s) forward if necessary,
- ☞ place the head restraints in the low position or remove them if necessary. Check that the seat belt strap is positioned correctly at the side of the seat back,
- ☞ release the front of the seat cushion **1** by passing your hands underneath and lifting at each end **A**,
- ☞ lift the front of the seat cushion **1**,
- ☞ tilt the seat cushion **1** against the front seat(s),
- ☞ pull control **3** forwards to release the seat back **2**,
- ☞ fold down the seat back **2** (left 1/3 or right 2/3).



Note: the one-piece seat cushion **1** can be removed, with care, to increase the volume of the load space.

Squeeze the seat cushion fixings to detach them from their fastenings.

When repositioning:

- ☞ fold up the seat back **2** and lock it (the red marker of control **3** should no longer be visible),
- ☞ fold up the seat **1**,
- ☞ refit the head restraints if they were removed.



When putting the seat backs and the seat cushion back in place, ensure that they are secured correctly to ensure your safety and take care not to trap the seat belts.



Locking/unlocking the access to the boot via the rear seats

Your vehicle's boot can be isolated from the passenger compartment.

The red indicator on the control **3** should no longer be visible. If it is, push the seat fully.

Insert the ignition key in the lock **4**.

Transporting long objects

In **exceptional circumstances**, a rear seat back can be folded without folding the seat cushion **1** in order to transport long, light objects (risk of damage to the seat cushion).



When transporting long objects, do not place a load weighing more than 30 kg on the rear of the seat back.

Do not place rough objects on the rear of the seat back as this could damage it.

GENERAL POINTS RELATING TO CHILD SEATS

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.



For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats**,
- **a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear.**

PEUGEOT recommends that children should travel in the **rear seats** of your vehicle:

- **"rearwards-facing"** up to the age of 2,
- **"forwards-facing"** over the age of 2.

CHILD SEAT IN THE FRONT

"Rearwards-facing"



When a "rearwards-facing" child seat is installed on the **front passenger seat**, it is essential that the passenger airbag is deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**

"Forwards-facing"



When a "forwards-facing" child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the intermediate longitudinal position with the seat back upright and leave the passenger airbag activated.



Intermediate longitudinal position

* The rules for carrying children are specific to each country. Refer to the current legislation in your country.



ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harness **keeping the slack** in relation to the child's body to **a minimum**, even for short journeys.

To install a child seat using the vehicle's seat belt, ensure that the belt is well tightened on the child seat and that it holds the child seat firmly against the vehicle's seat.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag* when a "rear facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

* According to country.

CHILD SEATS RECOMMENDED BY PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**:



Group 0+: from birth to 13 kg	Groups 1, 2 and 3: from 9 to 36 kg
 <p>L1 "RÖMER Baby-Safe Plus" Installed in the rearwards-facing position.</p>	 <p>L2 "KIDDY Life" The use of the restraining cushion is compulsory for carrying young children (from 9 to 18 kg).</p>
Groups 2 and 3: from 15 to 36 kg	
 <p>L3 "RECARO Start"</p>	 <p>L4 "KLIPPAN Optima" From the age of 6 years (approximately 22 kg), the booster is used on its own.</p>
 <p>L5 "RÖMER KIDFIX" Can be fitted to the vehicle's ISOFIX mountings. The child is restrained by the seat belt.</p>	



Passenger airbag OFF

LOCATIONS FOR CHILD SEATS ATTACHED USING THE SEAT BELT

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved in accordance with the weight of the child and the seat in the vehicle.

Seat	Weight of the child and indicative age			
	Under 13 kg (groups 0 (a) and 0+) Up to 1 year approx	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Front passenger seat (b) 	U	U	U(c)	U(c)
Rear seats 	U	U	U	U

a: group 0: from birth to 10 kg.

b: consult the legislation in force in your country before installing your child on this seat.

c: vehicle seat in the intermediate longitudinal position.

U: seat suitable for the installation of a universally approved child seat secured using a seat belt, "rear facing" and/or "forward facing".



Installation of the **L1** (RÖMER Baby-Safe Plus) child seat on the rear seats of your vehicle is not recommended.



ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harness **keeping the slack** in relation to the child's body to **a minimum**, even for short journeys.

To install a child seat using the vehicle's seat belt, ensure that the belt is well tightened on the child seat and that it holds the child seat firmly against the vehicle's seat.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag* when a "rear facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

* According to country.

"ISOFIX" MOUNTINGS

Your vehicle has been approved in accordance with the **new ISOFIX regulation**.

The seats*, represented below, are fitted with regulation ISOFIX mountings:



These are three rings for each seat:



- two lower rings **A**, located between the vehicle seat back and cushion, indicated by a label,



- an upper ring **B**, referred to as the **TOP TETHER**, indicated by a label.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are secured easily on these lower rings **A**.

Some also have an **upper strap** which is attached to the upper ring **B**.



To attach this strap, raise the vehicle seat's head restraint then pass the hook between its rods. Then fix the hook on the upper ring **B** and tighten the upper strap.



The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

For information on where ISOFIX child seats can be installed in your vehicle, refer to the table showing the locations for ISOFIX child seats.

* According to version.

ISOFIX CHILD SEAT RECOMMENDED BY PEUGEOT AND APPROVED FOR YOUR VEHICLE**ISOFIX RÖMER Duo Plus (size category B1)****Group 1: from 9 to 18 kg**

Installed in the forward facing position.
Fitted with an upper strap to be secured on the ISOFIX upper ring, referred to as the TOP TETHER.

Three seat body angles: sitting, reclining, lying.



This child seat can also be used on seats which are not fitted with ISOFIX mountings. In this case, it must be attached to the vehicle seat using the three point seat belt.

Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.

TABLE OF LOCATIONS FOR INSTALLING ISOFIX CHILD SEATS

Weight of the child/indicative age										
	Less than 10 kg (group 0) Up to 6 months approx		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to 1 year approx			From 9 to 18 kg (group 1) 1 to 3 years approx				
Type of ISOFIX child seat	Infant car seat		"rear facing"			"rear facing"		"forward facing"		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Universal and semi-universal ISOFIX child seats which can be installed on the rear seats	X		IL-SU			IL-SU		X	IUF IL-SU	

In accordance with the European regulation, this table indicates the options for the installation of ISOFIX child seats on the vehicle seats fitted with ISOFIX mountings.

In the case of the universal and semi-universal ISOFIX child seats, the child seat's ISOFIX size category, determined by a letter **A, B, B1, C, D, E, F, G**, is indicated on the child seat next to the ISOFIX logo.

IUF: seat approved for a **Universal Isofix** child seat, "Forward facing" with the "Top Tether" upper strap.

IL-SU: seat approved for a **Semi-Universal Isofix** child seat, "forward facing" with a support, "rear facing" or infant car seat with a support or a "Top Tether" upper strap.

X: seat not suitable for the installation of an ISOFIX child seat of the size category indicated.



ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harness **keeping the slack** in relation to the child's body to **a minimum**, even for short journeys.

To install a child seat using the vehicle's seat belt, ensure that the belt is well tightened on the child seat and that it holds the child seat firmly against the vehicle's seat.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag* when a "rear facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

* According to country.



REMOTE CONTROL KEY

The remote control in the key locks, deadlocks and unlocks the doors and boot at a distance and folds and unfolds the door mirrors.

The key permits mechanical and independent operation of the glove box lock, of the passenger airbag deactivation control and of the boot access from the rear seat locks as well as switching on the ignition.

From the driver's door, the key permits electrical control of the locking or unlocking of the doors and boot.

If one of the doors or the boot is open, the central locking does not function.

Unfolding/Folding the key

To unfold or fold the key, first press button **A**.

Normal locking

This renders the external door controls inoperative.

It also deactivates the internal central locking button.

- ☞ **Press button B** for complete locking of the vehicle.
- ☞ **Press button B for more than 2 seconds** for automatic closing of the windows and the tilting of the sunroof, if it is open, in addition to locking.

Each action is confirmed by fixed lighting of the direction indicators for approximately two seconds.

The door mirrors fold at the same time.



When the windows are closed automatically using the remote control, ensure that no one is preventing them from closing correctly.

Deadlocking

This renders the external and **internal** door controls inoperative.

It also deactivates the internal central locking button.

Using the key

- ☞ Turn the key in the door lock to lock the vehicle.
- ☞ Within five seconds, turn the key again to deadlock the vehicle.

Each action is confirmed by fixed lighting of the the direction indicators for approximately two seconds.

Using the remote control

- ☞ **Pressing button B** permits complete locking of the vehicle or **pressing button B for more than 2 seconds** closes the windows and the tilting of the sunroof, if it is open, in addition to locking.
- ☞ Within five seconds, a **second press** deadlocks the vehicle.

Each action is confirmed by fixed lighting of the direction indicators for approximately two seconds.



When the windows are closed automatically using the remote control, ensure that no one is preventing them from closing correctly.

The folding and unfolding of the door mirrors can be deactivated by a PEUGEOT dealer.

Unlocking

Complete

☞ Press button **C** for complete unlocking of the vehicle.

This is confirmed by rapid flashing of the direction indicators for approximately two seconds.

The door mirrors unfold at the same time.

Selective (if activated)

☞ **Press** button **C** to unlock the driver's door only.

☞ **Press the button again** to unlock the passenger door and the boot.

Each action is confirmed by rapid flashing of the direction indicators for approximately two seconds.

The door mirrors unfold at the same time.



When the vehicle is locked, if unlocking is activated inadvertently, without a door being opened within 30 seconds, the vehicle will lock automatically.



The complete or selective unlocking can be configured via the multifunction screen "**Personalisation-Configuration**" menu.

Unlocking and opening of the boot

☞ Press button **D** to unlock and open the boot.

This action also unlocks the doors.

If the permanent locking of the boot is activated, opening is only possible via button **D** on the remote control.



This function can be configured via the multifunction screen "**Personalisation-Configuration**" menu.

Key in ignition

A buzzer sounds on opening the driver's door, if the key has been left in the ignition.

LOCATING YOUR VEHICLE

To locate your vehicle, if you have locked or deadlocked it, in a car park:

☞ press button **B** on the remote control, the courtesy lamps come on and the direction indicators flash for a few seconds.

CHANGING THE REMOTE CONTROL BATTERY

Battery ref.: CR1620/3 volts.

To change the battery, unclip the casing using a coin at the notch.



If the remote control does not work after the battery has been changed, reinitialise the remote control.

REINITIALISATION

- ☞ Switch off the ignition.
- ☞ Switch the ignition on again.
- ☞ Press the remote control locking button immediately for a few seconds.
- ☞ Switch off the ignition and remove the remote control key from the ignition lock. The remote control is now working again.

ELECTRONIC ENGINE IMMOBILISER

This locks the engine control system a few moments after the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code is recognised and starting is possible.



If the system does not function correctly, the warning lamp comes on in the instrument panel screen, accompanied by an audible signal and a message in the multifunction screen.

In this case, your vehicle will not start. Contact a PEUGEOT dealer as soon as possible.



Make a careful note of the number on each key. The key number is coded on the label attached to the key.

If the keys are lost, a PEUGEOT dealer can rapidly supply you with new keys.

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock your vehicle, without you being aware of it.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off, except for reprogramming.

Do not operate the deadlocking function if there is anyone inside the vehicle.

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

As a safety precaution (with children on board), remove the ignition key when you leave the vehicle, even for a short time.

Do not repeatedly press the button of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reprogrammed.

When purchasing a second-hand vehicle, have the key codes memorised by a PEUGEOT dealer to ensure that the keys in your possession are the only ones which can start the vehicle.

Do not make any modifications to the electronic engine immobiliser system.



When the windows are closed automatically using the remote control, ensure that no one is preventing them from closing correctly.

The folding and unfolding of the door mirrors can be deactivated by a PEUGEOT dealer.

Unlocking

Complete

☞ Press button **C** for complete unlocking of the vehicle.

This is confirmed by rapid flashing of the direction indicators for approximately two seconds.

The door mirrors unfold at the same time.

Selective (if activated)

☞ **Press** button **C** to unlock the driver's door only.

☞ **Press the button again** to unlock the passenger door and the boot.

Each action is confirmed by rapid flashing of the direction indicators for approximately two seconds.

The door mirrors unfold at the same time.



When the vehicle is locked, if unlocking is activated inadvertently, without a door being opened within 30 seconds, the vehicle will lock automatically.



The complete or selective unlocking can be configured via the multifunction screen "**Personalisation-Configuration**" menu.

Unlocking and opening of the boot

☞ Press button **D** to unlock and open the boot.

This action also unlocks the doors.

If the permanent locking of the boot is activated, opening is only possible via button **D** on the remote control.



This function can be configured via the multifunction screen "**Personalisation-Configuration**" menu.

Key in ignition

A buzzer sounds on opening the driver's door, if the key has been left in the ignition.

LOCATING YOUR VEHICLE

To locate your vehicle, if you have locked or deadlocked it, in a car park:

☞ press button **B** on the remote control, the courtesy lamps come on and the direction indicators flash for a few seconds.

CHANGING THE REMOTE CONTROL BATTERY

Battery ref.: CR1620/3 volts.

To change the battery, unclip the casing using a coin at the notch.



If the remote control does not work after the battery has been changed, reinitialise the remote control.

REINITIALISATION

- ☞ Switch off the ignition.
- ☞ Switch the ignition on again.
- ☞ Press the remote control locking button immediately for a few seconds.
- ☞ Switch off the ignition and remove the remote control key from the ignition lock. The remote control is now working again.

ELECTRONIC ENGINE IMMOBILISER

This locks the engine control system a few moments after the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code is recognised and starting is possible.



If the system does not function correctly, the warning lamp comes on in the instrument panel screen, accompanied by an audible signal and a message in the multifunction screen.

In this case, your vehicle will not start. Contact a PEUGEOT dealer as soon as possible.

CHANGING THE REMOTE CONTROL BATTERY

Battery ref.: CR1620/3 volts.

To change the battery, unclip the casing using a coin at the notch.



If the remote control does not work after the battery has been changed, reinitialise the remote control.

REINITIALISATION

- ☞ Switch off the ignition.
- ☞ Switch the ignition on again.
- ☞ Press the remote control locking button immediately for a few seconds.
- ☞ Switch off the ignition and remove the remote control key from the ignition lock. The remote control is now working again.

ELECTRONIC ENGINE IMMOBILISER

This locks the engine control system a few moments after the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code is recognised and starting is possible.



If the system does not function correctly, the warning lamp comes on in the instrument panel screen, accompanied by an audible signal and a message in the multifunction screen.

In this case, your vehicle will not start. Contact a PEUGEOT dealer as soon as possible.



Make a careful note of the number on each key. The key number is coded on the label attached to the key.

If the keys are lost, a PEUGEOT dealer can rapidly supply you with new keys.

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock your vehicle, without you being aware of it.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off, except for reprogramming.

Do not operate the deadlocking function if there is anyone inside the vehicle.

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

As a safety precaution (with children on board), remove the ignition key when you leave the vehicle, even for a short time.

Do not repeatedly press the button of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reprogrammed.

When purchasing a second-hand vehicle, have the key codes memorised by a PEUGEOT dealer to ensure that the keys in your possession are the only ones which can start the vehicle.

Do not make any modifications to the electronic engine immobiliser system.



ALARM

This provides two types of monitoring:

- **exterior perimeter protection:** it sounds if a door, the boot or the bonnet is opened.
- **interior volumetric protection:** it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

Setting the alarm

- ☞ Switch off the ignition and get out of the vehicle.
- ☞ Set the alarm, by locking or deadlocking using the remote control (button **A** indicator lamp flashes once per second).

If you wish to lock or deadlock your vehicle without setting the alarm, lock it (one turn of the key) or deadlock it (a second turn within five seconds maximum) using the lock.

When the alarm is triggered, the siren sounds and the direction indicators flash for approximately thirty seconds. After triggering, the alarm remains set, ten times in succession.

On the eleventh time it will become inactive again, until the next cycle of deactivating then setting of the alarm.

Warning: if button **A** indicator lamp flashes rapidly, the alarm has been triggered while you were away from your vehicle.

Deactivation

Unlock the vehicle with the remote control key.

The alarm is deactivated, indicator lamp **A** goes out when the ignition is switched on.

To set the alarm with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- ☞ Switch off the ignition,
- ☞ In the next ten seconds, press button **A** until the indicator lamp is on continuously,
- ☞ Get out of the vehicle,
- ☞ Set the alarm by locking or deadlocking using the remote control (button **A** indicator lamp flashes once a second).

Remote control failure, alarm set

- ☞ Unlock the doors with the key and open the door. The alarm is triggered.
- ☞ Switch on the ignition. The alarm is deactivated.

Operating fault

When the ignition is switched on, if the lamp button **A** comes on for ten seconds, there is a fault in the siren connection.

Contact a PEUGEOT dealer to have the system checked.

Automatic activation*

The alarm is activated automatically two minutes after the last closure of a door or the boot.

In order to avoid accidental triggering of the alarm when a door or the boot is opened, it is essential to press the unlocking button on the remote control again.



Before setting the alarm, ensure that all of the openings (doors, bonnet, boot) are closed correctly.

* According to country.



ELECTRIC WINDOWS

1. Driver's electric window switch.
2. Passenger's electric window switch.

Manual operation:

To open or close the window, press or pull the switch gently. The window stops as soon as the switch is released.

Automatic operation:

To open or close the window, press or pull the switch fully: the window opens or closes completely when the switch is released. Pressing the switch again stops the movement of the window.

The electric window switches remain operational for approximately one minute after the key has been removed from the ignition.

Once this time has elapsed, the electric windows will not operate. To reactivate them, switch the ignition on again.

Safety anti-pinch

When the window rises and meets an obstacle, it stops and immediately partially lowers again.

In the event of unwanted opening of the window on closing, press the switch until the window opens completely, then pull the switch immediately until the window closes. Continue to hold the switch for approximately one second after the window has closed.

The safety anti-pinch function is not active during this operation.

REINITIALISATION OF THE WINDOWS

Following reconnection of the battery, the safety anti-pinch function must be re-initialised: the safety anti-pinch function is not active during these operations.

- with the door closed, lower the window completely, then raise it, it will rise in steps of a few centimetres each time the switch is pressed. Repeat the operation until the window closes completely,
- continue to press the switch for at least one second after reaching this position, window closed.



Always remove the key from the ignition when leaving the vehicle, even for a short time.

In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned.

When the driver operates the passenger electric window switch, he must ensure that no one is preventing correct closing of the window.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

DOORS



Opening the doors from outside



Opening the doors from inside

To make it easier to open the door, the window lowers automatically by a few centimetres.

It rises and adjusts automatically on closing to ensure perfect sealing.



Before carrying out any work which requires disconnection of the battery, lower the windows to permit opening and closing of the doors.

In the event of battery disconnection or if the automatic lowering fails (window iced up for example), it is still possible to open the doors. However, the doors must not be slammed when closing.

The safety anti-pinch is inoperative during the automatic raising of the windows.

Contact a PEUGEOT dealer as soon as possible.

When using a high pressure washer on your vehicle, it is recommended that the end of the gun is kept at least 50 cm away from the windows and door seals.



Locking/unlocking from the inside

☞ Press the button.

This allows the doors and the boot to be locked or unlocked.



If the vehicle has been locked or deadlocked using the key or the remote control, the button is inoperative.

In this case, use the key or the remote control to unlock.

Unlocking from the doors

You can unlock from the inside by operating a door opening control.

If the "Vehicle access" function is activated via the multifunction screen menu, opening:

- the **driver's** door, unlocks the door concerned.
- the **passenger's** door, unlocks the doors and the boot.

Automatic central locking of the doors

The doors and boot can lock automatically while driving (speed above 6 mph [10 km/h]).

You can activate or deactivate this function by pressing and holding the button.



Note: driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.



MANUAL LOCKING (BACK-UP MODE)

Driver's door

Insert the key in the lock to lock or unlock the door.

Passenger door

To lock, insert the key in the control located on the edge of the door then push to the left.



BOOT

To open the boot, press the push button and raise the boot lid.



If the permanent locking of the boot is activated, opening is only possible by pressing the remote control button.



Tailgate release

This enables the tailgate to be unlocked in the event of a central locking fault.

- Fold back the rear seats to gain access to the lock from inside the boot.
- Insert a small screwdriver into hole **A** of the lock to unlock the tailgate.

Automatic central locking of the doors

The doors and boot can lock automatically while driving (speed above 6 mph [10 km/h]).

You can activate or deactivate this function by pressing and holding the button.



Note: driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.



MANUAL LOCKING (BACK-UP MODE)

Driver's door

Insert the key in the lock to lock or unlock the door.

Passenger door

To lock, insert the key in the control located on the edge of the door then push to the left.



BOOT

To open the boot, press the push button and raise the boot lid.



If the permanent locking of the boot is activated, opening is only possible by pressing the remote control button.



Tailgate release

This enables the tailgate to be unlocked in the event of a central locking fault.

- Fold back the rear seats to gain access to the lock from inside the boot.
- Insert a small screwdriver into hole **A** of the lock to unlock the tailgate.



SUNROOF

To tilt the roof: press and hold part **A** of the switch.

To open the roof in sliding mode: tilt the sunroof, then press part **A** of the switch briefly.

To close it in sliding mode: press part **B** of the switch briefly.

To close it in tilt mode: press and hold part **B** of the switch.

Safety anti-pinch

When the sunroof is sliding closed and meets an obstacle, it stops then partially opens again.



Pressing the locking button on the remote control key for more than 2 seconds closes the sunroof in sliding mode. The sunroof remains tilted.

To close the sunroof completely, press and hold part **B** of the switch before getting out of the vehicle.

Notes:

In the event of unwanted opening of the roof on closing (for example, in the presence of ice), press and hold part **B** of the switch, **within the two seconds** which follow the triggering of the safety anti-pinch, until the sunroof closes completely.

Following reconnection of the battery or in the event of a malfunction, press and hold part **B** of the switch, the sunroof slides "step by step" until it closes. Continue to press the switch for **approximately one second** after closing.

The safety anti-pinch function is not active during these operations.

Blind

The sunroof blind is manual.

To open it, slide it rearwards using the handle.

To close it, slide it forwards using the handle.

Do not open the sunroof immediately after a shower or immediately after washing the car.



Always remove the key from the ignition when leaving the vehicle, even for a short time.

Always ensure that the sunroof is closed correctly before leaving the vehicle.

In the event of contact during closing in tilt mode, you must reverse the movement of the roof. To do this, press the switch concerned.

When the driver closes the roof in tilt mode, they must ensure that no one is preventing correct closing of the roof.

The driver must ensure that the passengers use the sunroof correctly.

Be aware of children when operating the roof.

FUEL TANK

Capacity of the tank: approximately 67 litres.

Low fuel level



When the low fuel level is reached, this warning lamp comes on in the instrument panel.

When it first comes on, **about 6 litres** of fuel remains in the tank.

Refuelling



A label affixed to the inside of the fuel filler flap indicates which type of fuel to use depending on your engine.

Additions of fuel must be of at least 5 litres to be registered by the fuel gauge.

Opening the filler cap may cause an inrush of air. This vacuum is perfectly normal and results from the sealing of the fuel system.



To refuel safely:

- ☞ **you must stop the engine, ignition off,**
- ☞ open the filler flap by pressing button **A**,
- ☞ turn the filler cap to the left,

- ☞ remove the filler cap and hang it on the hook located on the inner face of the filler flap,
- ☞ fill the tank, but **do not continue past the 3rd cut-off of the nozzle**; this may cause malfunctions.



Button **A** is deactivated automatically from 6 mph (10 km/h).

Once you have finished refuelling:

- ☞ Screw on the filler cap.
- ☞ Close the filler flap.

Operating fault

A fuel gauge fault is indicated by the fuel gauge needle returning to zero.

Consult a PEUGEOT dealer.

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Consult a PEUGEOT dealer.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



SP95
E10



SP98



DIESEL



LIGHTING STALK

Front and rear lamps (ring A)

☞ Turn ring **A** to the position required



Lighting off



Automatic illumination of headlamps.



In the case of vehicles which are not fitted with a lighting stalk with the "AUTO" position, you can deactivate or activate the automatic lighting via the multifunction screen "**Personalisation - Configuration**" menu.



Sidelamps



Dipped/main beam headlamps

Dipped/main beam change

☞ Pull the stalk fully towards you.

Lighting on

With the ignition and the automatic illumination of headlamps function switched off, on opening the driver's door there is an audible warning that you have left the vehicle lighting on.

Front and rear foglamps (ring B)

☞ Turn ring **B** forwards to switch on and backwards to switch off. The position is confirmed by indicators in the instrument panel.



Front foglamps (turn once)

These operate with the sidelamps, dipped or main beam headlamps.



Rear foglamps (turn twice)

These operate with the sidelamps and the front foglamps, or with the dipped or main beam headlamps.

Direction indicators



Left: downwards.

Right: upwards



If you forget to return the direction indicator to its normal position, the volume of the audible signal will increase, if you are driving at a speed greater than 45 mph (70 km/h).

Parking lamps*

The sidelamps are lit on the side the traffic is on for a few hours.

With the engine switched off and within 45 seconds, place the indicator and lighting stalk on the traffic side (for example: for parking on the left, put the stalk in the right hand direction indicator position). This is indicated by an audible signal and lighting of the corresponding direction indicator in the instrument panel for a few seconds.



If the parking lamps are activated when your vehicle switches to economy mode, they will remain on. However, you cannot activate the parking lamps if your vehicle is already in economy mode.

* According to version.

Automatic "guide-me-home" lighting

When you leave your vehicle with the **automatic illumination of headlamps activated**, the sidelamps and dipped beam headlamps remain on for the duration selected when the ignition is switched off.

To activate or deactivate this function, use the multifunction screen "**Personalisation - Configuration**" menu.



The timed duration must also be set, via the multifunction screen "**Personalisation - Configuration**" menu.

Cancellation:

- ☞ flash the headlamps,
- ☞ get out of the vehicle and lock it.

Manual "guide-me-home" lighting

If the automatic illumination of headlamps is not activated, the manual "guide-me-home" lighting can be activated.

When you leave your vehicle, the sidelamps and dipped beam headlamps remain on for approximately 1 minute.

Activation:

- ☞ switch off the engine,
- ☞ flash the headlamps,
- ☞ get out of the vehicle and lock it.

Deactivation:

- ☞ flash the headlamps again,
- ☞ get out of the vehicle and lock it.

Automatic illumination of headlamps



This function is available directly at the lighting stalk on certain versions depending on the type of lighting stalk.

The sidelamps and dipped beam headlamps switch on automatically if the light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.



In foggy weather, the sunshine sensor can detect sufficient light. As a consequence, the lighting will not come on automatically.

This function is active when the vehicle is supplied to the customer.



To switch the function on or off, use the multifunction screen "**Personalisation - Configuration**" menu.

Activation



When this function is activated, the indicator lamp in the instrument panel comes on.

Deactivation



When the function is deactivated, the indicator lamp in the instrument panel comes on.

If the sunshine sensor does not function correctly, if the system is activated, the dipped beam headlamps and the sidelamps come on.

Contact a PEUGEOT dealer to have the system checked.

Daytime running lamps*

On vehicles which are equipped with daytime running lamps, the dipped beam headlamps come on when the vehicle is started.



This warning lamp comes on in the instrument panel.



The instruments and controls (instrument panel, multifunction screen, air conditioning control panel, ...) are only illuminated on switching to the automatic illumination of headlamps mode or when the lighting is switched on manually.

* According to country.

Automatic "guide-me-home" lighting

When you leave your vehicle with the **automatic illumination of headlamps activated**, the sidelamps and dipped beam headlamps remain on for the duration selected when the ignition is switched off.

To activate or deactivate this function, use the multifunction screen "**Personalisation - Configuration**" menu.



The timed duration must also be set, via the multifunction screen "**Personalisation - Configuration**" menu.

Cancellation:

- ☞ flash the headlamps,
- ☞ get out of the vehicle and lock it.

Manual "guide-me-home" lighting

If the automatic illumination of headlamps is not activated, the manual "guide-me-home" lighting can be activated.

When you leave your vehicle, the sidelamps and dipped beam headlamps remain on for approximately 1 minute.

Activation:

- ☞ switch off the engine,
- ☞ flash the headlamps,
- ☞ get out of the vehicle and lock it.

Deactivation:

- ☞ flash the headlamps again,
- ☞ get out of the vehicle and lock it.

Automatic illumination of headlamps



This function is available directly at the lighting stalk on certain versions depending on the type of lighting stalk.

The sidelamps and dipped beam headlamps switch on automatically if the light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.



In foggy weather, the sunshine sensor can detect sufficient light. As a consequence, the lighting will not come on automatically.

This function is active when the vehicle is supplied to the customer.



To switch the function on or off, use the multifunction screen "**Personalisation - Configuration**" menu.

Activation



When this function is activated, the indicator lamp in the instrument panel comes on.

Deactivation



When the function is deactivated, the indicator lamp in the instrument panel comes on.

If the sunshine sensor does not function correctly, if the system is activated, the dipped beam headlamps and the sidelamps come on.

Contact a PEUGEOT dealer to have the system checked.

Daytime running lamps*

On vehicles which are equipped with daytime running lamps, the dipped beam headlamps come on when the vehicle is started.



This warning lamp comes on in the instrument panel.



The instruments and controls (instrument panel, multifunction screen, air conditioning control panel, ...) are only illuminated on switching to the automatic illumination of headlamps mode or when the lighting is switched on manually.

* According to country.



AUTOMATIC HEADLAMP ADJUSTMENT

When stationary and when the vehicle is moving, the system automatically corrects the height of the beam, whatever the load of the vehicle. The driver is then assured of having optimum lighting and not causing a nuisance to other road users.



On starting, with the engine running, the headlamps initialise automatically and perform a vertical sweep.



In the event of a fault, the warning lamp comes on in the instrument panel screen, accompanied by an audible signal and a message in the multifunction screen. The system places your headlamps in the low position.

Do not touch the xenon bulbs. Consult a PEUGEOT dealer.

DIRECTIONAL HEADLAMPS



Function activated



Function deactivated

When the dipped or main beam headlamps are on, this function enables the light beam to follow the direction of the road.

The quality of your lighting when turning is improved considerably.

Activation/Deactivation



To deactivate or activate the function, go to the **"Personalisation - Configuration"** menu in your multifunction screen.

When the engine is switched on, the status of activation/deactivation of this function selected when the engine was switched off is retained.

By default, this function is activated.



Note: when stationary or driving at very low speed, or in reverse gear, this function is inactive.



In the event of a malfunction, this warning lamp flashes in the instrument panel.

Consult a PEUGEOT dealer.



On vehicles fitted with daytime running lamps, the function is only activated if the lighting stalk is in the dipped/main beam headlamps position.



WIPER STALK

Windscreen wipers

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- I Intermittent wipe
- 0 Off



Automatic wipe then single sweep.

In the **Intermittent** position, the wiping speed is proportional to the speed of the vehicle.

In the **AUTO** position, no further action on your part is required.



The automatic wiping must be reactivated if the ignition has been switched off for more than one minute, by pressing the stalk down.

Automatic rain sensitive windscreen wipers

The automatic wiping is controlled by a rain sensor, fitted on the windscreen. In **AUTO** mode, the wipers operate automatically and **adjust their speed to the intensity of the rainfall.**

Activation



This warning lamp comes on in the instrument panel, accompanied by a message in the multifunction screen, when the driver presses the wipers stalk down in **AUTO** mode.



Manual operation of the wiper stalk by moving the lever **A** up and returning it to position **"0"** cancels the **AUTO** position, the deactivation warning lamp comes on in the instrument panel screen accompanied by a message in the multifunction screen.

Deactivation



This warning lamp comes on in the instrument panel, accompanied by a message in the multifunction screen, when the driver moves the wiper stalk to position **I, 1 or 2.**

In the event of a malfunction, the driver is informed of this by a message in the multifunction screen.

In **AUTO** mode, the wipers will then operate in intermittent mode.

Contact a PEUGEOT dealer to have the system checked.



Do not cover the rain sensor, located on the windscreen behind the rear view mirror.

When using a car wash, switch off the ignition.

In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic wipers.

When parking in snowy weather, position the blades at the top of the windscreen (maintenance position) to prevent the accumulation of snow.

Maintenance position

This position enables the wiper blades to be removed.

In the minute following switching off of the ignition, any action on the wiper stalk positions the wipers vertically on the windscreen (parking in winter, cleaning, replacement of the blades).

To reposition the wipers after this has been done, switch on the ignition and operate the stalk.

Windscreen and headlamp wash

Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.

The headlamp wash is also activated, **if the headlamps are on.**

Screenwash/headlamp wash low level



When the reservoir low level is reached, this warning lamp comes on, accompanied by an audible signal and a message in the multifunction screen.

Next time you stop, fill the screenwash/headlamp wash reservoir.

The warning lamp comes on each time the stalk is operated, until the reservoir is filled.



WIPER STALK

Windscreen wipers

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- I Intermittent wipe
- 0 Off



Automatic wipe then single sweep.

In the **Intermittent** position, the wiping speed is proportional to the speed of the vehicle.

In the **AUTO** position, no further action on your part is required.



The automatic wiping must be reactivated if the ignition has been switched off for more than one minute, by pressing the stalk down.

Automatic rain sensitive windscreen wipers

The automatic wiping is controlled by a rain sensor, fitted on the windscreen. In **AUTO** mode, the wipers operate automatically and **adjust their speed to the intensity of the rainfall.**

Activation



This warning lamp comes on in the instrument panel, accompanied by a message in the multifunction screen, when the driver presses the wipers stalk down in **AUTO** mode.



Manual operation of the wiper stalk by moving the lever **A** up and returning it to position **"0"** cancels the **AUTO** position, the deactivation warning lamp comes on in the instrument panel screen accompanied by a message in the multifunction screen.

Deactivation



This warning lamp comes on in the instrument panel, accompanied by a message in the multifunction screen, when the driver moves the wiper stalk to position **I, 1 or 2.**

In the event of a malfunction, the driver is informed of this by a message in the multifunction screen.

In **AUTO** mode, the wipers will then operate in intermittent mode.

Contact a PEUGEOT dealer to have the system checked.



Do not cover the rain sensor, located on the windscreen behind the rear view mirror.

When using a car wash, switch off the ignition.

In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic wipers.

When parking in snowy weather, position the blades at the top of the windscreen (maintenance position) to prevent the accumulation of snow.



COURTESY LAMPS

1. Front courtesy lamp

2. Front map reading lamps

With the ignition on, operate the corresponding switch.

3. Rear courtesy lamp

4. Rear map reading lamps

With the ignition on, operate the corresponding switch.

Pressing switch **1** or **3** switches on the corresponding courtesy lamp for ten minutes.

The front and rear courtesy lamps come on automatically when the ignition key is removed, on unlocking the vehicle or on opening one of the doors.

They gradually go off after the ignition has been switched on or the vehicle is locked.



Sill illumination

The sill lighting is at the bottom of each door panel.

The lamps come on automatically when a door is opened and switch off automatically when all of the doors are closed.

Deactivation

The courtesy lamps can be deactivated by pressing switch **1** for more than three seconds. Pressing switch **1** or **3** briefly switches the corresponding courtesy lamp on and off.

The map reading lamps are not affected by this and can still be switched on.

Boot lamp

The boot lamp is located in the right-hand boot trim.

It comes on automatically when the boot is opened and goes off automatically when the boot is closed.

Activation

To re-activate the automatic lighting, press switch **1** again.



SUN VISOR WITH ILLUMINATED COURTESY MIRROR


With the ignition on, the mirror is automatically illuminated when the flap is opened.



ZONES FOR TOLL CARDS/CAR PARK TICKETS

The athermic windscreen has two non-reflective zones located either side of the base of the rear view mirror.

They are intended for affixing toll cards and/or car park tickets.

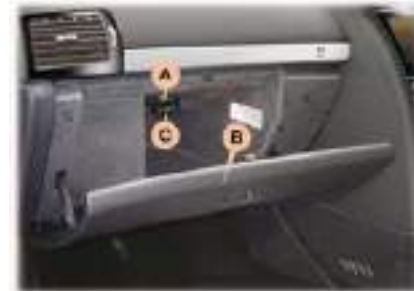

COOLED GLOVE BOX

This is fitted with a lock.

To open the glove box, lift the handle.

The glove box is illuminated when the lid is opened.

The glove box has a vent **A** that can be closed, which produces the same conditioned air as the vents in the passenger compartment.

In cold weather, it is recommended that this vent is closed in order to conserve the ambient air inside the passenger compartment.

It also has a pen holder **B** and three sockets* **C** for connecting video equipment.

* DT 16/9 colour screen only.



CENTRE CONSOLE

1 - Front ashtray (100 W max)

This is fitted with a cigar lighter socket or a 12 volt socket.

Press the cover to open the ashtray.

To empty the ashtray, after opening, grip the receptacle and remove it.

2 - 12 volt accessory socket (100 W max)

This is a cigar lighter type socket, fitted with a cap. It is supplied with current with the ignition on.

3 - Storage compartment

This is located at the rear of the front armrest.

To remove it, open it fully, press the upper lug then pull to remove it.



4 - Front armrest

To open the compartment, raise the cover or operate the left finger-plate (according to version).

This compartment permits access to the USB socket and can accommodate CDs and coins.

5 - Retractable cup/can holder

This is located at the front of the front armrest.

Press the cover to open the cup/can holder.



Fitting/Removing the mat

When removing the mat on the driver's side, push the seat as far back as possible and remove the fixings.

When refitting, position the mat correctly on the pin and clip the fixings. Check that the mat is secured correctly.



To prevent the mat from becoming caught under the pedals:

- only use mats suited to the fixings already present in the vehicle. It is essential that these fixings are used.
- never fit one mat on top of another.



Access to the ski flap

Tilt the rear armrest and pull the handle down then towards you to open the flap.



Right-hand storage compartment

The right-hand storage compartment (in the absence of the JBL Hi-Fi system) can accommodate a box of bulbs, a warning triangle and the luggage retaining net.

To gain access to the compartment:

- ☞ turn the two screws to the right and remove the panel.



Luggage retaining net

Use the 4 lashing rings on the luggage compartment floor to secure your luggage using the retaining net.



HORN

Press one of the spokes of the steering wheel.



HAZARD WARNING LAMPS

Press the button, the direction indicators flash.
They can operate with the ignition off.

Automatic operation of hazard warning lamps

When braking in an emergency, depending on the deceleration, the hazard warning lamps come on automatically. They switch off automatically the first time you accelerate.

It is also possible to switch them off by pressing the button.

ELECTRONIC STABILITY PROGRAMME (ESP)

The electronic stability programme (ESP) incorporates the following systems:

- anti-lock braking system (ABS) and the braking system (EBFD),
- emergency braking assistance system,
- anti-slip regulation (ASR), also known as traction control
- dynamic stability control (DSC).

Definitions

Anti-lock braking system (ABS) and braking system (EBFD)

This system improves the stability and manoeuvrability of your vehicle when braking and offers improved control, in particular on poor or slippery road surfaces.

The ABS prevents wheel lock in the event of emergency braking.

The EBFD provides complete management of the braking pressure wheel by wheel.

Emergency braking assistance system

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered in relation to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

Anti-slip regulation (ASR) - Traction control

The ASR system optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

Operating modes

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD) braking system



When this warning lamp comes on, accompanied by an audible signal and a message, it indicates that there is an ABS fault, which could cause a loss of control of the vehicle when braking.



When this warning lamp comes on, connected to the **STOP** and **ABS** warning lamps, accompanied by an audible signal and a message, it indicates that there is an electronic brake force distribution fault, which could cause a loss of control of the vehicle when braking.

Stop as soon as it is safe to do so.

In both cases, consult a PEUGEOT dealer.



When changing wheels (tyres and rims), ensure that only approved tyres and rims are used.

Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.



In emergency braking, press very firmly without releasing the pressure.

Dynamic stability control (DSC)

Operation of the DSC



The indicator lamp comes on.

Deactivation

In exceptional conditions (starting the vehicle when it is stuck in mud, immobilised in snow, on unstable ground...), it may prove useful to deactivate the DSC.

- ☞ Press the **"ESP OFF"** switch, located on the centre console.

The switch lamp and the warning lamp come on: the DSC no longer acts on the operation of the engine.



Warning lamp in the instrument panel.

Reactivation

- ☞ Automatic when the ignition is switched off,
- ☞ Automatic from 30 mph (50 km/h),
- ☞ Manual by pressing the switch again.

Operating fault

When a system malfunction occurs, the warning lamp comes on accompanied by an audible signal and a message in the multifunction screen.

Contact a PEUGEOT dealer to have the system checked.



Warning lamp in the instrument panel.



The DSC offers improved safety during normal driving but should not encourage the driver to take extra risks (late braking) or drive at very high speeds.

Operation of the system is guaranteed on condition that the manufacturer's instructions regarding the wheels (tyres and rims), the braking components, the electronic components and the assembly and repair procedures used by PEUGEOT dealers are observed.

Following an impact, have the system checked by a PEUGEOT dealer.



SEAT BELTS

Front seat belt height adjustment:

- ☞ To lower the attachment point, squeeze control 1 and slide it downwards.
- ☞ To raise the attachment point, slide control 1 upwards.

To fasten the seat belts

- ☞ Pull the strap, then insert the tongue into the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.



To unfasten the seat belts

- ☞ Press the red button on the buckle.



Front seat belts with pre-tensioner and force limiter

In the event of a serious front impact, the pre-tensioning system instantly tightens the seat belts firmly against the bodies of the occupants.

The pre-tensioning seat belts are armed when the ignition is on.

The force limiter reduces the pressure of the seat belt against the chest of the occupant, so increasing his pronstection.

Rear seat belts

The rear seats are each fitted with a three-point inertia reel seat belt. These seat belts have a force limiter.

Front seat belt fastening detection



When the ignition is switched on, if a front passenger has not fastened their seat belt and if the vehicle speed is **below 12 mph (20 km/h)**, you are warned by illumination of the **seat belt warning lamp**.

The warning lamp goes off when the seat belt(s) concerned is(are) fastened. If the vehicle speed is **above 12 mph (20 km/h)**, you are warned by flashing of the **seat belt warning lamp**, an audible signal and a message in the multifunction screen locating the unfastened seat belt(s).



Note: a bag or an animal placed on the front passenger seat may trigger the illumination of the warning lamp.

The audible signal ceases and the warning lamp goes off when the seat belt concerned is fastened.

After two minutes without any action on the seat belts, the flashing warning lamp remains on fixed and the audible signal ceases.

All of the warnings cease when a door is opened or when the engine is switched off.



The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not invert the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stored automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis.

The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling firmly on the strap and releasing it so that it re-winds slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, all repairs and checks must be carried out by a PEUGEOT dealer who guarantees that the work is carried out correctly.

Have your seat belts checked regularly by a PEUGEOT dealer and particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

In the event of an impact

Depending on the nature and seriousness of the impacts, the pre-tensioning device may be triggered before and independently of the airbags. Triggering of the pre-tensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer.

AIRBAGS

The airbags have been designed to maximise the safety of the occupants in the event of violent collisions. They supplement the action of the force-limiting seat belts.

In this case, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags are deployed instantaneously and protect the occupants of the vehicle; immediately after the impact, the airbags deflate rapidly so that they do not hinder the visibility of the occupants or their possible exit from the vehicle,
- in the event of a minor impact or rear impact and in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to provide maximum protection in these situations.



The airbags do not operate when the ignition is off.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

Impact detection zones



- A. Front impact zone.
- B. Side impact zone.



The deployment of one or more airbags is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.



Front airbags

The front airbags protect the driver and front passenger in the event of a serious front impact in order to limit the risks of injury to the head and chest.

They are fitted in the centre of the steering wheel for the driver and in the dashboard for the front passenger.

Deployment

They are deployed simultaneously, except in cases where the passenger's front airbag is deactivated, in the event of a serious front impact applied to all or part of the front impact zone A, in the longitudinal centreline of the vehicle on a horizontal plane directed from the front to the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.

In the event of a malfunction



Instrument panel warning lamp.

If this warning lamp comes on, accompanied by an audible signal and a message in the multifunction screen, contact a PEUGEOT dealer to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



Deactivating the front passenger's front airbag*

To ensure the safety of your child, it is essential to deactivate the passenger's airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

☞ **With the ignition switched off**, insert the key into the passenger's airbag deactivation switch, turn it to the **"OFF"** position, then remove the key keeping the switch in the new position.



When the ignition is on, this warning lamp remains on in the instrument panel while the airbag is deactivated.

In the **"OFF"** position, the passenger airbag will not be deployed in the event of an impact.

* According to country.

Reactivation

As soon as the child seat is removed, turn the airbag switch to the **"ON"** position to reactivate the airbag and thus ensure its safety function.

Knee airbag



The knee airbag protects the driver's knees in the event of a serious front impact.

It is fitted in the dashboard below the steering column.

Deployment

It is deployed at the same time as the front airbags.

Front lateral airbags

The lateral airbags protect the driver and passengers in the event of a serious side impact in order to limit the risks of injury to the chest.

Each lateral airbag is fitted into the front seat back.

Deployment

The lateral airbags are deployed independently of each other in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane directed from the outside to the inside of the vehicle.

The lateral airbag inflates between the front occupant of the vehicle and the corresponding door trim panel.

Impact detection zones



- A. Front impact zone.
- B. Side impact zone.

Curtain airbags

The curtain airbags protect the driver and passengers in the event of a serious side impact in order to limit the risks of injury to the head.

Each curtain air bag is fitted into the door pillars and the upper part of the passenger compartment.

Deployment

It is deployed at the same time as the corresponding lateral airbags in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane directed from the outside to the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

In the event of a front or rear collision, the airbag is not deployed.

In the event of a fault



Instrument panel warning lamp.

If this warning lamp comes on, accompanied by an audible signal and a message in the multifunction screen, contact a PEUGEOT dealer to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



For the airbags to be fully effective, observe the following safety rules:

- Wear a correctly adjusted seat belt.
- Sit in a normal upright position.
- Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.
- After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.
- All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the PEUGEOT network.
- Even if all of the precautions mentioned are observed, a risk of injury or of slight burns to the head, chest or arms, when an airbag is deployed, cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

- Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.
- Passengers must not place their feet on the dashboard.
- Smoke as little as possible; deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.
- Never remove or pierce the steering wheel or hit it violently.

Front lateral airbags

- Only put approved covers on the seats. These will not hamper the deployment of the lateral airbags. Consult a PEUGEOT dealer.
- Do not fix or attach anything to the seat backs. This could cause injury to the chest or arms when the lateral airbag inflates.
- Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

- Do not fix or attach anything to the pillars or the roof. This could cause injury to the head when the curtain airbag inflates.
- Do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

Knee airbag*

- Do not sit with your knees any nearer to the steering wheel than necessary.

In the event of a malfunction



Instrument panel warning lamp.

If this warning lamp comes on, accompanied by an audible signal and a message in the multifunction screen, contact a PEUGEOT dealer to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



Deactivating the front passenger's front airbag*

To ensure the safety of your child, it is essential to deactivate the passenger's airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

☞ **With the ignition switched off**, insert the key into the passenger's airbag deactivation switch, turn it to the **"OFF"** position, then remove the key keeping the switch in the new position.



When the ignition is on, this warning lamp remains on in the instrument panel while the airbag is deactivated.

In the **"OFF"** position, the passenger airbag will not be deployed in the event of an impact.

* According to country.

Reactivation

As soon as the child seat is removed, turn the airbag switch to the **"ON"** position to reactivate the airbag and thus ensure its safety function.

Knee airbag



The knee airbag protects the driver's knees in the event of a serious front impact.

It is fitted in the dashboard below the steering column.

Deployment

It is deployed at the same time as the front airbags.



PARKING BRAKE

To apply

When parking on a slope, turn the wheels towards the kerb and apply the parking brake.

To release

Pull the lever up and press the button to release the parking brake.



6-SPEED MANUAL GEARBOX

Reverse

To engage reverse gear, lift the ring under the gear knob and push the gear lever to the left then forwards.

Reverse gear can only be engaged when the vehicle is stationary with the engine idling.

"PORSCHE TIPTRONIC SYSTEM" AUTOMATIC GEARBOX

The six speed automatic gearbox offers, as required, the comfort of the auto-adaptive programme enhanced by a selection suited to dynamic driving conditions: sport, or to driving on a slippery road: snow.

However, manual selection is still possible using the gear lever.



Gear selection gate

☞ Move the lever in the gate to select a position.

The indicator corresponding to the position selected appears in the instrument panel screen.

Park: to immobilise the vehicle and to start the engine, with the parking brake on.

Reverse: to reverse (select this position with the vehicle stationary, engine at idle).

Neutral: to start the engine and to park, with the parking brake on.

Note: if position **N** is inadvertently engaged while driving, allow the engine to return to idle before engaging position **D** then accelerate.

Drive: to drive in automatic mode.

Manual: to drive selecting the gears.

S: sport programme.

☼: snow programme.

Starting the engine

☞ with the parking brake on, select position **P** or **N** in the gate,

☞ turn the ignition key.

Moving Off

With the engine running, to move off from position **P**:

☞ **to exit position P, you must press the brake pedal,**

☞ select position **R, D** or **M**, then gradually release the pressure on the brake pedal; the vehicle moves off immediately.

To move off from position **N**:

☞ with your foot on the brake, release the parking brake,

☞ select position **R, D** or **M**, then gradually release the pressure on the brake pedal; the vehicle moves off immediately.



Always keep your foot on the brake on a steep incline.

When the engine is at idle, brakes not applied, if position **R, D** or **M** is selected, the vehicle moves even without the accelerator being pressed.

Do not leave children unsupervised inside the vehicle, with position R, D or M selected, with the engine running, as the vehicle moves even without the accelerator being pressed.



With the ignition off, if the lever is not in position **P**, an audible signal is heard when the driver's door is opened, or after approximately 45 seconds. Move the lever to position **P**. The audible signal ceases.



When maintenance operations need to be carried out with the engine running, apply the parking brake and select the **Park** position.

The auto-adaptive programme

- ☞ select position **D** in the gate: the gearbox operates in auto-adaptive mode, without any action on your part, taking into account the following parameters:
 - the style of driving,
 - the profile of the road,
 - the vehicle load.

To obtain maximum acceleration without touching the lever, press the accelerator down fully (kick down). The programme will change down automatically or will stay in the gear selected until the maximum engine speed is reached.

When the brake is applied, the programme will change down automatically in order to provide efficient engine braking.



Releasing the accelerator sharply does not have any immediate effect on the speed of the vehicle.



Never select position **N** when the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is stationary.

Never change between positions to optimise braking on a slippery surface.

Sport and Snow programmes

These are two special programmes. The programme selected is displayed in the instrument panel screen.

Sport programme

- ☞ Press button **S** once the vehicle has been started in position **D**, the auto-adaptive programme favours dynamic driving.

Snow programme

This programme improves starting and drive when traction is poor.

- ☞ Press button ***** once the vehicle has been started and position **D** has been selected, the auto-adaptive programme adjusts the performance of the vehicle to the condition of the slippery road.

You can deactivate the Sport or Snow programme at any time by pressing the button selected.

Operation with manual selection of the gears

- ☞ select position **M** in the gate,
- ☞ push the lever towards the **+** sign to change up a gear and push again to change up another gear,
- ☞ pull the lever towards the **-** sign to change down a gear and pull again to change down another gear.

You can change from position **D** (driving in automatic mode) to position **M** (driving in manual mode) at any time.



It is only possible to change from one gear to another if the vehicle speed and engine speed permit. If they do not, the vehicle will operate temporarily in automatic mode.

When the vehicle is stationary or moving very slowly, the gearbox automatically selects gear **M1**.

Programmes **S** (sport) and ***** (snow) do not operate in manual gear selection mode.

Operating check



An operating fault is indicated by this warning lamp, accompanied by an audible signal and a message in the multifunction screen.

In this situation the gearbox operates in downgrade mode (locked in 3rd gear). You may feel a substantial jolt when changing from **P** to **R** and from **N** to **R** (this will not cause any damage to the gearbox).

Do not exceed 60 mph (100 km/h) or keep within local speed limits.

Contact a PEUGEOT dealer as soon as possible.



If the battery is flat and the lever is in position **P**, it will be impossible to change to another position.

In particular, do not force the lever or there is a risk the gearbox may be damaged.

Never press both the accelerator pedal and the brake pedal at the same time. Braking and acceleration should be done with the right foot. Pressing both pedals simultaneously may cause damage to the gearbox.



ELECTRONICALLY CONTROLLED SUSPENSION

The suspension adapts automatically and instantly to different driving styles and road characteristics, improving the comfort of the occupants and the vehicle's road holding capabilities. The suspension favours smooth shock absorption, ensuring a comfortable ride, but as soon as conditions demand a change (sporty driving, tight bends, avoidance action, etc.) it automatically selects firmer shock absorption, guaranteeing optimum road holding.

Manual selection of the SPORT position



Press switch **1**, the indicator lamp comes on and the **SPORT** warning lamp comes on.

In this position, the suspension is maintained in the **SPORT** position.

To return to automatic operation



Press switch **1** again. The indicator lamp is switched off and the **AUTO** indicator lamp comes on.

Operating check

This is confirmed by the switch lamp and the indicator lamps.



In the event of a fault, it comes on, accompanied by an audible signal and a message on the multifunction screen.

Select automatic operation and contact a PEUGEOT dealer as soon as possible.

Operating check



An operating fault is indicated by this warning lamp, accompanied by an audible signal and a message in the multifunction screen.

In this situation the gearbox operates in downgrade mode (locked in 3rd gear). You may feel a substantial jolt when changing from **P** to **R** and from **N** to **R** (this will not cause any damage to the gearbox).

Do not exceed 60 mph (100 km/h) or keep within local speed limits.

Contact a PEUGEOT dealer as soon as possible.



If the battery is flat and the lever is in position **P**, it will be impossible to change to another position.

In particular, do not force the lever or there is a risk the gearbox may be damaged.

Never press both the accelerator pedal and the brake pedal at the same time. Braking and acceleration should be done with the right foot. Pressing both pedals simultaneously may cause damage to the gearbox.



ELECTRONICALLY CONTROLLED SUSPENSION

The suspension adapts automatically and instantly to different driving styles and road characteristics, improving the comfort of the occupants and the vehicle's road holding capabilities. The suspension favours smooth shock absorption, ensuring a comfortable ride, but as soon as conditions demand a change (sporty driving, tight bends, avoidance action, etc.) it automatically selects firmer shock absorption, guaranteeing optimum road holding.

Manual selection of the SPORT position



Press switch **1**, the indicator lamp comes on and the **SPORT** warning lamp comes on.

In this position, the suspension is maintained in the **SPORT** position.

To return to automatic operation



Press switch **1** again. The indicator lamp is switched off and the **AUTO** indicator lamp comes on.

Operating check

This is confirmed by the switch lamp and the indicator lamps.



In the event of a fault, it comes on, accompanied by an audible signal and a message on the multifunction screen.

Select automatic operation and contact a PEUGEOT dealer as soon as possible.



CRUISE CONTROL/SPEED LIMITER

Cruise control function

This enables the vehicle to maintain a steady speed programmed by the driver

In order for it to be memorised, the vehicle speed must be greater than 25 mph (40 km/h) with at least fourth gear engaged (second gear for the automatic gearbox), **with the engine running**.

Selecting the function

- Place switch **1** in the **CRUISE** position. The cruise control is not yet active and no speed has been memorised. The screen indicates:



Switching the function off

- Place switch **1** in position **0** or **LIMIT** to switch the system off.

Activation/memorising a speed

As soon as you reach the chosen speed, press button **2** or **3**. This memorises the speed, which will be maintained automatically. The screen indicates (e.g. at 70 mph (110 km/h)):



Note: It is possible to accelerate and drive momentarily at a speed greater than the memorised speed. The value memorised flashes. When the accelerator pedal is released, the vehicle will return to the memorised speed.

Cancelling the memorised speed

If you wish to cancel the memorised speed:

- Press button **4** or the brake or clutch pedal. The display indicates (e.g. at 70 mph (110 km/h)):



On a steep descent, the cruise control, which does not act on the brakes, is not able to prevent the vehicle from exceeding the programmed speed.

In no circumstances does the cruise control replace the requirement to respect speed limits, nor does it replace the need for vigilance and responsibility on the part of the driver.

We recommend that your feet remain near the pedals.



Note: the speed memorised is cancelled automatically if the vehicle speed is less than 25 mph (40 km/h), or if the manual gearbox is in a gear lower than fourth (second gear for the automatic gearbox) or if the ESP is activated.

Recalling the memorised speed

After cancellation, press button **4**. Your vehicle will return to the last memorised speed. The display indicates (e.g. at 70 mph (110 km/h)):



Changing a memorised speed

To memorise a speed higher than the previous one, there are two options:

Without using the accelerator:

☞ press button **3**.

Using the accelerator:

☞ exceed the memorised speed until the required speed is reached,

☞ press button **2** or **3**.

To memorise a speed lower than the previous one:

☞ press button **2**.

Short press: +/- 1 mph (1 km/h)

Long press: +/- 5 mph (5 km/h)

Maintained press: continuous increase or decrease of the value in steps of 5 mph (5 km/h).

Cancelling the memorised speed

☞ Place switch **1** in position **0** or **LIMIT** or switch off the ignition.

Operating check

In the event of a cruise control malfunction, the memorised speed is erased, the dashes flash for a few seconds:



Contact a PEUGEOT dealer to have the system checked.



Do not use the cruise control on slippery roads or in heavy traffic.

To prevent the mat from becoming caught under the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.



CRUISE CONTROL/SPEED LIMITER

Speed limiter function

This prevents the vehicle speed exceeding the speed programmed by the driver (minimum speed of 18 mph (30 km/h)).



The operations must be carried out with the engine running.

Selecting the function

- Place switch **1** in the **LIMIT** position. The limiter is not yet active. By default the screen indicates:



Switching the function off

- Place switch **1** in position **0** or **CRUISE** or switch off the ignition to switch the system off. The last speed programmed remains in the memory.

Memorising a speed

A speed can be memorised without activation of the limiter.

Pressing buttons **2** and **3** decreases or increases the speed.

Short press: +/- 1 mph (1 km/h)

Long press: +/- 5 mph (5 km/h)

Maintained press: continuous increase or decrease of the value in steps of 5 mph (5 km/h).

Activation/deactivation of the limiter

Pressing button **4** activates the limiter, pressing this button again deactivates it. When the limiter is active, the screen indicates (e.g. at 70 mph (110 km/h)):



On a steep descent or if the driver accelerates sharply, the speed limiter, which does not act on the brakes, is not able to prevent the vehicle from exceeding the programmed speed.

In no circumstances does the speed limiter replace the requirement to respect speed limits, nor does it replace the need for vigilance and responsibility on the part of the driver.

The driver must remain vigilant and stay in complete control of his vehicle.

Exceeding the programmed speed

Additional pressing of the accelerator to exceed the programmed speed will have no effect unless the pedal is pressed firmly (passing the **point of resistance**).

The limiter is deactivated temporarily and displays the programmed speed (e.g. at 70 mph (110 km/h)):



Note: the speed also flashes when the speed limiter cannot prevent the vehicle from exceeding the programmed speed (on a steep descent or in the event of sharp acceleration).

To re-activate the limiter, release the accelerator to slow down to a speed below the programmed speed.

Operating check

In the event of a limiter malfunction, the memorised speed is erased, the dashes flash for a few seconds:



Contact a PEUGEOT dealer to have the system checked.



To prevent the mat from becoming caught under the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.



VISUAL AND AUDIBLE FRONT AND/OR REAR PARKING SENSORS

This system consists of proximity sensors:

- six in the front bumper, and/or
- four in the rear bumper.

It detects obstacles (person, vehicle, tree, gate, etc.) in front of or behind the vehicle. However, it cannot detect obstacles located directly under the bumper.

An object, such as a stake, cone or any other similar object may be detected at the beginning of the manoeuvre but may no longer be detected when the vehicle comes close to it.



To ensure optimum operation, in bad weather or in winter, ensure that the sensors are not covered with mud, frost or snow.



Detection zone

Detection

The system is activated when:

- reverse gear is engaged,
- the speed is below 6 mph (10 km/h) in forward gear.

It is accompanied by an audible signal and/or display of the vehicle in the multifunction screen.



The system is deactivated if the vehicle is stationary for more than 3 seconds.



The proximity of the obstacle is indicated by:

- an audible signal which becomes more rapid as the vehicle approaches the obstacle,
- a graphic in the multifunction screen, with blocks which become increasingly close to the vehicle.

The obstacle is located in relation to the emission of the audible signal by the speakers; that is, front or rear and right or left.

When the distance between the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous and/or the "Danger" symbol appears in the multifunction screen.

The system becomes inactive again:

- when you exit reverse gear,
- when the speed is above 6 mph (10 km/h),
- at the end of the manoeuvre, when stationary, after a few seconds (front parking sensors only).



Deactivation

Press button **A** to deactivate the system (child asleep in the rear...). The indicator lamp in the button comes on.



Note: this function will be deactivated automatically when a trailer is being towed (vehicle fitted with a towbar recommended by PEUGEOT).

Reactivation

Press button **A** again to reactivate the system. The indicator lamp in the button goes off.



If there is an operating fault, when reverse gear is engaged, the indicator lamp flashes, accompanied by an audible signal and a message in the multifunction screen.

TYRE UNDER-INFLATION DETECTION

Sensors check the tyre pressures while driving and trigger a warning in the event of problem.

Pressure Check



With the ignition on and the vehicle having been stationary for approximately 15 minutes, and after the engine oil level, this indicator lamp comes on in the instrument panel screen to indicate that the system is measuring the tyre pressures.

Pressure OK



This indicator lamp comes on in the instrument panel screen if all of the tyre pressure values measured are correct.

If this indicator lamp does not appear, contact a PEUGEOT dealer to have the system checked.

Under-inflated tyre



This warning lamp is accompanied by the audible signal and the message in the multifunction screen identifying the wheel concerned.

If this warning lamp comes on, have the tyre pressure checked as soon as possible.

Puncture



This warning lamp, accompanied by the audible signal and the message in the multifunction screen identifying the wheel concerned, is followed by illumination of the **STOP** warning lamp.

Stop as soon as it is safe to do so, avoiding any sudden movement of the steering wheel and the brakes.

Change the damaged wheel (punctured or very deflated tyre), and have the tyre pressure checked as soon as possible.

Sensor(s) not detected or faulty



This warning lamp is accompanied by the audible signal and the message in the multifunction screen which indicates that under-inflation detection is absent from one (or several) wheel(s) or that there is a fault in the system.

Contact a PEUGEOT dealer to replace the faulty sensor(s).



Note: this message is also displayed when one of the wheels is away from the vehicle (being repaired) or when one or more wheels without a sensor are fitted.



All repairs and changing of tyres on a wheel fitted with this system must be carried out by a PEUGEOT dealer.

If, when changing a tyre, you install a wheel which is not detected by your vehicle, you must have the system re-initialised by a PEUGEOT dealer.

The tyre under-inflation detection system is an aid to driving which does not replace the need for the driver to be vigilant or to drive responsibly.

This system does not avoid the need to have the tyre pressures checked regularly (see manufacturer's label) to ensure that the optimum dynamic performance of the vehicle is maintained and prevent premature wear of the tyres, particularly in arduous driving conditions (heavy load, high speed).

The tyre pressures must be checked cold, at least once a month. Remember to check the pressure of the spare wheel.

The tyre under-inflation detection system may experience temporary interference due to electromagnetic emissions on a frequency close to that used by the system.



OPENING THE BONNET

From inside: pull the release lever on the left-hand side under the dashboard towards you.

From outside: lift the safety catch and raise the bonnet.



Bonnet stay

Secure the stay in its housing to hold the bonnet open.

Before closing the bonnet, replace the stay in its clip.

To close

Lower the bonnet and release it at the end of its travel. Check that the bonnet is fully latched.



To avoid any risk of burns, only handle the safety catch and bonnet stay by the protective foam.



3 LITRE V6 24V PETROL INJECTION ENGINE

1. Windscreen/headlamp wash reservoir.
2. Power steering reservoir.
3. Coolant header tank.
4. Engine oil dipstick.
5. Engine oil filler cap.
6. Air filter.
7. Fusebox.
8. Brake and clutch fluid reservoir.



If you have to remove or refit the engine style cover, handle it with care to avoid damaging the fixing clips.



2 LITRE 16V HDI AND 3 LITRE V6 24V HDI DIESEL ENGINES

1. Windscreen/headlamp wash reservoir.
2. Power steering reservoir.
3. Coolant header tank.
4. Engine oil dipstick.
5. Engine oil filler cap.
6. Air filter.
7. Fusebox.
8. Brake fluid reservoir.



If you have to remove or refit the engine style cover, handle it with care to avoid damaging the fixing clips.

CHECKING THE LEVELS

These are normal maintenance operations which keep your vehicle in good working order. Ask for advice from a PEUGEOT dealer, or refer to the Service Box website or the servicing booklet supplied with the vehicle.

Important: if you have to remove/refit the engine style cover, handle it with care to avoid damaging the fixing clips.



Take care when when doing anything under the bonnet, as some parts of the engine can be extremely hot (risk of burns).

Oil level

☞ Check the level regularly and top up between oil changes.

Check the level with the vehicle level, the engine having been off for more than 15 minutes, using the dipstick.

Dipstick

There are two marks on the dipstick:

A = maximum

Never fill past this mark.

B = minimum



To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.

Oil change

It is imperative that this is carried out at the intervals specified and the viscosity of the oil chosen must meet the requirements laid down in the manufacturer's servicing schedule. Ask for advice from a PEUGEOT dealer or refer to the Service Box website.

Note: avoid used oil coming into prolonged contact with the skin. Empty the used oil into the containers provided for this purpose in the PEUGEOT dealer network (France) or take it to an authorised waste disposal site.

Oil filter

Replace the oil filter regularly in accordance with the recommendations of the servicing schedule.

Brake fluid change

Use the fluid recommended by the manufacturer, which fulfils DOT4 Standards.

It is imperative that the brake fluid is changed at the intervals specified in accordance with the manufacturer's servicing schedule.

Note: avoid all contact with the skin, the brake fluid is harmful to health and very corrosive.

Cooling system



Use only the fluid recommended by the manufacturer.

Note: the coolant does not need to be changed.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.



Slacken the cap to the first notch to release the pressure to prevent any risk of scalding. When the pressure has dropped, remove the cap and top up the level with coolant.



The engine fan can operate after the vehicle has stopped.

Used oil



Do not dispose of used oil, brake fluid or coolant into drains or onto the ground.

Power steering fluid level

Use the fluid recommended by the manufacturer.

- Open the reservoir, with the engine at ambient temperature, the level should always be above the MIN mark, close to the MAX mark.

Windscreen and headlamp wash level

For best quality cleaning and for your safety, to see and be seen, we would advise that you use products from the PEUGEOT range.

CHECKS

Battery



At the start of winter, have your battery checked by a PEUGEOT dealer.

Air filter and passenger compartment filter



Have the filter elements replaced regularly. If you drive in dusty conditions, change them twice as often.

Particle emission filter - Additive reservoir (Diesel)

It is imperative that the maintenance of the particle emission filter and the filling of the additive reservoir are carried out by a PEUGEOT dealer in accordance with the manufacturer's servicing schedule.

Brake pads



Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances.



It may be necessary to check the thickness of the pads, even between services.

Brake disc wear

For information on checking brake disc wear, contact a PEUGEOT dealer.

Parking brake



Where the parking brake travel is too great or there is a reduction in the performance of the system, the parking brake should be adjusted.

Have the system checked by a PEUGEOT dealer.



To ensure the best performance from components as important as the power steering and the braking system, the manufacturer selects and offers specific products; only use products recommended by PEUGEOT.

To prevent damage to the electrical units, high pressure washing of the engine compartment is strictly **prohibited**.

Used oil



Do not dispose of used oil, brake fluid or coolant into drains or onto the ground.

Power steering fluid level

Use the fluid recommended by the manufacturer.

- Open the reservoir, with the engine at ambient temperature, the level should always be above the MIN mark, close to the MAX mark.

Windscreen and headlamp wash level

For best quality cleaning and for your safety, to see and be seen, we would advise that you use products from the PEUGEOT range.

CHECKS

Battery



At the start of winter, have your battery checked by a PEUGEOT dealer.

Air filter and passenger compartment filter



Have the filter elements replaced regularly. If you drive in dusty conditions, change them twice as often.

Particle emission filter - Additive reservoir (Diesel)

It is imperative that the maintenance of the particle emission filter and the filling of the additive reservoir are carried out by a PEUGEOT dealer in accordance with the manufacturer's servicing schedule.

Brake pads



Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances.



It may be necessary to check the thickness of the pads, even between services.

Brake disc wear

For information on checking brake disc wear, contact a PEUGEOT dealer.

Parking brake



Where the parking brake travel is too great or there is a reduction in the performance of the system, the parking brake should be adjusted.

Have the system checked by a PEUGEOT dealer.



To ensure the best performance from components as important as the power steering and the braking system, the manufacturer selects and offers specific products; only use products recommended by PEUGEOT.

To prevent damage to the electrical units, high pressure washing of the engine compartment is strictly **prohibited**.



CHANGING A WHEEL

- ☞ Park the vehicle on level, stable and non-slippery ground.
- ☞ Apply the parking brake, switch off the ignition and engage first or reverse gear (position **P** for the automatic gearbox).



Never go underneath a vehicle which is supported only by a jack.

Weight of the spare wheel: approximately 20 kg.

Access to the spare wheel and the jack in the boot



- ☞ Lift the floor using the strap.



- ☞ Fold the floor back fully towards the back of the boot.



The floor must be retained in the raised position as shown in the illustration.

Recommendations when using the temporary spare wheel*

Your vehicle may be equipped with a spare wheel with a different rim from the standard wheel.

After use, be sure to replace it as soon as possible.

Observe the following advice to avoid altering the handling of the vehicle:

- do not drive above 50 mph (80 km/h),
- do not fit a wheel trim,
- drive carefully,
- check the inflation pressure indicated on the label.

* According to version and country.



Tools available

The following tools are located in the holder in the centre of the spare wheel:

1. Wheelbrace.
For removing the wheel trim and the wheel bolts.
2. Jack with integrated handle.
For raising the vehicle.
3. Removable towing eye.
See corresponding section.
4. Bolt cover tool.
For removing the bolt protectors (covers) on alloy wheels.

Removal

- ☞ For vehicles with alloy wheels, remove the covers using tool 4.
- ☞ Slacken the wheel bolts.
- ☞ Place the jack 2 in one of the four locations underneath the vehicle (the nearest one to the wheel to be changed).
- ☞ Extend the jack 2 until its base is in contact with the ground.
- ☞ Unscrew the bolts and remove the wheel.

Fitting a wheel

- ☞ Position the wheel.
- ☞ Tighten the bolts by hand.
- ☞ Partly tighten the bolts using the wheelbrace 1.
- ☞ Fold the jack 2 and remove it.
- ☞ Fully tighten the bolts using the wheelbrace 1.
- ☞ For vehicles with alloy wheels, refit the covers.
- ☞ Put the tool holder back in position. This helps to keep the boot floor in its correct position, to prevent any deformation of the floor when loaded.
- ☞ Tighten the spare wheel securing strap to prevent noise and for your safety in the event of impact.

Reminder: for your safety, always change a wheel:

- on level, stable, non-slippery ground,
- with the parking brake applied,
- with first or reverse gear engaged (position **P** for the automatic gearbox),
- never go underneath a vehicle which is supported only by a jack.

After changing the wheel:

- have the tightening of the bolts and the tyre pressure of the spare wheel checked as soon as possible.
- have the punctured wheel repaired and refit it to the vehicle as soon as possible.
- have the spare wheel checked and replace it in its boot recess.

Information in the instrument panel:



Punctured tyre warning lamp



Tyre under-inflation detection system warning lamp

These original wheels are fitted with a pressure sensor (see "Tyre under-inflation detection"). The alarm which detects the removal or absence of a wheel fitted with the indicator sensor signals the anomaly. Have the wheel repaired and checked by a PEUGEOT dealer.

Special features of alloy wheels

Bolt covers

Alloy wheel bolts are covered by chrome trims.

Use the yellow tool to remove the trims before slackening the bolts.

Fitting the spare wheel

If your vehicle is fitted with a steel spare wheel, when fitting it, it is **normal** when tightening the bolts to notice that the washers do not come into contact with the rim. The spare wheel is secured by the cone shape of each bolt.

Fitting snow tyres

If you fit snow tyres mounted on steel wheels onto your vehicle, it is **essential** to use special bolts available from your PEUGEOT dealer.

Security bolts

Your wheels are fitted with security bolts (one per wheel), placed under chrome trims which must be removed using the yellow tool, before the bolts are unscrewed using the security bolt socket and the wheelbrace 1.



This security bolt socket was given to you on delivery of your vehicle with the duplicate keys. Make a careful note of the code number engraved on the head of the security bolt socket. This will enable you to obtain a duplicate security bolt socket from a PEUGEOT dealer. You are advised to do the same for the duplicate keys.

VERY COLD CLIMATE SCREEN*

The very cold climate screen is a partial removable cover which is fixed onto the air intake grille to prevent the accumulation of snow due to direct splashes.

Once it has been fitted on your vehicle, it must be removed when the ambient temperature conditions rise above 10 °C again.

Consult a PEUGEOT dealer.

3 litre V6 HDi 24V engine

When the temperature is below minus 20 °C, your vehicle must be pre-heated for 30 minutes using the programmable heating before starting.

Refer to the corresponding paragraph in the "Comfort" section.

* According to country.

Information in the instrument panel:



Punctured tyre warning lamp



Tyre under-inflation detection system warning lamp

These original wheels are fitted with a pressure sensor (see "Tyre under-inflation detection"). The alarm which detects the removal or absence of a wheel fitted with the indicator sensor signals the anomaly. Have the wheel repaired and checked by a PEUGEOT dealer.

Special features of alloy wheels

Bolt covers

Alloy wheel bolts are covered by chrome trims.

Use the yellow tool to remove the trims before slackening the bolts.

Fitting the spare wheel

If your vehicle is fitted with a steel spare wheel, when fitting it, it is **normal** when tightening the bolts to notice that the washers do not come into contact with the rim. The spare wheel is secured by the cone shape of each bolt.

Fitting snow tyres

If you fit snow tyres mounted on steel wheels onto your vehicle, it is **essential** to use special bolts available from your PEUGEOT dealer.

Security bolts

Your wheels are fitted with security bolts (one per wheel), placed under chrome trims which must be removed using the yellow tool, before the bolts are unscrewed using the security bolt socket and the wheelbrace 1.



This security bolt socket was given to you on delivery of your vehicle with the duplicate keys. Make a careful note of the code number engraved on the head of the security bolt socket. This will enable you to obtain a duplicate security bolt socket from a PEUGEOT dealer. You are advised to do the same for the duplicate keys.

VERY COLD CLIMATE SCREEN*

The very cold climate screen is a partial removable cover which is fixed onto the air intake grille to prevent the accumulation of snow due to direct splashes.

Once it has been fitted on your vehicle, it must be removed when the ambient temperature conditions rise above 10 °C again.

Consult a PEUGEOT dealer.

3 litre V6 HDi 24V engine

When the temperature is below minus 20 °C, your vehicle must be pre-heated for 30 minutes using the programmable heating before starting.

Refer to the corresponding paragraph in the "Comfort" section.

* According to country.



CHANGING A FRONT BULB

Handle the bulbs with a dry cloth.

Front lamps

In the engine compartment, remove the cover secured by one or two butterfly screws, a plastic retainer clip and two quarter turn screws.

- 1 - Dipped and main beam headlamps:**
D1S-35W xenon bulb.

Xenon bulbs must be replaced by a PEUGEOT dealer.



WARNING: RISK OF ELECTROCUTION

2 - Sidelamps:

W 5 W (COOL BLUE®).

- ☞ Turn the access cap a quarter turn, remove the bulb and change it.

3 - Direction indicators:

PY 21 W (DIADEM®).

- ☞ Turn the access cap a quarter turn.
- ☞ Remove the bulb holder.
- ☞ Change the bulb.



Coloured bulbs (sidelamps and direction indicators) must be replaced with bulbs of identical specification and colour.

4 - Front foglamps:

H11 - 55 W.

The headlamps are fitted with polycarbonate glass with a protective coating. Do not clean them with a dry or abrasive cloth, nor with a detergent or solvent product.

Ensure that the liquid used to fill the screenwash and headlamp wash reservoir is of good quality.



Integrated direction indicator side repeaters

- ☞ Push the repeater forwards or backwards and release it.
- ☞ Unclip the repeater and change it.

Repeaters can be obtained from a PEUGEOT dealer.



High pressure washing:

when using a high pressure washer on stubborn dirt, do not persist on the headlamps, other lamps and their edges to avoid damaging their coating and seals.

In certain climatic conditions (low temperature, humidity), condensation on the inside surface of the headlamp glass and rear lamp lens is normal; it disappears a few minutes after the lighting is switched on.



CHANGING A REAR BULB

1. **Direction indicators:** W 16W.
2. **Fog lamps:** P 21 W.
3. **Reversing lamps:** P 21W.
4. **Brake lamps/sidelamps:** P 21/5 W.



- ☞ Fold down the panel to gain access to the lamp unit.
- ☞ Unscrew the 2 lamp unit fixing nuts inside the boot.
- ☞ Disconnect the connector.
- ☞ Pull the lamp unit towards the outside.
- ☞ Unscrew the bulb holder sleeve a quarter of a turn.
- ☞ Unscrew the faulty bulb and change it.
- ☞ Screw in the bulb holder sleeve a quarter of a turn.
- ☞ Put the lamp unit back in place from the outside.
- ☞ Reconnect the connector.
- ☞ Screw on the 2 lamp unit fixing nuts inside the boot. When refitting, ensure that the lamp unit is positioned and fixed correctly.



Number plate lamps: W 5 W.

- ☞ Remove the transparent cover using a screwdriver.
- ☞ Change the faulty bulb.

Third brake lamp: LEDs.

Contact a PEUGEOT dealer for replacement.



In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

CHANGING A FUSE

The fuseboxes are placed in the glove box (passenger side), in the engine compartment (left-hand side) and in the left boot trim.

Replacing a fuse

Before replacing a fuse, the cause of the fault must be found and rectified. The fuse numbers are indicated on the fusebox.




Always replace a faulty fuse with a fuse of the same rating (same colour).



Use the special tweezers located on the support next to the fusebox; this support also contains the replacement fuses.

Dashboard fuses

To access the fuses, open the glove box and tilt the fusebox lid.

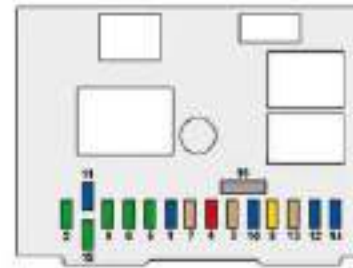

Fuse N°	Rating A	Functions
G29	-	Not used.
G30	5	Heated rear screen.
G31	5	Tyre under-inflation detection.
G32	-	Not used.
G33	5	Power steering electropump unit, dual-function brake switch.
G34	5	Dual-function brake switch, automatic gearbox relay.
G35	5	Steering wheel angle sensor and ESP gyroscope sensor.
G36	25	Hi-Fi amplifier.
G37	15	Automatic gearbox.
G38	20	Heated seats.
G39	30	Passenger seat memory unit.
G40	30	Driver's seat memory unit.

CHANGING A FUSE

The fuseboxes are placed in the glove box (passenger side), in the engine compartment (left-hand side) and in the left boot trim.

Replacing a fuse

Before replacing a fuse, the cause of the fault must be found and rectified. The fuse numbers are indicated on the fusebox.




Always replace a faulty fuse with a fuse of the same rating (same colour).



Use the special tweezers located on the support next to the fusebox; this support also contains the replacement fuses.


Dashboard fuses

To access the fuses, open the glove box and tilt the fusebox lid.

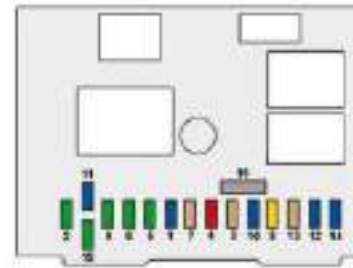

Fuse N°	Rating A	Functions
G29	-	Not used.
G30	5	Heated rear screen.
G31	5	Tyre under-inflation detection.
G32	-	Not used.
G33	5	Power steering electropump unit, dual-function brake switch.
G34	5	Dual-function brake switch, automatic gearbox relay.
G35	5	Steering wheel angle sensor and ESP gyroscope sensor.
G36	25	Hi-Fi amplifier.
G37	15	Automatic gearbox.
G38	20	Heated seats.
G39	30	Passenger seat memory unit.
G40	30	Driver's seat memory unit.

Fuse N°	Rating A	Functions
F1	-	Not used.
F2	30	Locking and deadlocking.
F3	5	Airbags and pretensioners control unit.
F4	10	Automatic gearbox switch, diagnostic socket, electrochromatic mirror.
F5	30	Driver and passenger electric windows.
F6	30	Sunroof.
F7	5	Glove box lamp, map reading lamps, courtesy lamps, courtesy mirrors.
F8	20	Multifunction screen, audio equipment, top-of-column, trailer fusebox (accessory), alarm, alarm siren.
F9	30	Front cigar lighter, 12 V rear socket, glove box lamp, map reading lamps, courtesy lamps, courtesy mirrors.
F10	15	Tyre under-inflation detection, CD changer.
F11	15	Diagnostic socket, ignition switch.
F12	15	Trailer fusebox (accessory), parking sensors control unit supply, passenger seat memory unit, rain and sunshine sensor.
F13	5	Windscreen wipers relay control, engine fusebox.
F14	15	Driver's seat memory unit, instrument panel, airbags and pre-tensioners control unit, air conditioning control panel, steering wheel adjustment switch, hands-free kit.
F15	30	Locking and deadlocking.
F16	-	PARC shunt.

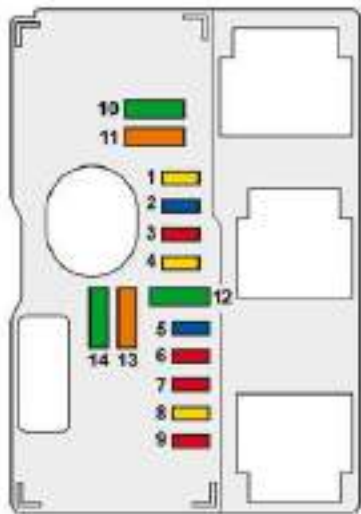

Engine compartment fuses

To access the fuses located in the engine compartment (next to the battery), remove the battery cover and unclip the fusebox cover.

Close the fusebox cover carefully and refit the battery cover when you have finished.

Fuse N°	Rating A	Functions
1	20	Engine control unit, fan assembly relay supply.
2	15	Horn.
3	10	Screenwash pump.
4	20	Headlamp wash pump.
5	15	Fuel pump, engine management actuators (air flow sensor, electrovalves, ...).
6	10	ESP control unit.
7	10	Automatic headlamp adjustment.
8	20	Starter coil.
9	10	Directional headlamps control unit, additional heating switching and protection control unit, clutch switch.
10	30	Engine management actuators (ignition coil, injectors, thermostats, electrovalves, oxygen sensors), Diesel additive pump, fuel pump, engine control unit, blow-by heater.
11	40	Air conditioning fan.
12	30	Windscreen wipers.
13	40	Built-in systems interface supply (ignition positive).
14	30	Not used.



The electrical system of your vehicle is designed to operate with standard or optional equipment.

Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer.

PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular where the equipment in question consumes more than 10 milliamperes.

The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.



CHANGING A WINDSCREEN WIPER BLADE

Placing the wiper blades in the maintenance position

- ☞ Less than one minute after switching off the ignition, press the windscreen wiper stalk down once to position the blades vertically on the windscreen (maintenance position).

Replacing a blade

- ☞ Lift the arm, then unclip the blade and remove it.
- ☞ Fit the new blade and fold down the arm.

To reposition the blades, switch on the ignition and operate the windscreen wiper stalk.

ECONOMY MODE FUNCTION

After the engine has stopped, certain electrical functions can be used for a maximum duration of approximately one hour, to prevent discharging of the battery.



This time may be significantly reduced if the battery charge is low.

Once the hour is over, a switching to economy mode message appears in the multifunction screen and the active functions are put on standby.

These functions are reactivated automatically next time the vehicle is driven.

In order to resume the use of these functions immediately, the engine must be started and left to run for a few minutes.

The time available to you will then be approximately double the duration for which the engine is left running. However, this period will always be between five and thirty minutes.



Note: if the telephone is being used when economy mode starts, it will still be possible to finish the call.



A flat battery prevents the engine from starting.

LOAD REDUCTION FUNCTION

When driving, certain functions (air conditioning, heated rear screen, heating system for passenger compartment of Diesel vehicles, etc.) may be switched off temporarily, depending on the level of battery charge.

Reactivation of these functions is automatic, once the battery charge is sufficient.



Note: at the risk of discharging the battery, the functions that have been switched off may be reactivated manually.

BATTERY (LOCATED IN THE ENGINE COMPARTMENT)



Disconnecting/Reconnecting the cables

1. Raise the locking plate **A**.
2. Position the open clip of the cable on the positive (+) terminal of the battery.
3. Press until the position checking system **B** tilts.
4. Lock the clip by lowering the locking plate while pressing on the clip.



Do not force the plate as locking is not possible if the clip is not positioned correctly.
Start the procedure again.



To charge the battery using a battery charger:

- Disconnect the battery,
- Follow the instructions for use given by the manufacturer the battery charger,
- Reconnect starting with the negative (-) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

To start the vehicle from another battery:

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery,
- Operate the starter, let the engine run,
- Wait for the engine to return to idle, then disconnect the cables.



It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.

BATTERY (LOCATED IN THE BOOT)*



The battery is behind the left hand boot trim.

To charge the battery using a battery charger (boot open):

- ☞ fold down the panel to gain access to the battery,
- ☞ disconnect the battery,
- ☞ follow the instructions for use given by the battery charger manufacturer,
- ☞ reconnect starting with the negative (-) terminal,
- ☞ raise the panel and close it.

To start the vehicle from another battery:



- ☞ open the bonnet,
- ☞ use the two additional positive (+) and negative (-) terminals located under the bonnet,
- ☞ open the red cover of the positive (+) terminal,
- ☞ connect the red cable between the positive (+) terminal and the positive (+) terminal of the slave battery,
- ☞ connect the green or black cable between the negative (-) terminal and the negative (-) terminal of the slave battery,
- ☞ operate the starter, let the engine run,
- ☞ wait for the engine to return to idle, then disconnect the cables,
- ☞ close the red cover of the positive (+) terminal,
- ☞ refit the left side cover,
- ☞ close the bonnet.



Before disconnecting the battery, you must wait for 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

Open the windows and close the sun-roof before disconnecting the battery. If they do not operate normally following reconnection of the battery, they must be reinitialised (see paragraphs "Reinitialisation of the electric windows" and "Sunroof").

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. However, if slight difficulties are experienced after this, please contact a PEUGEOT dealer.

On the 2.7 litre 24V HDI engine, if there is no battery in the boot, do not connect a slave battery to the positive (+) and negative (-) terminals under the bonnet as a short circuit may occur.



The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must never be discarded with household waste.

Take used batteries to an approved collection point.

* Vehicles fitted with the 3 litre HDI V6 24V engine.



TOWING THE VEHICLE

Without lifting (4 wheels on the ground)

You must always use a towing bar.
The removable towing eye is inside the spare wheel.

From the front:

- ☞ Unclip the left part of the cover,
- ☞ Screw in the towing eye as far as it will go.

From the rear:

- ☞ Unclip the cover, pulling the upper rib towards you,
- ☞ Screw in the towing eye as far as it will go.



When towing with the engine switched off, there is no braking or steering assistance.



Special requirements with an automatic gearbox



Towing a vehicle with an automatic gearbox in reverse gear is **prohibited** (the gearbox is not lubricated).

When being towed with all four wheels on the ground, it is imperative that the following rules are obeyed:

- gear lever in position **N**,
- the vehicle must be towed at a speed of less than 30 mph (50 km/h) over a maximum distance of 30 miles (50 km),
- do not add oil to the gearbox.

Lifting (2 wheels only on the ground)

It is preferable to raise the vehicle with professional lifting equipment.

TOWING A TRAILER, CARAVAN, BOAT, ETC...

We recommend the use of genuine PEUGEOT towbars which have been tested and approved from the design stage of your vehicle, and that the towbar is fitted by a PEUGEOT dealer.

Driving advice

Distribution of loads: distribute the load in the trailer so that the heaviest loads are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

Cooling: towing a trailer on a slope increases the coolant temperature.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

In all cases, pay attention to the coolant temperature.



Note: in certain cases of particularly arduous use (towing the maximum load in high temperatures), the engine automatically limits its power and selects the appropriate automatic gearbox gear in manual mode. In this case, switching off the air conditioning saves engine power and so increases towing capacity.



If the coolant temperature warning lamp comes on, stop the vehicle and switch off the engine as soon as possible.

Tyres: check the tyre pressures of the towing vehicle (label on the central door pillar on the driver's side) and of the trailer, observing the recommended pressures.

Brakes: towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

Side wind: sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

ACCESSORIES

A wide range of accessories recommended by PEUGEOT and genuine replacement parts are offered by the dealer network.

They all benefit from PEUGEOT's recommendation.

These accessories and parts, having been tested and approved for reliability and safety, are all adapted to your PEUGEOT vehicle.

"Comfort": Coat hanger, insulated modules, child booster cushion...

"Transport solutions": boot liner, towbar with quickly detachable ball, towbar-mounted bicycle carrier, boot spacers...

"Style": 19 inch alloy wheels, spoiler, chrome door mirror shells...

"Safety and security": winter equipment, range of child seats, alarm, security bolts for alloy wheels, high visibility vest, warning triangle, breathalyzer...

"Protection": Rear mud flaps, anti-skid covers, ...

"Multimedia": 230V socket, Wi-Fi on board, mapping updates for built in satellite navigation, hands-free kit, portable satellite navigation systems...



Depending on the country in which the vehicle is sold, it is compulsory to have a high visibility vest, warning triangle and spare bulbs available in the vehicle.

Note:

To prevent the mat from becoming caught under the pedals:

- ensure that the mat is positioned and secured correctly,
- never fit one mat on top of another.



The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system.

Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment and accessories.

The NINETEEN inch alloy wheels which are available as accessories require the fitting of tyres of specific dimensions (235/40ZR19 96 Y), with a maximum section of 236 mm. Consult a PEUGEOT dealer.

ENGINE AND GEARBOX: PETROL

Model codes: 6J...	XFVJ
Engine	3 litre V6 24V
Cubic capacity (cc)	2 946
Bore x stroke (mm)	87 x 82.6
EU standard maximum power (kW)/(hp)	155/211
Maximum power engine speed (rpm)	6 000
EU standard maximum torque (Nm)	290
Maximum torque engine speed (rpm)	3 750
Fuel	Unleaded
Catalytic converter	Yes
Gearbox - Gears	Automatic - 6
Oil capacity (in litres)	
Engine (with filter replacement)*	5.25

* Draining by gravity with oil filler cap open.

ENGINES AND GEARBOXES: DIESEL

Model codes: 6J...	RHH8	X8ZA
Engines	2 litre HDI 16V	3 litre HDI V6 24V
Cubic capacity (cc)	1 997	2 993
Bore x stroke (mm)	85 x 88	84 x 90
EU standard maximum power (kW)/(hp)	120/163	177/240
Maximum power engine speed (rpm)	3 750	3 800
EU standard maximum torque (Nm)	340	450
Maximum torque engine speed (rpm)	2 000	1 600
Fuel	Diesel	Diesel
Catalytic converter	Yes	Yes
Particle emission filter (PEF)	Yes	Yes
Gearbox - Gears	Manual - 6	Automatic - 6
Oil capacity (in litres)		
Engine (with filter replacement)*	5.25	6.3

* Draining by gravity with oil filler cap open.

WEIGHTS AND TOWED LOADS (IN KG): PETROL

Engine	3 litre V6 24V
Gearbox	Automatic
Model codes: 6J...	XFVJ
<ul style="list-style-type: none"> • Kerb weight** • Gross vehicle weight (GVW) • Gross train weight (GTW)*** • Unbraked trailer weight • Braked trailer weight (a) • Recommended nose weight 	<p>1 763</p> <p>2 060</p> <p>3 360</p> <p>750</p> <p>1 300 (1)</p> <p>61</p>

** The kerb weight is equal to the unladen vehicle + driver (75 kg).

*** The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

(a) The braked trailer value corresponds to the towing capacity of the vehicle on a 12 % incline.

The braked trailer weight may be increased by (1) 250 kg, on condition that the load in the vehicle is reduced so that the GTW is not exceeded.

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the ambient temperature is higher than 37 °C, limit the weight towed to 600 kg, without load transfer.

WEIGHTS AND TOWED LOADS (IN KG): DIESEL

Engines	2 litre HDI 16V	3 litre HDI V6 24V
Gearbox	Manual	Automatic
Model codes: 6J...	RHH8	X8ZA
<ul style="list-style-type: none"> • Kerb weight* • Gross vehicle weight (GVW) • Gross train weight (GTW)** • Unbraked trailer • Braked trailer (a) • Recommended nose weight 	1 607/1 662 1 977 3 277 750 1 300 (1) 62	1 781/1 827 2 136 3 436 750 1 300 (1) 61

* The kerb weight is equal to the unladen vehicle + driver (75 kg).


** The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

(a) The braked trailer value corresponds to the towing capacity of the vehicle on a 12 % incline.

The braked trailer weight may be increased by (1) 250 kg, on condition that the load in the vehicle is reduced so that the GTW is not exceeded.

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the ambient temperature is higher than 37 °C, limit the weight towed to 600 kg, without load transfer.

DIMENSIONS (IN MM)

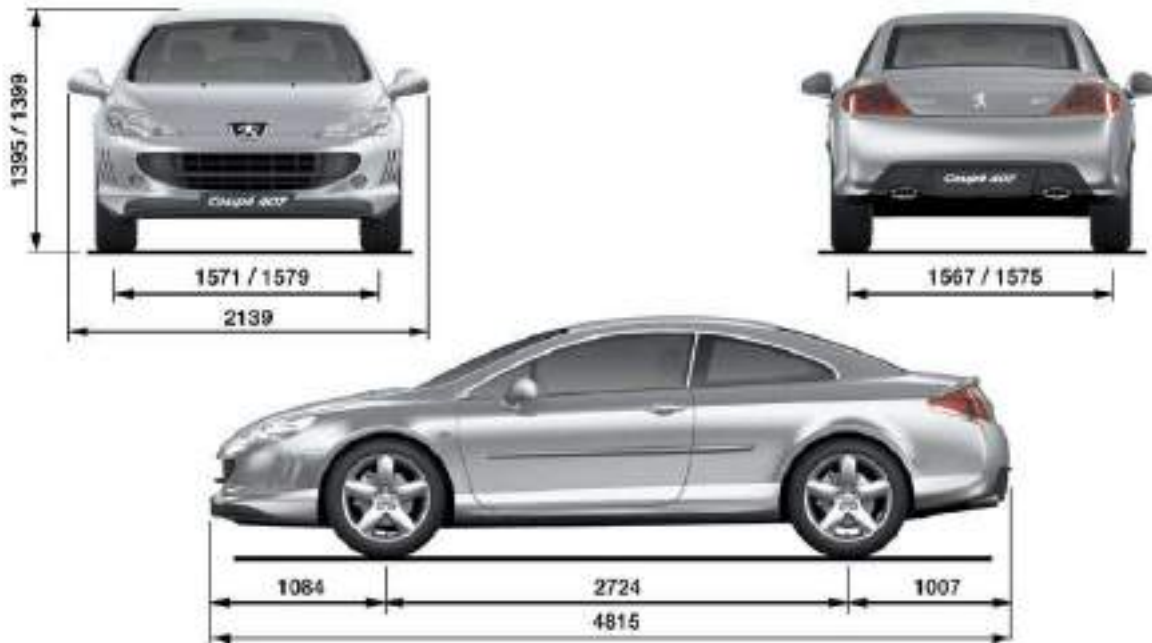**WARNING**

The 407 Coupé has reduced ground clearance.

Drive carefully over kerbs, speed humps, access ramps, fords and unmade roads.

IDENTIFICATION MARKINGS ON YOUR 407



A - Vehicle Identification Number (VIN) on the bodywork.

B - VIN on the dashboard (visible at the bottom of the windscreen).

C - Manufacturer's plate and tyre pressure and paint colour code label.

The labels **C** on the centre door pillars indicate:

- the Vehicle Identification Number (VIN),
- the wheel and tyre sizes,
- the brands of tyres approved by the manufacturer,
- the tyre pressures,
- the paint colour code.



The pressures must be checked cold, at least once a month.




Tyres of sizes 215/55 R17 and 235/45 R18 can be fitted with snow chains, contact a PEUGEOT dealer.

D - Front number plate.

In the event of replacement, a front number plate of a height less than or equal to 110 mm must be fitted provided that this size conforms to current regulations.

Otherwise, contact a PEUGEOT dealer.

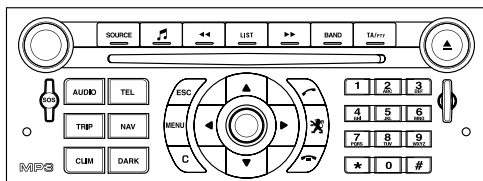

PEUGEOT CONNECT MEDIA

MULTIMEDIA AUDIO/TELEPHONE SYSTEM
JUKEBOX FUNCTION (10 GB)/GPS (EUROPE)



The Peugeot Connect Media is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.




For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the Peugeot Connect Media may switch off after a few minutes.

CONTENTS

01	First steps	p.	132
02	Voice commands and steering mounted controls	p.	133
03	Screen and main menu	p.	135
04	Navigation - Guidance	p.	139
05	Traffic information	p.	149
06	Audio/Video	p.	151
07	Telephone	p.	160
08	Trip computer	p.	165
09	Configuration	p.	167
10	Screen menu map	p.	168
	Frequently asked questions	p.	175


01 FIRST STEPS

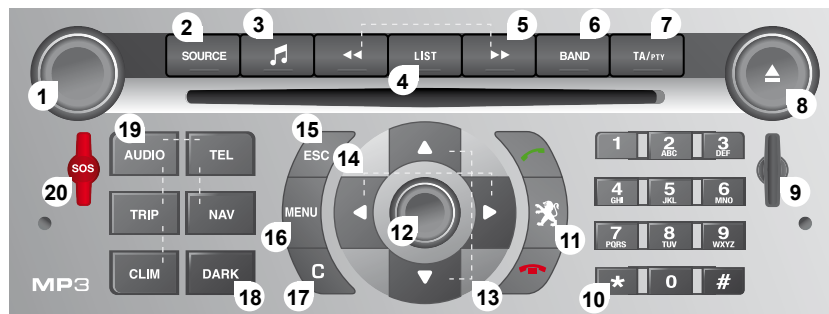

1. On/Off and Volume adjustment.
2. Selection of source: radio, Jukebox, CD/DVD, and auxiliary (AUX, if activated on the Configuration menu). Long press: CD copy to hard disk.
3. Audio option adjustments: front/rear, left/right balance, loudness, sound ambiances.
4. Display the list of local radio stations, the tracks on the CD/DVD or the MP3/USB/Jukebox folders.
Long press: update the local radio stations.
5. Automatic search for a lower/higher frequency.
Selection of the previous/next CD/DVD, MP3, USB or Jukebox track.
Long press: fast forward and backward play.
6. Selection of waveband FM1, FM2, FMast, AM.
7. TA (Traffic Announcement) function on/off.
Long press: access to the PTY mode (radio Programme TYpes).
8. Eject CD/DVD.
9. SIM card slot.
10. Keypad for entering descriptions by successive presses.
11. Access to the "PEUGEOT" services menu.
12. Selection and confirmation.
13. Select the previous/next MP3/USB/Jukebox folder.
14. Select a lower/higher frequency.
15. Cancel the current operation.
Long press: return to the current application.
16. Display the main menu.
17. Delete the last character entered or the entire line.
18. Modify the screen display.
Long press: reinitialisation of the Peugeot Connect Media system.
19. Select the display on the screen from the modes: TRIP, TEL, CLIM, NAV and AUDIO.
20. Long press on the SOS button: emergency call.

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

RADIO: selection of the next stored station.
MP3/USB/JUKEBOX: selection of the next folder.
Selection of the next item on a menu.

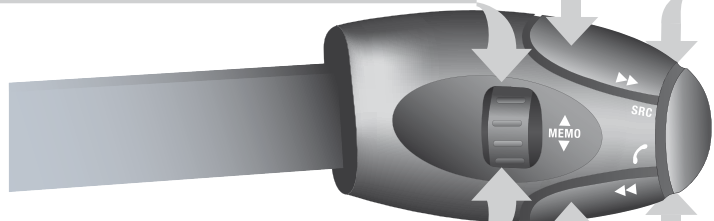

RADIO: selection of the previous stored station.
MP3/USB/JUKEBOX: selection of the previous folder.
Selection of the previous item on a menu.

RADIO: automatic search for a higher frequency.
CD/MP3/USB/JUKEBOX: selection of the next track.
CD/USB: continuous press: fast forwards play.

Volume increase.

- Change of sound source.
- Confirmation of a selection.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds: access to the telephone menu.

Mute: by pressing the volume increase and decrease buttons simultaneously.
The sound is restored by pressing one of the two volume buttons.

Volume decrease.

RADIO: automatic search for a lower frequency.
CD/MP3/USB/JUKEBOX: selection of the previous track.
CD/USB: continuous press: fast backwards play.

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

VOICE COMMANDS

DISPLAYING THE LIST AND USING THEM



1




To display the list of available voice commands, press the end of the lighting stalk to start voice recognition, then say HELP or WHAT CAN I SAY.



For the same operation, press and hold the MENU button and select the function VOICE COMMANDS LIST.

Voice commands list

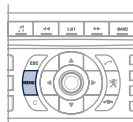

2



Press the end of the lighting stalk to start voice recognition.

Say the words one by one and wait for the audible confirmation signal between each word.


The list which follows is exhaustive.



	LEVEL 1	LEVEL 2	LEVEL 3
radio		memory autostore previous/next list	1 to 6/*
cd player Jukebox (if activated) USB		previous/next track track number/track scan random play directory (CD-MP3 inserted) list	1 to 250/* previous/next repeat help/what can I say/cancel
call/guide to		"Pre-recorded description"	
telephone		last number voice box voice mail directory	"Pre-recorded description"
message		display read directory	"Pre-recorded description"
navigation		stop/resume zoom in/out view	* destination vehicle
traffic info		display read	
display		audio telephone trip computer Navigation air conditioning	
previous/next stop delete yes/no		for all level 1 and 2	
* help/what can I say/cancel		for all level 1, 2 or *	

03 SCREEN AND MAIN MENU

> COLOUR SCREEN

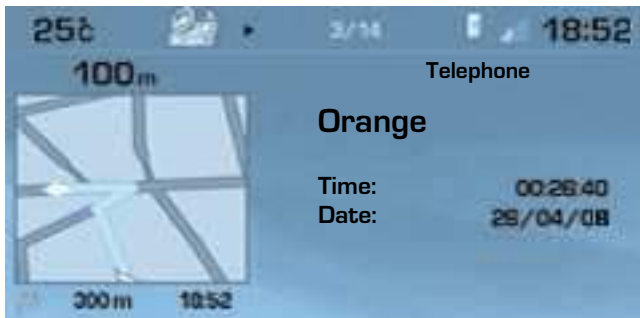

This displays the following information, via the audio control panel:

- time,
- date,
- ambient temperature (if there is a risk of ice, you are warned by a message),
- audio source displays (radio, CD, jukebox, ...),
- telematic system displays (telephone, services, ...),
- check of openings (doors, boot, ...),
- warning messages (e.g.: "Fuel level low") and vehicle function status messages (e.g.: "Auto lighting activated") displayed temporarily,
- trip computer information,
- GPS (Europe) satellite navigation system information.



Screen configuration: refer to the section - Screen menu map.



The system uses the complete and detailed NAVTEQ maps installed directly on the equipment's hard disk. Updates of the maps of the UK and of the other European countries, supplied by our partner NAVTEQ, are available from the PEUGEOT network.

03 SCREEN AND MAIN MENU

TRAFFIC INFORMATION:
TMC information, messages.



For maintenance of the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended without any additional product.

MAP: orientation, details, display.

NAVIGATION GUIDANCE:
GPS, stages, options.

AIR CONDITIONING:
on/off and dual-zone control
(according to equipment).

VEHICLE DIAGNOSTICS:
alert log, status of the
functions.

VIDEO: activation,
parameters.

AUDIO FUNCTIONS: radio,
CD, Jukebox, options.

TELEMATIC: telephone,
directory, SMS.

CONFIGURATION: vehicle, display,
time, languages, voice, auxiliary
socket (AUX) parameters.



Long press on MENU: help.

03 SCREEN AND MAIN MENU

DISPLAY ACCORDING TO THE CONTEXT



Press the OK dial to access short-cut menus according to the display on the screen.

NAVIGATION (IF NAVIGATION IS IN PROGRESS):

- 1 resume/stop guidance
- 1 divert route
- 1 route type
- 1 consult traffic info
- 1 zoom/scroll map

IN "ZOOM/SCROLL" MODE

- 1 position info
- 1 select as destination
- 1 select as stage
- 1 store this position
- 1 exit map mode
- 1 guidance option

INTERNAL TELEPHONE

- 1 call list
- 1 dial
- 1 phone book
- 1 voice mail

BLUETOOTH TELEPHONE

- 1 call list
- 1 call
- 1 phone book
- 1 private mode/hands-free mode
- 1 place call on hold/resume call

VEHICLE DIAGNOSTICS

- 1 alert log
- 1 status of functions

03 SCREEN AND MAIN MENU

CD (MP3 OR AUDIO)

- 1 copy CD to JBX/stop copy
- 1 activate/deactivate Introsca
- 1 activate/deactivate random play
- 1 activate/deactivate repeat

JUKEBOX

- 1 select playlist
- 1 activate/deactivate Introsca
- 1 activate/deactivate random play
- 1 activate/deactivate repeat

RADIO

- 1 enter a frequency
- 1 activate/deactivate RDS
- 1 activate/deactivate REG mode
- 1 hide/display "Radio Text"


















USB

- 1 copy USB to JBX/stop copy
- 1 eject USB
- 1 activate/deactivate Introsca
- 1 activate/deactivate random play
- 1 activate/deactivate repeat



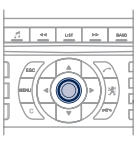







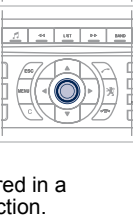



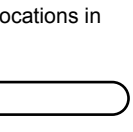

04 NAVIGATION - GUIDANCE

SELECTING A DESTINATION

Tip: for a detailed global view of the menus available, refer to the "Screen menu map" part of this section.


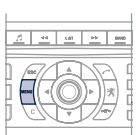

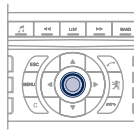


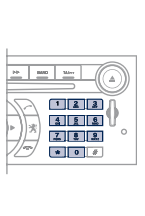





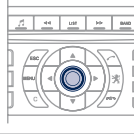



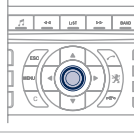

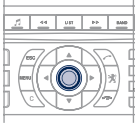

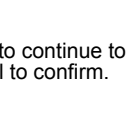
<p>1</p>  <p>Press the MENU button.</p>		<p>5</p>  <p>Press the dial to confirm the selection.</p>	
<p>2</p>  <p>Turn the dial and select the Navigation Guidance function.</p> 		<p>6</p>  <p>Turn the dial and select the "Enter an address" function.</p> <p>Enter an address</p>	
<p>3</p>  <p>Press the dial to confirm the selection.</p>		<p>7</p>  <p>Press the dial to confirm the selection.</p>	
<p>4</p>  <p>Turn the dial and select the "Destination choice" function.</p> <p>Destination choice</p>		<p>8</p>  <p>When the country has been selected, turn the dial and select the "Town" function.</p> <p>Town</p>	

04 NAVIGATION - GUIDANCE

<p>9</p>  <p>Press the dial to confirm the selection.</p>		<p>12</p>  <p>Press the dial to confirm the selection.</p>	
<p>10</p>  <p>Turn the dial and select the letters of the town one by one confirming each time by pressing the dial.</p> <p>Paris</p>		<p>13</p> <p>Repeat steps 8 to 12 for the "Road" and "N" functions.</p>	
<p></p> <p>To speed up the process, the "Post code" can be entered instead of the name of the "Town". Use the alphanumeric keypad to enter the letters and digits and "*" to correct (limit of 5 characters).</p>		<p>14</p>  <p>Select "OK" on the "Enter an address" page.</p> <p>OK</p>	
<p>11</p>  <p>Turn the dial and select OK.</p> <p>OK</p>		<p>15</p>  <p>Press the dial to confirm the selection.</p>	
<p></p> <p>Select the "Store" function to record the address entered in a directory record and press the dial to confirm the selection. The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports, ...).</p> <p>Store POI</p>			

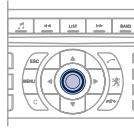04 NAVIGATION - GUIDANCE

ADDING A STAGE

<p>1</p>  <p>During guidance, press the MENU button.</p>		<p>6</p>  <p>Select the "Add a stage" function (9 stages maximum) and press the dial to confirm.</p> <p>Add a stage</p>	
<p>2</p>   <p>Turn the dial and select the "Navigation guidance" function.</p>		<p>7</p>  <p>Enter for example a new address.</p> <p>Enter an address</p>	
<p>3</p>  <p>Press the dial to confirm the selection.</p>		<p>8</p>  <p>When the new address has been entered, select "OK" and press the dial to confirm.</p>	
<p>4</p>  <p>Turn the dial and select the "Journey legs and route" function.</p> <p>Journey legs and route</p>		<p>9</p>  <p>Select OK and press the dial to confirm the order of the stages.</p>	
<p>5</p>  <p>Press the dial to confirm the selection.</p>		 <p>Select "Strict" (the stage must be completed in order to continue to the next destination) or "Proximity" then press the dial to confirm.</p>	

04 NAVIGATION - GUIDANCE

GUIDANCE SPEECH SYNTHESIS




The volume of the Risk Areas POI alerts can only be adjusted during the alert using the volume adjustment control. During announcements, the volume of each speech synthesis function (guidance, traffic information...) can be adjusted directly using the volume adjustment control.

1



Press the MENU button.

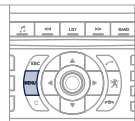

2



Turn the dial and select the "Navigation guidance" function.



3



Press the dial to confirm the selection.




4



Turn the dial and select the "Guidance options" function.


Guidance options

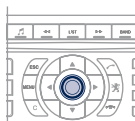

5



Press the dial to confirm the selection.

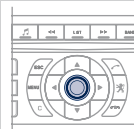


6



Select the "Adjust speech synthesis" function and press the dial to confirm.

Adjust speech synthesis

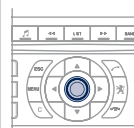


7



Press the dial then adjust the volume of the speech synthesis or select the "Deactivate" function and press the dial to confirm.

Deactivate

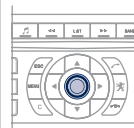


8




 




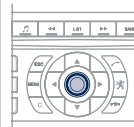




Select "OK" and press the dial to confirm.

OK



04 NAVIGATION - GUIDANCE

List of POI

-  Flying club
-  Airport
-  Lay-by
-  Bowling alley
-  Casino
-  Business park
-  Sports centre
-  Town centre
-  Cinema
-  Sports complexes
-  Culture/Museum
-  Vineyard
- 

-  Station
-  Dock station
-  Bus station
-  Hospitals
-  Hotels
-  Vehicle hire
-  Town halls
-  Historical monuments
-  Tourist information
-  Theme park
-  Park/Garden
-  Park and ride
- 

-  Covered parking
-  Skating rink
-  Ports
-  Restaurant
-  Shopping
-  Show/Exhibition
-  Winter sports centre
-  Service station
-  Supermarkets
-  Golf course
-  Tourism
-  University
- 

04 NAVIGATION - GUIDANCE

UPDATING THE RISK AREAS POIs

1



Download the "Risk areas POIs" update file onto a CD ROM or USB memory stick from the Internet. This service is available on <https://www.wipinforadars.fr> or <https://www.peugeot-connect-downloads.co.uk>.

!

The files must be copied to the root on the chosen medium.

2



Insert the medium (CD ROM or USB memory stick) containing the POI database into the system's CD player or USB port. The system detects the medium inserted automatically. Confirm the start of the update by validating "YES".

3

 
Successful downloading is confirmed by a message. The medium must be blank with no other data present.

DISPLAYING RISK AREAS POIs

1



Press the MENU button.




2



Select "Map" and confirm by pressing "OK".

Map

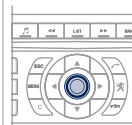


3



Select "Map details" and confirm by pressing "OK".

Map details

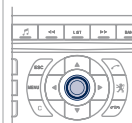


4



Select "Transport and automobiles" and confirm by pressing "OK".

Transport and automobiles

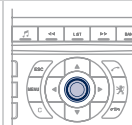


5



Select "Risk areas" and confirm by pressing "OK".


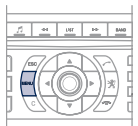

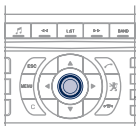


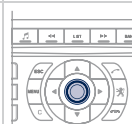

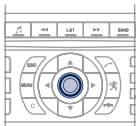

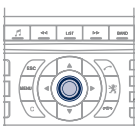

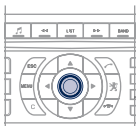



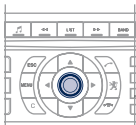
Risk areas



04 NAVIGATION - GUIDANCE

GUIDANCE OPTIONS

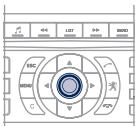The route presented depends directly on the guidance options. Changing these options may completely change the route.

<p>1</p>  <p>Press the MENU button.</p>		<p>5</p>  <p>Press the dial to confirm the selection.</p>	
<p>2</p>  <p>Turn the dial and select the "Navigation guidance" function.</p> 		<p>6</p>  <p>Turn the dial and select the "Define calculation criteria" function.</p> <p>Define calculation criteria</p>	
<p>3</p>  <p>Press the dial to confirm the selection.</p>		<p>7</p>  <p>Press the dial to confirm the selection.</p>	
<p>4</p>  <p>Turn the dial and select the "Guidance options" function.</p> <p>Guidance options</p>		<p>8</p>  <p>Turn the dial and select, for example, the "Distance/time" function.</p> <p>Distance/time</p>	


04 NAVIGATION - GUIDANCE

The volume of the Risk Areas POI alerts can only be adjusted during the alert.

9



Press the dial to confirm the selection.

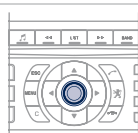


10



Turn the dial and select the "Traffic info" function if you wish to receive the traffic information announcements.

Traffic info

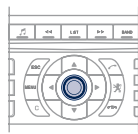


Tick this box for optimum operation of the traffic information, diversions will be suggested.

11



Press the dial to confirm the selection.

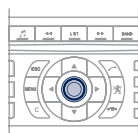


12



Select "OK" and press the dial to confirm.

OK

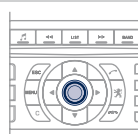

SETTING RISK AREAS ALERT PARAMETERS



1


Repeat steps 1 to 5 of the guidance option.

2



Turn the dial and select the "Set risk area parameters" function, then press the dial to confirm the warning message. Press the dial to confirm the selection.

Set risk area parameters

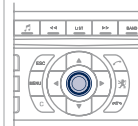


3



Select:

- visual warnings,
- audible warnings with an announcement duration (in seconds),
- warn during guidance only, then select OK and press the dial to confirm.


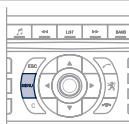


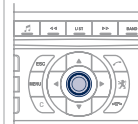




OK








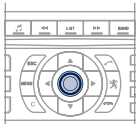



 
These functions are only available if the risk areas have been downloaded and installed on the system.

04 NAVIGATION - GUIDANCE

ACTIONS ON THE MAP

<p>1</p> 	<p>Press the MENU button.</p>	
<p>2</p> 	<p>Turn the dial and select the "Map" function.</p> 	
<p>3</p> 	<p>Press the dial to confirm the selection.</p>	
<p>4</p> 	<p>Turn the dial and select the "Map details" function. Permits selection of the services which can be seen on the map (hotels, restaurants, risk areas...).</p> <p>Map details</p>	

MAP ORIENTATION


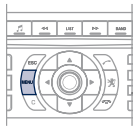

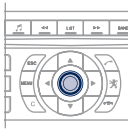




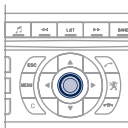



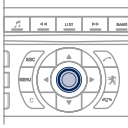



	<p>For improved visibility, beyond the scale of 10 km, the map automatically switches to North Orientation.</p>	
<p>4</p> 	<p>Repeat steps 1 to 3 then turn the dial and select the "Map orientation" function.</p> <p>Map orientation</p>	
<p>5</p> 	<p>Press the dial to confirm the selection.</p>	
<p>6</p> 	<p>Turn the dial and select the orientation of your choice.</p> <p>Vehicle direction</p> <p>North direction</p> <p>3D view</p>	
<p>7</p> 	<p>Select "OK" and press the dial to confirm.</p> <p>OK</p>	

04 NAVIGATION - GUIDANCE

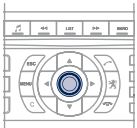

DISPLAYING THE MAP IN A WINDOW OR IN FULL SCREEN MODE

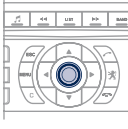


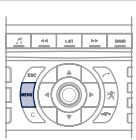









<p>1</p>  <p>Press the MENU button.</p>		<p>5</p>  <p>Press the dial to confirm the selection.</p>	
<p>2</p>  <p>Turn the dial and select the "Map" function.</p> 		<p>6</p>  <p>Turn the dial and select the "Map in window" or "Full screen map" tab.</p> <p>Map in window</p> <p>Full screen map</p>	
<p>3</p>  <p>Press the dial to confirm the selection.</p>		<p>7</p>  <p>Select "OK" and press the dial to confirm.</p> <p>OK</p>	
<p>4</p>  <p>Turn the dial and select the "Display map" function.</p> <p>Display map</p>			


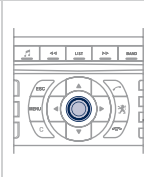

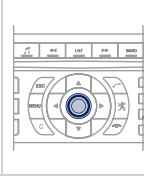

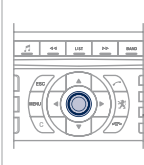
05 TRAFFIC INFORMATION



CONFIGURING THE FILTERING OF TMC ANNOUNCEMENTS

The TMC (Traffic Message Channel) messages provide information relating to the traffic and the weather conditions, received in real time and communicated to the driver in the form of audible announcements and icons on the navigation map. The guidance system may then suggest a diversion route.
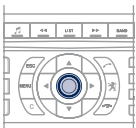
<p>1</p>  <p>Press the MENU button.</p>	
<p>2</p>  <p>Turn the dial and select the "Traffic information" function.</p> 	
<p>3</p>  <p>Press the dial to confirm the selection.</p>	
<p>4</p>  <p>Turn the dial and select the "Filter traffic information" function.</p> <p>Filter traffic information</p>	
<p>5</p>  <p>Press the dial to confirm the selection.</p>	

<p>6</p>  <p>Select the "Geographic filter" function and press the dial to confirm.</p> <p>Geographic filter</p>	
<p>7</p>  <p>Turn the dial and select the filter of your choice.</p> <p>Around the vehicle</p> <p>On the route</p>	
<p>8</p>  <p>Select "OK" and press the dial to confirm.</p> <p>OK</p>	

i The filters are independent and one replaces the other. We recommend:

- a filter of 6 miles (10 km) around the vehicle in heavy traffic,
- a filter of 30 miles (50 km) around the vehicle or a filter on the route for motorway journeys.

06 AUDIO/VIDEO



RADIO SELECTING A STATION

1



Press the SOURCE button several times in succession and select RADIO.



2



 
Press the BAND button to select a waveband: FM1, FM2, FMast, AM.



3




Briefly press one of the buttons to carry out an automatic search of the radio stations.




4



 Press one of the buttons to carry out a manual search of the radio stations.



 Press the LIST button to display the list of stations received locally (60 maximum).
To update this list, press for more than two seconds.




RDS

1



 
Press the MENU button.



2



Select "Audio functions" then press "OK".

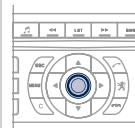


3



Select the "FM waveband preferences" function then press "OK".

FM waveband preferences

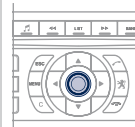


4



Select "Activate RDS" then press "OK".
RDS appears on the screen.

Activate RDS

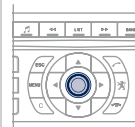

RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

06 AUDIO/VIDEO





MP3 CD


INFORMATION AND ADVICE

! Empty CDs are not recognised and may damage the system.

! The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.

 In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.
If the disc is recorded in another format, it may not be played correctly.
It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.
In the particular case of a multi-session CD, the Joliet format is recommended.

 The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.

 It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.

CD

PLAYING A CD OR AN MP3 COMPILATION

 


Insert circular compact discs only. Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may generate malfunctions regardless of the quality of the original player.
Insert an audio CD or an MP3 compilation in the player, play begins automatically.

1




If the player already contains a disc, press the SOURCE button several times in succession and select CD to listen to it.



2



Press one of the buttons to select a track on the CD.
Press the LIST button to display the list of tracks on the CD or of the folders of the MP3 compilation.

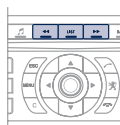

The play and display of an MP3 compilation may depend on the disc burning software and/or the settings used. We recommend use of the ISO 9660 file system format.

06 AUDIO/VIDEO

USING THE USB PORT

The list of compatible equipment is available from PEUGEOT dealers.

1



The audio files are transmitted from a USB memory stick to your audio system, to be listened to via the vehicle's speakers.

Do not connect a hard drive or USB equipment other than USB memory sticks in FAT 16 or FAT 32 format (NTFS not supported). This could damage your installation.

2

USB memory stick (1.1, 1.2 and 2.0):

- the USB memory sticks must be in FAT or FAT 32 format (NTFS not supported),
- navigation through the file base is by means of the steering mounted controls.



CONNECTING A USB MEMORY STICK

1



Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB memory stick.


The file formats recognised are .mp3 (mpeg1 layer 3 only).


!

Do not connect a hard drive or USB equipment other than USB memory sticks in FAT 16 or FAT 32 format (NTFS not supported). This could damage your installation.


06 AUDIO/VIDEO

 
PLAYING AN MP3 USB MEMORY STICK

1  Connect a USB memory stick to the port provided.

2  If another source is being played, press the SOURCE button several times in succession and select "USB" to play it.




3  Press one of the buttons to select a track on the USB memory stick. Press the LIST button to display the list of folders on the MP3 USB memory stick.






! To eject the USB memory stick, use the short-cut menu (press OK) or press the MENU button, select "Audio functions", "USB", then select "Eject USB".
The play and display of an MP3 compilation may depend on the file format used.


! In order to be read, the USB memory stick must be formatted FAT 16 or 32. The player only reads USB memory sticks.


JUKEBOX COPYING AN MP3 USB MEMORY STICK ONTO THE HARD DISK

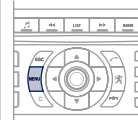1  Insert a USB memory stick in the space provided and press the MENU button.





2   Select "Audio functions" and press the dial to confirm.

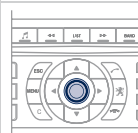


3  Select "USB" and press the dial to confirm.


USB

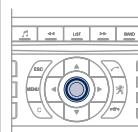


4  Select "Copy USB to jukebox" and press the dial to confirm.

Copy USB to jukebox

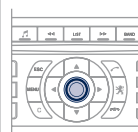





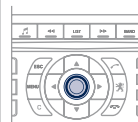





5  Select "Complete disc" to copy the entire USB memory stick and press the dial to confirm.




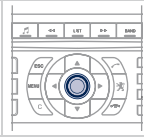




Complete disc



06 AUDIO/VIDEO

COPYING A CD ONTO THE HARD DISK

<p>1</p> 	<p>Insert an audio CD or an MP3 compilation and press the MENU button.</p>	
<p>2</p> 	<p>Select "Audio functions" then select CD and press the dial to confirm.</p> <p>Audio functions</p>	
<p>3</p> 	<p>Select "Copy CD to jukebox" and press the dial to confirm.</p> <p>Copy CD to jukebox</p>	
<p>4</p> 	<p>Select "Complete CD" to copy the entire CD and press the dial to confirm.</p> <p>Complete CD</p>	
<p>5</p> 	<p>To stop the copy, repeat points 2 and 3. Select "Stop copy" and press the dial to confirm.</p> <p>Stop copy</p>	

 <p>The "Auto creation" tab automatically copies the CD by default into an album of the type "album n°...".</p>	
<p>6</p>  <p>Select the letters one by one and select "OK" to confirm.</p> <p>OK</p>	
 <p>The audio or MP3 CD is copied onto the hard disk. Copying may take up to 20 minutes depending on the length the CD. While copying is in progress, it is not possible to listen to albums previously copied to the hard disk or to CDs.</p>	
 <p>If it is not an MP3 CD, the Jukebox automatically compresses the CD in MP3 format. The compression may take approximately 20 minutes depending on the length the CD. During this compression phase, it is possible to listen to the CD or to albums previously copied to the hard disk.</p>	
 <p>A long press on the SOURCE button starts copying of the CD.</p>	
 <p>It is not possible to copy files from the Jukebox to a CD. The "Stop the CD copy" action does not delete the files which have already been transferred onto the jukebox hard disk.</p>	

06 AUDIO/VIDEO

LISTENING TO THE JUKEBOX

1



Press the SOURCE button several times in succession and select the "Jukebox" function.

 


Jukebox

2




Press the LIST button.



3



Turn the dial to select the files.

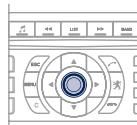


Press the ESC button to return to the first file level.

RENAMING AN ALBUM

1




Press the MENU button.

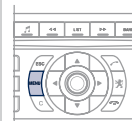

2



Select "Audio functions" and press the dial to confirm.

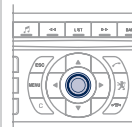


3



Select the "Jukebox" function and press the dial to confirm.

Jukebox

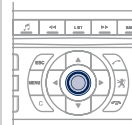


4



Select the "Jukebox management" function and press the dial to confirm.

Jukebox management

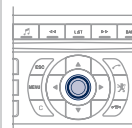


06 AUDIO/VIDEO

5



Select the album to be renamed and press the dial to confirm.

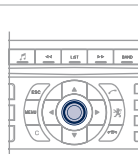


6



Select the "Rename" tab and press the dial to confirm.


Rename

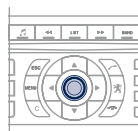

7



Turn the dial and select the letters of the album title one by one confirming each time by pressing the dial.

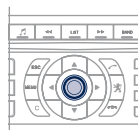


Use the alphanumeric keypad to enter the letters of the album title one by one.

8



Select "OK" and press the dial to confirm.

 OK




To rename the tracks of an album, follow the same procedure, selecting the tracks to be renamed.
Use the ESC button to exit from the list of tracks.



Select the "Delete" function to delete an album or a track from the Jukebox.

Delete

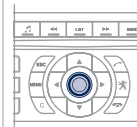

06 AUDIO/VIDEO

USING THE AUXILIARY INPUT (AUX) AUDIO (JACK/RCA) CABLE NOT SUPPLIED



Press the MENU button then select the "Configuration" function, then "Sounds", then "Activate auxiliary source" to activate the Peugeot Connect Com audio/telephone auxiliary input.

1

 
Connect the portable device (MP3 player...) to the audio sockets (white and red, RCA type) located in the glovebox using a suitable audio cable (JACK or RCA).



2



Press the SOURCE button several times in succession and select AUX.



Display and control is on the portable device.


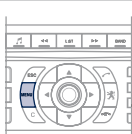



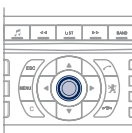
















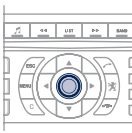


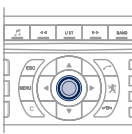
It is not possible to copy the files onto the hard disk via the auxiliary input.

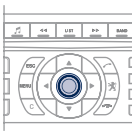06 AUDIO/VIDEO

 VIDEO MENU

You can connect video equipment (camcorder, digital camera, DVD player...) to the three audio/video sockets, located in the glove box.
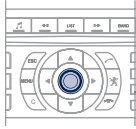
<p>1</p>  <p>After connecting the video equipment, press the MENU button.</p>	
<p>2</p>    <p>Turn the dial and select the "Video" function.</p>	
<p>3</p>   <p>Press the dial to confirm the selection.</p>	
<p>4</p>   <p>Turn the dial and select the "Activate video mode" function.</p> <p>Activate video mode</p>	
<p>5</p>   <p>Press the dial to confirm the selection.</p>	


<p>6</p>   <p>Turn the dial and select the "Video parameters" function to set the display format, the brightness, the contrast and the colours.</p> <p>Video parameters</p>	
<p>7</p>   <p>Press the dial to confirm the selection.</p>	
 <p>Pressing the DARK button disconnects display of the video.</p>	
 <p>Pressing the SOURCE button several times in succession permits the selection of an audio source other than that of the video.</p>	
 <p>Videos can only be displayed when stationary.</p>	

07 INTERNAL TELEPHONE




INSTALLING YOUR SIM CARD (NOT SUPPLIED)

 
1



 
Open the holder by pressing the button using the tip of a pen.



2

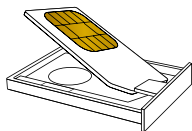


 Install the SIM card in the holder and then insert it in the slot.



3

 To remove the SIM card, repeat step 1.



Your SIM card must be installed and removed with the Peugeot Connect Media audio and telematics system switched off and the ignition off.

 
ENTERING THE PIN CODE

1



Enter the PIN code on the keypad.

PIN code



2



Confirm the PIN code by pressing the # button.



When entering your PIN code, tick the "Store PIN" tab to gain access to the telephone without having to enter this code when it is used subsequently.

07 BLUETOOTH TELEPHONE



CONNECTING A BLUETOOTH TELEPHONE

The services offered by the telephone depend on the network, the SIM card and the compatibility of the Bluetooth equipment used. Refer to your telephone's manual and your operator to check which services you have access to. A list of mobile telephones which offer the best range of services is available from dealers.




For reasons of safety, the driver should only carry out operations which require prolonged attention when the vehicle is stationary (pairing the Bluetooth mobile telephone to the hands-free kit).

3



Select "Bluetooth activation mode", then "Activated and visible". Press the dial to confirm each operation.

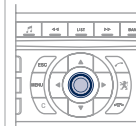

1

Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.




To find and change the name of the PEUGEOT audio/telephone, repeat step 2 then select "Change the name of the audio/telephone".

2



Press the MENU button, select "Telematics", then "Bluetooth functions". Press the dial to confirm each operation.

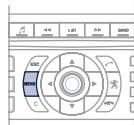

4

On your telephone, select the name of the PEUGEOT audio/telephone. Enter the authentication code (0000 by default).



07 BLUETOOTH TELEPHONE



CONNECTING A BLUETOOTH TELEPHONE



To change the authentication code, repeat step 2 then select "Authentication code" and save the code of your choice.



Once the telephone has been connected, the system can synchronise the address book and the call list. Repeat step 2 then select "Phone book synchronisation mode". Select the synchronisation of your choice and press the dial to confirm. The synchronisation may take a few minutes.



To change the telephone connected, repeat step 2 then select "List of matched peripheral equipment" and press OK to confirm. The list of previously connected telephones (10 maximum) appears. Select the telephone of your choice, confirm, then select "Connect" and press the dial to confirm.



The call list consists of calls made from the vehicle's telephone only.

 
07 USING THE TELEPHONE

CALLING A CONTACT

1



Press the PICK UP button to display the telephone short-cut menu.





Select "Call list" or "Phone book" and press "OK". Select the number required and confirm to make the call.

2



 
Turn the dial and select the "Dial" function.

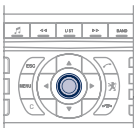

3




Press the dial to confirm the selection.

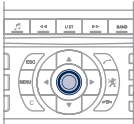

4



Dial the telephone number of your contact using the alphanumeric keypad.

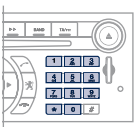

To select the telephone used, press MENU, then select "Telematics", then "Bluetooth functions", then "Bluetooth activation mode". Then select:

- "Deactivated": to use the internal telephone,
- "Activated and visible": to use the Bluetooth telephone, visible to all telephones,
- "Activated and not visible": to use the Bluetooth telephone, not visible to other telephones, it is not possible to match a new telephone.

5



 
Press the PICK UP button to call the number dialed.



6



Press the HANG UP button to end the call.



ACCEPTING OR REJECTING A CALL



 
Press the PICK UP button to accept a call.



Press the HANG UP button to reject a call.



Press the end of the steering wheel stalk for more than 2 seconds to access the telephone menu: calls log, directory, voice mailbox.



07 USING THE TELEPHONE

 
EMERGENCY CALL



In an emergency, press the SOS button until an audible signal is heard and a CONFIRMATION/CANCELLATION screen is displayed (if valid SIM card inserted).

A call is made to the emergency services (112).

In certain countries*, this emergency call is made directly by the PEUGEOT Emergency team which locates the vehicle and alerts the appropriate emergency services as quickly as possible.



If necessary, the internal telephone is activated automatically to make an emergency call.

* On condition that the PEUGEOT Emergency contract has been taken out. This is free and of unlimited duration. Consult a PEUGEOT dealer.




When the PEUGEOT Emergency contract has been taken out, it is recommended that an initial call is made to the PEUGEOT Emergency team.

CONTACTING THE SERVICES

1



Press this button to gain access to the PEUGEOT services*.

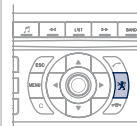


2



Select "Customer call" to request any information about the PEUGEOT marque.

Customer call

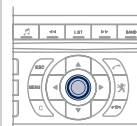


3





Select "PEUGEOT Assistance" to make a breakdown assistance call.

PEUGEOT Assistance

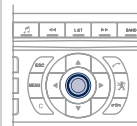

* These services and options are subject to conditions and availability.

08 TRIP COMPUTER

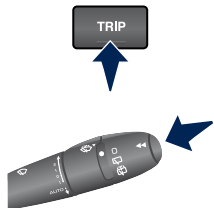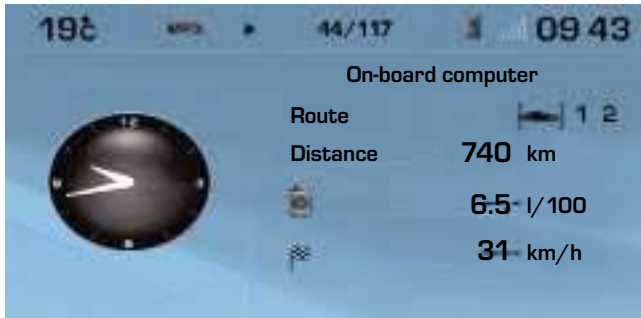

- The "vehicle" tab: the range, the current fuel consumption and the distance remaining to the destination.
- Tab "1" (route 1) with: the average speed, the average fuel consumption and the distance travelled calculated over route "1".
- Tab "2" (route 2) with the same functions for a second route.

A FEW DEFINITIONS

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.


Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

08 TRIP COMPUTER

CONTROL SHORT-CUTS



Each press of the button displays the different trip information in succession, depending on the screen.

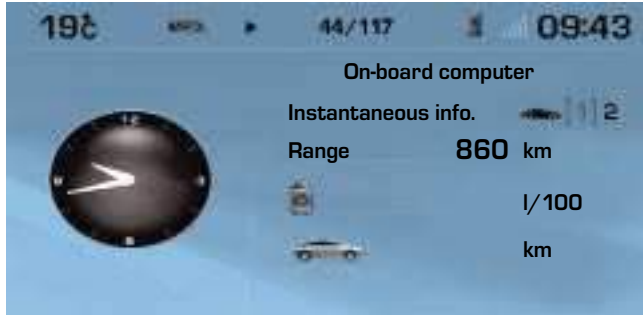

Zero reset

When the required route is displayed, press the control for more than two seconds.

VEHICLE DIAGNOSTICS



1 VEHICLE DIAGNOSTICS

2 ALERT LOG

2 STATUS OF FUNCTIONS

2 RESET TYRE PRESS. DETECT. SYS.


09 CONFIGURATION




SETTING THE DATE AND TIME


The "Configuration" function gives access to the colour, brightness and units settings and to voice commands.


! This adjustment must be carried out whenever the battery has been disconnected.


1  Press the MENU button.

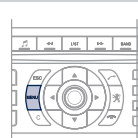


2  Turn the dial and select the "Configuration" function.

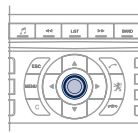


3  Press the dial to confirm the selection.

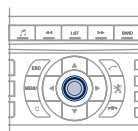



4  Turn the dial and select the "Display configuration" function.

Display configuration





5  Press the dial to confirm the selection.

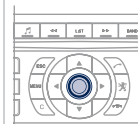



6  Turn the dial and select the "Set date and time" function.

Set date and time

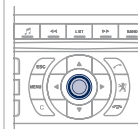


7  Press the dial to confirm the selection.

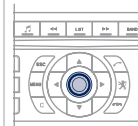

8  Adjust the settings one by one confirming by pressing the dial. Next select the "OK" tab on the screen then confirm.

OK

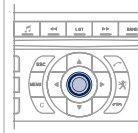

10 SCREEN MENU MAP



1 MAP

2 MAP ORIENTATION

3 vehicle direction

3 north direction

3 3D view

2 MAP DETAILS

3 administration and safety

4 town halls, town centre

4 universities, colleges

4 hospitals

3 hotels, restaurants and shops

4 hotels

4 restaurants

4 vineyards

4 business centres

4 supermarkets, shopping

3 culture, tourism and shows

4 culture and museums

4 casinos and nightlife

4 cinemas and theatres

4 tourism

4 shows and exhibitions

3 sports and open air centres

4 sports centres

4 golf courses

4 skating rinks, bowling alleys

4 winter sports resorts

4 parks, gardens

4 theme parks

3 transport and automobile

4 airports, ports

4 stations, bus stations

4 vehicle rental

4 lay bys, car parks

4 service stations, garages

2 DISPLAY MAP

3 full screen map

3 map in window

2 MOVE THE MAP/FOLLOW VEHICLE

2 MAP DATABASE DESCRIPTION

10 SCREEN MENU MAP



1 **TRAFFIC INFORMATION**

2 **READ MESSAGES**

2 **FILTER TRAFFIC INFORMATION**

3 **geographic filter**

3 **store all messages**

3 **store messages**

4 **around the vehicle**

4 **on the route**

3 **road information**

4 **traffic information**

4 **road closure**

4 **size limit**

4 **road condition**

4 **weather and visibility**

3 **urban/city information**

4 **parking**

4 **public transport**

4 **demonstrations**

2 **CONFIGURE MESSAGE ANNOUNCEMENT**

3 **read messages**

3 **new message display**

2 **SELECT TMC STATION**

3 **automatic TMC**

3 **manual TMC**

3 **list of TMC stations**



1 **AUDIO FUNCTIONS**

2 **RADIO FAVOURITES**

3 **enter a frequency**

3 **activate/deactivate RDS mode**

3 **activate/deactivate regional mode**

3 **display/hide radio text**

2 **CD, USB, JUKEBOX FAVOURITES**

3 **activate/deactivate Intros can (SCN)**

3 **activate/deactivate Random mode (RDM)**

3 **activate/deactivate Repeat (RPT)**

3 **activate/deactivate display of CD info**

2 **CD**

3 **copy CD to Jukebox**

4 **copy complete CD**

4 **multiple selection**

4 **current album**

4 **current track**

3 **eject CD**

10 SCREEN MENU MAP

2 **USB**
3 copy USB to Jukebox

4 complete disc
4 multiple selection
4 current album
4 current track

3 **eject USB**

2 **JUKEBOX**

3 **jukebox management**

3 **jukebox configuration**

4 hi-fi (320 kbps)
4 high (192 kbps)
4 normal (128 kbps)

3 **playlist management**

3 **delete jukebox data**

3 **Jukebox status**



1 **TELEMATICS**

2 **CALL**

3 **call list**

3 **dial**

3 **directory**

3 **mailbox**

3 **services**

4 customer contact centre

4 PEUGEOT assistance

4 PEUGEOT service

4 messages received

2 **DIRECTORY**

3 **managing directory files**

4 consult or modify a file

4 add a file

4 delete a file

4 delete all files

3 **configure directory**

4 select a directory

4 name directory

4 select starting directory

3 **file transfer**

4 exchange by infrared

5 send all records

5 send one record

5 receive by infrared

4 exchange with SIM card

5 send all records to SIM

5 send one record to SIM

5 receive all SIM files

10 SCREEN MENU MAP

5 receive a SIM file

4 exchange with Bluetooth

2 TEXT MESSAGES (SMS)

3 read received text messages

3 send a text message

3 write a text message

3 delete list of text messages

2 TELEPHONE FUNCTIONS

3 network

4 network search mode

5 automatic mode

5 manual mode

4 networks available

3 length of calls

4 reset

3 manage PIN code

4 activate/deactivate

4 save PIN code

4 modify PIN code

3 call options

4 configure calls

5 display my number

5 automatic reply after x ring(s)

4 ring options

5 for voice calls

5 for text messages (SMS)

6 text message ring

3 calls diversion to mailbox n°

3 delete calls log

2 BLUETOOTH FUNCTIONS

3 activation mode

4 deactivated

4 activated and visible

4 activated and not visible

3 list of matched peripheral equipment

3 change the name of the audio/telephone

3 authentication code

3 phone book synchronisation mode

4 no synchronisation

4 view telephone phone book

4 view SIM card phone book

4 view all phone books

10 SCREEN MENU MAP



AIR CONDITIONING

1

SWITCHING THE AIR CONDITIONING ON/OFF

2

ACTIVATING/DEACTIVATING THE SEPARATE
LH-RH CONTROL

2



CONFIGURATION

1

DISPLAY CONFIGURATION

2

choose colour

3

adjust luminosity

3

set date and time

3

select units

3

SOUND

2

voice commands setting

3

speech synthesis setting

3

guidance instructions volume

4

other message volume

4

select female/male voice

4

activate/deactivate auxiliary source

3

SELECT LANGUAGE

2

DEFINE VEHICLE PARAMETERS*

2



VIDEO

1

ACTIVATE VIDEO MODE

2

VIDEO PARAMETERS

2

display formats

3

adjust luminosity

3

set colours

3

set contrasts

3



VEHICLE DIAGNOSTICS

1

ALERT LOG

2

STATUS OF FUNCTIONS*

2

RESET TYRE PRESS. DETEC. SYS.*

2

* The parameters vary according to vehicle.

Display short cuts version 8.2

10 SCREEN MENU MAP



Press the MENU button for more than 2 seconds to access the following flow chart.

1 VOICE COMMANDS LIST

1 AUDIO/TELEPHONE DIAGNOSTICS

2 GPS COVERAGE

2 UNIT BACKUP POWER

2 UNIT DESCRIPTION

1 NAVIGATION DEMONSTRATION

1 SERVICES CONFIGURATION



Press the Music button several times in succession to access the following settings.

MUSICAL AMBIENCE

BASS

TREBLE

LOUDNESS CORRECTION

FR - RR BALANCE

LH - RH BALANCE

AUTO VOLUME CORRECTION



Each audio source (Radio, CD, MP3, Jukebox) has its own separate settings.


FREQUENTLY ASKED QUESTIONS

The table below groups together the answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.	<p>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.</p> <ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the Audio section. - The audio equipment's CD player does not play DVDs. - Due to inadequate quality, certain recorded CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
TRAFFIC INFO is selected. However, certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).
	In certain countries, only major routes (motorways, ...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The time taken to calculate a route sometimes seems longer than usual.	The performance of the system may slow down temporarily if a CD is being copied onto the Jukebox at the same time as a route is being calculated.	Wait until the CD has been copied or stop the copying before starting the guidance function.

QUESTION	ANSWER	SOLUTION
Does the emergency call function work without a SIM card?	Certain national regulations impose the presence of a SIM card in order to make an emergency call.	Insert a valid SIM card in the slot on the system.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the MENU button, then select AUDIO/TELEPHONE DIAGNOSTICS, then GPS COVERAGE).
	Depending on the geographical environment (tunnel, ...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.
My SIM card is not recognised.	The system accepts 3.3 V SIM cards, the old 5 V and 1.8 V SIM cards are not recognised.	Contact your telephone operator.
The route is not calculated successfully.	The exclusion criteria may conflict with the current location (exclusion of toll roads on a motorway with tolls).	Check the exclusion criteria.
There is a long wait after inserting a CD.	When a new medium is inserted, the system reads a certain amount of data (folder, title, artist, etc.). This may take a few seconds.	This phenomenon is normal.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the equipment may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check that your telephone is visible.

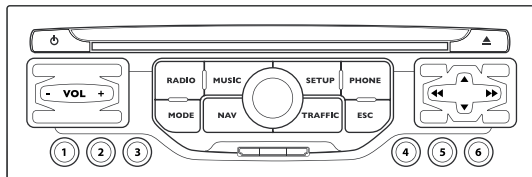

PEUGEOT CONNECT NAVIGATION

MULTIMEDIA AUDIO SYSTEM/BLUETOOTH TELEPHONE
SATELLITE NAVIGATION SYSTEM FOR EUROPE BY SD CARD



The Peugeot Connect Navigation is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the Peugeot Connect Navigation switches off following the activation of the Energy Economy mode.




Certain functions described in this handbook will become available during the year.

CONTENTS

01	First steps	p.	180
02	Steering mounted controls	p.	181
03	General operation	p.	182
04	Navigation - Guidance	p.	185
05	Traffic information	p.	193
06	Radio	p.	195
07	Music media players	p.	196
08	Bluetooth telephone	p.	199
09	Configuration	p.	201
10	Trip computer	p.	202
11	Screen menu map	p.	203
	Frequently asked questions	p.	207

01 FIRST STEPS


Peugeot Connect Navigation CONTROL PANEL

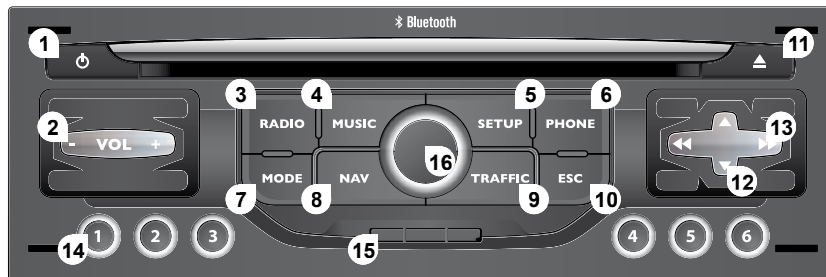

1. Engine not running
- Short press: on/off.
- Long press: CD pause, mute for the radio.
Engine running
- Short press: CD pause, mute for the radio.
- Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including also navigation messages and alerts).
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
- 3 - 4. Long press: access to the audio settings: front/rear fader and left/right balance, bass/treble, equaliser, loudness, automatic volume adjustment, initialise the settings.
5. Access to the "SETUP" menu.
Long press: access to the GPS coverage and the demonstration mode.
6. Access to the "Phone" Menu. Display the call list.
7. Access to the "MODE" menu.
Selection of the successive display of: Radio, Map, NAV (if navigation is in progress), Telephone (if a conversation is in progress), Trip computer.
Long press: display of a black screen (DARK).
8. Access to the "Navigation" Menu. Display the last destinations.
9. Access to the "Traffic" Menu. Display the current traffic alerts.
10. ESC: abandon the operation in progress.
11. CD eject.
12. Selection of the previous/next radio station from the list.
Selection of the previous/next MP3 folder.
Selection of the previous/next page of a list.
13. Selection of the previous/next radio station.
Selection of the previous/next CD or MP3 track.
Selection of the previous/next line of a list.
14. Buttons 1 to 6:
Selection of the stored radio station.
Long press: store the current radio station.
15. SD card reader (navigation SD card only).
16. Dial for selection of the screen display and according to the context of the menu.
Short press: contextual menu or confirmation.
Long press press: contextual menu specific to the list displayed.

02 STEERING MOUNTED CONTROLS

RADIO: selection of the next stored station.
Selection of the next entry in the address book.

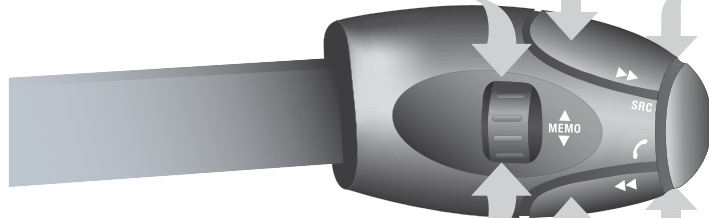

RADIO: selection of the previous stored station.
Selection of the previous entry in the address book.

RADIO: change to the next radio station on the list.
Long press: automatic search for a higher frequency.
CD: selection of the next track.
CD: continuous press: fast forward play.

Volume increase.

- Change the sound source.
- Make a call from the address book.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds: access to the address book.

 

Mute: function activated by pressing the volume increase and decrease buttons simultaneously. Restore the sound by pressing one of the two volume buttons.

Volume decrease.

RADIO: change to the previous radio station on the List.
Long press: automatic search for a lower frequency.
CD: selection of the previous track.
CD: continuous press: fast reverse.

03 GENERAL OPERATION

Press the MODE button several times in succession for access to the following menus:

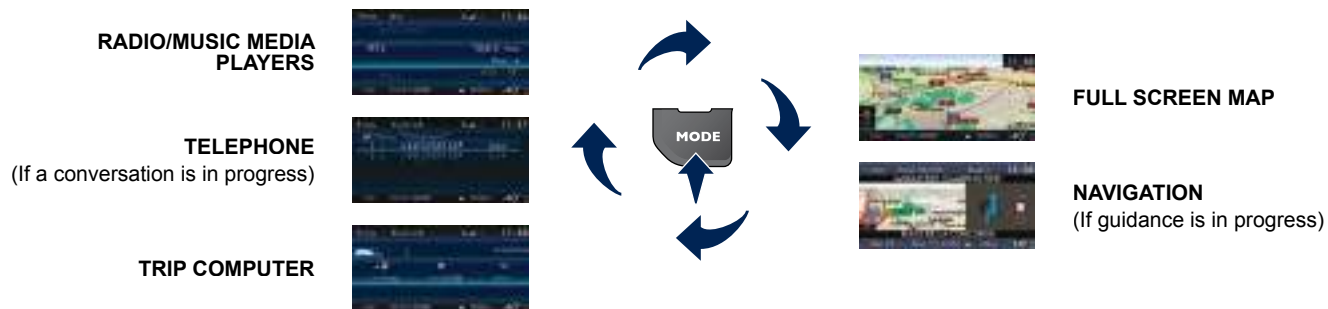

SETUP:
system language*, date and time*, display, vehicle settings*, unit and system settings, "Demo mode".

* Available according to model.



TRAFFIC:
TMC information and messages.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT



A press on the OK dial gives access to short-cut menus according to the display on the screen.

NAVIGATION (IF GUIDANCE IS IN PROGRESS):

- 1 Abort guidance
- 1 Repeat advice
- 1 Block road
- 1 Route info
- 2 Show destination
- 2 Trip info
- 3 Route type
- 3 Avoid
- 3 Satellites

2 Zoom/Scroll

1 Voice advice

1 Route options

TRIP COMPUTER:

1 Alert log

1 Status of functions

TELEPHONE:

1 End call

1 Hold call

1 Dial

1 DTMF-Tones

1 Private mode

1 Micro off

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT

MUSIC MEDIA PLAYERS:

1 Traffic info (TA)

1 Play options

2 Normal order

2 Random track

2 Repeat folder

2 Scan

1 Select music

RADIO:

1 In FM mode

2 Traffic info (TA)

2 RDS

2 Radiotext

2 Regional prog.

2 AM

1 In AM mode

2 TA

2 Refresh AM list

2 FM

FULL SCREEN MAP:

1 Abort guidance/Resume guidance

1 Set destination

1 POIs nearby

1 Position info

1 Map settings

1 Zoom/Scroll

04 NAVIGATION - GUIDANCE

 
SELECTING A DESTINATION

Insert the SD card in the front panel reader and leave it there to use the Navigation functions.
The navigation SD card data must not be modified.
Map data updates are available from PEUGEOT dealers.

1



Press the NAV button.




4



Select the "Address input" function and press the dial to confirm.

 Address input




The list of the last 20 destinations appears under the Navigation Menu function.

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

 
Navigation Menu



5



 
Once the country has been selected, turn the dial and select the town function. Press the dial to confirm.



6



 Select the letters of the town one by one confirming each time by pressing the dial.




3



Select the "Destination input" function and press the dial to confirm.

 Destination input




A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.

04 NAVIGATION - GUIDANCE

7



 Turn the dial and select OK.
Press the dial to confirm.




To speed up the process, the post code can be entered directly after selecting the "Postal code" function.
Use the virtual keypad to enter the letters and digits.

8



 Repeat steps 5 to 7 for the "Street"
and "House number" functions.



Select the "Save to address book" function to record the address entered in a directory file. Press the dial to confirm the selection.
Peugeot Connect Navigation allows up to 500 contact files to be recorded.



During guidance, pressing the end of the lighting stalk repeats the last guidance instruction.

 


To clear a destination; from steps 1 to 3, select "Choose from last destinations".
A long press on one of the destinations displays a list of actions from which you can select:
Delete entry
Delete list

9



Then select "Start route guidance"
and then press the dial to confirm.



Start route guidance



Select the route type:

"Fast route", "Short route" or "Optimized route" and press the dial to confirm.

It is also possible to select a destination via "Choose from address book" or "Choose from last destinations".

Choose from address book

Choose from last destinations



Map settings

You can zoom in/zoom out on the map using the dial.

It is possible to move the map or select its orientation via the short-cut menu of the FULL SCREEN MAP.

Press MODE until the map is displayed full screen. Press the dial then select "Map settings". Select "2.5D Map" or "2D Map" and in the latter case, select "North Up" or "Heading Up".

04 NAVIGATION - GUIDANCE

SETTING AND NAVIGATING TO MY "HOME ADDRESS"

i

 
To be set as the "Home address", an address must first be entered in the address book, for example from "Destination input"/"Address input" then "Save to address book".

1



Press the NAV button twice to display the Navigation Menu.

Navigation Menu



2



Select "Destination input" and confirm. Then select "Choose from address book" and confirm.

Destination input

 


3



Select "Address book" and confirm. Then select "Search entry (complete address book)" and confirm.

Address book




4



Select your home address and confirm. Then select "Edit entry" and confirm.

 Edit entry




5



Select "Set as home address" and confirm to save.

 Set as "Home address"



 
 

 

 

 

 

 

 
To start navigation towards "Home address", press NAV twice to display the Navigation Menu, select "Destination input" and confirm.

Then select "Navigate HOME" and confirm to start guidance.

04 NAVIGATION - GUIDANCE

ROUTE OPTIONS


 

 

 

 

 

 

 

The route selected by the Peugeot Connect Navigation system depends directly on the route options.
Changing these options may change the route completely.

<p>1</p>  <p>Press the NAV button.</p>	
<p>2</p>  <p>Press the NAV button again or select the Navigation Menu function and press the dial to confirm.</p> <p>Navigation Menu</p>	
<p>3</p>  <p>Select the "Route options" function and press the dial to confirm.</p> <p>Route options</p>	
<p>4</p>  <p>Select the "Route type" function and press the dial to confirm. This function allows you to change the route type.</p> <p>Route type</p>	
<p>5</p>  <p>Select the "Route dynamics" function. This function gives access to the "Traffic independent" or "Semi-dynamic" options.</p> <p>Route dynamics</p>	
<p>6</p>  <p>Select the "Avoidance criteria" function. This function provides access to the AVOID options (motorways, toll roads, ferries).</p> <p>Avoidance criteria</p>	
<p>7</p>  <p>Turn the dial and select the "Recalculate" function to take into account the route options selected. Press the dial to confirm.</p> <p>Recalculate</p>	

04 NAVIGATION - GUIDANCE

ADDING A STOPOVER

 


 

 


 

 

 

 
Stopovers can be added to the route once the destination has been selected.

<p>1</p>  <p>Press the NAV button.</p>	
<p>2</p>  <p>Press the NAV button again or select the Navigation Menu function and press the dial to confirm.</p> <p>Navigation Menu</p>	
<p>3</p>  <p>Select the "Stopovers" function and press the dial to confirm.</p> <p>Stopovers</p>	
<p>4</p>  <p>Select the "Add stopover" function (5 stopovers maximum) and press the dial to confirm.</p> <p>Add stopover</p>	
<p>5</p>  <p>Enter a new address, for example.</p> <p>Address input</p>	
<p>6</p>  <p>Once the new address has been entered, select OK and press the dial to confirm.</p> <p>OK</p>	
<p>7</p>  <p>Select "Recalculate" and press the dial to confirm.</p> <p>Recalculate</p>	
 <p>The stopover must be completed or deleted in order for the guidance to continue to the next destination. Otherwise, the Peugeot Connect Navigation will always return you to the previous stopover.</p>	

04 NAVIGATION - GUIDANCE

SEARCHING FOR POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

<p>1</p>  <p>Press the NAV button.</p>		<p>6</p>  <p>Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.</p> <p>POI in city</p> 
<p>2</p>  <p>Press the NAV button again or select the Navigation Menu function and press the dial to confirm.</p> <p>Navigation Menu</p>		 <p>A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.</p>
<p>3</p>  <p>Select the "POI search" function and press the dial to confirm.</p> <p>POI search</p>		<p>7</p>  <p>Select the "POI in country" function to search for POIs in the country required.</p> <p>POI in country</p> 
<p>4</p>  <p>Select the "POI nearby" function to search for POIs around the vehicle.</p> <p>POI nearby</p>		<p>8</p>  <p>Select the "POI near route" function to search for POIs near the route.</p> <p>POI near route</p> 

04 NAVIGATION - GUIDANCE



This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.

LIST OF PRINCIPAL POINTS OF INTEREST (POI)

	Service station		Airport		Cinema
	LPG station		Railway station		Camp site
	Garage		Bus station		Theme parks
	PEUGEOT		Port		Hospital
	Motor racing circuit		Industrial estate		Pharmacy
	Covered car park		Supermarket		Police station
	Car park		Bank		School
	Rest area		Vending machine		Post office
	Hotel		Tennis court		Museum
	Restaurant		Swimming pool		Tourist information
	Refreshment area		Golf course		Automatic speed camera*
	Picnic area		Winter sports resort		Red light camera*
	Cafeteria		Theatre		Risk area*

* According to availability in the country.

 
04 NAVIGATION - GUIDANCE

NAVIGATION SETTINGS

1



Press the NAV button.




2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

 Navigation Menu




3



Select the "Settings" function and press the dial to confirm.

 Settings




4



Select the "Navi volume" function and turn the dial to set the volume of each voice synthesiser (traffic information, alert messages...).

 Navi volume



i To activate or deactivate vocal guidance, with guidance active and the map displayed on the screen, press the dial and then select or deselect "Voice advice".

Voice advice



 
The adjustment of the volume for the Risk Areas POIs is used only during the transmission of an alert.

5



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

POI categories on Map




6



Select "Set parameters for risk areas" for access to the "Display on map", "Visual alert" and "Sound alert" functions.

 Set parameters for risk areas



i

UPDATING THE RISK AREAS POIs

This requires an SDHC (High Capacity) compatible reader. Download the update file from the Internet (www.peugeot.fr or www.peugeot.co.uk).

Open this file and copy the extracted documents to the DATABASE folder on the SD card, replacing the existing files.


05 TRAFFIC INFORMATION

CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

1



Press the TRAFFIC button.

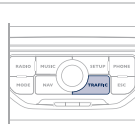


The list of TMC messages appears under the Traffic Menu sorted in order of proximity.

2



Press the TRAFFIC button again or select the Traffic Menu function and press the dial to confirm.

 Traffic Menu



3



Select the filter of your choice:

Messages on route

 
All warning messages

Only warnings on route

All messages

The messages appear on the map and on the list.

To exit, press ESC.




4



Select the "Geo. Filter" function and press the dial to confirm.

 Geo. Filter



5



Then select the radius of the filter in miles (km) required in accordance with the route, press the dial to confirm.

When all of the messages on the route are selected, the addition of a geographical filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographical filter follows the movement of the vehicle.



The filters are independent and their results are cumulative.

We recommend a filter on the route and a filter around the vehicle of:

- 2 miles (3 km) or 3 miles (5 km) for a region with heavy traffic,
- 6 miles (10 km) for a region with normal traffic,
- 30 miles (50 km) for long journeys (motorway).

05 TRAFFIC INFORMATION

PRINCIPAL TMC SYMBOLS




1 Black and blue triangle: general information, for example:




2 Red and yellow triangle: traffic information, par example:

 


RECEIVING TA MESSAGES

- i
-  - the station transmits TA messages.
 -  - the station does not transmit TA messages.
 -  - TA messages are not activated.


The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


- 1
- 
- With the current audio source displayed on the screen, press the dial.



- 2
- The shortcut menu for the source appears and gives access to:

TA

 - 3
- 
- Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.




06 RADIO

SELECTING A STATION


1



 
Press the RADIO button to display the list of stations received locally sorted in alphabetical order. Select the station required by turning the dial and press to confirm.



 While listening to the radio, press one of the buttons to select the previous or next station on the list.



 A long press of one of the buttons starts the automatic search for a station with a lower or higher frequency.



Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. Press the button on the numeric keypad to recall the stored radio station.

 
The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

RDS - REGIONAL MODE

1




When the current radio station is displayed on the screen, press the dial.



2


The radio source short-cuts menu appears and provides access to the following short-cuts:

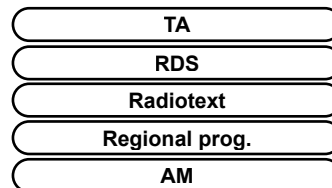

3



 Select the function required and press the dial to confirm to gain access to the corresponding settings.



RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

07 MUSIC MEDIA PLAYERS

CD, MP3/WMA CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The Peugeot Connect Navigation will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps.

It also supports the VBR (Variable Bit Rate) mode.

No other type of file (.mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters, without using special characters (e.g. : " " ? ; ù) to avoid any play or display problems.

 
07 MUSIC MEDIA PLAYERS

SELECTING/PLAYING MUSIC CD, MP3/WMA CD

1



Press the MUSIC button.



!

 
The list of tracks or MP3/WMA files appears under Music Menu.

2



Press the MUSIC button again or select the Music Menu function and press the dial to confirm.

Music Menu




3



Select the "Select music" function and press the dial to confirm.

 
Select music



4



 
Select the music source required: CD, MP3/WMA CD. Press the dial to confirm. Play begins.




5



 
Press the up or down button to select the next/previous folder.



6

 

 Press one of the buttons to select a music track.
Press and hold one of the buttons for fast forward or rewind play.



⚠

The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the settings used. We recommend the ISO 9660 file standard.

07 MUSIC MEDIA PLAYERS

USING THE EXTERNAL INPUT (AUX)

JACK-RCA AUDIO CABLE NOT SUPPLIED

1

Connect the portable device (MP3/WMA player...) to the audio sockets (white and red, RCA type) in the glove box using a JACK/RCA audio cable.

 


2



Press the MUSIC button then press it again or select the Music Menu function and press the dial to confirm.

Music Menu




3



Select the "External device" function and press the dial to activate it.

 
External device



4



 Select the AUX music source and press the dial to confirm. Play begins automatically.



!

The display and management of the controls is on the portable device.

08 BLUETOOTH TELEPHONE



CONNECTING A TELEPHONE

* The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you. A list of mobile telephones with the best level of compatibility is available from the dealer network.



For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the Peugeot Connect Navigation must be carried out with the vehicle stationary. The ignition must be on.

1

 
Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.



2



Press the PHONE button.




The list of telephones connected previously (4 maximum) appears on the multifunction screen. Select the telephone required for a new connection.

3



For a first connection, select "Search phone" and press the dial to confirm. Then select the name of the telephone.

 Search phone



4

Enter the authentication code on the telephone. The code to be entered is displayed on the screen.

 


Once the telephone has been connected, Peugeot Connect Navigation can synchronise the address book and the call list. This synchronisation may take a few minutes*.

1



To change the telephone connected, press the PHONE button, then select Phone Menu and press the dial to confirm.




2



Select "Connect phone". Select the telephone and press to confirm.

 Connect phone



08 BLUETOOTH TELEPHONE

RECEIVING A CALL

1

 
An incoming call is announced by a ring and a superimposed display on the multifunction screen.

2



Select the "Yes" tab to accept or "No" to refuse and confirm by pressing the dial.

Yes No




3




To hang up, press the PHONE button or press the dial and select "End call" then confirm by pressing the dial.

 End call



 Press the end of the steering mounted control to accept the call or end the call in progress.




MAKING A CALL

1



 Press the PHONE button.



The list of the last 20 calls made and received in the vehicle appears under Phone Menu. You can select a number and press the dial to make the call.

2

 


Select the Phone Menu function and press the dial to confirm.

Phone Menu

Select "Dial number", then dial the telephone number using the virtual keypad.

Dial number



It is also possible to select a number from the address book. You can select "Dial from address book". The Peugeot Connect Navigation can record up to 4 000 entries. Press the end of the steering mounted control for more than two seconds to gain access to the address book.




To delete a number, press the PHONE button then press and hold on a call number to display a list of actions including:
Delete entry
Delete list


09 CONFIGURATION


SETTING THE DATE AND TIME

The SETUP function gives access to the following options: System language, Date & Time, Display (Brightness, Colour, Map colour), Vehicle, Units, System.


! These settings must be entered again if the battery has been disconnected.


1  Press the SET UP button.

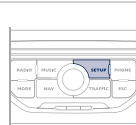


2  Select the "Date & Time" function and press the dial to confirm.

 
Date & Time





3  Select the "Set date & time" function and press the dial to confirm.

    
Set date & time




 
4  Adjust the settings one by one using the direction arrows and confirm by means of the dial.




5  Select the "Date format" function and press the dial to confirm.



6  Confirm the format required using the dial. Select the "Time format" function and press the dial to confirm.



 Confirm the format required using the dial. Pressing the SET UP button for more than 2 seconds gives access to:

Description of the unit

GPS coverage

Demo mode

10 TRIP COMPUTER/VEHICLE PARAMETERS

 
TRIP COMPUTER

1

Press the MODE button several times in succession until the trip computer is displayed.



- The "vehicle" tab:
The range, the current fuel consumption and the distance remaining.
- The "1" (trip 1) tab with:
The average speed, the average fuel consumption and the distance travelled calculated over route "1".
- The "2" (trip 2) tab with the same functions for a second route.



Each press of the button at the end of the wiper stalk displays the different trip computer information in succession, according to the screen.

A FEW DEFINITIONS

i

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

11 SCREEN MENU MAP



MAIN FUNCTION

- 1
- 2 OPTION A
 - 3 option A1
 - 3 option A2
- 2 OPTION B...



"Traffic" Menu

- 1
- 2 Messages on route
- 2 Only warnings on route
- 2 All warning messages
- 2 All messages
- 2 Geo. Filter
 - 3 Within 2 miles (3 km)
 - 3 Within 3 miles (5 km)

3

Within 6 miles (10 km)

3

Within 30 miles (50 km)

3

Within 60 miles (100 km)



"Music" Menu

- 1
- 2 Select music
- 2 Sound settings
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear
 - 4 Classic
 - 4 Jazz
 - 4 Rock/Pop
 - 4 Techno

4

Vocal

3

Loudness

3

Speed dependent volume

3

Reset sound settings



"Radio" Menu

- 1
- 2 Waveband
 - 3 FM
 - 3 AM
- 2 Manual tune
- 2 Sound settings
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear

4 Classic

4 Jazz

4 Rock/Pop

4 Techno

4 Vocal

3 **Loudness**

3 **Speed dependent volume**

3 **Reset sound settings**



"Navigation" Menu

1 **Abort guidance/Resume guidance**

2 **Destination input**

2 **Enter new address**

3 Country

4 City

4 Street

4 House number

4 Start route guidance

4 Postal code

4 Save to address book

4 Intersection

4 City district

4 Geo position

4 Map

3 **Navigate HOME**

3 **Choose from address book**

3 **Choose from last destinations**

3 **TMC station information**

2 **Stopovers**

3 **Add stopover**

4 Address input

4 Navigate HOME

4 Choose from address book

4 Choose from last destinations

3 **Rearrange route**

3 **Replace stopover**

3 **Delete stopover**

3 **Recalculate**

4 Fast route

4 Short route

4 Optimized route

2 **POI search**

3 **POI nearby**

3 **POI near destination**

3 **POI in city**

3 **POI in country**

3 **POI near route**

2 **Route options**

3 **Route type**

4 Fast route

4 Short route

4 Optimized route

3 **Route dynamics**

4 Traffic independent

4 Semi-dynamic

3 **Avoidance criteria**

4 Avoid motorways

4 Avoid toll roads

4 Avoid ferries

3 **Recalculate**

2 **Settings**

3 **Navi volume**

3 **POI categories on Map**

3 **Set parameters for risk areas**

4 Display on map

4 Visual alert

4 Sound alert



1 **"Phone" Menu**

2 Dial number

2 Dial from address book

2 Call lists

2 Connect phone

3 Search phone

3 Phones connected

4 Disconnect phone

4 Rename phone

4 Delete pairing

4 Delete all pairings

4 Show details

2 **Settings**

3 **Select ring tone**

3 **Phone/Ring tone volume**

3 **Enter mailbox number**



1 **"SETUP" menu**

2 **System language***

3 **Deutsch**

3 **English**

3 **Español**

3 **Français**

3 **Italiano**

3 **Nederlands**

3 **Polski**

3 **Portuguese**

2 **Date & Time***

3 **Set date & time**

3 **Date format**

3 **Time format**

* Available according to model.

2 **Display**

3 **Brightness**

3 **Colour**

4 Pop titanium

4 Toffee

4 Blue steel

4 Technogrey

4 Dark blue

3 **Map colour**

4 Day mode for map

4 Night mode for map

4 Auto. Day/Night for map

2 **Vehicle***

3 **Vehicle information**

4 Alert log

4 Status of functions

2 **Units**

3 **Temperature**

4 Celsius

4 Fahrenheit

3 **Metric/Imperial**

4 Kilometres (Consumption: l/100)

4 Kilometres (Consumption: km/l)

4 Miles (Consumption: MPG)

2 **System**

3 **Factory reset**

3 **Software version**

3 **Automatic scrolling**

* Available according to model.


FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the Linear musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the Audio section. - The audio equipment's CD player does not play DVDs. - Because of their quality level, certain writeable CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

QUESTION	ANSWER	SOLUTION
TA is selected. However, certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
I receive a speed camera alert for a camera which is not on my route.	The system announces all speed cameras located in a conical zone forward of the vehicle. It may detect speed cameras on nearby or parallel roads.	Zoom the map to view the exact position of the speed camera.
The audible speed camera alert is not working.	Audible alerts are not active.	Activate audible alerts in Navigation Menu, Settings, Set parameters for risk areas.
	The alert volume level is set to minimum.	Increase the speed camera alert volume.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 3 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 3 satellites (long press on the SETUP button, then select GPS coverage).
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.
The route is not calculated successfully.	The exclusion criteria may conflict with the current location (exclusion of toll roads on a motorway with tolls).	Check the exclusion criteria.

QUESTION	ANSWER	SOLUTION
There is a long waiting time after inserting a CD.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take a few seconds.	This phenomenon is normal.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be deactivated or the equipment may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is activated. - Check that your telephone is visible.
A telephone connected by Bluetooth is inaudible.	The volume level depends on both the system and the telephone.	Increase the Peugeot Connect Navigation volume setting, possibly to maximum, and increase the telephone volume level if necessary.

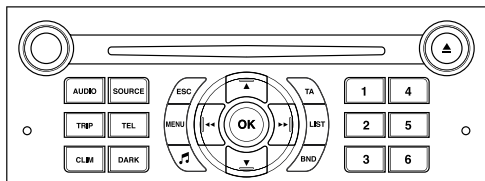

PEUGEOT CONNECT SOUND

AUDIO SYSTEM/BLUETOOTH



Your Peugeot Connect Sound is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact your PEUGEOT dealer for configuration of the system.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

CONTENTS

01	First steps	p.	212
02	Steering mounted controls	p.	213
03	Main menu	p.	214
04	Audio	p.	215
05	Peugeot Connect USB	p.	218
06	Bluetooth	p.	221
07	Configuration	p.	223
08	Trip computer	p.	224
09	Screen menu map	p.	225
	Frequently asked questions	p.	228


01 FIRST STEPS



1. On/Off and volume adjustment.
2. Selection of the display on the screen from the modes: AUDIO, trip computer (TRIP), air conditioning (CLIM) and Bluetooth hands-free (TEL).
The TEL button is not active if the Bluetooth option is not fitted.
3. Selection of source: radio, CD, USB.
4. Display the main menu.
5. Cancel the current operation/return to the previous screen.
6. Confirmation.
7. Automatic search for a lower/higher frequency.
Select previous/next CD, MP3 or USB track.
8. TA (Traffic Announcement) function on/off.
Long press: access to the PTY (radio Programme Types) mode.
9. Display the list of local stations, the tracks on the CD or the MP3 directories.
10. CD eject.
11. Buttons 1 to 6:
Select a stored radio station.
12. Select the FM1, FM2, FMast and AM wavebands.
13. Select a lower/higher radio frequency
Select the previous/next MP3 folder
Select the previous/next USB folder/genre/artist/playlist.
14. Set audio options: front/rear balance, left/right balance, loudness, sound ambience.
15. The DARK button changes the screen display for greater driving comfort at night.
1st press: lighting of the upper band only.
2nd press: black screen.
3rd press: return to the standard display.

02 STEERING MOUNTED CONTROLS

RADIO: selection of the previous stored station.
USB: selection of the previous genre/artist/folder from the classification list.
Selection of the previous item on a menu.

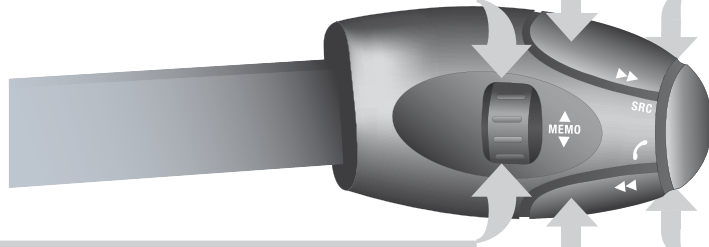

RADIO: selection of the next stored station.
USB: selection of the next genre/artist/folder from the classification list.
Selection of the next item on a menu.

RADIO: automatic search for a higher frequency.
CD/MP3/USB: selection of the next track.
CD/USB: continuous press: fast forwards play.
Selection of the previous item.

Volume increase.

- Change of sound source.
- Confirmation of a selection.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds: access to the telephone menu.

Mute: press the volume increase and decrease buttons simultaneously.
The sound is restored by pressing one of the two volume buttons.

Volume decrease.

RADIO: automatic search for a lower frequency.
CD/MP3/USB: selection of the previous track.
CD/USB: continuous press: fast reverse.
Selection of the next item.

03 MAIN MENU

AUDIO FUNCTIONS: radio, CD, USB, options.

TELEPHONE: Bluetooth hands-free, pairing, management of a call.

> COLOUR SCREEN C




AIR CONDITIONING: on/off and dual-zone control (according to equipment).

TRIP COMPUTER: entering of distances, alerts, status of functions.

PERSONALISATION-CONFIGURATION: vehicle parameters, display, languages.

> MONOCHROME SCREEN C

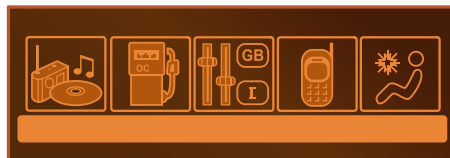
 

 

 

 

 


For a detailed global view of the menus available, refer to the "Screen menu map" section.

04 AUDIO


 

 

 

 



RADIO SELECTING A STATION

-  Press the SOURCE button several times in succession and select the radio. 
-  Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM. 
-  Briefly press one of the buttons to carry out an automatic search of the radio stations. 
-  Press one of the buttons to carry out a manual search of the radio stations. 
-  Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds. 

The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

RDS

-  Press the MENU button. 
 -  Select AUDIO FUNCTIONS then press OK. 
 -  Select the FM WAVEBAND PREFERENCES function then press OK. 
 -  Select ACTIVATE RDS then press OK. RDS appears on the screen. 
-  The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

04 AUDIO


RECEIVING TA MESSAGES

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



Press the TA button to activate or deactivate traffic messages.

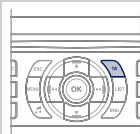

CD PLAYING A CD



Insert circular compact discs only.
Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.
Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



Press one of the buttons to select a track on the CD.

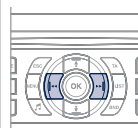


Press the LIST REFRESH button to display the list of tracks on the CD.

3



Press and hold one of the buttons for fast forward or backward.

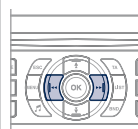

04 AUDIO

MP3 CD PLAYING AN MP3 COMPILATION



Insert an MP3 compilation in the player.

The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.



 
On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



Press one of the buttons to select a track on the CD.

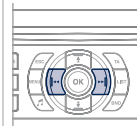


!

Press the LIST REFRESH button to display the list of directories of the MP3 compilation.

3



Press and hold one of the buttons for fast forward or backward play.

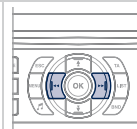

MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.



The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.



Empty CDs are not recognised and may damage the system.

05 PEUGEOT CONNECT USB

USING THE PEUGEOT CONNECT USB

The list of compatible devices and the compression rates supported are available from PEUGEOT dealers.

1

You have a USB port. The audio files are transmitted from a portable device such as a digital player or a USB memory stick to your Peugeot Connect Sound to be listened to via the vehicle's speakers.



2

USB memory stick (1.1, 1.2 and 2.0) or iPod® of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS is not supported),
- the iPod® lead is essential,
- navigation through the file database is by means of the steering wheel controls,
- the iPod® software should be regularly updated for the best connection.



CONNECTING A USB MEMORY STICK

1

Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB stick.



The file formats recognised are .mp3 (mpeg1 layer 3 only), .wma (standard 9 only, 128 kbits/sec compression), .wav and .ogg.

The playlists types accepted are m3u, .pls, .wpl.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB device. The other sources are available during this time.

The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected.

When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

05 PEUGEOT CONNECT USB

USING THE PEUGEOT CONNECT USB


2

Press and hold LIST to display the different classifications.
Select by Folder/Artist/Genre/Playlist, press OK to select the classification required, then press OK again to confirm.

OK




- by Folder: all folders containing audio files recognised on the portable device, classified in alphabetical order without following the folder structure.
- by Artist: all of the artist names defined in the ID3 Tags, sorted in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.

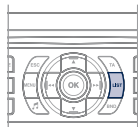

3

Press LIST briefly to display the previously selected classification.
Navigate through the list using the left/right and up/down buttons.
Confirm the selection by pressing OK.

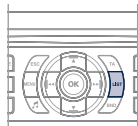


4



Press one of these buttons to gain access to the previous/next track on the classification list currently being played.


Press and hold one of the buttons for fast forward or backward play.

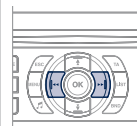

5



Press one of these buttons to gain access to the previous/next Genre, Folder, Artist or Playlist on the classification list currently being played.

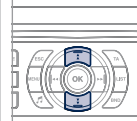

CONNECTING AN iPod® VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined on the iPod®).
Selection and Navigation are described in steps 1 to 5 above.

!

Do not connect a hard disk or USB devices other than audio equipment to the USB port. This could damage your installation.

05 PEUGEOT CONNECT USB

USING THE AUXILIARY SOCKET (AUX) RCA SOCKET



The RCA auxiliary socket permits the connection of a portable device (MP3 player...).

1

 
Connect the portable device (MP3 player...) to the audio sockets (white and red, RCA type) using a suitable cable (not supplied).



2



Press the SOURCE button several times in succession and select AUX.



ADJUSTING THE VOLUME OF THE AUXILIARY SOURCE

1


First adjust the volume of your portable device.



2



Then adjust the volume of your audio system.

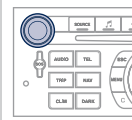

The display and control is via the portable device.



06 BLUETOOTH



BLUETOOTH TELEPHONE SCREEN C (AVAILABLE ACCORDING TO MODEL AND VERSION)

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used. Consult your telephone's manual and your operator to find out which services are available to you. A list of mobile telephones which offer the best range of services is available from PEUGEOT dealers.

PAIRING A TELEPHONE



For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth system of your audio equipment should only be carried out with the vehicle stationary. The ignition must be on.

1

Press the MENU button.



2



Activate the telephone's Bluetooth function.

 


3



In the menu, select:

- Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search



4

A window is displayed with "Searching...".

5

The first 4 telephones recognised are displayed in this window.



The TELEPHONE menu gives access to the following functions in particular: Directory*, Call list, Pairing management.

* if your telephone hardware is fully compatible.

6

Select the telephone to be connected from the list. Only one telephone can be connected at a time.

7

A virtual keypad is displayed on the screen: enter a code with at least 4 digits. Confirm by pressing OK.



8

A message is displayed on the screen of the telephone chosen: to accept the pairing, enter the same code on the telephone, then confirm by pressing OK. If pairing fails, the number of attempts is not limited.



9

"Pairing of Name_telephone successful" appears on the screen.

10

The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the synchronisation period.




The pairing can also be initiated from the telephone.


06 BLUETOOTH




 
RECEIVING A CALL

- 1 An incoming call is announced by a ring and a superimposed display on the multifunction screen.

- 2  Select the YES tab on the screen using the buttons and confirm by pressing OK.

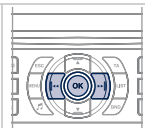

- 2  Press TEL or OK on the steering wheel controls to accept the call.



MAKING A CALL

- 1 From the Bluetooth telephone function Audio menu, select Manage the telephone call then call, call list or directory.

- 2 Press the TEL steering wheel control, or press and hold OK for access to your directory.
Or
To dial a number, use your telephone's keypad, with the vehicle stationary.




BLUETOOTH AUDIO STREAMING


- ! Wireless transmission of the telephone's music files via the audio equipment. The telephone must be able to manage the appropriate bluetooth profiles (Profiles A2DP/AVRCP).

- 1 Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. See steps 1 to 10 on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.



- 2 Select the telephone to be connected from the telephone function menu.
The audio system connects to a newly paired telephone automatically.

- 3  Activate the streaming source by pressing the SOURCE button*. The tracks to be played can be controlled as usual via the buttons on the Radio control panel and the steering mounted controls**. The contextual information can be displayed on the screen.

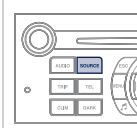


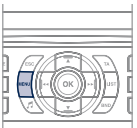

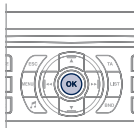

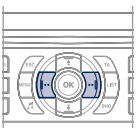

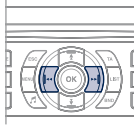

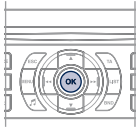

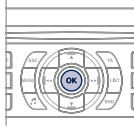

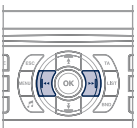

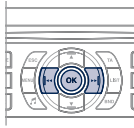
* In certain cases, playing of the Audio files must be initiated from the keypad.

** If the telephone supports the function.

07 CONFIGURATION



SETTING THE DATE AND TIME SCREEN C

<p>1</p>  <p>Press the MENU button.</p>		<p>5</p>  <p>Press to confirm the selection.</p>	
<p>2</p>  <p>Using the arrows, select PERSONALISATION CONFIGURATION.</p>		<p>6</p>  <p>Using the arrows, select ADJUST DATE AND TIME.</p>	
<p>3</p>  <p>Press to confirm the selection.</p>		<p>7</p>  <p>Press to confirm the selection.</p>	
<p>4</p>  <p>Using the arrows, select DISPLAY CONFIGURATION.</p>		<p>8</p>  <p>Adjust the settings one by one confirming by pressing the OK button. Next select the OK tab on the screen then confirm.</p>	

08 TRIP COMPUTER



Each press of the button, located at the end of the wiper stalk, displays the different trip computer information in succession, depending on the screen.



- the "vehicle" tab with:
 - the range, the current fuel consumption and the distance remaining to the destination,
- the "1" tab (trip 1) with:
 - the average speed, the average consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



Zero reset

When the required trip is displayed, press the control for more than two seconds.

A FEW DEFINITIONS

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

09 SCREEN MENU MAP

MONOCHROME C



COLOUR C



1 MAIN FUNCTION

2 OPTION A

3 Option A1

3 Option A2

2 OPTION B



A press on OK gives access to the short cut menus, depending on the display on the screen:

RADIO

1 activate/deactivate RDS

1 activate/deactivate REG mode

1 activate/deactivate radiotext

CD/MP3 CD

1 activate/deactivate Intro

1 activate/deactivate track repeat
(the entire current CD for CD,
the entire current folder for MP3 CD)

1 activate/deactivate random play (the
entire current CD for CD, the entire
current folder for MP3 CD)

USB

1 activate/deactivate track repeat
(of the current folder/artist/genre/playlist)

1 activate/deactivate random play (of the
current folder/artist/genre/playlist)

09 SCREEN MENU MAP

Pressing the MENU button displays:



1 AUDIO FUNCTIONS

2 FM BAND PREFERENCES

3 alternative frequencies (RDS)

4 activate/deactivate

3 regional mode (REG)

4 activate/deactivate

3 radio-text information (RDTXT)

4 activate/deactivate

2 PLAY MODES

3 album repeat (RPT)

4 activate/deactivate

3 track random play (RDM)

4 activate/deactivate



1 TRIP COMPUTER

2 ENTER DISTANCE TO DESTINATION

3 Distance: x miles

2 ALERT LOG

3 Diagnostics

2 STATUS OF THE FUNCTIONS*

3 Functions activated or deactivated



1 PERSONALISATION-CONFIGURATION

2 DEFINE THE VEHICLE PARAMETERS*

2 DISPLAY CONFIGURATION

3 video brightness adjustment

4 normal video

4 inverse video

4 brightness (- +) adjustment

3 date and time adjustment

3 day/month/year adjustment

4 hour/minute adjustment

4 choice of 12 h/24 h mode

3 choice of units

4 l/100 km - mpg - km/l

4 °Celsius/°Fahrenheit

2 CHOICE OF LANGUAGE

* The parameters vary according to vehicle.

09 SCREEN MENU MAP



1 **BLUETOOTH TELEPHONE**

2 **Bluetooth configuration**

3 **Connect/Disconnect a device**

3 **Telephone function**

3 **Audio Streaming function**

4 Consult the paired device

4 Delete a paired device

4 Perform a Bluetooth search

2 **Call**

3 **Calls list**

4 Directory

2 **Manage the telephone call**

3 **Terminate the current call**

3 **Activate private mode**



1 **AIR CONDITIONING**

2 **SWITCH OFF AIR CONDITIONING (A/C OFF)**

2 **SIMULTANEOUS L-R CONTROL**

3 **activate/deactivate**

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The message "USB peripheral error" is displayed on the screen.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The Bluetooth connection is cut.	The USB memory stick is not recognised. The memory stick may be corrupt.	Reformat the memory stick.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.