

Fig. 1: Engine Compartment & Headlights
1988 Toyota Land Cruiser

COMPONENT LOCATOR:

A/C AMPLIFIER	E 9-10
ALTERNATOR	B 3
BLOWER SW	E 8
CHARGE LT RELAY	A 15
CG LTR	A 11
CLOCK	A 11
COLD START INJECTOR	A-B 2-3
COOLANT FAN RELAY	E 3
DEFOG SWITCH	D 16
DIFFERENTIAL IND LT	A 15
DIMMER SWITCH	D 12
DIR/HAZ SWITCH	C 12
DOOR CTSY SWITCHES	D 16
DOOR LOCK CB	D 11
DOOR LOCK SWITCH	B-C 19
EFI CTRL UNIT	B-D 4
EFI MAIN RELAY	A 5
FUSE BLOCK	C 9-10
4WD IND LT	D 13
HEADLT RELAY	E 12
HORN SWITCH	C 1
IGN MAIN RELAY	B 3
IGNITER	E 5-8
IGNITION SWITCH	B 8
ILLUMINATION LIGHTS	A-B 12
INSTRUMENT CLUSTER	A-B 12
INTERIOR LT & SW	D-E 18
NEUTRAL START SWITCH	A 9
POWER ANTENNA	C 17
POWER MIRROR SW	D 16
POWER WINDOW MASTER SW	A-B 18
REAR HEATER	E 11
REAR WASHER MOTOR	D 17
REAR WIPER MOTOR	E 18-17
RHEOSTAT	E 16
SEAT BELT WARN RLY	E 18
STARTER MOTOR	A 3
T/M CTRL COMPUTER	C 15
TAILT RELAY	E 12
UNLOCK WARN SW	E 18
WASHER MOTOR	D 3
WIPER MOTOR	D 3
WIPER/WASHER SW	E 15

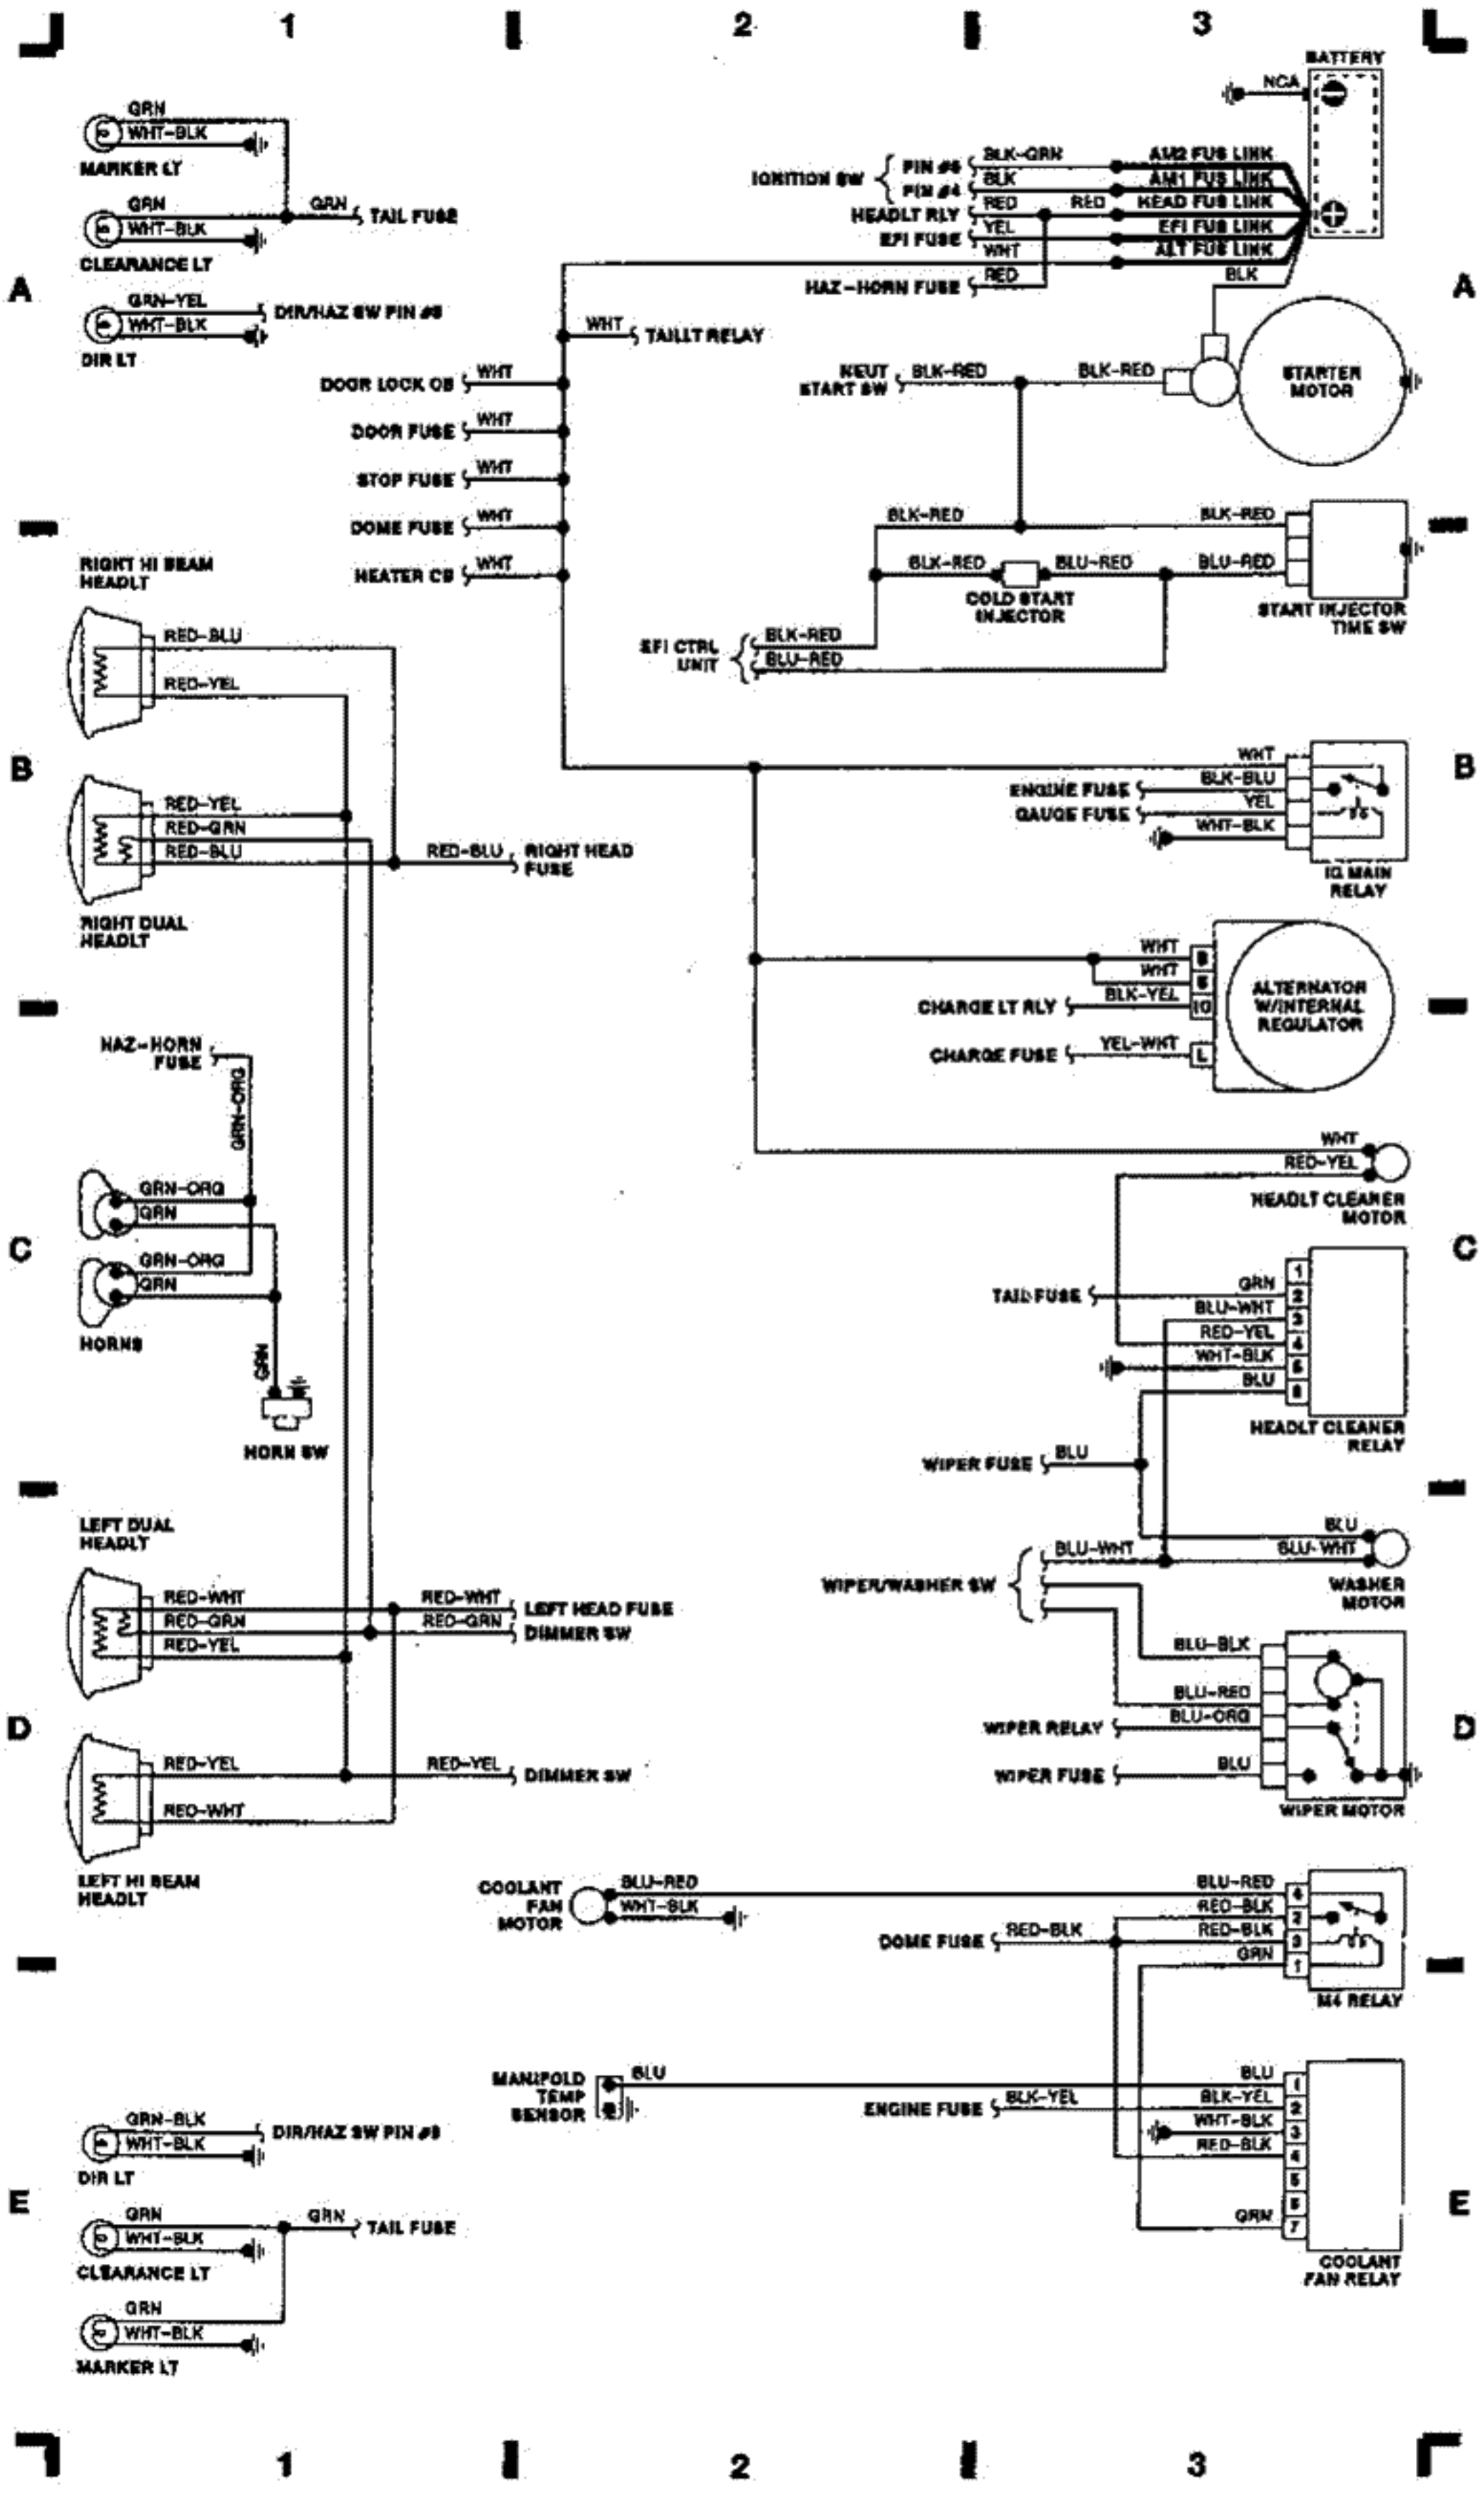


Fig. 2: Engine Compartment (Cont.), Ignition
1988 Toyota Land Cruiser

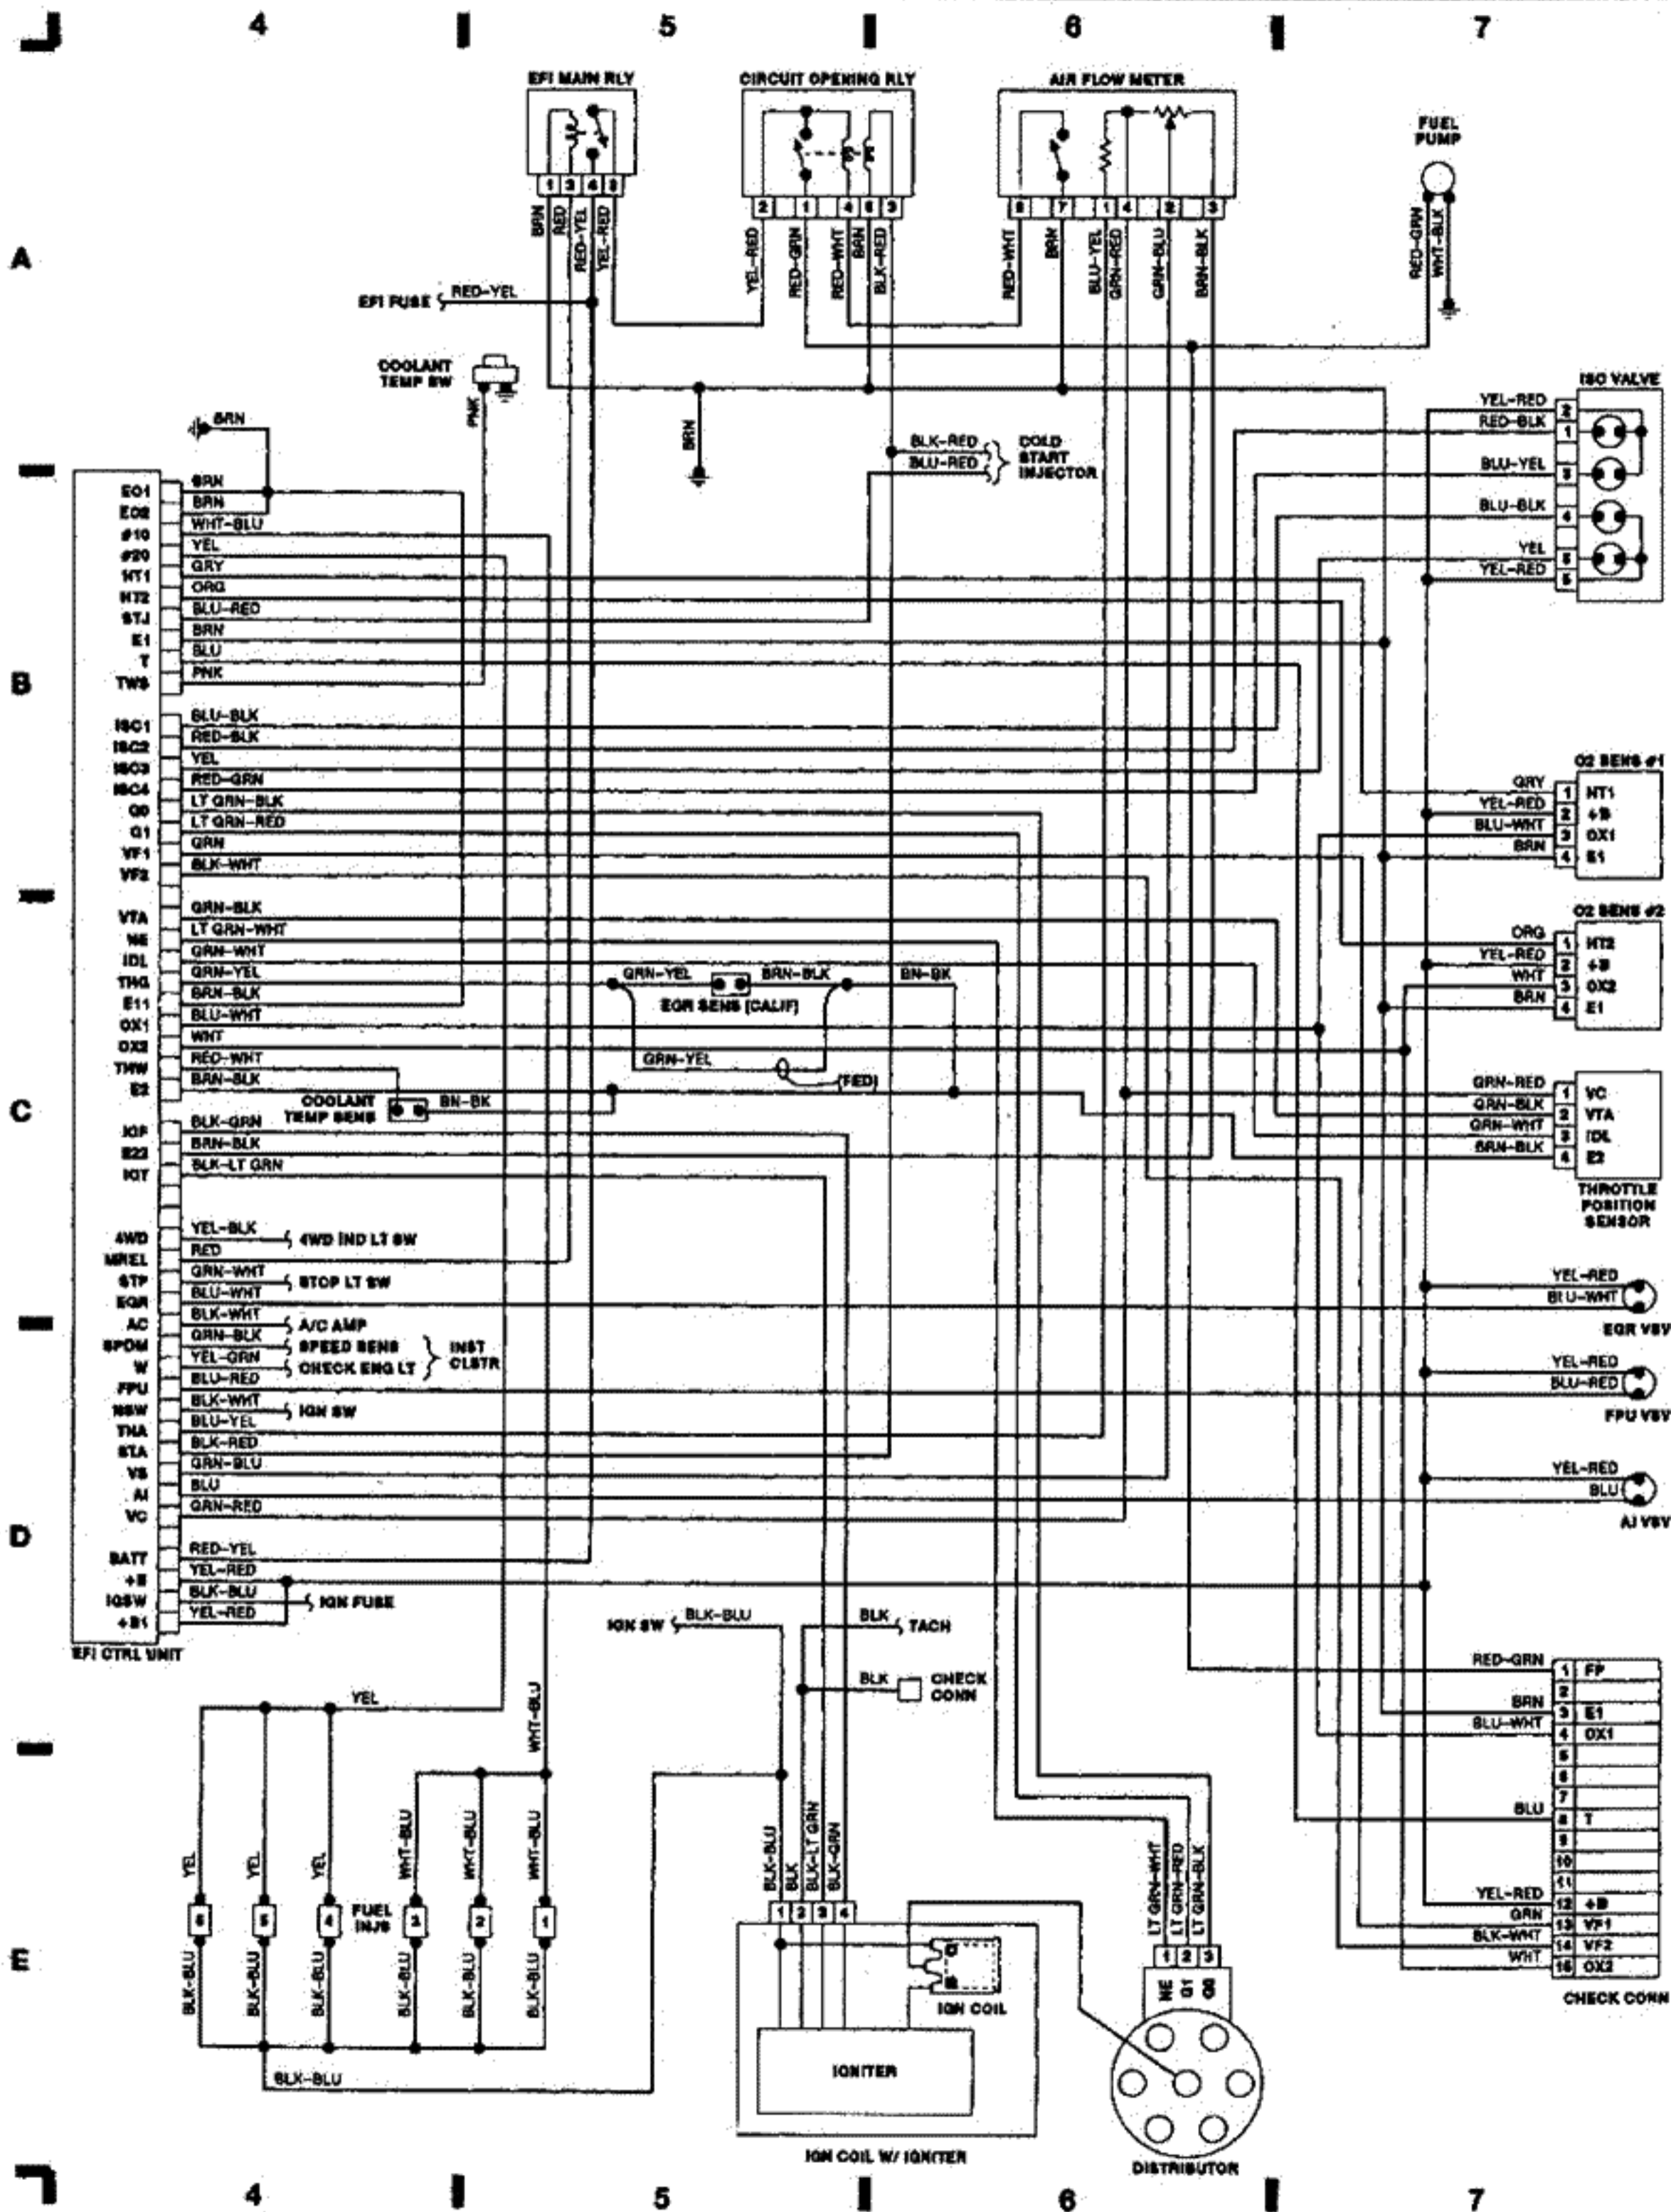


Fig. 4: Instrument Panel (Cont.) & Rear Compartment, Cluster, Hazard, Wiper/Washer 1988 Toyota Land Cruiser

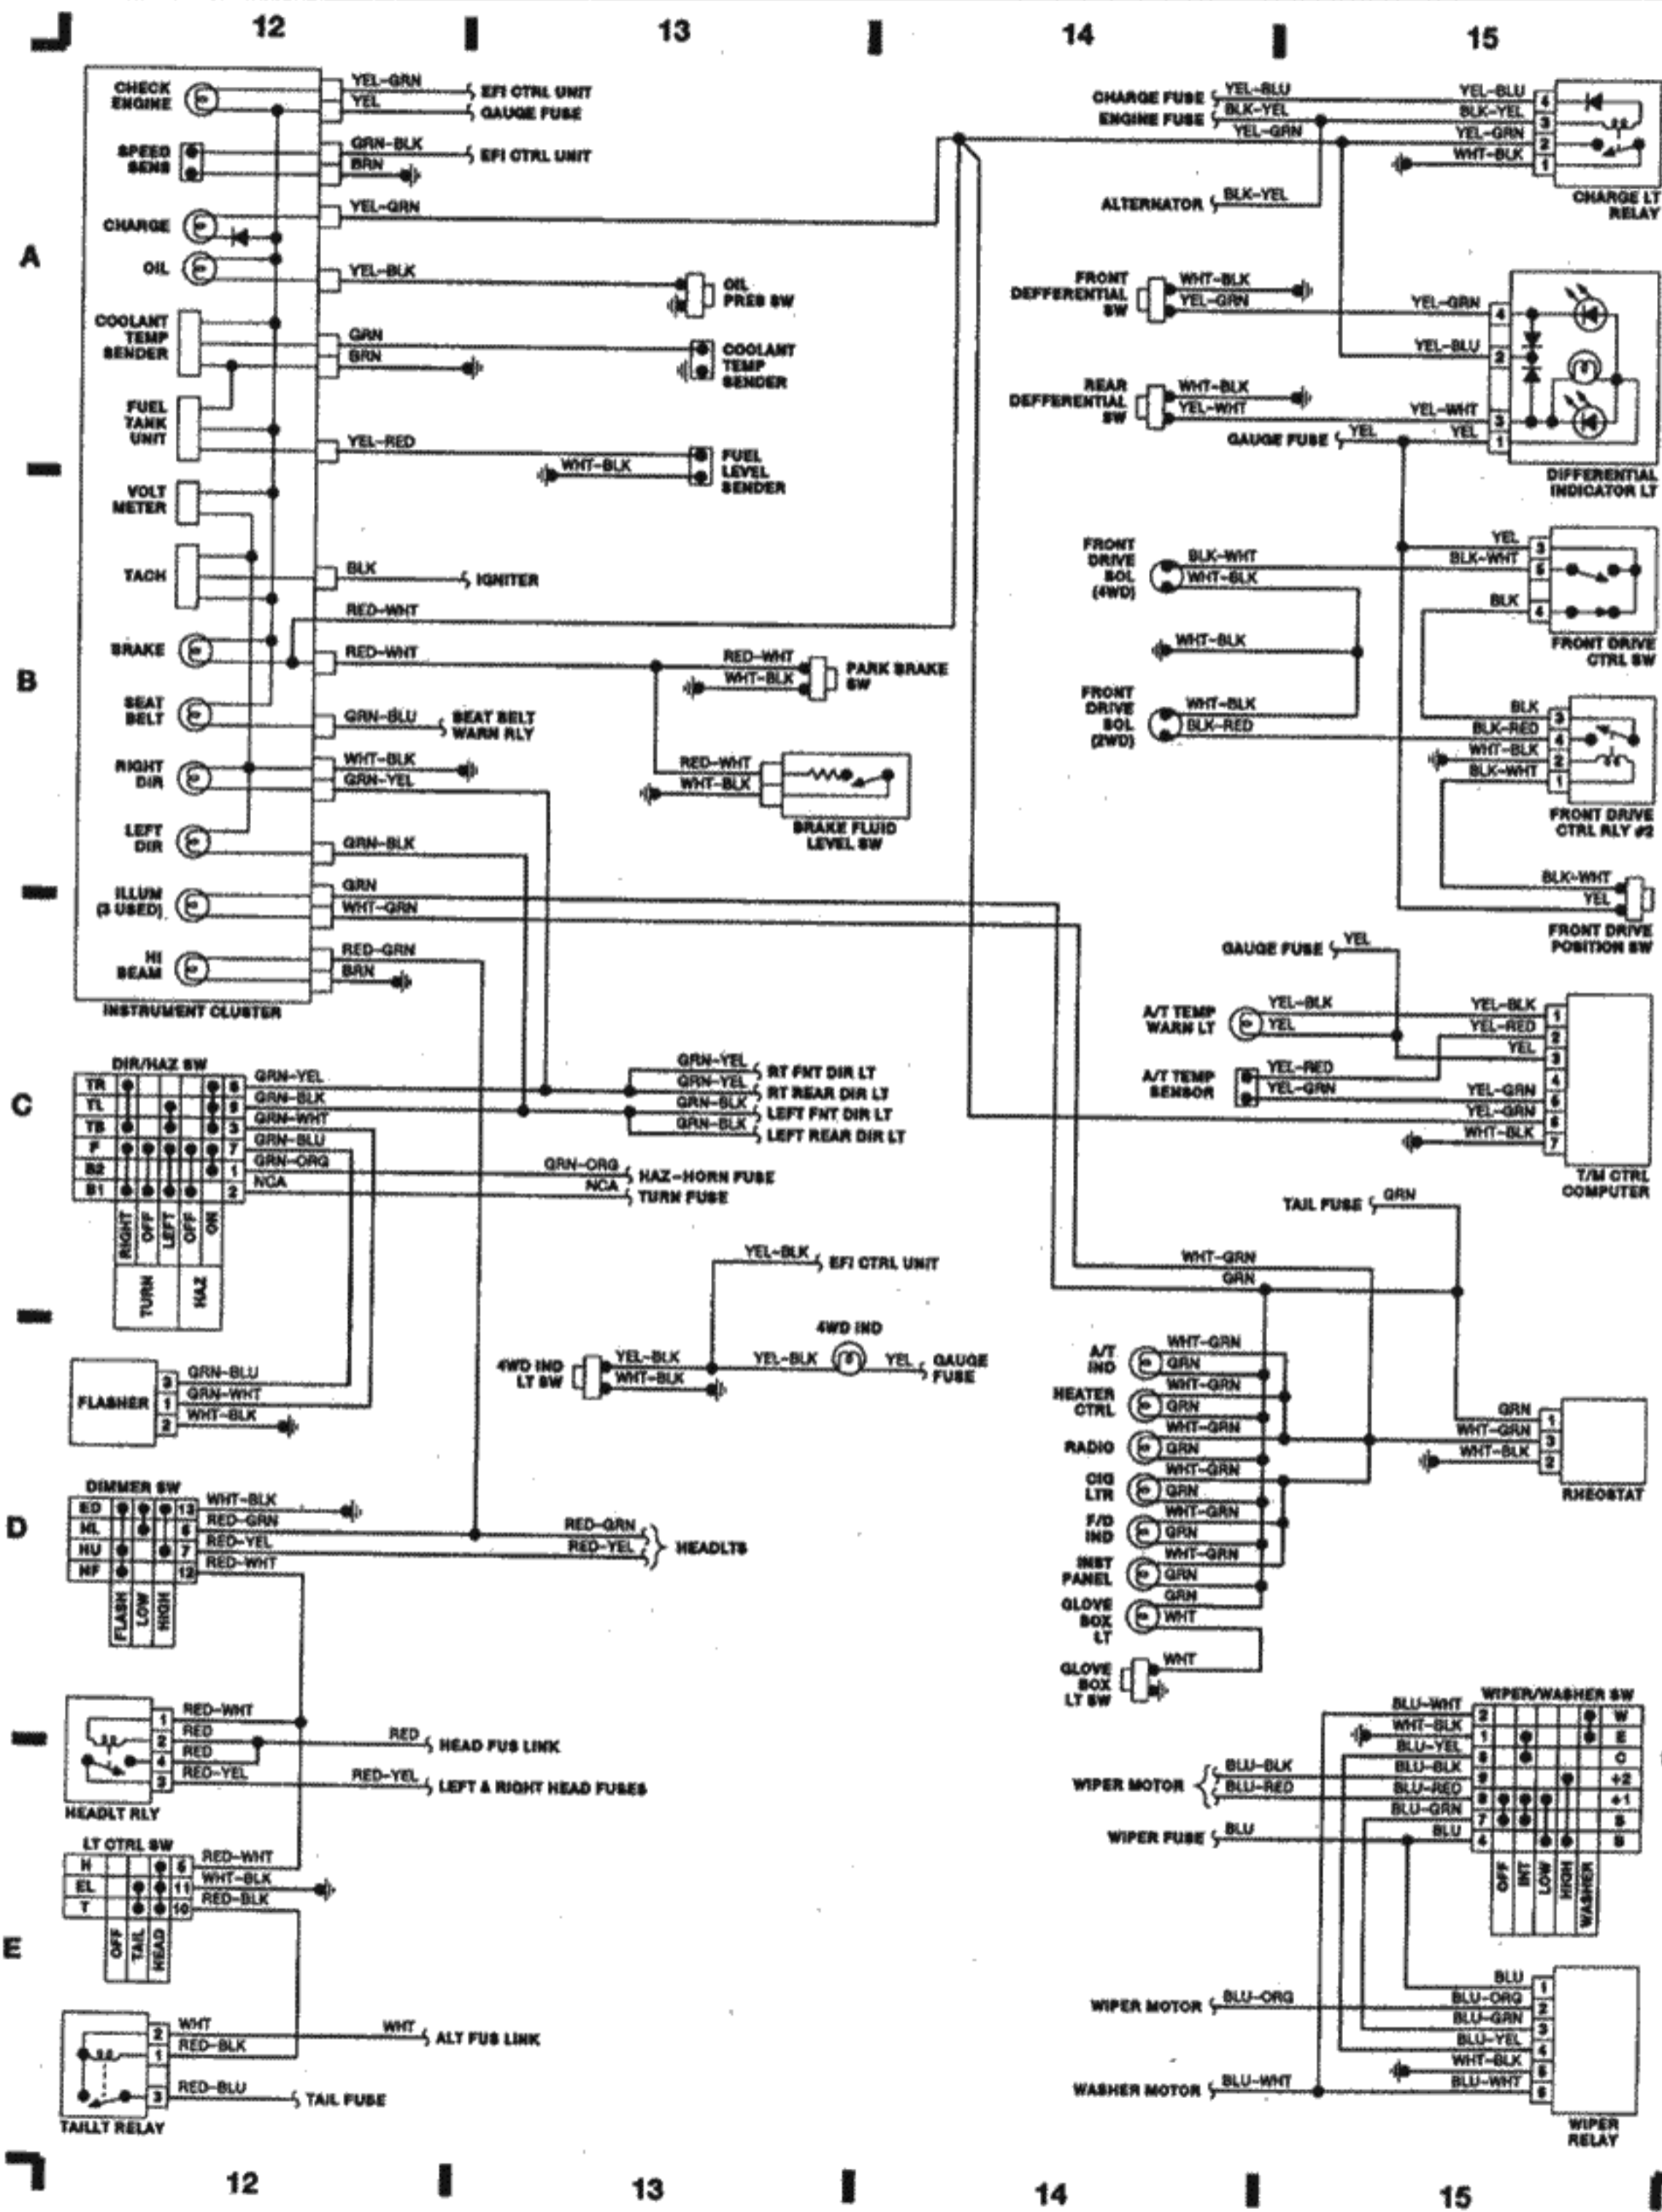


Fig. 5: Instrument Panel & Rear Compartment (Cont.), Power Windows, Power Antenna, Door Interior Lights, Rear Lights, Rear Wiper, 1988 Toyota Land Cruiser

