


Key to symbols

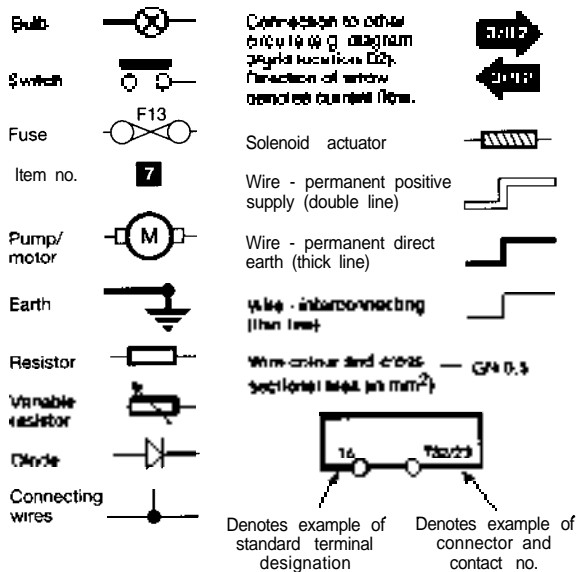

Earth locations

- | | | | |
|-----|--------------------------------|-----|-----------------------------------|
| E1 | Earthing strap - body | E15 | In headlight wiring loom |
| E2 | Earthing strap - body | E16 | In headlight wiring loom |
| E3 | In engine compartment, left | E17 | In front light wiring loom |
| E4 | On inner metal shield | E18 | In engine compartment wiring loom |
| E5 | On engine block | E19 | In headlight wiring loom |
| E6 | Near fuse relay box | E20 | In Mono jetronic wiring loom |
| E7 | Behind dashboard, left | E21 | In engine compartment wiring loom |
| E8 | Luggage compartment, left | E22 | In dashboard wiring |
| E9 | In wiring loom for instruments | E23 | In Mono motronic wiring loom |
| E10 | In dashboard loom | E24 | In Mono motronic wiring loom |
| E11 | In front right wiring loom | E25 | In Mono motronic wiring loom |
| E12 | In Digifant wiring loom | E26 | In foglight wiring loom |
| E13 | In boot lid | E27 | In loom for dash speaker |
| E14 | In front left wiring loom | | |

Fuse colour code

- | | |
|--------|---------|
| White | 8 Amps |
| Red | 16 Amps |
| Yellow | 20 Amps |

Fuses

- | | | |
|----|-----|--|
| 1 | 8A | Number plate lights |
| 2 | 8A | Fog lights, rear fog lights |
| 3 | 8A | LH side and tail lights, instrument illumination |
| 4 | 8A | RH side and tail lights, headlight washer |
| 5 | 8A | LH main beam |
| 6 | 8A | RH main beam and warning light |
| 7 | 8A | LH dipped beam, LH headlight adjustment |
| 8 | 8A | RH dipped beam, RH headlight adjustment |
| 9 | 8A | Horn, carburettor idle cut-off valve, reversing light |
| 10 | 8A | Direction indicators, seat heating |
| 11 | 8A | Interior light, cigar lighter, radio, diagnosis supply |
| 12 | 8A | Stop lights, clock |
| 13 | 16A | Engine cooling fan |
| 14 | 16A | Rear wiper, blower, lighting switch light |
| 15 | 8A | Windscreen wipers, intermittent wipe |
| 16 | 16A | Heated rear window |
| 17 | 20A | Electric fuel pump, lambda sensor |
- (1) in separate holder above the fuse box

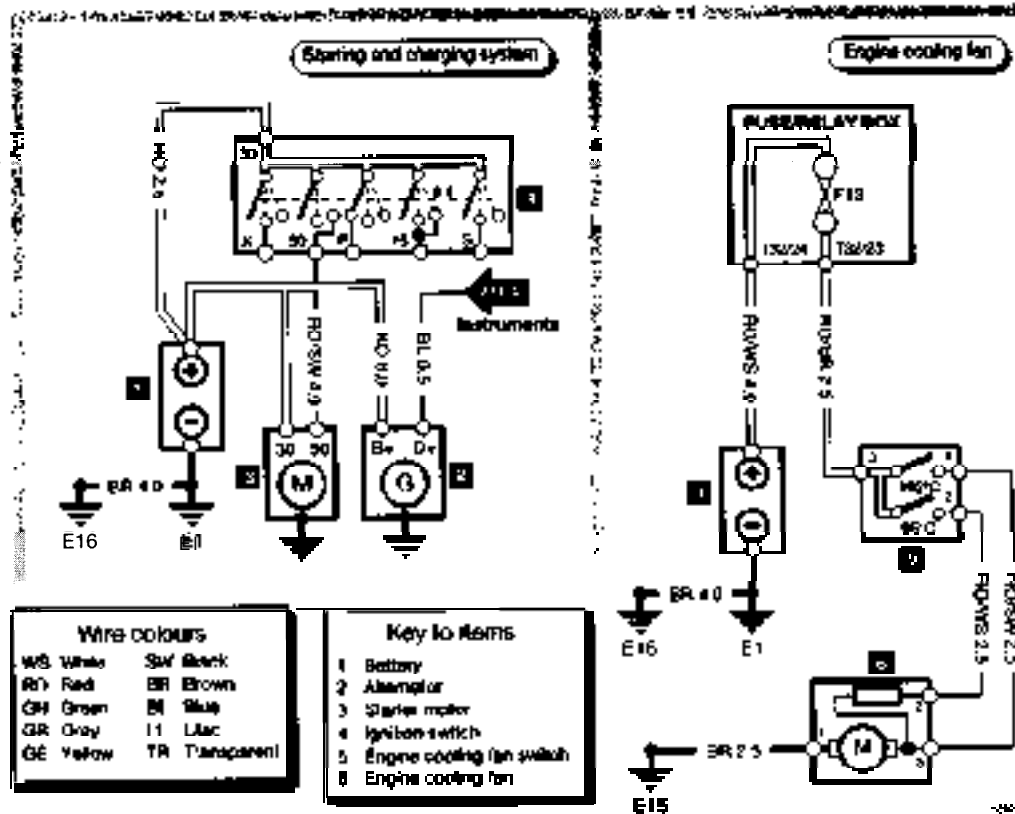


Diagram 1: Information for wiring diagrams, starting, charging and engine cooling fan


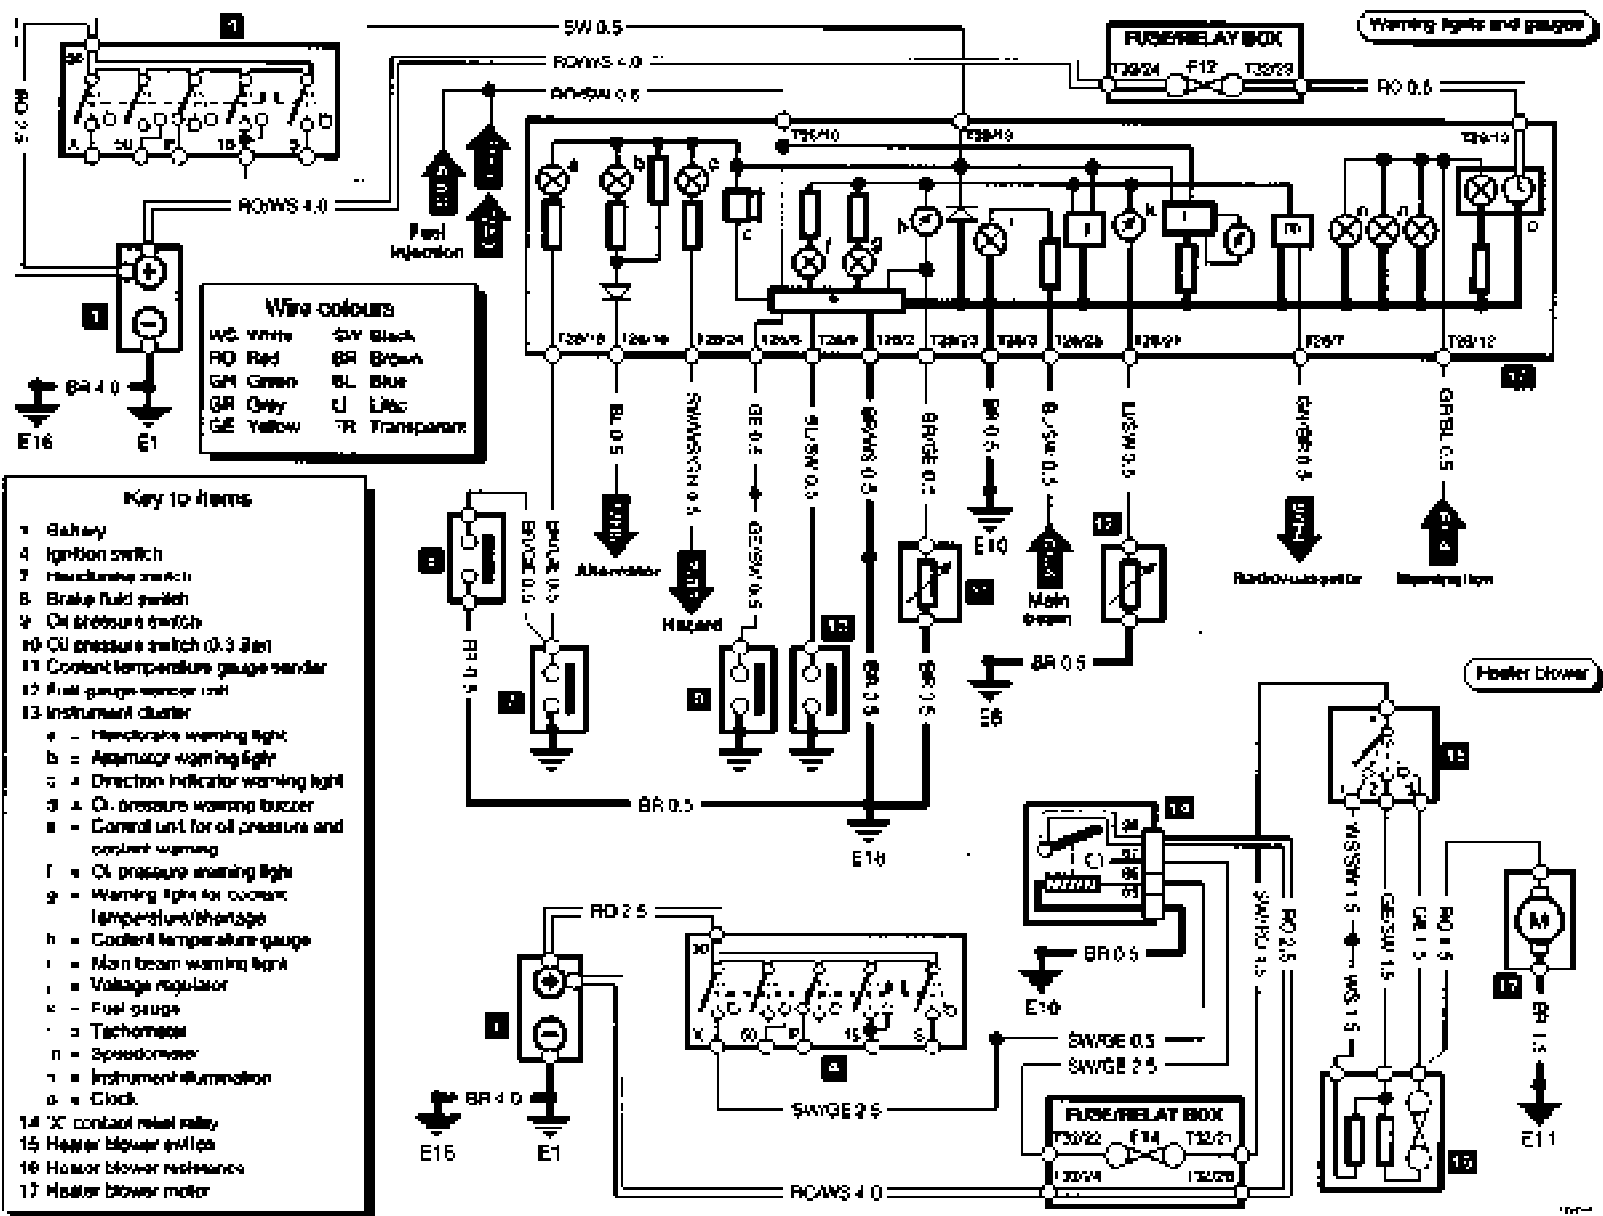


Diagram 2: Warning lights, gauges and heater blower

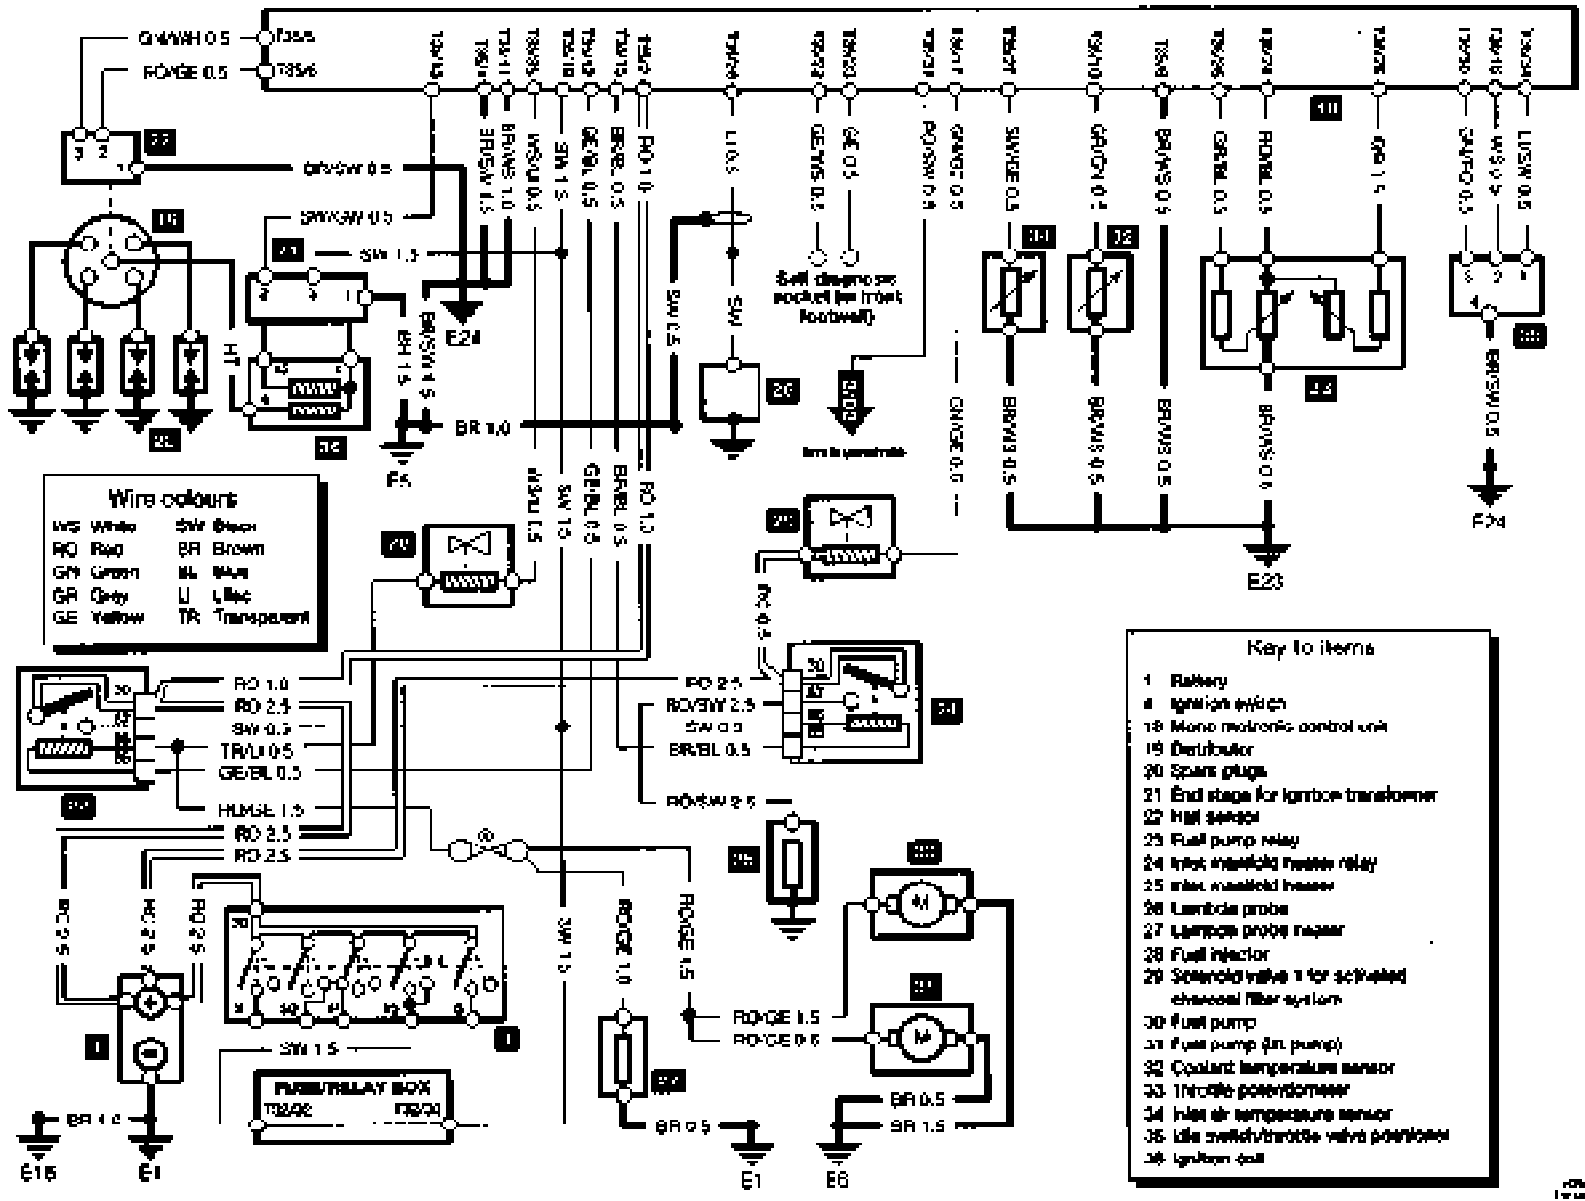

Wire colours

W	White	SW	Black
RO	Red	BR	Brown
GR	Green	BL	Blue
GR	Grey	LI	Light
GE	Yellow	TR	Transparent

Key to items

- 1 Battery
- 4 Ignition switch
- 18 Mono electronic control unit
- 19 Distributor
- 30 Spare plugs
- 21 End stage for ignition transformer
- 22 IHT sensor
- 25 Fuel pump relay
- 24 Intake manifold heater relay
- 25 Intake manifold heater
- 26 Lambda probe
- 27 Lambda probe heater
- 28 Fuel injector
- 29 Solenoid valve 1 for activated charcoal filter system
- 30 Fuel pump
- 31 Fuel pump (in pump)
- 22 Coolant temperature sensor
- 23 Throttle potentiometer
- 24 Intake air temperature sensor
- 26 Idle switch/throttle valve potentiometer
- 36 Ignition coil

Diagram 3: Single-point fuel injection


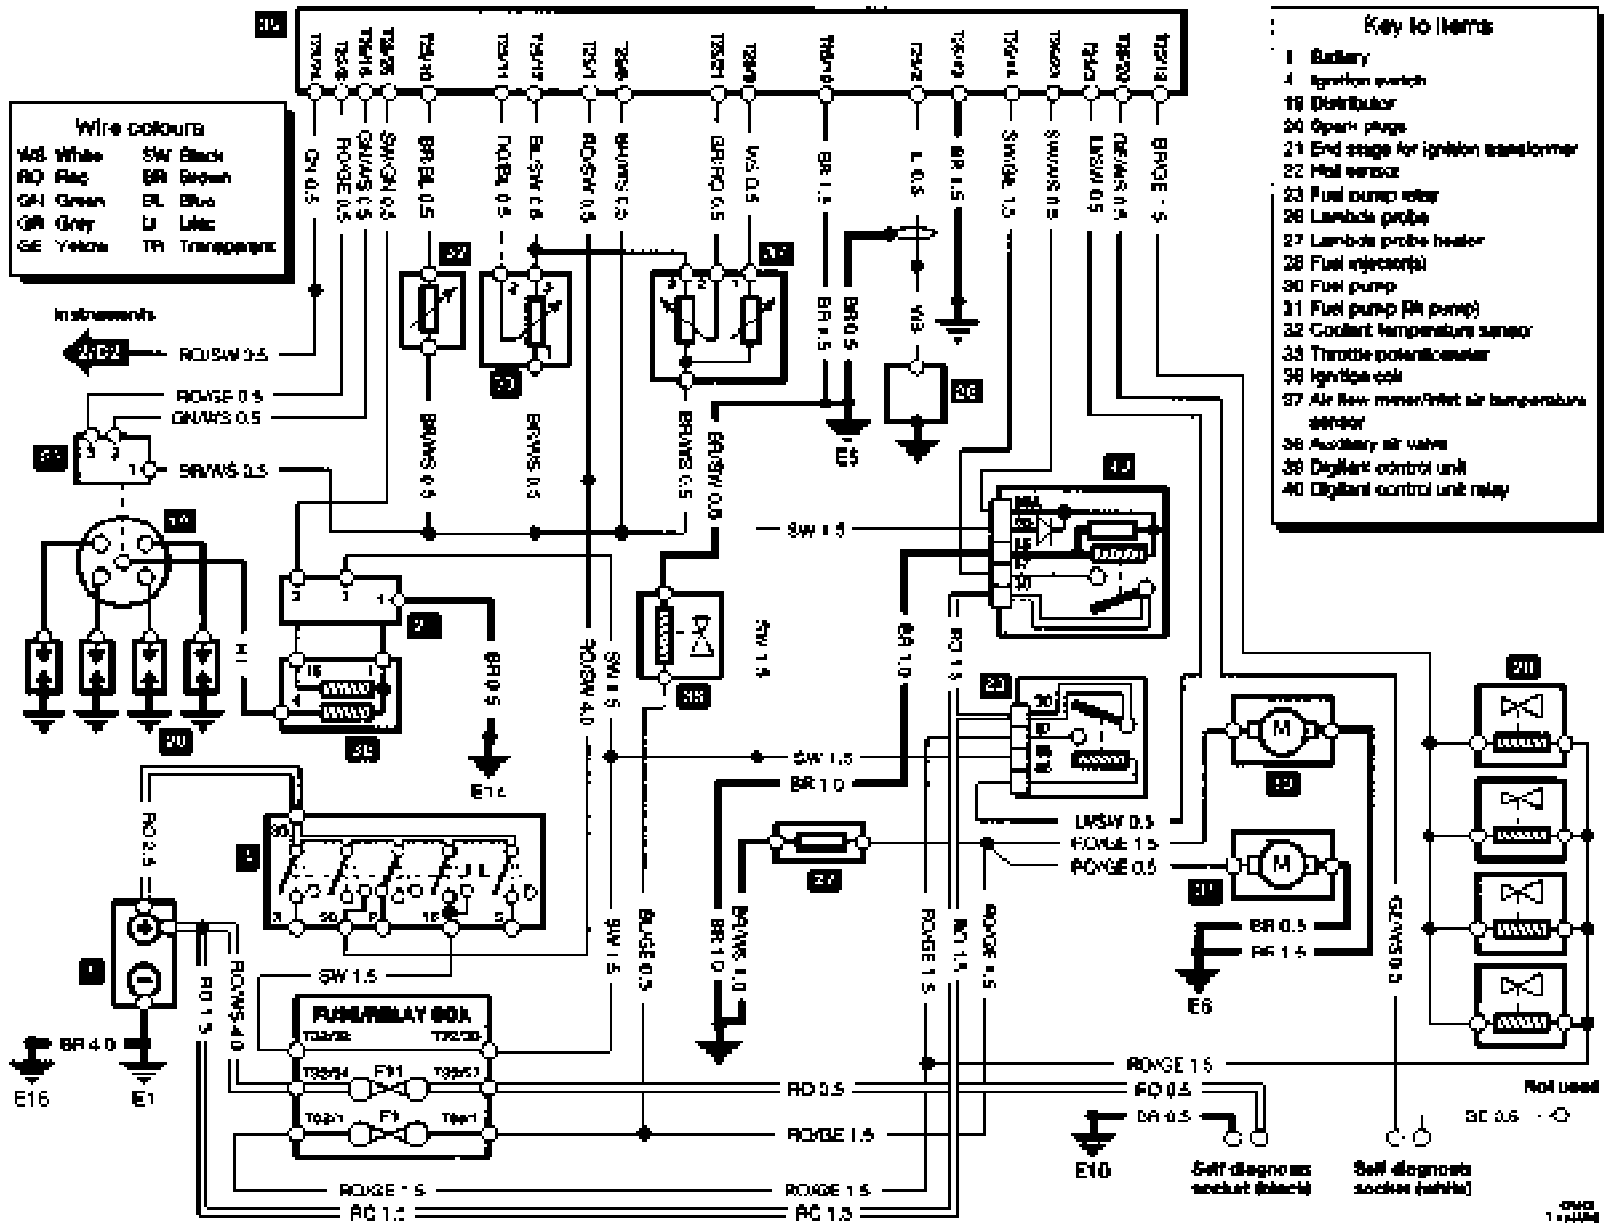


Diagram 4: Multi-point fuel injection (except G40 models)

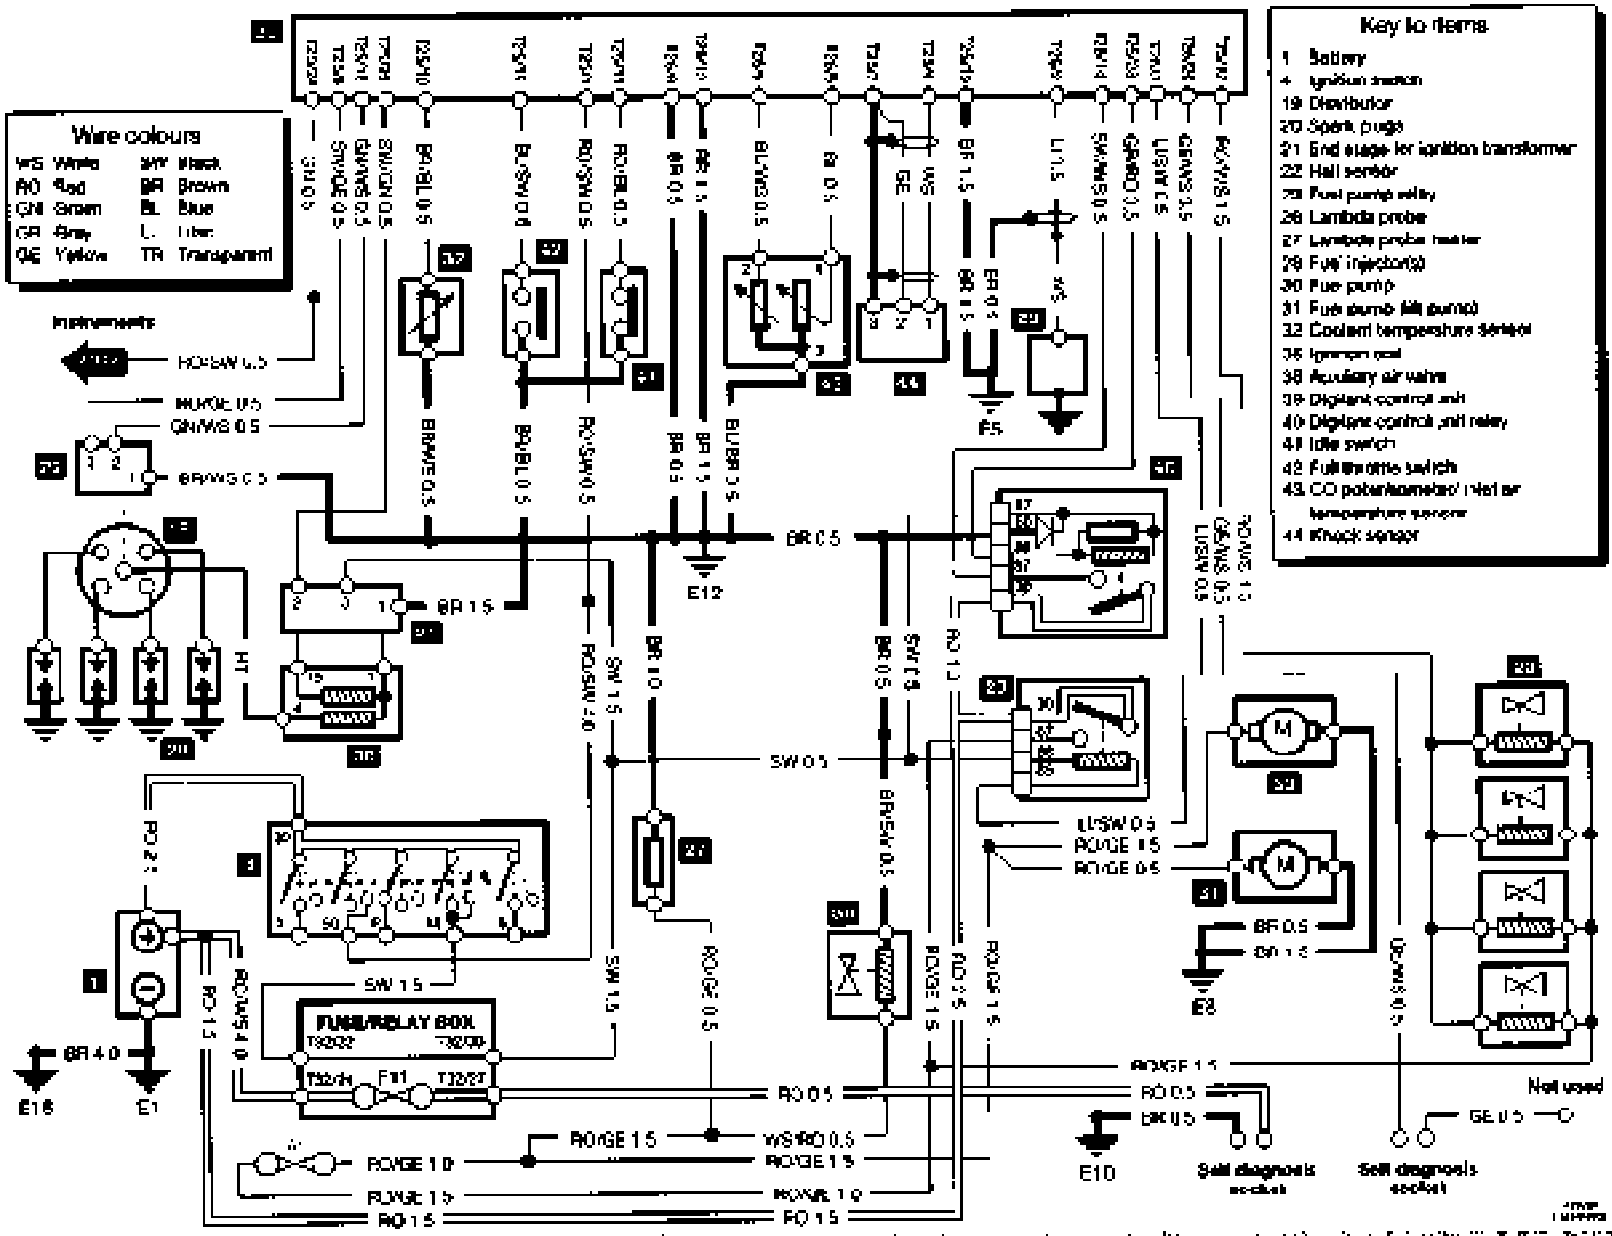



Key to items

- 1 Battery
- 4 Ignition switch
- 19 Distributor
- 20 Spark plugs
- 21 End stage for ignition transformer
- 22 Hall sensor
- 25 Fuel pump relay
- 26 Lambda probe
- 27 Lambda probe heater
- 29 Fuel injector(s)
- 30 Fuel pump
- 31 Fuel pump (fit pump)
- 32 Coolant temperature sensor
- 35 Ignition coil
- 38 Auxiliary air valve
- 39 Digital control unit
- 40 Digital control unit relay
- 41 Idle switch
- 42 Fuel ratio switch
- 43 CO potentiometer/ inlet air temperature sensor
- 44 Knock sensor

Wire colours



WS	White	SW	Black
RO	Red	BR	Brown
GN	Green	BL	Blue
GR	Grey	L	Light
GE	Yellow	TR	Transparent

Diagram 5: Multi-point fuel injection (G-40 models)

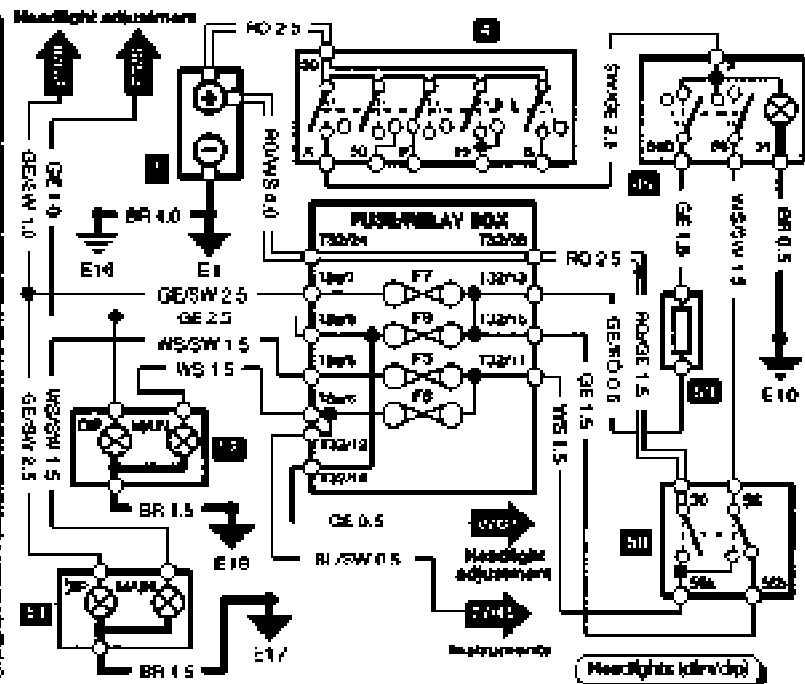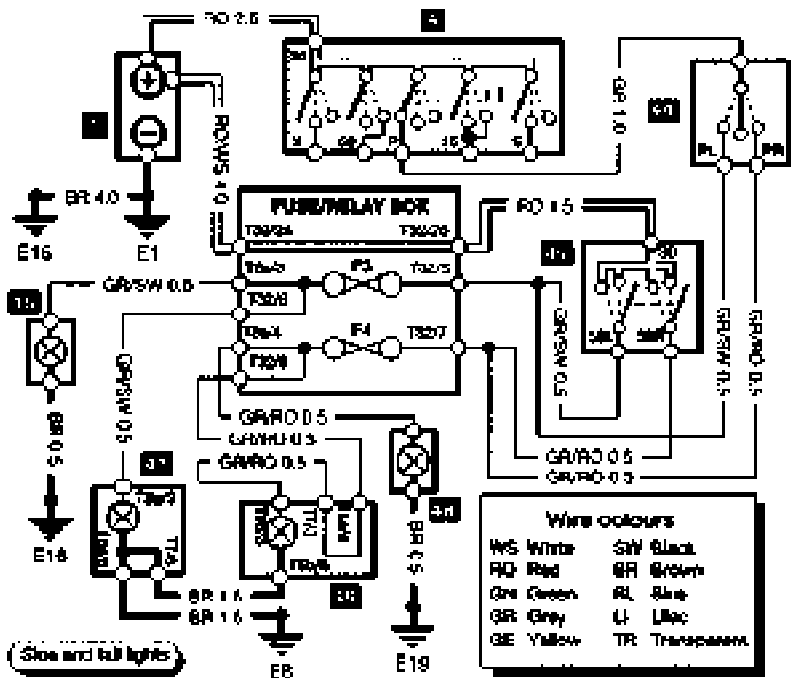

Key to items

- 1 Battery
- 4 Ignition switch
- 44 Parking switch
- 45 Light switch
- 46 LH side light
- 47 LH tail light
- 48 RH side light
- 49 RH tail light
- 50 Dip switch
- 51 LH headlight
- 52 RH head light
- 63 Decade resistor
- 64 Stop light switch
- 65 Reversing light switch
- 66 LH brake light
- 67 RH brake light
- 68 RH Reversing light

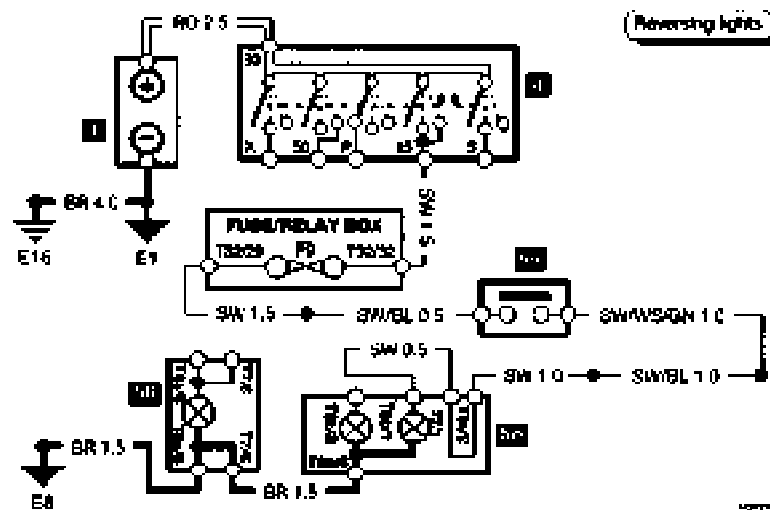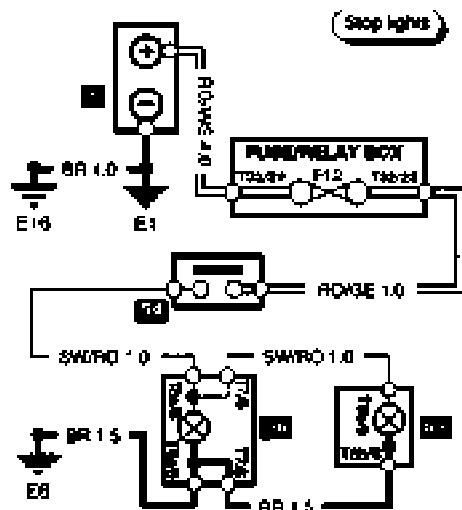

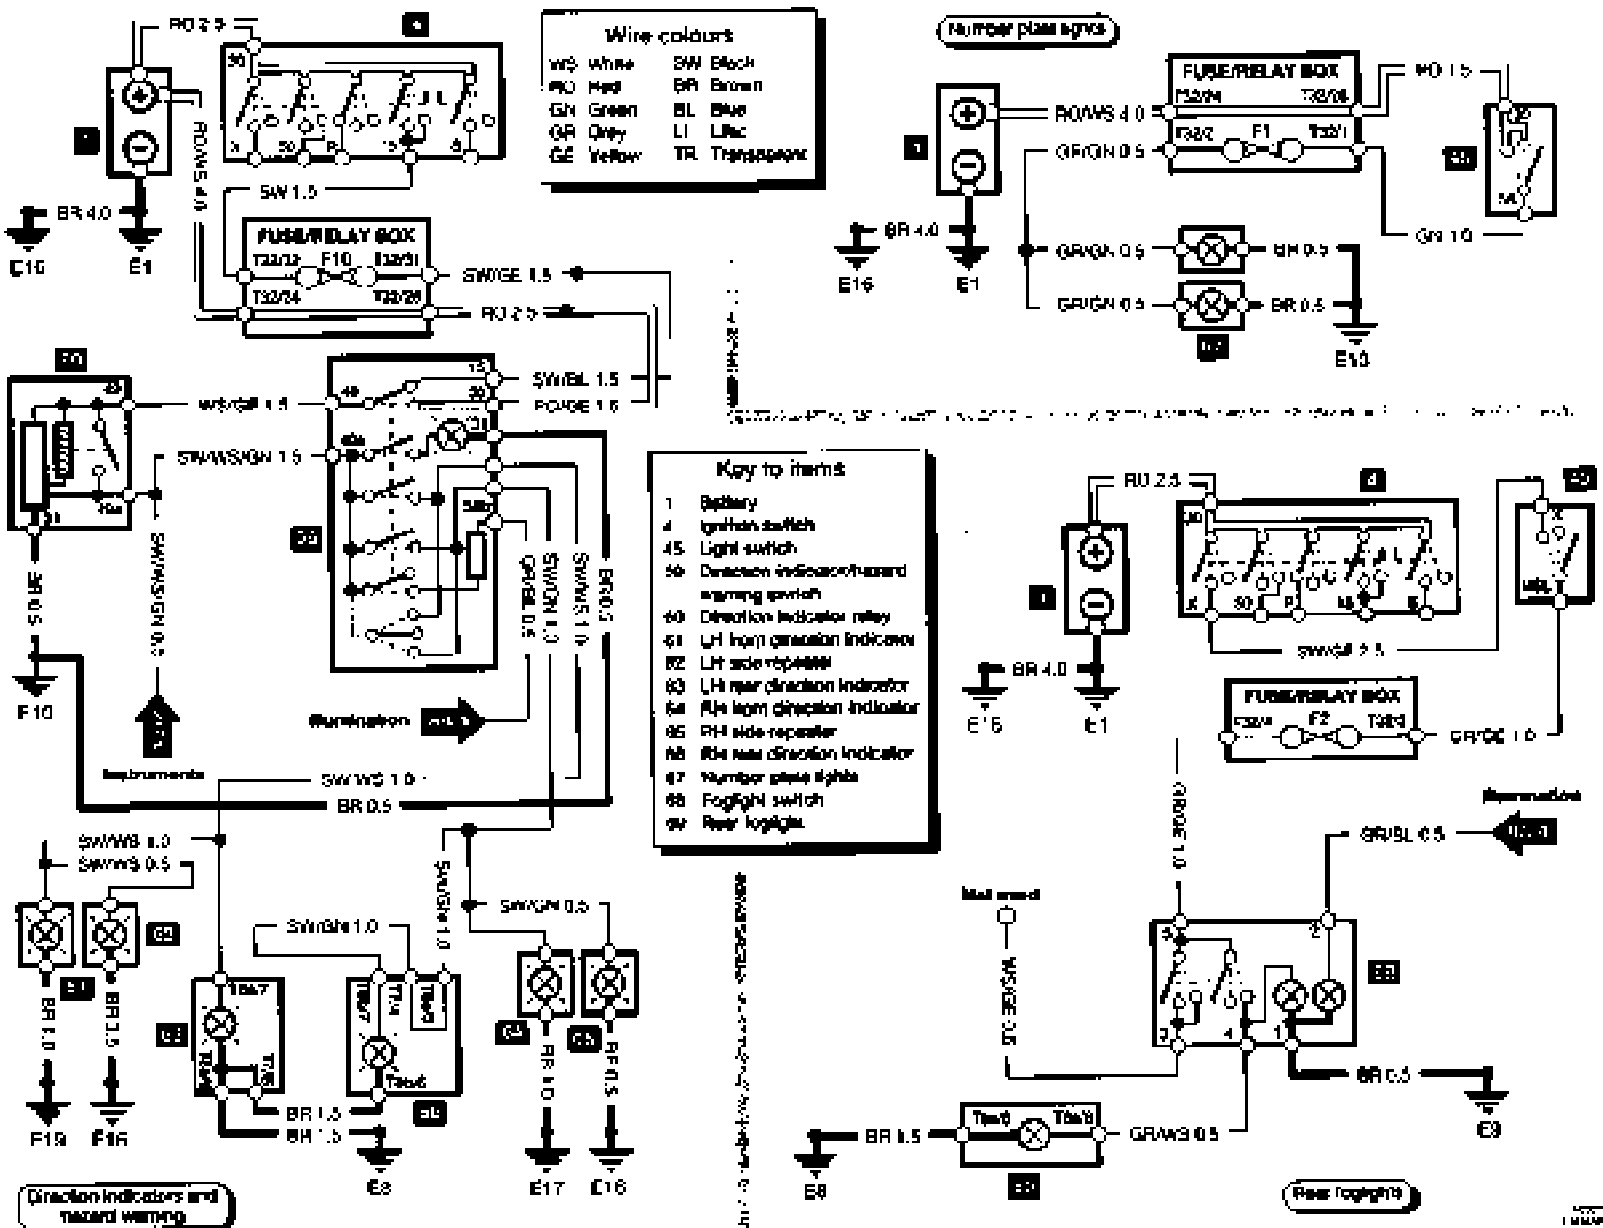




Diagram 7 : Exterior lighting continued

Key to Items

- 1 Battery
- 4 Ignition switch
- 14 "X" connect relay
- 40 Light switch
- 70 Headlight adjustment switch
- 71 LH headlight adjuster
- 72 RH headlight adjuster
- 73 Lighting rheostat
- 74 Interior light
- 75 LH interior light door switch
- 76 RH interior light door switch
- 77 Fresh air control illumination
- 78 Wash/wipe switch
- 79 Front wiper motor
- 80 Front wiper relay
- 81 Rear wiper motor
- 82 Rear wiper relay
- 83 Front/rear washer pump

Wire colours

WB White	SW Black
RO Red	BR Brown
GN Green	BL Blue
GR Grey	LI Lipo
GE Yellow	TR Transparent

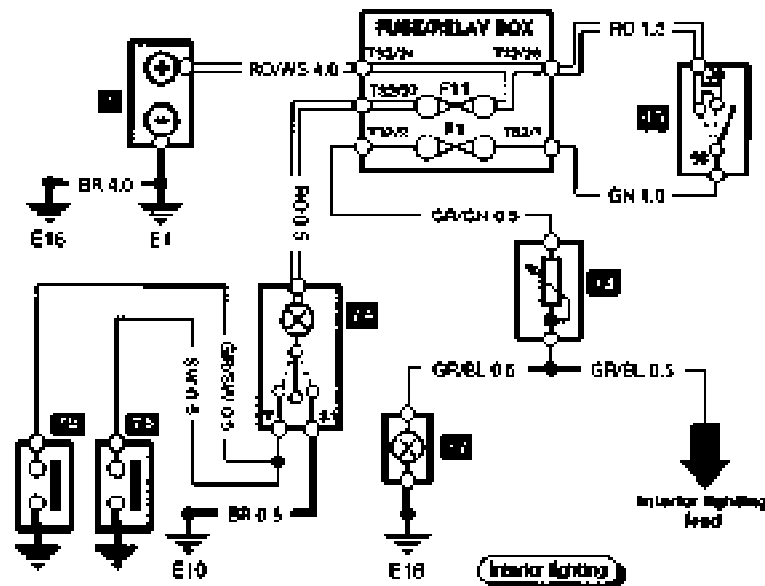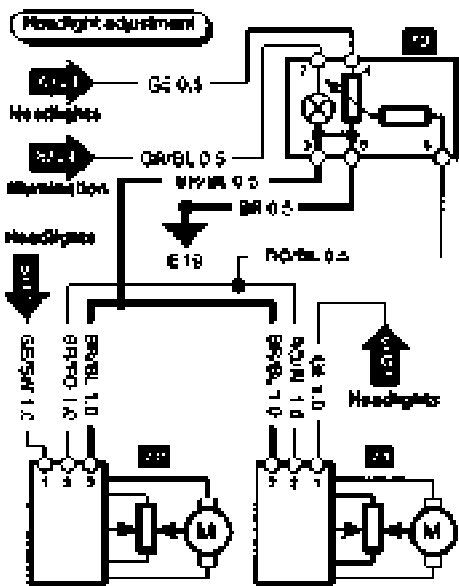

Wash/Wipe

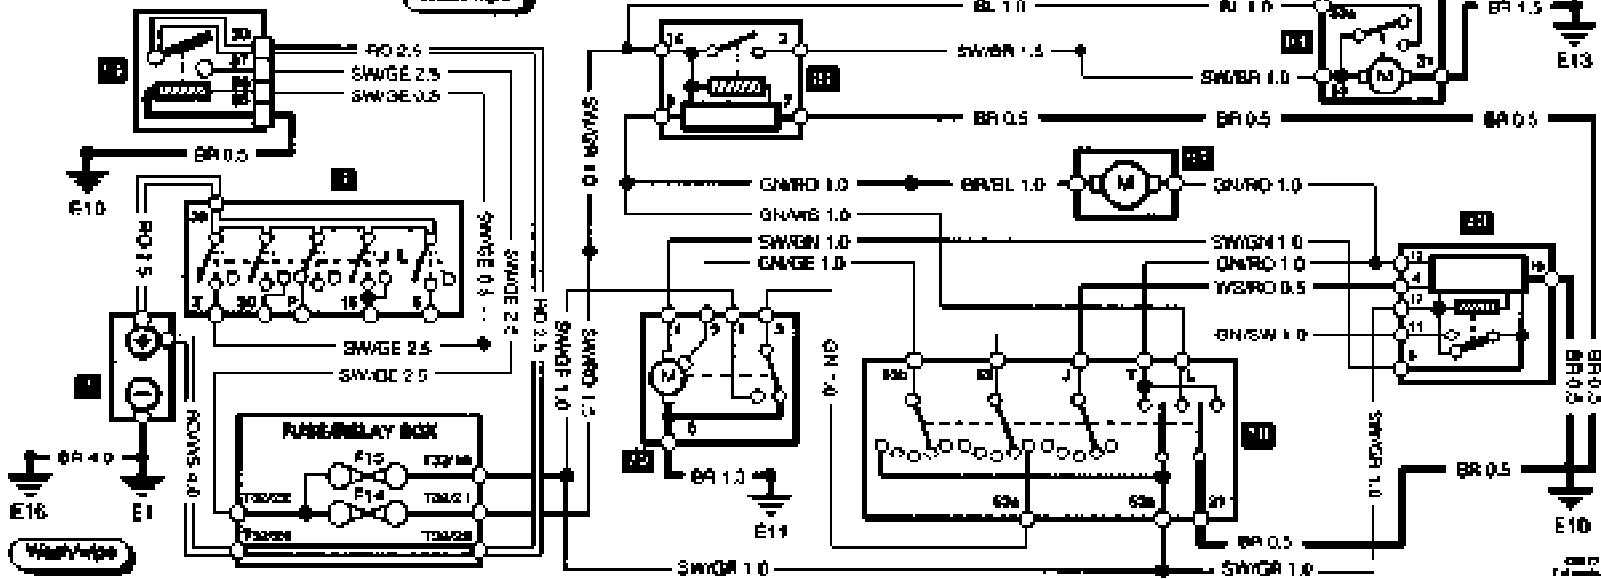


Diagram 6: Headlight adjustment, interior lighting and wash/wipe

- Key to items**
- 1 Battery
 - 4 Ignition switch
 - 14 X Contact relay
 - 84 Horn
 - 85 Horn switch
 - 86 Heated rear window switch
 - 87 Heated rear window
 - 88 Cigar lighter
 - 89 Radio/cassette unit
 - 90 LH front speaker
 - 91 RH front speaker
 - 92 LH rear speaker
 - 93 RH rear speaker

- Wire colours**
- | | |
|-----------|----------------|
| WS White | SWF Black |
| RO Red | BR Brown |
| GR Green | BL Blue |
| GR Grey | LI Linc |
| GE Yellow | TR Transparent |

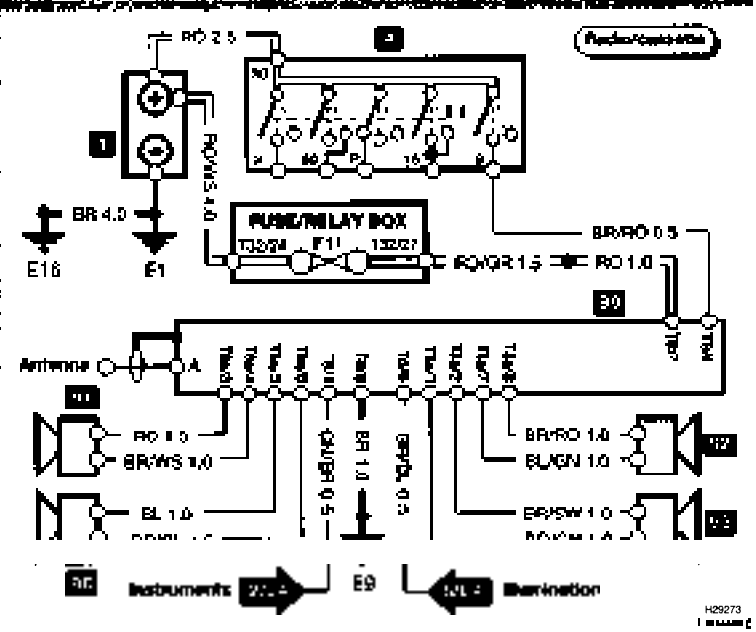
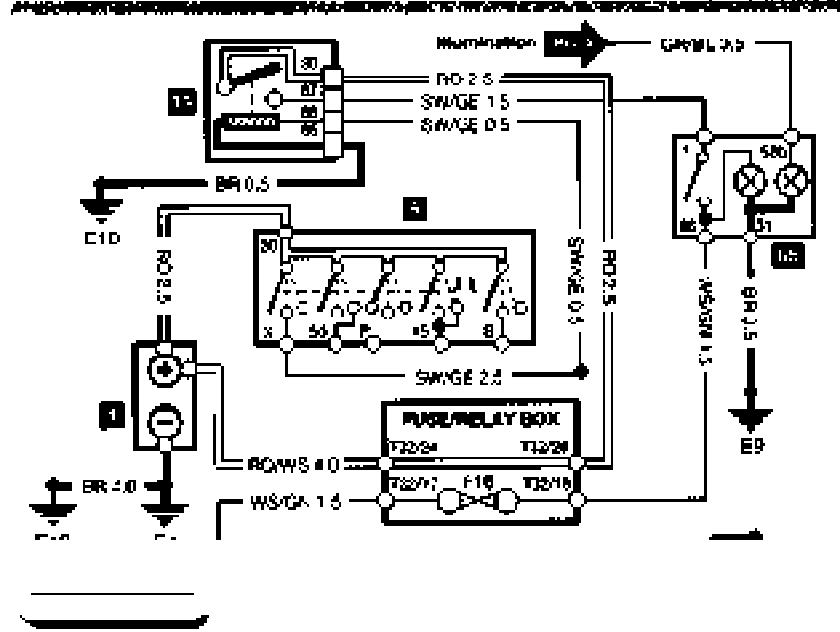
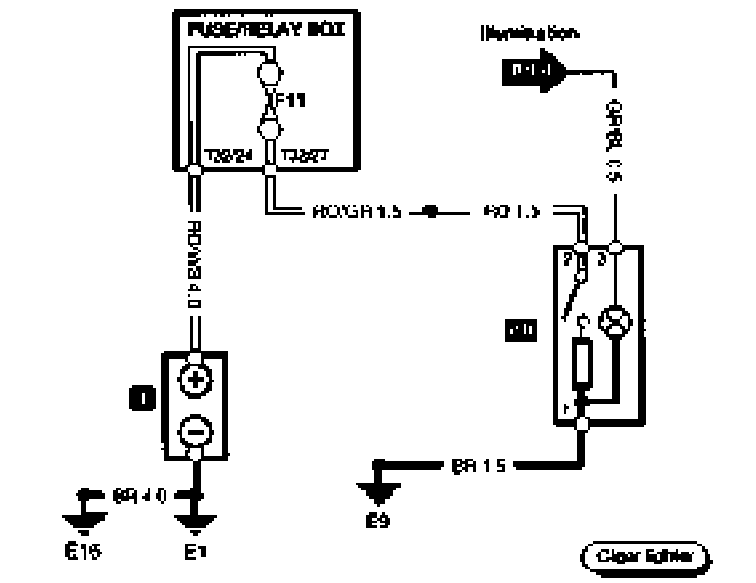
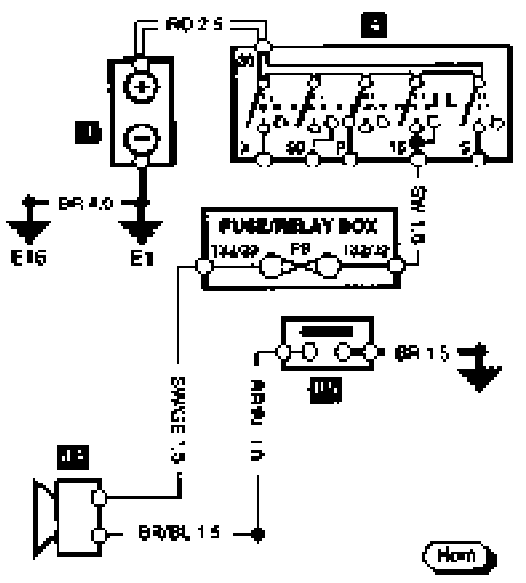


Diagram 9 : Horn, heated rear window, cigar lighter and radio/cassette